REVISION HISTORY BG3R CHASSIS

MODEL

KV-AR25M60
KV-AR25M66
KV-AR25M80
KV-AR25M80
KV-AR25N90
KV-AR25N90

PART NO.: 9-872-338-01

NO.	SUFFIX	DATE	SUPP / CORR	DESCRIPTION
1	-01	2002.9	--	1st. Issue

Self Diagnosis
Supported model

SERVICE MANUAL

BG3R CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-AR25M60	RM-995	Thailand	SCC-U46C-A
KV-AR25M66	RM-993	GE	SCC-U52K-A
KV-AR25M80	RM-995	E	SCC-U53E-A
KV-AR25M80	RM-995	ME	SCC-U48U-A
KV-AR25N90	RM-996	Philippines	SCC-U65E-A
KV-AR25N90	RM-996	Taiwan	SCC-U54G-A

MODEL	COMMANDER	DEST.	CHASSIS NO.

RM-993

RM-995

RM-996

TRINITRON® COLOR TV

SONY®

SPECIFICATIONS
(KV-AR25M60)

				Note
Power requirements	220-240 V AC, 50/60 Hz			
Power consumption (W)	Indicated on the rear of the TV			
Television system	B/G, I, D/K, M			
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43			
Stereo/Bilingual system	NICAM Stereo / Bilingual B/G, I; A2 Stereo / Bilingual B/G			
Channel coverage				
B/G	VHF: E2 to E12 UHF: E21 to E69 CATV: S01 to S03, S1 to S41			
I	UHF: B21 to B68 CATV: S01 to S03, S1 to S41			
D/K	VHF: C1 to C12, R1 to R12 UHF: C13 to C57, R21 to R60 CATV: S01 to S03, S1 to S41, Z1 to Z39			
M	VHF: A2 to A13 UHF: A14 to A79 CATV: A-8 to A-2, A to W+4, W+6 to W+84			
(Antenna)	75-ohm external terminal			
Audio output (Speaker)	8W + 8W			
Number of terminal				
Video	Input: 4*	Output: 1	Phono jacks; 1 Vp-p, 75 ohms	* Three input lines available
♪ Audio	Input: 4*	Output: 1	Phono jacks; 500 mVrms	* Three input lines available
(S Video)	Input : 2		Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms	
(Component Video)	Input : 1		Phono jacks: Y: 1 Vp-p, 75 ohms, sync negative C_B: 0.7 Vp-p, 75 ohms C_R: 0.7 Vp-p, 75 ohms Audio: 500mVrms	
(Headphone)	Output: 1		Stereo minijack	
Picture tube	25 in.			
Tube size (cm)	64			Measured diagonally
Screen size (cm)	60			Measured diagonally
Dimension (w/h/d,mm)	650 × 517 × 496			
Mass (kg)	39			

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SPECIFICATIONS
(KV-AR25N90)

				Note
Power requirements	110 V AC, 60 Hz			
Power consumption (W)	Indicated on the rear of the TV			
Television system	M			
Color system	NTSC3.58, PAL*, PAL 60*, SECAM*, NTSC4.43*			*AV IN only
Stereo/Bilingual system	MTS			
Channel coverage	VHF: 2 to 13 UHF: 14 to 69 CATV: 1 to 125			
(Antenna)	75-ohm external terminal			
Audio output (Speaker)	8W + 8W			
Number of terminal				
Video	Input: 4*	Output: 1	Phono jacks; 1 Vp-p, 75 ohms	* Three input lines available
♪ Audio	Input: 4*	Output: 1	Phono jacks; 500 mVrms	* Three input lines available
(S Video)	Input : 2		Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms	
Component Video (DVD) IN	Input : 1		Phono jacks: Y: 1 Vp-p, 75 ohms, sync negative C_B: 0.7 Vp-p, 75 ohms C_R: 0.7 Vp-p, 75 ohms Audio: 500mVrms	
(Headphone)	Output: 1		Stereo minijack	
Picture tube	25 in.			
Tube size (mm)	639			Measured diagonally
Screen size (mm)	598			Measured diagonally
Dimension (w/h/d,mm)	650 × 517 × 496			
Mass (kg)	39			

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SPECIFICATIONS
(KV-AR25M66/M80(ME)/M80(E))

				Note
Power requirements	110-240 V AC, 50/60 Hz			
Power consumption (W)	Indicated on the rear of the TV			
Television system	B/G, I, D/K, M			
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43			
Stereo/Bilingual system	NICAM Stereo / Bilingual B/G, I; A2 Stereo / Bilingual B/G			KV-AR25M66 only
Teletext language	English, Arabic, French			KV-AR25M66 only
	English, Farsi (Persian), French			Except KV-AR25M66
Channel coverage				
B/G	VHF: E2 to E12 UHF: E21 to E69 CATV: S01 to S03, S1 to S41			
I	UHF: B21 to B68 CATV: S01 to S03, S1 to S41			
D/K	VHF: C1 to C12, R1 to R12 UHF: C13 to C57, R21 to R60 CATV: S01 to S03, S1 to S41, Z1 to Z39			
M	VHF: A2 to A13 UHF: A14 to A79 CATV: A-8 to A-2, A to W+4, W+6 to W+84			
(Antenna)	75-ohm external terminal			
Audio output (Speaker)	8W + 8W			
Number of terminal				
Video	Input: 4*	Output: 1	Phono jacks; 1 Vp-p, 75 ohms	* Three input lines available
♪ Audio	Input: 4*	Output: 1	Phono jacks; 500 mVrms	* Three input lines available
(S Video)	Input : 2		Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms	
(Component Video)	Input : 1		Phono jacks: Y: 1 Vp-p, 75 ohms, sync negative C_B: 0.7 Vp-p, 75 ohms C_R: 0.7 Vp-p, 75 ohms Audio: 500mVrms	
(Headphone)	Output: 1		Stereo minijack	
Picture tube	25 in.			
Tube size (cm)	64			Measured diagonally
Screen size (cm)	60			Measured diagonally
Dimension (w/h/d,mm)	650 × 517 × 496			
Mass (kg)	39			

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

SELF DIAGNOSTIC FUNCTION 6

1. DISASSEMBLY

1-1. Rear Cover Removal 9
1-2. Speaker Block Assy Removal 9
1-3. Chassis Assy Removal (KV-AR25M66) 9
1-4. Chassis Assy Removal (Except KV-AR25M66) 9
1-5. Service Position 9
1-6. F Board Removal (KV-AR25M66) 9
1-7. F Board Removal (Except KV-AR25M66) 10
1-8. Terminal Bracket and J Board Removal (KV-AR25M66) 10
1-9. Terminal Bracket and J Board Removal (Except KV-AR25M66) 10
1-10. B1 and V1 Boards Removal 10
1-11. P5 Board Removal 10
1-12. H1 and H2 Boards Removal 10
1-13. A and B10 Boards Removal (KV-AR25M66) 11
1-14. A and B8 Boards Removal (Except KV-AR25M66) 11
1-15. Picture Tube Removal 11

2. ADVANCE OPERATION

2-1. "RESET" Function 13

3. SET-UP ADJUSTMENTS

3-1. Beam Landing 14
3-2. Convergence 15
3-3. Focus Adjustment 17
3-4. G2 (SCREEN) and White Balance Adjustment 18

4. CIRCUIT ADJUSTMENTS

4-1. Adjustment With Commander 19
4-2. Adjustment Method 19
4-3. Adjustment for Non Digital Texture Enhancer (DTE) Model 62
4-4. Adjustment for Digital Texture Enhancer (DTE) Model 62
4-5. Display Position Adjustment 63
4-6. Deflection Adjustment 63
4-7. H-Trapezoid Adjustment 64
4-8. A Board Adjustment After IC003 (MEMORY) Replacement 64
4-9. Picture Distortion Adjustment 65

5. DIAGRAMS

5-1. Block Diagram 66
5-2. Circuit Board Location 70
5-3. Schematic Diagram 71
(1) A Board Schematic Diagram 72
(2) B10 Board Schematic Diagram 76
(3) B8 Board Schematic Diagram 78
(4) V1 Board Schematic Diagram 80
(5) C6 Board Schematic Diagram 82
(6) H1 Board Schematic Diagram 84
(7) P5 Board Schematic Diagram 86
(8) B1 Board Schematic Diagram 94
(9) H2 Board Schematic Diagram 95
(10) J and F Boards Schematic Diagrams 96
(11) VM1 Board Schematic Diagram 97
5-4. Voltage List and Waveforms 101
5-5. Printed Wiring Boards and Parts Location 110
5-6. Semiconductors 123

6. EXPLODED VIEWS

6-1. Speaker Block 126
6-2. Chassis 127
6-3. Picture Tube 129

7. ELECTRICAL PARTS LIST 131

OPERATING INSTRUCTIONS

SELF DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER lamp will automatically begin to flash.
The number of times the lamp flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER lamp flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. DIAGNOSTIC TEST INDICATORS

When an errors occurs, the STANDBY/TIMER lamp will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the lamp will identify the first of the problem areas.

Result for all of the following diagnostic items are displayed on screen. No error has occured if the screen displays a "0".

Diagnostic Item Description	No. of times STANDBY/TIMER lamp flashes	Self-diagnostic display/Diagnostic result	Probable Cause Location	Detected Symptoms
• Power does not turn on	Does not light	—	• Power cord is not plugged in. • Fuse is burned out F4601 (F)	• Power does not come on. • No power is supplied to the TV. • AC power supply is faulty.
• +B overcurrent (OCP) or overvoltage (OVP) • Vertical deflection stopped • Horizontal deflection overdrive	2 times	002:000 or 002:001~255 003:001~255 004:001~255 at the same time	• H.OUT Q511 is shorted. (A board) • Q701, Q702, Q703 is shorted (C6 board) • -13V is not supplied. (A board) • IC 503 faulty (A board)	• Power does not come on. • Load on power line is shorted. • Has entered standby state after horizontal raster. • Vertical deflection pulse is stopped. • Power line is shorted or power supply is stopped.
• White balance failure (no PICTURE)	5 times	005:000 or 005:001~225	• G2 is improperly adjusted. (Note 2) • CRT problem. • R(Q703), G(Q702) or B(Q701) out is faulty (C6 board) • IC301 is faulty. (A board) • No connection A board to C6 board.	• No raster is generated. • CRT cathode current detection reference pulse output is small.
• Micro reset	—	101:00 or 101:001~225	• Discharge CRT (C6 Board) • Static discharge • External noise	• Power is shut down shortly, after this return back to normal. • Detect Micro latch up.

Note 1: If a + B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously.
The symptom that is diagnosed first by the microcontroller is displayed on the screen.
Note 2: Refer to screen (G2) Adjustment in section 3-4 of this manual.
* R(Q703), G(Q702) or B(Q701) out is faulty (C6 board).

2. DISPLAY OF STANDBY/TIMER LIGHT FLASH COUNT

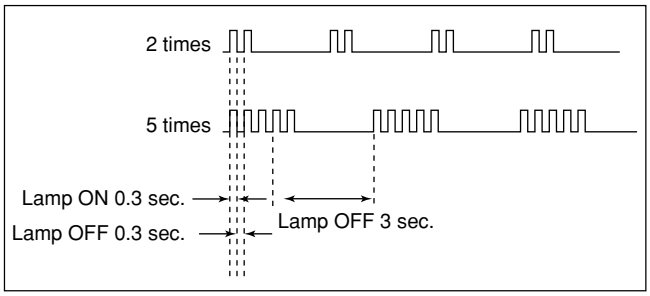

Diagnostic Item	Flash Count*
+B overcurrent/overvoltage Vertical deflection stopped	2 times
White balance failure	5 times

* One flash count is not used for self-diagnostic.

3. STOPPING THE STANDBY/TIMER FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER lamp from flashing.

4. SELF-DIAGNOSTIC SCREEN DIPLAY

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes out” that cannot be confirmed, it is possible to bring up past occurances of failure for confirmation on the screen:

[To Bring Up Screen Test]

In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

Screen display ➡ channel 5 ➡ Sound volume - ➡ Power ON

⇧

Note that this differs from entering the service mode (mode volume +).

Self-Diagnosis screen display

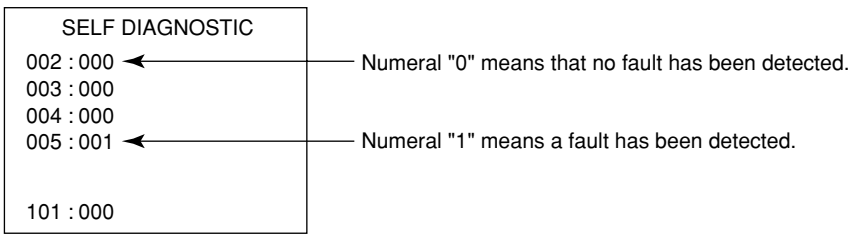
SELF DIAGNOSTIC
002 : 000
003 : 000
004 : 000
005 : 001
101 : 000
Numeral "0" means that no fault has been detected.
Numeral "1" means a fault has been detected.

5. HANDLING OF SELF-DIAGNOSTIC SCREEN DISPLAY

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to "0".

Unless the result display is cleared to "0", the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

[Clearing the result display]

To clear the result display to "0", press buttons on the remote commander sequentially as shown below when the diagnostic screen is being displayed.

Channel [8] ➡ 0

[Quitting Self-diagnostic screen]

To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

6. SELF-DIANOSTIC CIRCUIT

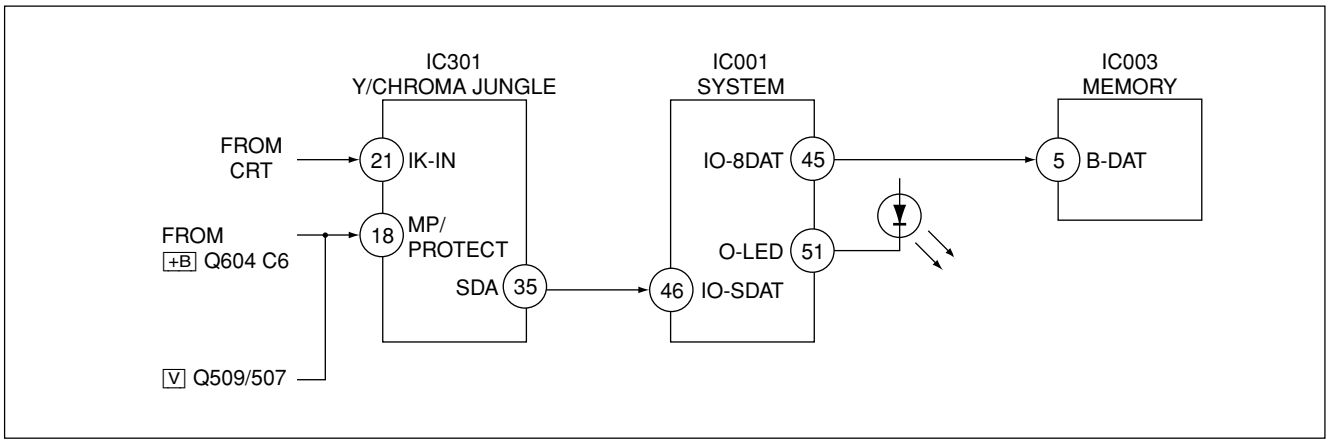

+B overcurrent (OCP)	Occurs when an overcurrent on the +B(135) line is detected by Q604. If Q604 go to ON and the voltage to pin 18 of IC301 should go down when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.
Vertical deflection stopped	Occurs when an absence of the vertical deflection pulse is detected by Q509 and IC001 shut down the power supply.
Vertical deflection overcurrent	Occurs when an overcurrent on V drive line is detected by Q507. Power supply will be shut down when detect this by IC001.
White balance failure	If the RGB levels* do not balance or become low level within 5 seconds, this error will be detected by IC301. TV will stay on, but there will be no picture. * (Refers to the RGB levels of the AKB detection Ref pulse that detects IK.)

SECTION 1
DISASSEMBLY

1-1. REAR COVER REMOVAL

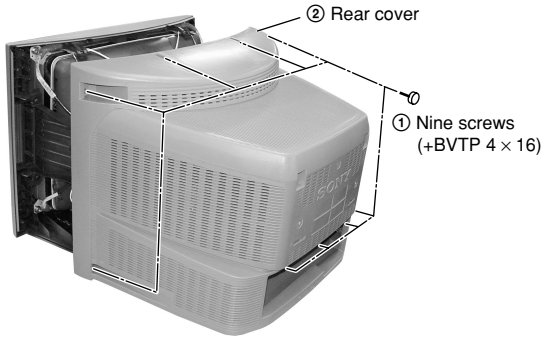

1-2. SPEAKER BLOCK ASSY REMOVAL

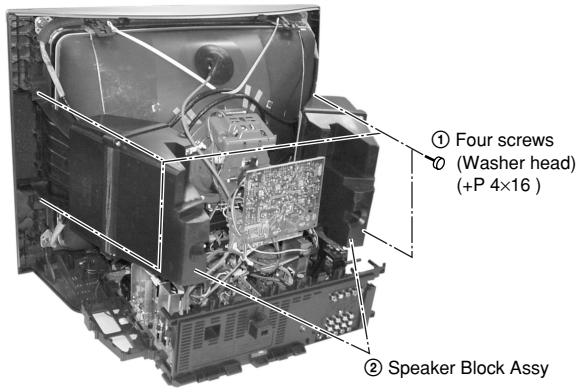

1-3. CHASSIS ASSY REMOVAL (KV-AR25M66)

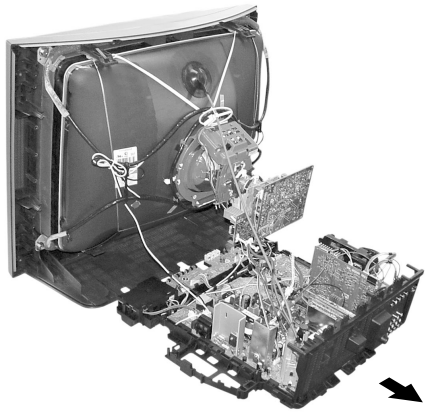

1-4. CHASSIS ASSY REMOVAL (Except KV-AR25M66)

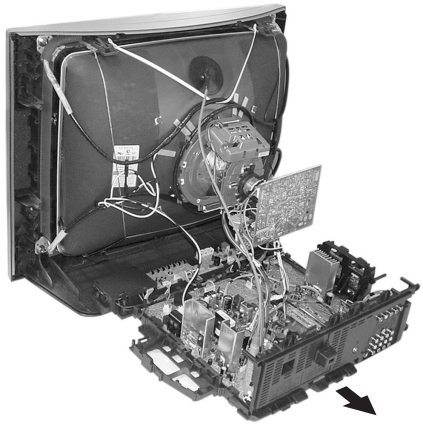

1-5. SERVICE POSITION

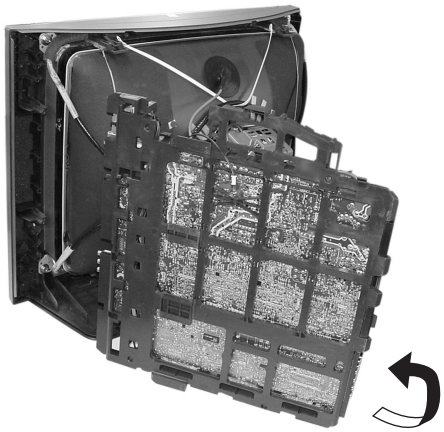

1-6. F BOARD REMOVAL (KV-AR25M66)

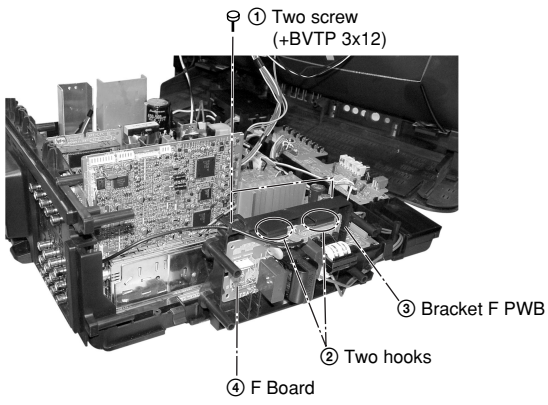

1-7. F BOARD REMOVAL (Except KV-AR25M66)

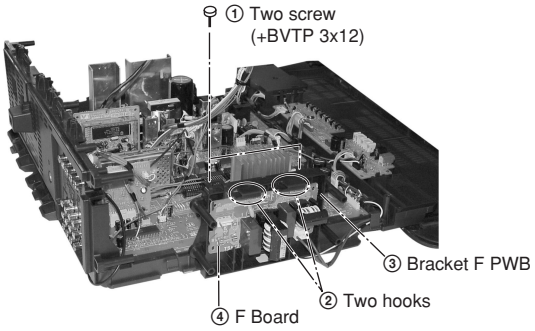

1-8. TERMINAL BRACKET AND J BOARD REMOVAL (KV-AR25M66)

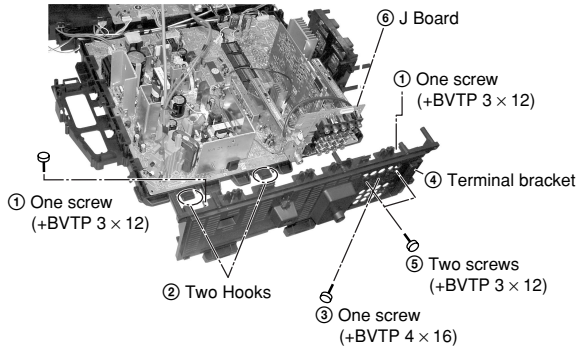

1-9. TERMINAL BRACKET AND J BOARD REMOVAL (Except KV-AR25M66)

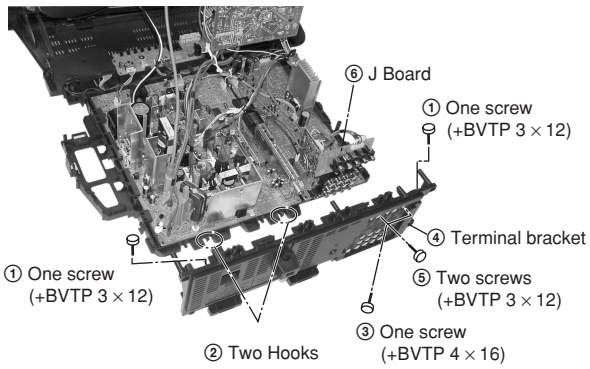

1-10. B1 AND V1 BOARDS REMOVAL

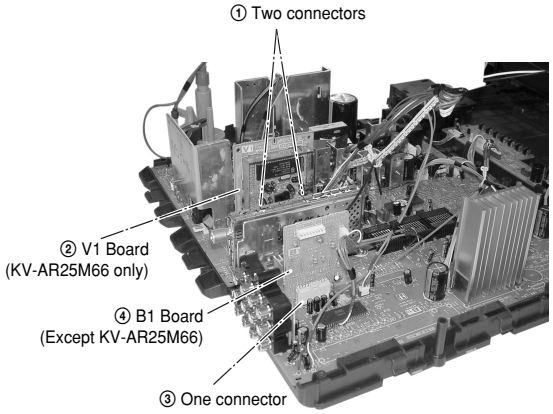

1-11. P5 BOARD REMOVAL

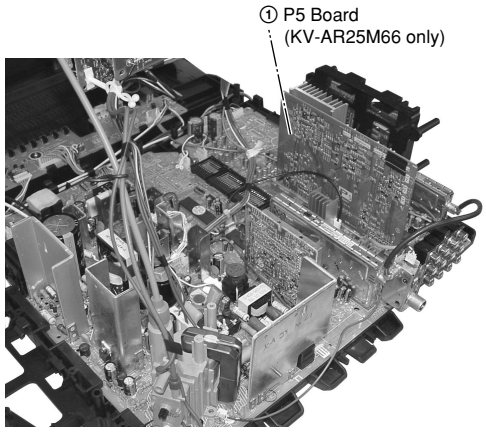

1-12. H1 AND H2 BOARDS REMOVAL

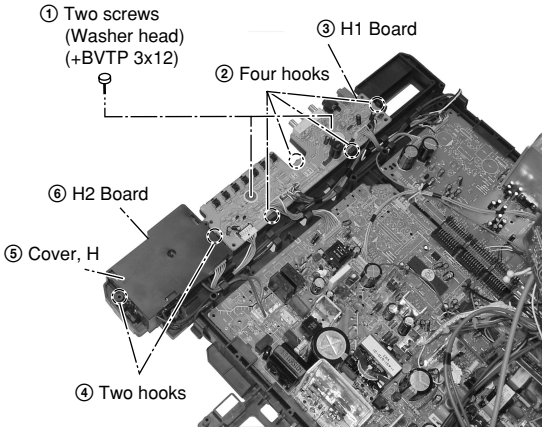

1-13. A AND B10 BOARDS REMOVAL (Except KV-AR25M66)

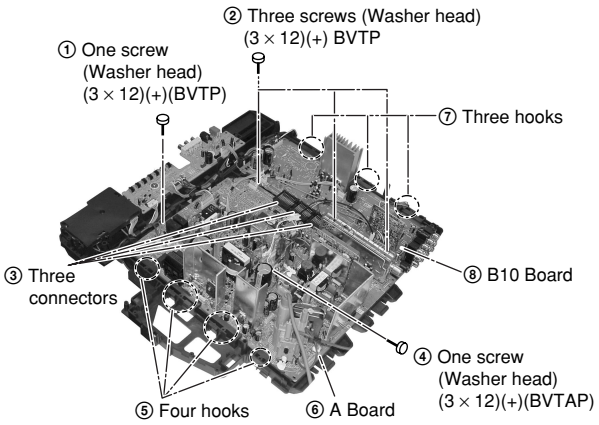
② Three screws (Washer head) (3 × 12)(+) BVTP
① One screw (Washer head) (3 × 12)(+)(BVTP)
⑦ Three hooks
③ Three connectors
⑧ B10 Board
④ One screw (Washer head) (3 × 12)(+)(BVTAP)
⑤ Four hooks
⑥ A Board

1-14. A AND B8 BOARDS REMOVAL (KV-AR25M66 ONLY)

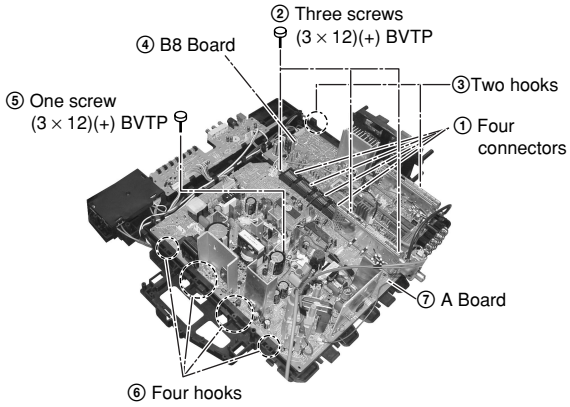

1-15. PICTURE TUBE REMOVAL

Note:

- Please make sure the TV set is not in standing position before removing necessary CRT support located on bottom right and left.

1) Place the TV set with the CRT face down on a cushion jig.
2) Removal the rear cover.
3) Removal the Speaker Block Assy.

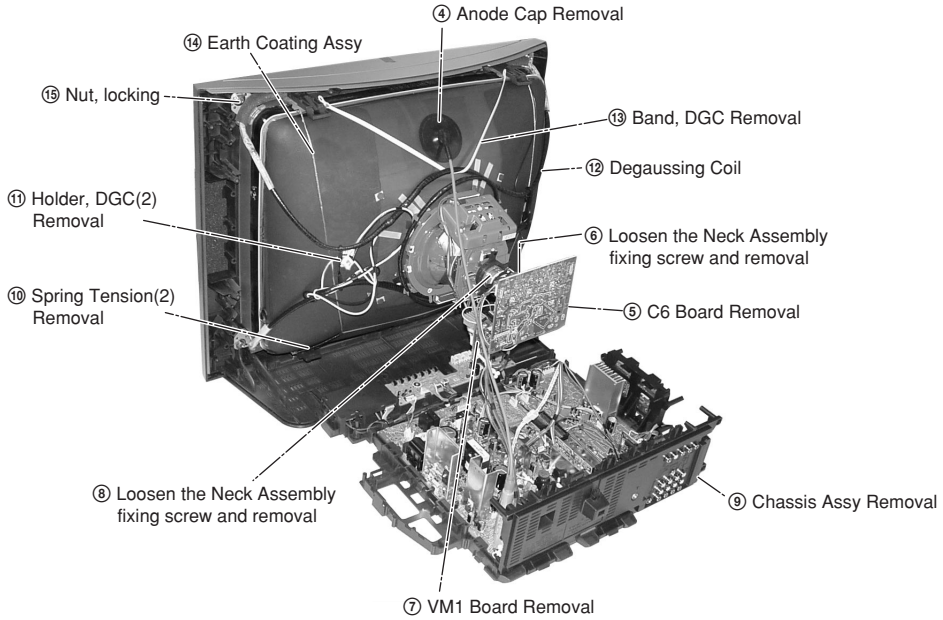
④ Anode Cap Removal
⑭ Earth Coating Assy
⑮ Nut, locking
⑬ Band, DGC Removal
⑫ Degaussing Coil
⑪ Holder, DGC(2) Removal
⑥ Loosen the Neck Assembly fixing screw and removal
⑩ Spring Tension(2) Removal
⑤ C6 Board Removal
⑧ Loosen the Neck Assembly fixing screw and removal
⑨ Chassis Assy Removal
⑦ VM1 Board Removal

• REMOVAL OF ANODE-CAP

Note:

- After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.

• REMOVING PROCEDURES

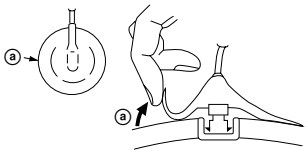

① **Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.**

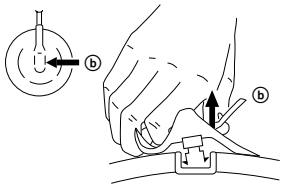

② **Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.**

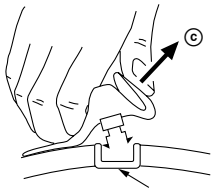

anode button

③ **When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ⓒ.**

• HOW TO HANDLE AN ANODE-CAP

① **Do not damage the surface of anode-caps with sharp shaped objects.**
② **Do not press the rubber too hard so as not to damage the inside of anode-cap.**
A metal fitting called the shatter-hook terminal is built into the rubber.
③ **Do not turn the foot of rubber over too hard.**
The shatter-hook terminal will stick out or damage the rubber.

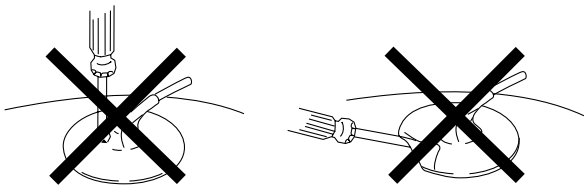

SECTION 2
ADVANCE OPERATION

2-1. "RESET" FUNCTION

1. Purpose

If a customer faces some setting problem that cannot be solved, using the "RESET" function some items will be reset to its original setting (shipment condition)

2. How to Operate

The way to access to the "RESET" Function:-

a) By pressing "MENU" button or "SELECT" button (for non-menu models) on the Front Key Input and hold it down for 5 seconds.

3. Subsequent of Operation

Sequential to the resetting operation (either methods being used in No. 2), TV set would shut down once and automatically turn on again. The power-off duration is expected to be about 500msec. An OSD message, "RESET" tentatively will be displayed for 10 sec after IK status gets stable.
As a result, some items will be reset to an initial condition (shipment condition) wheareas some other remains at the last selection by user.

Items that remains at the last selection by user

Channel No., Favourite CH Setup, PIC rotation, OSD Language, Fine tuning, TV System, Skip

Reset Items

Video input	RF	OSD recall	OFF
Volume	30	Antenna sensitivity	HIGH*
Picture mode	DYNAMIC	Stereo mode	STEREO/NICAM*
Wide mode	OFF	Bilingual mode	MAIN*
Intelligent picture	ON	High-deviation mode	AUTO
Sound mode	DYNAMIC	Child lock	OFF*
Surround mode	OFF	Game mode	OFF
Intelligent Vol	OFF	Teletext mode	OFF
Multi Picture (PIP)	OFF (KV-AR25M66 only)	Sleep timer	OFF
PIP position	Bottom Right (KV-AR25M66 only)	Wake-up timer	OFF
		Sound muting	OFF

*= only when in RF mode

SECTION 3
SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switches should be set as follows unless otherwise noted:
PICTURE control ..... normal
BRIGHTNESS control ..... normal

Perform the adjustments in the following order :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Pattern Generator
2. Degausser
3. Oscilloscope

. . . . . .

Preparation :

- In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input a white signal with the pattern generator.
   Contrast, Brightness } normal
2. Position neck assy as shown in Fig3-2.
3. Set the pattern generator raster signal to a green raster.
4. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side. (See Figures 3-1 through 3-4.)
5. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 3-2.)
6. Switch the raster signal to blue, then to red and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws and DY spacers.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it. (See Figure 3-5.)

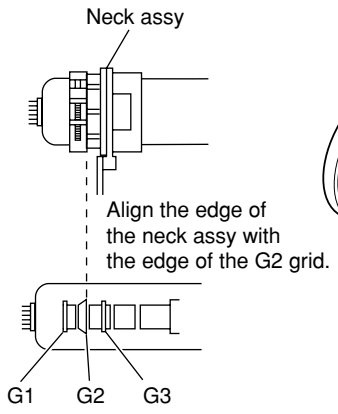

Fig. 3-1

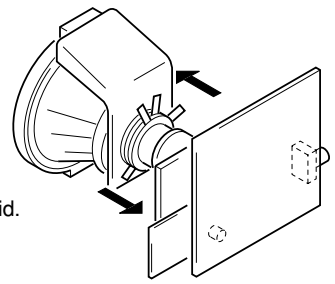

Fig. 3-2

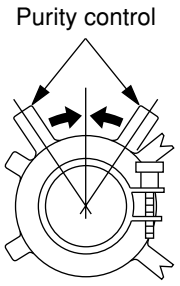

Fig. 3-3

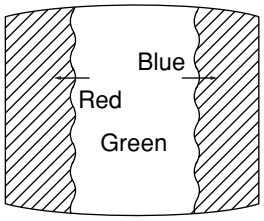

Fig. 3-4

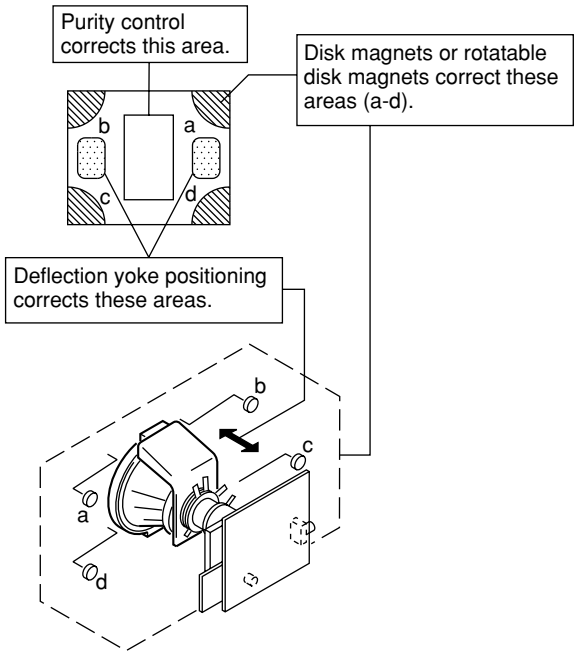

Fig. 3-5

3-2. CONVERGENCE

Preparation :

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Receive dot/hatch signal.
- Pic mode: Personal (Pic 90%, Brightness 50%, Colour 50 %, Hue 50%, Sharpness 50%).

(1) Horizontal and Vertical Static Convergence

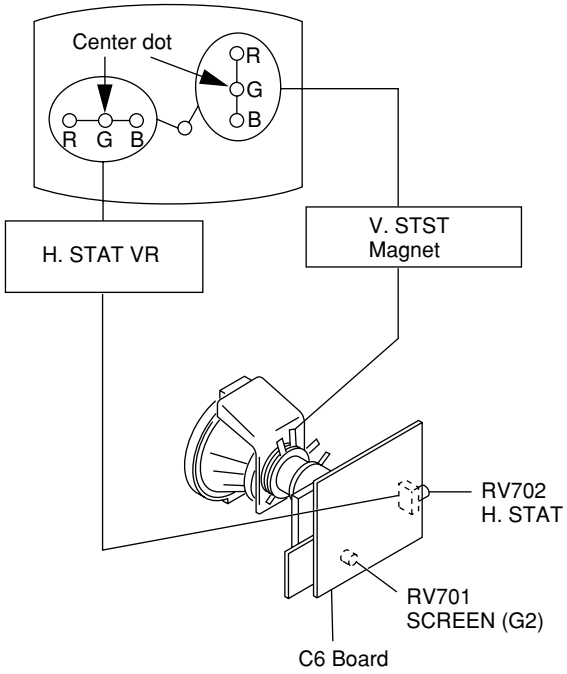

1. (Moving horizontally), adjust the H.STAT control so that the red, green and blue dots are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green and blue dots together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below.
   (In this case, the H.STAT variable resistor and the V.STAT magnet influence each other, so be sure to perform adjustments while tracking.)

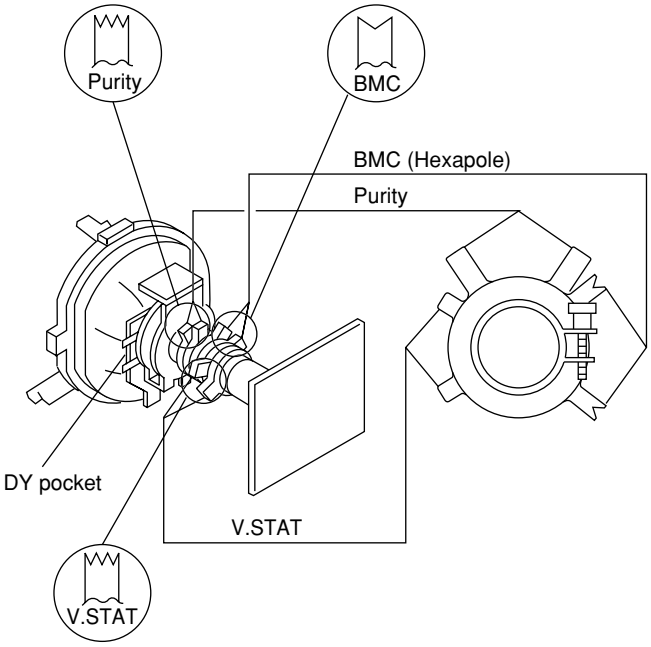

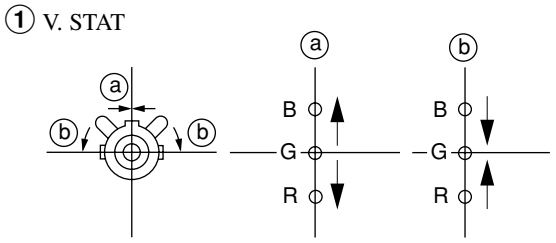

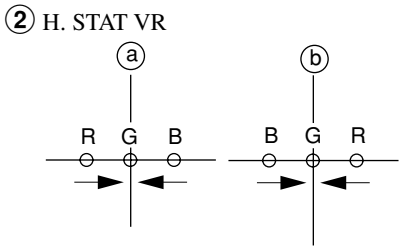

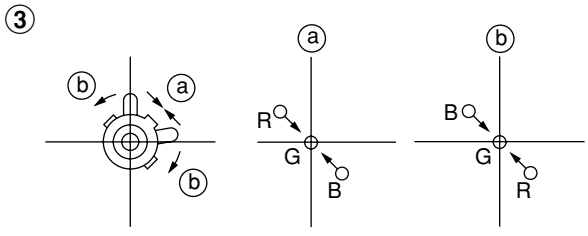

④ BMC (Hexapole) Magnet.

If the red, green and blue dots are not balanced or aligned, then use the BMC magnet to adjust in the manner described below.

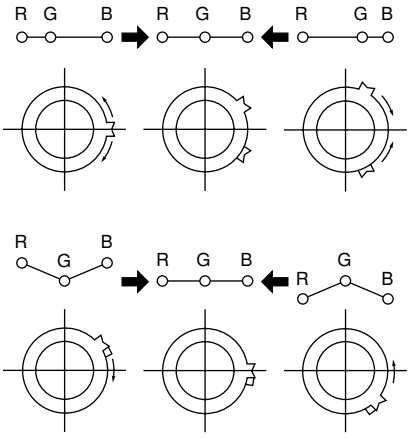

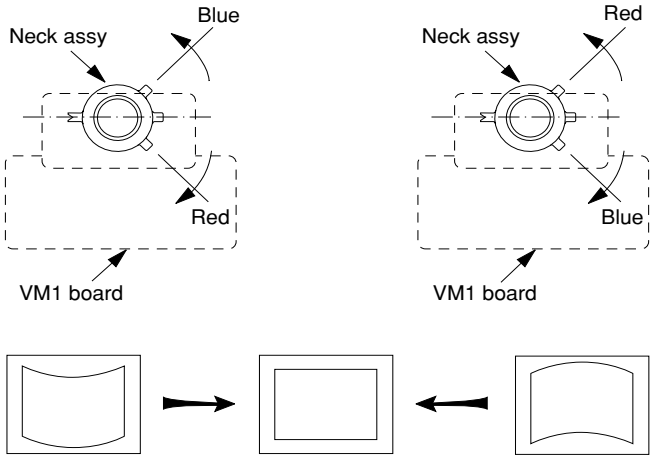

Note

1. The Red and Blue magnets should be equally far from the horizontal center line.
2. Do not separate the Red and Blue magnets too far. (Less than 8 mm)

⑤ Y separation axis correction magnet adjustment.

1. Receive the cross-hatch signal and adjust [PICTURE] to [MIN] and [BRIGHTNESS] to [STANDARD] .
2. Adjust the Y separation axis correction magnet on the neck assembly so that the horizontal lines at the top and bottom of the screen are straight.

(2) Dynamic Convergence Adjustment

Preparation:

- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence

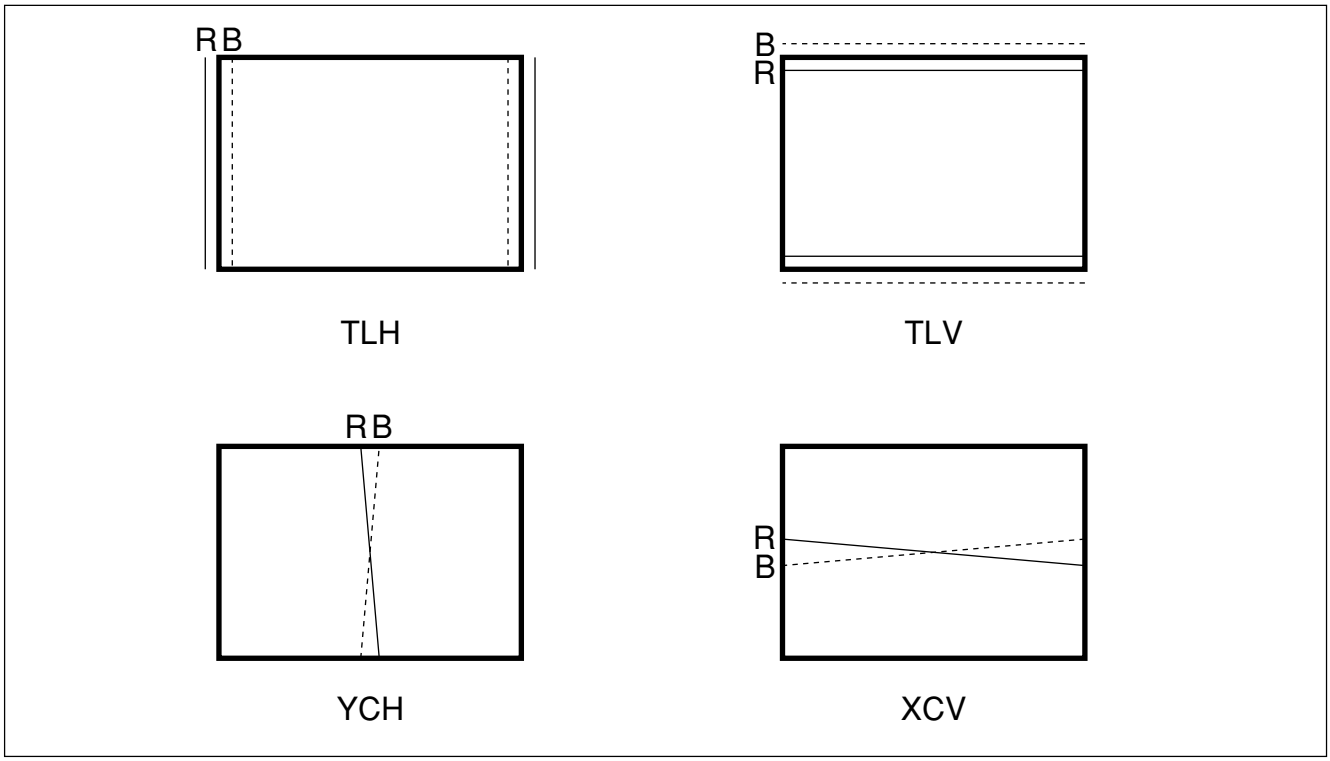

TLV	Rotate	TLV-2	VOL (29”, 34”) on DY
	Rotate	TLV	VOL (25”)
XCV	Rotate	XCV	Adj core on DY
YCH	Rotate	YCH	VOL on DY
TLH	Insert	TLH	Correction Plate to DY Pocket (Left or Right)

ON DY:

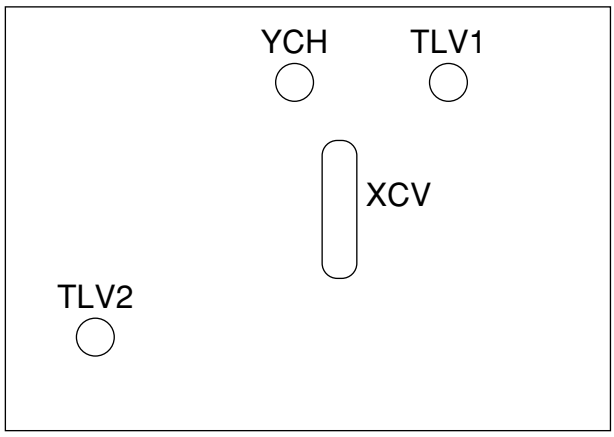

(3) Screen-corner Convergence

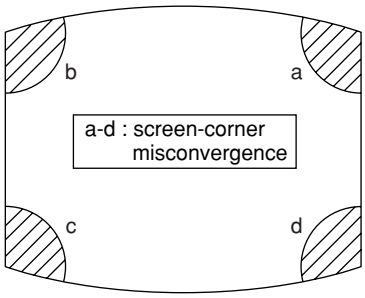

Fix a Permalloy assy corresponding to the misconverged areas.

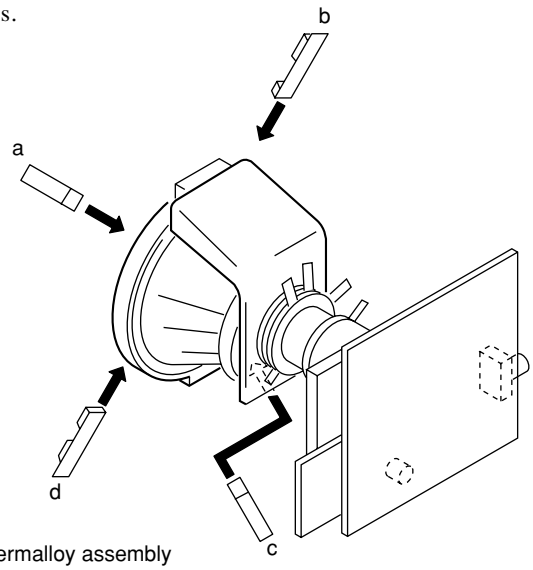

3-3. FOCUS ADJUSTMENT

FOCUS adjustment should be completed before W/B adjustment.

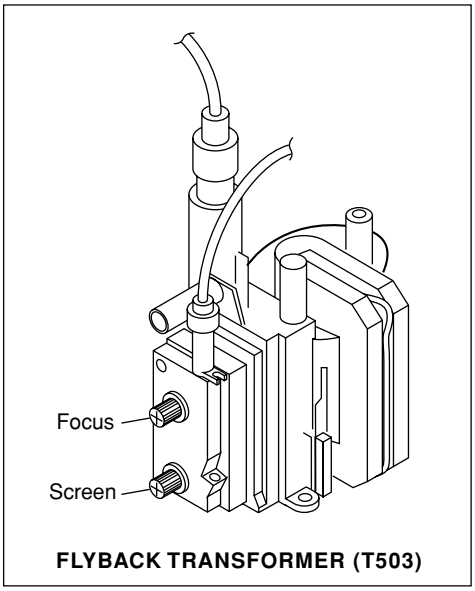

FLYBACK TRANSFORMER (T503)

1. Receive digital monoscope pattern.
2. Set "Picture Mode" to "DYNAMIC".
3. Adjust focus VR so that the lion teeth becomes just focus.
4. Change the receiving signal to white pattern blue back.
5. Confirm Magenta ring is not noticable. Incase magneta ring is obvious, adjust FOCUS VR to take balance of MAGENTA RING and FOCUS.

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G2 (SCREEN) ADJUSTMENT

1) Set the PICTURE to normal.
2) Put to VIDEO input mode without signals.
3) Connect R, G and B of the C6 board cathode to the oscilloscope.
4) Adjust BRIGHTNESS to obtain the cathode voltage to the value below.
5) Adjust G2 (screen) on the FBT until picture shows the point before cut off.

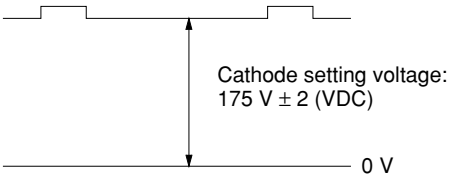

2. WHITE BALANCE ADJUSTMENT

1) Set to Service Mode (Refer Section 4-1: ADJUSTMENTS WITH COMMANDER).
2) Input white raster signal.
3) Set the PICTURE to minimum.
4) Select WHB 04 "GCT" and WHB 05 "BCT" with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
5) Set the PICTURE to maximum.
6) Select WHB 01 "GDR" and WHB 02 "BDR" with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
7) Write into the memory by pressing [MUTING] then [0].

3. SUB BRIGHT ADJUSTMENT

1) Set to service mode.
2) Input a staircase signal of black to white from the pattern generator.
3) BRIGHTNESS .... 50%.
   PICTURE ..... MINIMUM
4) Select WHB 07 "SBR" with [1] and [4], and adjust WHB 07 "SBR" level with [3] and [6] so that the second stripe from the right is dimly lit.

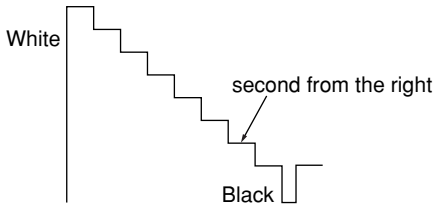

SECTION 4
CIRCUIT ADJUSTMENTS

4-1. ADJUSTMENTS WITH COMMANDER

Service adjustments to this model can be performed using the supplied Remote Commander RM-993, RM-995 and RM-996.

a. ENTERING SERVICE MODE

With the unit on standby

→ [DISPLAY] → [5] → [VOL (+)] → [POWER]

This operation sequence puts the unit into service mode.

The screen display is :

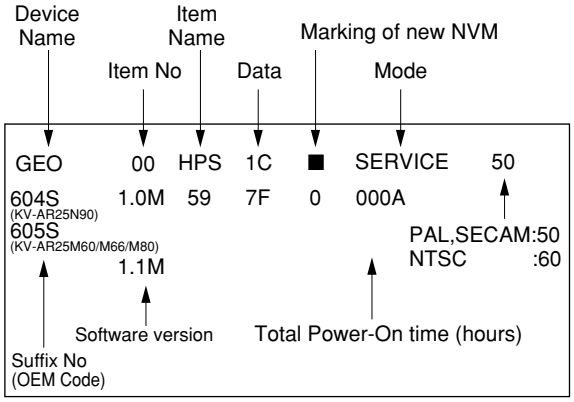

b. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press [POWER] button on the commander), then press [POWER] button again, hereupon it becomes TV mode.

c. METHOD OF WRITE INTO MEMORY

1) Set to Service Mode.
2) Press [1] (UP) and [4] (DOWN), to select the adjustment.
4) Press [MUTING] button to indicate WRITE on the screen.
5) Press [0] button to write into memory.

d. MEMORY WRITE CONFIRMATION METHOD

1) After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
2) Turn the power switch ON and set to Service Mode.
3) Call the adjusted items again to confirm adjustments were made.

[1], [4]	Select the adjustment item.
↓	
[3], [6]	Raise/lower the data value.
↓	
[MUTING]	Writes.
↓	
[0]	Executes the writing.

[7], [0]	All the data becomes the values in memory.
[8], [0]	All user control goes to the standard state.
[5], [0]	Service data initialization (Be sure not to use usually.)
[MUTING], [0]	Write 50Hz adjustment data to 60Hz, or vice versa.
[2], [0]	Copy and write all data.

4-2. ADJUSTMENT METHOD

Item Number 00 of device GEO

This explanation uses H-Position as an example.

1. Select "GEO 00 HPS" with the [1] and [4] buttons.
2. Raise/lower the data with the [3] and [6] buttons.
3. Select the optimum state. (The standard is 1F for PAL reception.)
4. Write with the [MUTING] button. (The display changes to WRITE.)
5. Execute the writing with the [0] button. (The WRITE display will be changed to red color while excuting, and back to SERVICE.)

Example on screen display :-

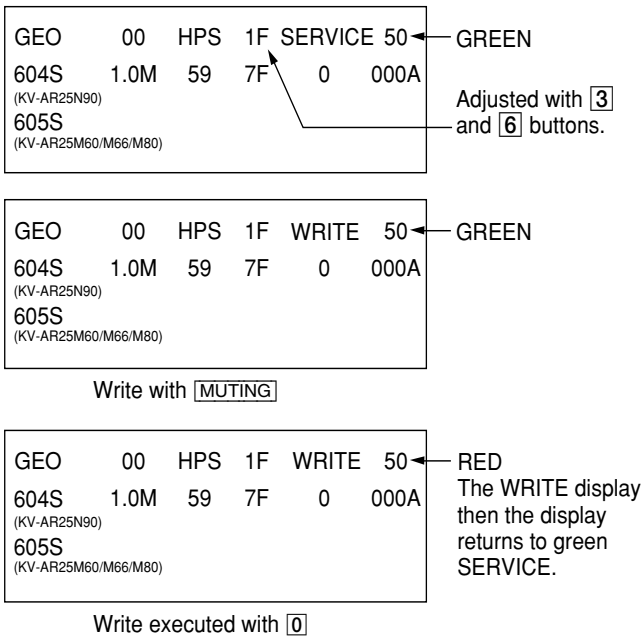
GEO 00 HPS 1F SERVICE 50
GREEN
604S (KV-AR25N90) 1.0M 59 7F 0 000A
605S (KV-AR25M60/M66/M80)
Adjusted with [3] and [6] buttons.
GEO 00 HPS 1F WRITE 50
GREEN
604S (KV-AR25N90) 1.0M 59 7F 0 000A
605S (KV-AR25M60/M66/M80)
Write with [MUTING]
GEO 00 HPS 1F WRITE 50
RED
The WRITE display then the display returns to green SERVICE.
604S (KV-AR25N90) 1.0M 59 7F 0 000A
605S (KV-AR25M60/M66/M80)
Write executed with [0]

Use the same method for all Items. Use [1] and [4] to select the adjustment item, use [3] and [6] to adjust, write with [MUTING], then execute the write with [0].

Note : 1. In [WRITE], the data for all items are written into memory together.
2. For adjustment items that have different standard data between 50Hz or 60Hz, be sure to use the respective input signal after adjustment.

Adjustment Item Table (except KV-AR25M66/KV-AR25N90(Philippines/Taiwan)

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)					
Category	No	Name				Common	50NC	60NC	50VC	60VC	Soft bsw
GEO	00	HPS	H Position	Normal (50/60)/Wide (50/60)	CXA2159S		1E	1E	1E	1E	
	01	HSZ	H Size	Normal (50/60)/Wide (50/60)			25	25	25	25	
	02	PAP	Pin Amp	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	03	TLT	Trapezium	Normal (50/60)/Wide (50/60)			07	07	07	07	
	04	VPS	V Position	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	05	VSZ	V Size	Normal (50/60)/Wide (50/60)			0F	0F	07	07	
	06	SCO	S Correction	Normal (50/60)/Wide (50/60)			07	07	07	07	
	07	VLN	V Linearity	Normal (50/60)/Wide (50/60)			07	07	07	07	
	08	BOW	AFC Bow	Normal (50/60)/Wide (50/60)			07	07	07	07	
	09	AGL	AFC Angle	Normal (50/60)/Wide (50/60)			07	07	07	07	
	0A	UPN	Upper Pin	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	0B	LPN	Lower Pin	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	0C	HBL	H Blanking on/off			**01**					
	0D	LBL	Left H Blanking	Normal (50/60)/Wide (50/60)			**0A**	**0F**	**0A**	**0F**	
	0E	RBL	Right H Blanking	Normal (50/60)/Wide (50/60)			**02**	**02**	**02**	**02**	

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)				
Category	No	Name				Common	SECAM	Others	Dynamic	Others
WHB	00	RDR	R Drive	DYNAMIC/others	CXA2159S				**25**	**2A**
	01	GDR	G Drive	DYNAMIC/others					25	25
	02	BDR	B Drive	DYNAMIC/others					25	25
	03	RCT	R Cutoff	SECAM/others			**07**	**07**		
	04	GCT	G Cutoff	SECAM/others			07	07		
	05	BCT	B Cutoff	SECAM/others			07	07		
	06	BMN	Brightness Minimum Data			**15**				
	07	SBR	Sub Brightness Control			25				
	08	APB	Sub Bright Control Switch for Intelligent Picture #3			**03**				

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)							
Category	No	Name				NC	VC	NTSCNC	OTHERSNC	NTSCVC	OTHERSVC	TV	Video
SAJ	00	PMX	Picture Maximum Data	non-Wide/Wide	CXA2159S	**33**	**2E**						
	01	SHU	Sub Hue Control	TV/Video								07	07
	02	SSH	Sub Sharpness Control	TV/Wide								**05**	**09**
	03	SCL	Sub Color Control	(NTSC/others)/WIDE(NTSC/others)				23	21	20	1E		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)								
Category	No	Name				Common	50NC	60NC	50VC	60VC	NTSC NON-STD	OTHERS NON-STD	NTSC STD	OTHERS STD
VP	00	EHT	EHT Comp	Normal(50/60)/Wide(50/60)	CXA2159S		**02**	**02**	**02**	**02**				
	01	GMA	Gamma Correction (separated in STANDARD mode)	NON-STD.(NTSC/others)/STD.(NTSC/others)							**02**	**02**	**01**	**01**
	02	APG	Gamma Control Switch for Intelligent Picture #3	NON-STD.(NTSC/others)/STD.(NTSC/others)							**00**	**00**	**00**	**00**

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			Common	SECAM	NTSC	PAL	DVD	TEXT
VP	03	YDL	Y Delay	PAL/SECAM/NTSC/DVD		**09**	**08**	**06**	**08**	
	04	SST	SECAM ID Start Position	SECAM&ATUTO/FORCED-PAL&NTSC		**01**		**01**		
	05	SSP	SECAM ID Stop Position	SECAM&ATUTO/FORCED-PAL&NTSC		**01**		**01**		
	06	RLM	RGB Limit		**00**					
	07	SLV	SECAM ID Level	SECAM&ATUTO/FORCED-PAL&NTSC		**02**		**02**		
	08	SBF	SECAM BELL for	SECAM&ATUTO/FORCED-PAL&NTSC		**22**		**22**		

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			Common	NTSC	Others	TV	Video	TEXT
VP	09	DYC	Dynamic Color on/off		**01**					
	0A	ABL	ABL Mode Switching (except STANDARD mode)	except STANDARD	**01**					
	0B	VTH	ABL Detection Vth Switching		**01**					
	0C	SF0	FO Switching for Sharpness	NTSC/others		**01**	**01**			
	0D	DCX	DC Trans. Ratio Switching		**01**					
	0E	SHT	Pre-/Overshoot ratio Switch	NTSC/others		**01**	**01**			
	0F	HDW	H Drive Pulse Width Switch		**00**					
	10	AFC	AFC Gain Control	TV/Video/Text				**01**	**00**	**01**
	11	HOS	H Oscillation		07					
	12	HSS	Slice Level of H Sync Sep.		**00**					
	13	VSS	Slice Level of V Sync Sep.		**00**					

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)								
Category	No	Name			Common	50NC	60NC	50VC	60VC	NTSCNC	OTHERSNC	NTSCVC	OTHERSVC
VP	14	HMS	Macro Vision C/m off/on	Normal(50/60)/Wide(50/60)		**01**	**01**	**01**	**01**				
	15	YUV	Y SEL		**00**								
	16	CDV	CD mode for Video and RF under no signal	video only	**01**								
	17	RON	R ON	not memorized	**01**								
	18	GON	G ON	not memorized	**01**								
	19	BON	B ON	not memorized	**01**								
	1A	PON	P ON	not memorized	**01**								
	1B	AXN	AXIS SW	(NTSC/others)/Wide(NTSC/others)[only DYNA]						**01**	**01**	**01**	**01**
	1C	RSL	RGB SEL		**00**								
	1D	VBW	VBLKW		**00**								
	1E	RFP	REFP		**00**								
	1F	VMC	VM Level		**00**								
	20	CBF	Chroma Bandpass Filter		**01**								
	21	CTO	Chroma Trap Off		**01**								

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)						
Category	No	Name			Common	Dynamic	Standard/Drama	Hi-Fine/Soft	Dyna bsw	Drama bsw	Soft bsw
AP2	00	BBS	Bass Boost Level Setting		**03**						
	01	BCB	Boost cut select for Sub Bass Control		**00**						
	02	SBS	Sub Bass Level Setting		**00**						
	03	BCT	Boost cut select for Sub Treble Control		**00**						
	04	STS	Sub Treble Level Setting		**00**						
	05	AGL	AGC Level Setting		**00**						
	06	BSW	Bass Boost ON/OFF Switch		**00**						
	07	BAS	Bass sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**13**	**01**	**01**	11	03	03
	08	TRE	Treble sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**01**	**01**	**07**	14	14	02
	09	BBE	BBE Sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**90**	**7F**	**00**	89	6C	00

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)
Category	No	Name				Common
MSP	00	WST	W/G Stereo Threshold		MSP3415D	**15**
	01	WBT	W/G Bilingual Threshold			**EC**
	02	WLL	W/G Monaural Threshold			**05**
	03	WAC	W/G Agreement Count			**01**
	04	WDL	W/G Search Delay			**30**
	05	NDL	NICAM Search Delay			**20**
	06	SDL	Stereo status Read Delay			**10**
	07	AGC	AGC Switch Auto/Constant			**01**
	08	REL	AGC Gain at Constant Mode			**28**
	09	CRM	Carrier muting on/off			**00**
	0A	ACO	Audio Clock out on/off			**01**
	0B	FP	FM Prescale for non-M system			**1B**
	0C	FPM	FM Prescale for M system			**32**
	0D	FH	FM Prescale for HDEV			**36**
	0E	FHM	FM Prescale for HDEV and M			**65**
	0F	WGP	W/G Prescale			**1C**
	10	NIP	NICAM Prescale			**7F**
	11	ERR	Auto FM switch Threshold			**50**
	12	VOL	Loud Speaker gain 7000h to 7ff0h			**6D**

TVG	Functionality		Function	Device Name	Initial Value (Detailed)
Category	No	Name			Common
PIP	00	PRO	Progreeive Scan Mode Enable	SDA9288X	**00**
	01	RED	Read Double Mode		**00**
	02	FEI	Field Select		**00**
	03	HPS	Horizontal Picture Position		**33**
	04	VPS	Vertical Picture Position		**1B**
	05	HFP	Horizontal Fine Positioning		**08**
	06	VFP	Vertical Fine Positioning		**00**
	07	DIS	Display standard		**00**
	08	HOS	Horizontal Size		**00**
	09	VES	Vertical Size		**00**
	0A	FPS	Force Parent Standard		**00**
	0B	HZM	Horizontal Zoom		**00**
	0C	VSP	Vertical Sync Pule Noise Reduction		**01**
	0D	VDL	Vertical Sync Pulse Delay		**00**
	0E	FRH	Frame Width Horizontal		**05**
	0F	FWV	Frame Width Vertical		**02**
	10	VRD	Reduction		**00**
	11	VBK	Vertical Blanking		**00**
	12	DLY	Select Delay		**01**
	13	PCR	Position Correction		**00**
	14	AGM	AGC Mode		**03**
	15	AGC	Automatic Gain Control Value		**09**
	16	CVB	CVBS Select		**00**
	17	CPD	CLAMPING Duration		**01**
	18	CPT	CLAMPING Pulse start		**01**
	19	LUM	Luminance offset		**00**

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			SECAM	NTSC	PAL	TV	Video	DVD
PIP	1A	PLL	Insert PLL Time Constant	TV/Video				**00**	**00**	
	1B	YCD	Y/C Delay	PAL/SECAM/NTSC/DVD	**08**	**08**	**08**			**08**
	1C	NSR	Noise Reduction for inset PII	TV/Video				**00**	**00**	

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)		
Category	No	Name			Common	50	60
PIP	1D	LSP	Standard Identification Speed		00		
	1E	KIL	Color Killer Threshold		02		
	1F	BGP	Burst Gate Position		01		
	20	SEC	SECAM Identification Level		01		
	21	DEM	Deemphasw selection		01		
	22	CMA	Chroma Bandwith		00		
	23	IFC	IF Compensation Filter		02		
	24	HUE	Hue		00		
	25	SCA	Color Subcarrier Adjustment		06		
	26	CON	Contrast Adjustment		00		
	27	BLR	Blanking Level Red Channel		00		
	28	BRT	Brightness Adjustment		03		
	29	BLG	Blanking Level Green Channel		00		
	2A	BIR	Blanking Inversion Red Channel		00		
	2B	BIB	Blanking Inversion Blue Channel		00		
	2C	BLB	Blanking Level Blue Channel		00		
	2D	INT	Refresh Interval		00		
	2E	PKR	Peak Level Red Channel		85		
	2F	PKG	Peak Level Green Channel		85		
	30	PKB	Peak Level Blue Channel		85		
	31	FRY	Frame Color Y		09		
	32	OUT	Output Format		01		
	33	FRU	Frame Color U		00		
	34	FRV	Frame Color V		00		
	35	SAT	Color Saturation Adjustment		09		
	36	YPK	Y Peak Adjustment		03		
	37	YCO	Y Coring Enable		01		
	38	PAL	PAL ID Level		03		
	39	POV	Position Offset Vertical		00		
	3A	POH	Position Offset Horizontal		00		
	3B	VSH	Vertical Shrink		00		
	3C	HSH	H Shrink		00		
	3D	CPL	CLAMPING Pulse Length		01		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)			
Category	No	Name				COMMON	S-INPUT	TV	VIDEO
YCT	00	SHU	Sub Hue Adjustment	TV/Video	CXA2163AQ			0E	12
	01	PNG	PAL/NTSC Gate Width			**01**			
	02	PNI	PAL/NTSC Sensitivity SW			**00**			

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)						
Category	No	Name			COMMON	50TV	50VIDEO	50DVD	60TV	60VIDEO	60DVD
YCT	03	SCL	Sub Color Control	50/60*TV/Video		**05**	**07**		**05**	**07**	
	04	SCT	Sub Contrast Control	50-60*TV/Video		**05**	**08**		**05**	**08**	
	05	SF0	Sharpness Center Frequency Changing		**02**						
	06	SEQ	Sharpness Equalizer Characteristic		**03**						
	07	SHG	Sharpness Gain Control	50/60*TV/Video/DVD		**06**	**07**	**09**	**06**	**07**	**09**
	08	YOL	Y-output Level Control		21						
	09	BSP	Black Stretch Start Point Changing		**00**						

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			COMMON	S-INPUT	TV	VIDEO	DVD	OTHERS
YCT	0A	COL	Cb/Cr Output Level Control	DVD/others					**27**	**1E**
	0B	DCR	DC Restoration Ratio Adjustment		**00**					
	0C	BF0	BPF/TQF F0 Adjustment		**01**					
	0D	BFQ	BPF/TQF Q Adjustment		**02**					
	0E	FSW	BPF/TQF Switch		**01**					
	0F	SDT	SECAM Double Trap Switch		**01**					
	10	LPF	Y/Cb/Cr LPF Switch		**01**					
	11	YDL	Y-DL Time Adjustment	TV/Video/S-input/DVD		**05**	**06**	**05**	**05**	
	12	CMT	Cb/Cr Output Mute Switch		**00**					
	13	B01	Cb Offset1 Adjustment (main route)		**07**					
	14	RO1	Cr Offset1 Adjustment		**07**					
	15	CDF	V Count Down Frequency Switch	forced 50Hz for no signal	**00**					
	16	CDM	V Count Down Judge Switch		**00**					
	17	AFC	AFC Sensitivity Switch	(TV/)Video/DVD				**00**	**00**	
	18	MVM	Macrovision Mask + AFC Mask		**01**					
	19	SRY	SECAM R-Y Black Adjustment		**07**					
	1A	SBY	SECAM B-Y Black Adjustment		**01**					
	1B	BEL	SECAM BELL/HPF Switching		**02**					
	1C	BLF	BELL f0 Adjustment		**00**					
	1D	SVI	SECAM V-ID Switch		**00**					
	1E	SGP	SECAM Gate Position Adjustment		**00**					
	1F	SID	SECAM Sensitivity Switch	except SECAM	**01**					
	20	SIH	SECAM Inhibition Switch		**00**					
	21	STP	Y Black Level Setup for PAL plus		**00**					
	22	ASW	Auto Video Select Mode SW		**01**					
	23	WSH	Sharpness Gain Step for noise reduction		**00**					
	24	WCO	Cb/Cr Output Level Step for noise reduction		**00**					
	25	CB2	Cb2 offset adjustment (YCbCr2 input)		**07**					
	26	CR2	Cr2 offset adjustment (YCbCr2 input)		**07**					
	27	HPH	HS Output phase switch		**00**					
	28	VPH	Switch for VP output phase		**00**					
	29	NCM	NTSC COMB		**00**					

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)		
Category	No	Name				COMMON	NTSC	OTHERS
TE	00	NR0	NR	NTSC/Others	DTE		**01**	**01**
	01	TC0	TE Coring	NTSC/Others			**05**	**05**
	02	TG0	TE Gain	NTSC/Others			**05**	**05**
	03	STH	Forced TE bypass 1:TE bypass			**00**		
	04	COF	Color Component OFF 1:OFF (512)			**00**		
	05	YOF	Luminance Component OFF 1:OFF			**00**		
	06	VJR	V jitter control 0:ON 1:SP1 2:SP2 3:SP2			**00**		
	07	TOF	TE OFF 1:TE OFF			**00**		
	08	DOF	Dot NR OFF 1:Dot NR OFF			**00**		
	09	FOF	TE LPF OFF 1:LPF OFF			**01**		
	0A	CTH	Color TE OFF 1:OFF			**00**		
	0B	PSL	TE Parameter Selection			**02**		
	0C	CLP	Input Clamp Level			**08**		
	0D	CL2	Output Clamp Level			**00**		
	0E	LA1	Level depend Gain (+, White)			**00**		
	0F	LA2	Level depend Gain (+, Black)			**01**		
	10	LA3	Level depend Gain (-, White)			**0F**		
	11	LA4	Level depend Gain (-, Black)			**01**		
	12	CRW	TE Y/C compensation ratio			**04**		
	13	YCD	TE Y/C output delay adjustment			**04**		
NR	00	DMO	NR Demo Mode ON/OFF (1=Demo Mode)		DTE	**00**		
	01	THV	Offset of Noise Threshold level for vertical direction			**03**		
	02	THH	Offset of level Threshold level for horizontal direction			**11**		
	03	BLL	Offset of Level detection for Black Level			**07**		
	04	CST	Offset of Level detection for Color Level			**07**		
	05	THC	Offset of Edge Detection Threshold			**09**		
	06	NRF	NR0 always Rank = 0			**00**		
	07	DIG	A/D In or Digital In (1=Digital In)			**00**		
TXT	00	TXH	Teletext Horizontal Position		SAA5261	**00**		
	01	TXV	Teletext Vertical Position			**00**		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)		
Category	No	Name				COMMON	NTSC	Others
OPM	00	OSH	OSD H Position	Option - Misc	CXP750097	0F		
	01	COM	Selection (0: None, 1:NTSC, 2:Multi, 3:3D) [NON-DTE]/(0:None, 1:Multi, 2:3D, 3: None)[DTE]			**02**		
	02	APC	APC Switch			**01**		
	03	TSY	TV Sys at Auto TV Sys			**00**		
	04	MUT	No Signal Mute			**00**		
	05	AFM	Auto FM switch			**01**		
	06	RFB	C-BPF Control			**00**		
	07	TVO	Tilt to V-Angle offset			**01**		
	08	DBL	Disable Blueback Function			**00**		
	09	SSO	Speed Search Option (0: Off, 1: 4x, 2: 6x, 3:8x)			**01**		
	0A	SCH	CH Selection for Shipping Condition	NTSC Models only		**01**		
	0B	SCA	Cable/Air selection for shipping condition	NTSC Models only		**01**		
	0C	POR	Power On Reset Dectection From YCT			**00**		
	0D	NRC	N-Det Counter for PICSI			**1F**		
	0E	RUC	RF Signal Change Counter after Unlocked			**04**		
	0F	RLC	RF Signal Change Counter after Locked			**01**		
	10	BYP	DTE ON/OFF Blanking			**00**		
OPB	00	OP1	Optional Bits 1 (see page 28)	Option - Bits	CXP750097	**EF**		
	01	OP2	Optional Bits 2 (see page 28)			**67**		
	02	OP3	Optional Bits 3 (see page 28)			**F1**		
	03	OP4	Optional Bits 4 (see page 28)			**97**		

NOTE
- shaded items are fixed data.
- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory. In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

Adjustment Item Table (KV-AR25M66 (GE) ONLY)

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)					
Category	No	Name				Common	50NC	60NC	50VC	60VC	Soft bsw
GEO	00	HPS	H Position	Normal (50/60)/Wide (50/60)	CXA2159S		1E	1E	1E	1E	
	01	HSZ	H Size	Normal (50/60)/Wide (50/60)			25	25	25	25	
	02	PAP	Pin Amp	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	03	TLT	Trapezium	Normal (50/60)/Wide (50/60)			07	07	07	07	
	04	VPS	V Position	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	05	VSZ	V Size	Normal (50/60)/Wide (50/60)			0F	0F	07	07	
	06	SCO	S Correction	Normal (50/60)/Wide (50/60)			07	07	07	07	
	07	VLN	V Linearity	Normal (50/60)/Wide (50/60)			07	07	07	07	
	08	BOW	AFC Bow	Normal (50/60)/Wide (50/60)			07	07	07	07	
	09	AGL	AFC Angle	Normal (50/60)/Wide (50/60)			07	07	07	07	
	0A	UPN	Upper Pin	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	0B	LPN	Lower Pin	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	0C	HBL	H Blanking on/off			**01**					
	0D	LBL	Left H Blanking	Normal (50/60)/Wide (50/60)			**0A**	**0F**	**0A**	**0F**	
	0E	RBL	Right H Blanking	Normal (50/60)/Wide (50/60)			**02**	**02**	**02**	**02**	

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)				
Category	No	Name				Common	SECAM	Others	Dynamic	Others
WHB	00	RDR	R Drive	DYNAMIC/others	CXA2159S				**25**	**2A**
	01	GDR	G Drive	DYNAMIC/others					25	25
	02	BDR	B Drive	DYNAMIC/others					25	25
	03	RCT	R Cutoff	SECAM/others			**07**	**07**		
	04	GCT	G Cutoff	SECAM/others			07	07		
	05	BCT	B Cutoff	SECAM/others			07	07		
	06	BMN	Brightness Minimum Data			**15**				
	07	SBR	Sub Brightness Control			25				
	08	APB	Sub Bright Control Switch for Intelligent Picture #3			**00**				

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)							
Category	No	Name				NC	VC	NTSCNC	OTHERSNC	NTSCVC	OTHERSVC	TV	Video
SAJ	00	PMX	Picture Maximum Data	non-Wide/Wide	CXA2159S	**33**	**2E**						
	01	SHU	Sub Hue Control	TV/Video								07	07
	02	SSH	Sub Sharpness Control	TV/Wide								**04**	**09**
	03	SCL	Sub Color Control	(NTSC/others)/WIDE(NTSC/others)				23	21	20	1E		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)								
Category	No	Name				Common	50NC	60NC	50VC	60VC	NTSC NON-STD	OTHERS NON-STD	NTSC STD	OTHERS STD
VP	00	EHT	EHT Comp	Normal(50/60)/Wide(50/60)	CXA2159S		**02**	**02**	**02**	**02**				
	01	GMA	Gamma Correction (separated in STANDARD mode)	NON-STD.(NTSC/others)/STD.(NTSC/others)							**02**	**02**	**01**	**01**
	02	APG	Gamma Control Switch for Intelligent Picture #3	NON-STD.(NTSC/others)/STD.(NTSC/others)							**00**	**00**	**00**	**00**

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			Common	SECAM	NTSC	PAL	DVD	TEXT
VP	03	YDL	Y Delay	PAL/SECAM/NTSC/DVD		**00**	**00**	**00**	**00**	
	04	SST	SECAM ID Start Position	SECAM&ATUTO/FORCED-PAL&NTSC		**01**		**01**		
	05	SSP	SECAM ID Stop Position	SECAM&ATUTO/FORCED-PAL&NTSC		**01**		**01**		
	06	RLM	RGB Limit		**00**					
	07	SLV	SECAM ID Level	SECAM&ATUTO/FORCED-PAL&NTSC		**02**		**02**		
	08	SBF	SECAM BELL for	SECAM&ATUTO/FORCED-PAL&NTSC		**22**		**22**		

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			Common	NTSC	Others	TV	Video	TEXT
VP	09	DYC	Dynamic Color on/off		**01**					
	0A	ABL	ABL Mode Switching (except STANDARD mode)	except STANDARD	**01**					
	0B	VTH	ABL Detection Vth Switching		**01**					
	0C	SF0	FO Switching for Sharpness	NTSC/others		**01**	**01**			
	0D	DCX	DC Trans. Ratio Switching		**01**					
	0E	SHT	Pre-/Overshoot ratio Switch	NTSC/others		**01**	**01**			
	0F	HDW	H Drive Pulse Width Switch		**00**					
	10	AFC	AFC Gain Control	TV/Video/Text				**01**	**00**	**01**
	11	HOS	H Oscillation		07					
	12	HSS	Slice Level of H Sync Sep.		**00**					
	13	VSS	Slice Level of V Sync Sep.		**00**					

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)								
Category	No	Name			Common	50NC	60NC	50VC	60VC	NTSCNC	OTHERSNC	NTSCVC	OTHERSVC
VP	14	HMS	Macro Vision C/m off/on	Normal(50/60)/Wide(50/60)		**01**	**01**	**01**	**01**				
	15	YUV	Y SEL		**00**								
	16	CDV	CD mode for Video and RF under no signal	video only	**01**								
	17	RON	R ON	not memorized	**01**								
	18	GON	G ON	not memorized	**01**								
	19	BON	B ON	not memorized	**01**								
	1A	PON	P ON	not memorized	**01**								
	1B	AXN	AXIS SW	(NTSC/others)/Wide(NTSC/others)[only DYNA]						**01**	**01**	**01**	**01**
	1C	RSL	RGB SEL		**00**								
	1D	VBW	VBLKW		**00**								
	1E	RFP	REFP		**00**								
	1F	VMC	VM Level		**00**								
	20	CBF	Chroma Bandpass Filter		**01**								
	21	CTO	Chroma Trap Off		**01**								

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)						
Category	No	Name			Common	Dynamic	Standard/Drama	Hi-Fine/Soft	Dyna bsw	Drama bsw	Soft bsw
AP2	00	BBS	Bass Boost Level Setting		**03**						
	01	BCB	Boost cut select for Sub Bass Control		**00**						
	02	SBS	Sub Bass Level Setting		**00**						
	03	BCT	Boost cut select for Sub Treble Control		**00**						
	04	STS	Sub Treble Level Setting		**00**						
	05	AGL	AGC Level Setting		**00**						
	06	BSW	Bass Boost ON/OFF Switch		**00**						
	07	BAS	Bass sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**13**	**01**	**01**	11	03	03
	08	TRE	Treble sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**01**	**01**	**07**	14	14	02
	09	BBE	BBE Sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**90**	**7F**	**00**	89	6C	00

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)
Category	No	Name				Common
MSP	00	WST	W/G Stereo Threshold		MSP3415D	**15**
	01	WBT	W/G Bilingual Threshold			**EC**
	02	WLL	W/G Monaural Threshold			**05**
	03	WAC	W/G Agreement Count			**01**
	04	WDL	W/G Search Delay			**30**
	05	NDL	NICAM Search Delay			**20**
	06	SDL	Stereo status Read Delay			**10**
	07	AGC	AGC Switch Auto/Constant			**01**
	08	REL	AGC Gain at Constant Mode			**28**
	09	CRM	Carrier muting on/off			**00**
	0A	ACO	Audio Clock out on/off			**01**
	0B	FP	FM Prescale for non-M system			**1B**
	0C	FPM	FM Prescale for M system			**32**
	0D	FH	FM Prescale for HDEV			**36**
	0E	FHM	FM Prescale for HDEV and M			**65**
	0F	WGP	W/G Prescale			**1C**
	10	NIP	NICAM Prescale			**7F**
	11	ERR	Auto FM switch Threshold			**50**
	12	VOL	Loud Speaker gain 7000h to 7ff0h			**6D**

TVG	Functionality		Function	Device Name	Initial Value (Detailed)
Category	No	Name			Common
PIP	00	PRO	Progreeive Scan Mode Enable	SDA9288X	00
	01	RED	Read Double Mode		00
	02	FEI	Field Select		00
	03	HPS	Horizontal Picture Position		33
	04	VPS	Vertical Picture Position		1B
	05	HFP	Horizontal Fine Positioning		08
	06	VFP	Vertical Fine Positioning		00
	07	DIS	Display standard		00
	08	HOS	Horizontal Size		00
	09	VES	Vertical Size		00
	0A	FPS	Force Parent Standard		00
	0B	HZM	Horizontal Zoom		00
	0C	VSP	Vertical Sync Pule Noise Reduction		01
	0D	VDL	Vertical Sync Pulse Delay		00
	0E	FRH	Frame Width Horizontal		05
	0F	FWV	Frame Width Vertical		02
	10	VRD	Reduction		00
	11	VBK	Vertical Blanking		00
	12	DLY	Select Delay		01
	13	PCR	Position Correction		00
	14	AGM	AGC Mode		03
	15	AGC	Automatic Gain Control Value		09
	16	CVB	CVBS Select		00
	17	CPD	CLAMPING Duration		01
	18	CPT	CLAMPING Pulse start		01
	19	LUM	Luminance offset		00

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			SECAM	NTSC	PAL	TV	Video	DVD
PIP	1A	PLL	Insert PLL Time Constant	TV/Video				00	00	
	1B	YCD	Y/C Delay	PAL/SECAM/NTSC/DVD	08	08	08			08
	1C	NSR	Noise Reduction for inset PII	TV/Video				00	00	

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)		
Category	No	Name			Common	50	60
PIP	1D	LSP	Standard Identification Speed		**00**		
	1E	KIL	Color Killer Threshold		**02**		
	1F	BGP	Burst Gate Position		**01**		
	20	SEC	SECAM Identification Level		**01**		
	21	DEM	Deemphasw selection		**01**		
	22	CMA	Chroma Bandwith		**00**		
	23	IFC	IF Compensation Filter		**02**		
	24	HUE	Hue		**00**		
	25	SCA	Color Subcarrier Adjustment		**06**		
	26	CON	Contrast Adjustment		**00**		
	27	BLR	Blanking Level Red Channel		**00**		
	28	BRT	Brightness Adjustment		**03**		
	29	BLG	Blanking Level Green Channel		**00**		
	2A	BIR	Blanking Inversion Red Channel		**00**		
	2B	BIB	Blanking Inversion Blue Channel		**00**		
	2C	BLB	Blanking Level Blue Channel		**00**		
	2D	INT	Refresh Interval		**00**		
	2E	PKR	Peak Level Red Channel		**85**		
	2F	PKG	Peak Level Green Channel		**85**		
	30	PKB	Peak Level Blue Channel		**85**		
	31	FRY	Frame Color Y		**09**		
	32	OUT	Output Format		**01**		
	33	FRU	Frame Color U		**00**		
	34	FRV	Frame Color V		**00**		
	35	SAT	Color Saturation Adjustment		**09**		
	36	YPK	Y Peak Adjustment		**03**		
	37	YCO	Y Coring Enable		**01**		
	38	PAL	PAL ID Level		**03**		
	39	POV	Position Offset Vertical		**00**		
	3A	POH	Position Offset Horizontal		**00**		
	3B	VSH	Vertical Shrink		**00**		
	3C	HSH	H Shrink		**00**		
	3D	CPL	CLAMPING Pulse Length		**01**		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)			
Category	No	Name				COMMON	S-INPUT	TV	VIDEO
YCT	00	SHU	Sub Hue Adjustment	TV/Video	CXA2163AQ			0E	12
	01	PNG	PAL/NTSC Gate Width			**01**			
	02	PNI	PAL/NTSC Sensitivity SW			**00**			

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)						
Category	No	Name			COMMON	50TV	50VIDEO	50DVD	60TV	60VIDEO	60DVD
YCT	03	SCL	Sub Color Control	50/60*TV/Video		**05**	**07**		**05**	**07**	
	04	SCT	Sub Contrast Control	50-60*TV/Video		**05**	**08**		**05**	**08**	
	05	SF0	Sharpness Center Frequency Changing		**02**						
	06	SEQ	Sharpness Equalizer Characteristic		**03**						
	07	SHG	Sharpness Gain Control	50/60*TV/Video/DVD		**06**	**07**	**09**	**06**	**07**	**09**
	08	YOL	Y-output Level Control		21						
	09	BSP	Black Stretch Start Point Changing		**00**						

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			COMMON	S-INPUT	TV	VIDEO	DVD	OTHERS
YCT	0A	COL	Cb/Cr Output Level Control	DVD/others					**27**	**1E**
	0B	DCR	DC Restoration Ratio Adjustment		**00**					
	0C	BF0	BPF/TQF F0 Adjustment		**01**					
	0D	BFQ	BPF/TQF Q Adjustment		**02**					
	0E	FSW	BPF/TQF Switch		**01**					
	0F	SDT	SECAM Double Trap Switch		**01**					
	10	LPF	Y/Cb/Cr LPF Switch		**01**					
	11	YDL	Y-DL Time Adjustment	TV/Video/S-input/DVD		**05**	**06**	**05**	**05**	
	12	CMT	Cb/Cr Output Mute Switch		**00**					
	13	B01	Cb Offset1 Adjustment (main route)		**07**					
	14	RO1	Cr Offset1 Adjustment		**07**					
	15	CDF	V Count Down Frequency Switch	forced 50Hz for no signal	**00**					
	16	CDM	V Count Down Judge Switch		**00**					
	17	AFC	AFC Sensitivity Switch	(TV/)Video/DVD				**00**	**00**	
	18	MVM	Macrovision Mask + AFC Mask		**01**					
	19	SRY	SECAM R-Y Black Adjustment		**07**					
	1A	SBY	SECAM B-Y Black Adjustment		**01**					
	1B	BEL	SECAM BELL/HPF Switching		**02**					
	1C	BLF	BELL f0 Adjustment		**00**					
	1D	SVI	SECAM V-ID Switch		**00**					
	1E	SGP	SECAM Gate Position Adjustment		**00**					
	1F	SID	SECAM Sensitivity Switch	except SECAM	**01**					
	20	SIH	SECAM Inhibition Switch		**00**					
	21	STP	Y Black Level Setup for PAL plus		**00**					
	22	ASW	Auto Video Select Mode SW		**01**					
	23	WSH	Sharpness Gain Step for noise reduction		**00**					
	24	WCO	Cb/Cr Output Level Step for noise reduction		**00**					
	25	CB2	Cb2 offset adjustment (YCbCr2 input)		**07**					
	26	CR2	Cr2 offset adjustment (YCbCr2 input)		**07**					
	27	HPH	HS Output phase switch		**00**					
	28	VPH	Switch for VP output phase		**00**					
	29	NCM	NTSC COMB		**00**					

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)		
Category	No	Name				COMMON	NTSC	OTHERS
TE	00	NR0	NR	NTSC/Others	DTE		**01**	**01**
	01	TC0	TE Coring	NTSC/Others			**05**	**05**
	02	TG0	TE Gain	NTSC/Others			**05**	**05**
	03	STH	Forced TE bypass 1:TE bypass			**00**		
	04	COF	Color Component OFF 1:OFF (512)			**00**		
	05	YOF	Luminance Component OFF 1:OFF			**00**		
	06	VJR	V jitter control 0:ON 1:SP1 2:SP2 3:SP2			**00**		
	07	TOF	TE OFF 1:TE OFF			**00**		
	08	DOF	Dot NR OFF 1:Dot NR OFF			**00**		
	09	FOF	TE LPF OFF 1:LPF OFF			**01**		
	0A	CTH	Color TE OFF 1:OFF			**00**		
	0B	PSL	TE Parameter Selection			**02**		
	0C	CLP	Input Clamp Level			**08**		
	0D	CL2	Output Clamp Level			**00**		
	0E	LA1	Level depend Gain (+, White)			**00**		
	0F	LA2	Level depend Gain (+, Black)			**01**		
	10	LA3	Level depend Gain (-, White)			**0F**		
	11	LA4	Level depend Gain (-, Black)			**01**		
	12	CRW	TE Y/C compensation ratio			**04**		
	13	YCD	TE Y/C output delay adjustment			**04**		
NR	00	DMO	NR Demo Mode ON/OFF (1=Demo Mode)		DTE	**00**		
	01	THV	Offset of Noise Threshold level for vertical direction			**03**		
	02	THH	Offset of level Threshold level for horizontal direction			**11**		
	03	BLL	Offset of Level detection for Black Level			**07**		
	04	CST	Offset of Level detection for Color Level			**07**		
	05	THC	Offset of Edge Detection Threshold			**09**		
	06	NRF	NR0 always Rank = 0			**00**		
	07	DIG	A/D In or Digital In (1=Digital In)			**00**		
TXT	00	TXH	Teletext Horizontal Position		SAA5261	**00**		
	01	TXV	Teletext Vertical Position			**00**		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)		
Category	No	Name				COMMON	NTSC	Others
OPM	00	OSH	OSD H Position	Option - Misc	CXP750097	0F		
	01	COM	Selection (0: None, 1:NTSC, 2:Multi, 3:3D) [NON-DTE]/(0:None, 1:Multi, 2:3D, 3: None)[DTE]			**01**		
	02	APC	APC Switch			**01**		
	03	TSY	TV Sys at Auto TV Sys			**00**		
	04	MUT	No Signal Mute			**00**		
	05	AFM	Auto FM switch			**01**		
	06	RFB	C-BPF Control			**00**		
	07	TVO	Tilt to V-Angle offset			**01**		
	08	DBL	Disable Blueback Function			**00**		
	09	SSO	Speed Search Option (0: Off, 1: 4x, 2: 6x, 3:8x)			**01**		
	0A	SCH	CH Selection for Shipping Condition	NTSC Models only		**01**		
	0B	SCA	Cable/Air selection for shipping condition	NTSC Models only		**01**		
	0C	POR	Power On Reset Dectection From YCT			**00**		
	0D	NRC	N-Det Counter for PICSI			**1F**		
	0E	RUC	RF Signal Change Counter after Unlocked			**04**		
	0F	RLC	RF Signal Change Counter after Locked			**01**		
	10	BYP	DTE ON/OFF Blanking			**00**		
OPB	00	OP1	Optional Bits 1 (see page 28)	Option - Bits	CXP750097	**EF**		
	01	OP2	Optional Bits 2 (see page 28)			**67**		
	02	OP3	Optional Bits 3 (see page 28)			**F1**		
	03	OP4	Optional Bits 4 (see page 28)			**97**		

NOTE
- shaded items are fixed data.
- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory. In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

Adjustment Item Table (KV-AR25N90 (PHILIPPINES))

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)					
Category	No	Name				Common	50NC	60NC	50VC	60VC	Soft bsw
GEO	00	HPS	H Position	Normal (50/60)/Wide (50/60)	CXA2159S		12	0A	12	0A	
	01	HSZ	H Size	Normal (50/60)/Wide (50/60)			25	25	25	25	
	02	PAP	Pin Amp	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	03	TLT	Trapezium	Normal (50/60)/Wide (50/60)			07	07	07	07	
	04	VPS	V Position	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	05	VSZ	V Size	Normal (50/60)/Wide (50/60)			0F	0F	07	07	
	06	SCO	S Correction	Normal (50/60)/Wide (50/60)			07	07	07	07	
	07	VLN	V Linearity	Normal (50/60)/Wide (50/60)			07	07	07	07	
	08	BOW	AFC Bow	Normal (50/60)/Wide (50/60)			07	07	07	07	
	09	AGL	AFC Angle	Normal (50/60)/Wide (50/60)			07	07	07	07	
	0A	UPN	Upper Pin	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	0B	LPN	Lower Pin	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	0C	HBL	H Blanking on/off			**01**					
	0D	LBL	Left H Blanking	Normal (50/60)/Wide (50/60)			**0A**	**0F**	**0A**	**0F**	
	0E	RBL	Right H Blanking	Normal (50/60)/Wide (50/60)			**02**	**02**	**02**	**02**	

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)				
Category	No	Name				Common	SECAM	Others	Dynamic	Others
WHB	00	RDR	R Drive	DYNAMIC/others	CXA2159S				**25**	**2A**
	01	GDR	G Drive	DYNAMIC/others					25	25
	02	BDR	B Drive	DYNAMIC/others					25	25
	03	RCT	R Cutoff	SECAM/others			**07**	**07**		
	04	GCT	G Cutoff	SECAM/others			07	07		
	05	BCT	B Cutoff	SECAM/others			07	07		
	06	BMN	Brightness Minimum Data			**15**				
	07	SBR	Sub Brightness Control			25				
	08	APB	Sub Bright Control Switch for Intelligent Picture #3			**03**				

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)							
Category	No	Name				NC	VC	NTSCNC	OTHERSNC	NTSCVC	OTHERSVC	TV	Video
SAJ	00	PMX	Picture Maximum Data	non-Wide/Wide	CXA2159S	**32**	**2D**						
	01	SHU	Sub Hue Control	TV/Video								07	07
	02	SSH	Sub Sharpness Control	TV/Wide								**05**	**09**
	03	SCL	Sub Color Control	(NTSC/others)/WIDE(NTSC/others)				23	21	20	1E		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)								
Category	No	Name				Common	50NC	60NC	50VC	60VC	NTSC NON-STD	OTHERS NON-STD	NTSC STD	OTHERS STD
VP	00	EHT	EHT Comp	Normal(50/60)/Wide(50/60)	CXA2159S		**02**	**02**	**02**	**02**				
	01	GMA	Gamma Correction (separated in STANDARD mode)	NON-STD.(NTSC/others)/STD.(NTSC/others)							**02**	**02**	**01**	**01**
	02	APG	Gamma Control Switch for Intelligent Picture #3	NON-STD.(NTSC/others)/STD.(NTSC/others)							**00**	**00**	**00**	**00**

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			Common	SECAM	NTSC	PAL	DVD	TEXT
VP	03	YDL	Y Delay	PAL/SECAM/NTSC/DVD		**09**	**08**	**06**	**08**	
	04	SST	SECAM ID Start Position	SECAM&ATUTO/FORCED-PAL&NTSC		**01**		**01**		
	05	SSP	SECAM ID Stop Position	SECAM&ATUTO/FORCED-PAL&NTSC		**01**		**01**		
	06	RLM	RGB Limit		**00**					
	07	SLV	SECAM ID Level	SECAM&ATUTO/FORCED-PAL&NTSC		**02**		**02**		
	08	SBF	SECAM BELL for	SECAM&ATUTO/FORCED-PAL&NTSC		**22**		**22**		

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			Common	NTSC	Others	TV	Video	TEXT
VP	09	DYC	Dynamic Color on/off		**01**					
	0A	ABL	ABL Mode Switching (except STANDARD mode)	except STANDARD	**01**					
	0B	VTH	ABL Detection Vth Switching		**01**					
	0C	SF0	FO Switching for Sharpness	NTSC/others		**01**	**01**			
	0D	DCX	DC Trans. Ratio Switching		**01**					
	0E	SHT	Pre-/Overshoot ratio Switch	NTSC/others		**01**	**01**			
	0F	HDW	H Drive Pulse Width Switch		**00**					
	10	AFC	AFC Gain Control	TV/Video/Text				**01**	**00**	**01**
	11	HOS	H Oscillation		07					
	12	HSS	Slice Level of H Sync Sep.		**00**					
	13	VSS	Slice Level of V Sync Sep.		**00**					

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)								
Category	No	Name			Common	50NC	60NC	50VC	60VC	NTSCNC	OTHERSNC	NTSCVC	OTHERSVC
VP	14	HMS	Macro Vision C/m off/on	Normal(50/60)/Wide(50/60)		**01**	**01**	**01**	**01**				
	15	YUV	Y SEL		**00**								
	16	CDV	CD mode for Video and RF under no signal	video only	**01**								
	17	RON	R ON	not memorized	**01**								
	18	GON	G ON	not memorized	**01**								
	19	BON	B ON	not memorized	**01**								
	1A	PON	P ON	not memorized	**01**								
	1B	AXN	AXIS SW	(NTSC/others)/Wide(NTSC/others)[only DYNA]						**01**	**01**	**01**	**01**
	1C	RSL	RGB SEL		**00**								
	1D	VBW	VBLKW		**00**								
	1E	RFP	REFP		**00**								
	1F	VMC	VM Level		**00**								
	20	CBF	Chroma Bandpass Filter		**01**								
	21	CTO	Chroma Trap Off		**01**								

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)						
Category	No	Name			Common	Dynamic	Standard/Drama	Hi-Fine/Soft	Dyna bsw	Drama bsw	Soft bsw
AP2	00	BBS	Bass Boost Level Setting		**03**						
	01	BCB	Boost cut select for Sub Bass Control		**00**						
	02	SBS	Sub Bass Level Setting		**00**						
	03	BCT	Boost cut select for Sub Treble Control		**00**						
	04	STS	Sub Treble Level Setting		**00**						
	05	AGL	AGC Level Setting		**00**						
	06	BSW	Bass Boost ON/OFF Switch		**00**						
	07	BAS	Bass sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**13**	**01**	**01**	11	03	03
	08	TRE	Treble sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**01**	**01**	**07**	14	14	02
	09	BBE	BBE Sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**9D**	**7F**	**00**	89	6C	00

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)
Category	No	Name				Common
MSP	00	WST	W/G Stereo Threshold		MSP3415D	**15**
	01	WBT	W/G Bilingual Threshold			**EC**
	02	WLL	W/G Monaural Threshold			**05**
	03	WAC	W/G Agreement Count			**01**
	04	WDL	W/G Search Delay			**30**
	05	NDL	NICAM Search Delay			**20**
	06	SDL	Stereo status Read Delay			**10**
	07	AGC	AGC Switch Auto/Constant			**01**
	08	REL	AGC Gain at Constant Mode			**28**
	09	CRM	Carrier muting on/off			**00**
	0A	ACO	Audio Clock out on/off			**01**
	0B	FP	FM Prescale for non-M system			**1B**
	0C	FPM	FM Prescale for M system			**32**
	0D	FH	FM Prescale for HDEV			**36**
	0E	FHM	FM Prescale for HDEV and M			**65**
	0F	WGP	W/G Prescale			**1C**
	10	NIP	NICAM Prescale			**7F**
	11	ERR	Auto FM switch Threshold			**50**
	12	VOL	Loud Speaker gain 7000h to 7ff0h			**6D**

TVG	Functionality		Function	Device Name	Initial Value (Detailed)
Category	No	Name			Common
PIP	00	PRO	Progreeive Scan Mode Enable	SDA9288X	**00**
	01	RED	Read Double Mode		**00**
	02	FEI	Field Select		**00**
	03	HPS	Horizontal Picture Position		**33**
	04	VPS	Vertical Picture Position		**1B**
	05	HFP	Horizontal Fine Positioning		**08**
	06	VFP	Vertical Fine Positioning		**00**
	07	DIS	Display standard		**00**
	08	HOS	Horizontal Size		**00**
	09	VES	Vertical Size		**00**
	0A	FPS	Force Parent Standard		**00**
	0B	HZM	Horizontal Zoom		**00**
	0C	VSP	Vertical Sync Pule Noise Reduction		**01**
	0D	VDL	Vertical Sync Pulse Delay		**00**
	0E	FRH	Frame Width Horizontal		**05**
	0F	FWV	Frame Width Vertical		**02**
	10	VRD	Reduction		**00**
	11	VBK	Vertical Blanking		**00**
	12	DLY	Select Delay		**01**
	13	PCR	Position Correction		**00**
	14	AGM	AGC Mode		**03**
	15	AGC	Automatic Gain Control Value		**09**
	16	CVB	CVBS Select		**00**
	17	CPD	CLAMPING Duration		**01**
	18	CPT	CLAMPING Pulse start		**01**
	19	LUM	Luminance offset		**00**

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			SECAM	NTSC	PAL	TV	Video	DVD
PIP	1A	PLL	Insert PLL Time Constant	TV/Video				**00**	**00**	
	1B	YCD	Y/C Delay	PAL/SECAM/NTSC/DVD	**08**	**08**	**08**			**08**
	1C	NSR	Noise Reduction for inset PII	TV/Video				**00**	**00**	

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)		
Category	No	Name			Common	50	60
PIP	1D	LSP	Standard Identification Speed		00		
	1E	KIL	Color Killer Threshold		02		
	1F	BGP	Burst Gate Position		01		
	20	SEC	SECAM Identification Level		01		
	21	DEM	Deemphasw selection		01		
	22	CMA	Chroma Bandwith		00		
	23	IFC	IF Compensation Filter		02		
	24	HUE	Hue		00		
	25	SCA	Color Subcarrier Adjustment		06		
	26	CON	Contrast Adjustment		00		
	27	BLR	Blanking Level Red Channel		00		
	28	BRT	Brightness Adjustment		03		
	29	BLG	Blanking Level Green Channel		00		
	2A	BIR	Blanking Inversion Red Channel		00		
	2B	BIB	Blanking Inversion Blue Channel		00		
	2C	BLB	Blanking Level Blue Channel		00		
	2D	INT	Refresh Interval		00		
	2E	PKR	Peak Level Red Channel		85		
	2F	PKG	Peak Level Green Channel		85		
	30	PKB	Peak Level Blue Channel		85		
	31	FRY	Frame Color Y		09		
	32	OUT	Output Format		01		
	33	FRU	Frame Color U		00		
	34	FRV	Frame Color V		00		
	35	SAT	Color Saturation Adjustment		09		
	36	YPK	Y Peak Adjustment		03		
	37	YCO	Y Coring Enable		01		
	38	PAL	PAL ID Level		03		
	39	POV	Position Offset Vertical		00		
	3A	POH	Position Offset Horizontal		00		
	3B	VSH	Vertical Shrink		00		
	3C	HSH	H Shrink		00		
	3D	CPL	CLAMPING Pulse Length		01		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)			
Category	No	Name				COMMON	S-INPUT	TV	VIDEO
YCT	00	SHU	Sub Hue Adjustment	TV/Video	CXA2163AQ			0E	12
	01	PNG	PAL/NTSC Gate Width			**01**			
	02	PNI	PAL/NTSC Sensitivity SW			**00**			

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)						
Category	No	Name			COMMON	50TV	50VIDEO	50DVD	60TV	60VIDEO	60DVD
YCT	03	SCL	Sub Color Control	50/60*TV/Video		**05**	**07**		**05**	**07**	
	04	SCT	Sub Contrast Control	50-60*TV/Video		**05**	**08**		**05**	**08**	
	05	SF0	Sharpness Center Frequency Changing		**02**						
	06	SEQ	Sharpness Equalizer Characteristic		**03**						
	07	SHG	Sharpness Gain Control	50/60*TV/Video/DVD		**06**	**07**	**09**	**06**	**07**	**09**
	08	YOL	Y-output Level Control		21						
	09	BSP	Black Stretch Start Point Changing		**00**						

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			COMMON	S-INPUT	TV	VIDEO	DVD	OTHERS
YCT	0A	COL	Cb/Cr Output Level Control	DVD/others					**27**	**1E**
	0B	DCR	DC Restoration Ratio Adjustment		**00**					
	0C	BF0	BPF/TQF F0 Adjustment		**01**					
	0D	BFQ	BPF/TQF Q Adjustment		**02**					
	0E	FSW	BPF/TQF Switch		**01**					
	0F	SDT	SECAM Double Trap Switch		**01**					
	10	LPF	Y/Cb/Cr LPF Switch		**01**					
	11	YDL	Y-DL Time Adjustment	TV/Video/S-input/DVD		**05**	**06**	**05**	**05**	
	12	CMT	Cb/Cr Output Mute Switch		**00**					
	13	B01	Cb Offset1 Adjustment (main route)		**07**					
	14	RO1	Cr Offset1 Adjustment		**07**					
	15	CDF	V Count Down Frequency Switch	forced 50Hz for no signal	**00**					
	16	CDM	V Count Down Judge Switch		**00**					
	17	AFC	AFC Sensitivity Switch	(TV/)Video/DVD				**00**	**00**	
	18	MVM	Macrovision Mask + AFC Mask		**01**					
	19	SRY	SECAM R-Y Black Adjustment		**07**					
	1A	SBY	SECAM B-Y Black Adjustment		**01**					
	1B	BEL	SECAM BELL/HPF Switching		**02**					
	1C	BLF	BELL f0 Adjustment		**00**					
	1D	SVI	SECAM V-ID Switch		**00**					
	1E	SGP	SECAM Gate Position Adjustment		**00**					
	1F	SID	SECAM Sensitivity Switch	except SECAM	**01**					
	20	SIH	SECAM Inhibition Switch		**00**					
	21	STP	Y Black Level Setup for PAL plus		**00**					
	22	ASW	Auto Video Select Mode SW		**01**					
	23	WSH	Sharpness Gain Step for noise reduction		**00**					
	24	WCO	Cb/Cr Output Level Step for noise reduction		**00**					
	25	CB2	Cb2 offset adjustment (YCbCr2 input)		**07**					
	26	CR2	Cr2 offset adjustment (YCbCr2 input)		**07**					
	27	HPH	HS Output phase switch		**00**					
	28	VPH	Switch for VP output phase		**00**					
	29	NCM	NTSC COMB		**00**					

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)		
Category	No	Name				COMMON	NTSC	OTHERS
TE	00	NR0	NR	NTSC/Others	DTE		**01**	**01**
	01	TC0	TE Coring	NTSC/Others			**05**	**05**
	02	TG0	TE Gain	NTSC/Others			**05**	**05**
	03	STH	Forced TE bypass 1:TE bypass			**00**		
	04	COF	Color Component OFF 1:OFF (512)			**00**		
	05	YOF	Luminance Component OFF 1:OFF			**00**		
	06	VJR	V jitter control 0:ON 1:SP1 2:SP2 3:SP2			**00**		
	07	TOF	TE OFF 1:TE OFF			**00**		
	08	DOF	Dot NR OFF 1:Dot NR OFF			**00**		
	09	FOF	TE LPF OFF 1:LPF OFF			**01**		
	0A	CTH	Color TE OFF 1:OFF			**00**		
	0B	PSL	TE Parameter Selection			**02**		
	0C	CLP	Input Clamp Level			**08**		
	0D	CL2	Output Clamp Level			**00**		
	0E	LA1	Level depend Gain (+, White)			**00**		
	0F	LA2	Level depend Gain (+, Black)			**01**		
	10	LA3	Level depend Gain (-, White)			**0F**		
	11	LA4	Level depend Gain (-, Black)			**01**		
	12	CRW	TE Y/C compensation ratio			**04**		
	13	YCD	TE Y/C output delay adjustment			**04**		
NR	00	DMO	NR Demo Mode ON/OFF (1=Demo Mode)		DTE	**00**		
	01	THV	Offset of Noise Threshold level for vertical direction			**03**		
	02	THH	Offset of level Threshold level for horizontal direction			**11**		
	03	BLL	Offset of Level detection for Black Level			**07**		
	04	CST	Offset of Level detection for Color Level			**07**		
	05	THC	Offset of Edge Detection Threshold			**09**		
	06	NRF	NR0 always Rank = 0			**00**		
	07	DIG	A/D In or Digital In (1=Digital In)			**00**		
TXT	00	TXH	Teletext Horizontal Position		SAA5261	**00**		
	01	TXV	Teletext Vertical Position			**00**		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)		
Category	No	Name				COMMON	NTSC	Others
OPM	00	OSH	OSD H Position	Option - Misc	CXP750097	0F		
	01	COM	Selection (0: None, 1:NTSC, 2:Multi, 3:3D) [NON-DTE]/(0:None, 1:Multi, 2:3D, 3: None)[DTE]			**01**		
	02	APC	APC Switch			**01**		
	03	TSY	TV Sys at Auto TV Sys			**00**		
	04	MUT	No Signal Mute			**00**		
	05	AFM	Auto FM switch			**01**		
	06	RFB	C-BPF Control			**00**		
	07	TVO	Tilt to V-Angle offset			**01**		
	08	DBL	Disable Blueback Function			**00**		
	09	SSO	Speed Search Option (0: Off, 1: 4x, 2: 6x, 3:8x)			**01**		
	0A	SCH	CH Selection for Shipping Condition	NTSC Models only		**01**		
	0B	SCA	Cable/Air selection for shipping condition	NTSC Models only		**01**		
	0C	POR	Power On Reset Dectection From YCT			**00**		
	0D	NRC	N-Det Counter for PICSI			**1F**		
	0E	RUC	RF Signal Change Counter after Unlocked			**04**		
	0F	RLC	RF Signal Change Counter after Locked			**01**		
	10	BYP	DTE ON/OFF Blanking			**00**		
OPB	00	OP1	Optional Bits 1 (see page 28)	Option - Bits	CXP750097	**E1**		
	01	OP2	Optional Bits 2 (see page 28)			**07**		
	02	OP3	Optional Bits 3 (see page 28)			**E9**		
	03	OP4	Optional Bits 4 (see page 28)			**92**		

NOTE

- shaded items are fixed data.
- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory. In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

Adjustment Item Table (KV-AR25N90 (TAIWAN))

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)					
Category	No	Name				Common	50NC	60NC	50VC	60VC	Soft bsw
GEO	00	HPS	H Position	Normal (50/60)/Wide (50/60)	CXA2159S		12	0A	12	0A	
	01	HSZ	H Size	Normal (50/60)/Wide (50/60)			25	25	25	25	
	02	PAP	Pin Amp	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	03	TLT	Trapezium	Normal (50/60)/Wide (50/60)			07	07	07	07	
	04	VPS	V Position	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	05	VSZ	V Size	Normal (50/60)/Wide (50/60)			0F	0F	07	07	
	06	SCO	S Correction	Normal (50/60)/Wide (50/60)			07	07	07	07	
	07	VLN	V Linearity	Normal (50/60)/Wide (50/60)			07	07	07	07	
	08	BOW	AFC Bow	Normal (50/60)/Wide (50/60)			07	07	07	07	
	09	AGL	AFC Angle	Normal (50/60)/Wide (50/60)			07	07	07	07	
	0A	UPN	Upper Pin	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	0B	LPN	Lower Pin	Normal (50/60)/Wide (50/60)			1F	1F	1F	1F	
	0C	HBL	H Blanking on/off			**01**					
	0D	LBL	Left H Blanking	Normal (50/60)/Wide (50/60)			**0A**	**0F**	**0A**	**0F**	
	0E	RBL	Right H Blanking	Normal (50/60)/Wide (50/60)			**02**	**02**	**02**	**02**	

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)				
Category	No	Name				Common	SECAM	Others	Dynamic	Others
WHB	00	RDR	R Drive	DYNAMIC/others	CXA2159S				**25**	**2A**
	01	GDR	G Drive	DYNAMIC/others					25	25
	02	BDR	B Drive	DYNAMIC/others					25	25
	03	RCT	R Cutoff	SECAM/others			**07**	**07**		
	04	GCT	G Cutoff	SECAM/others			07	07		
	05	BCT	B Cutoff	SECAM/others			07	07		
	06	BMN	Brightness Minimum Data			**15**				
	07	SBR	Sub Brightness Control			25				
	08	APB	Sub Bright Control Switch for Intelligent Picture #3			**03**				

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)							
Category	No	Name				NC	VC	NTSCNC	OTHERSNC	NTSCVC	OTHERSVC	TV	Video
SAJ	00	PMX	Picture Maximum Data	non-Wide/Wide	CXA2159S	**32**	**2D**						
	01	SHU	Sub Hue Control	TV/Video								07	07
	02	SSH	Sub Sharpness Control	TV/Wide								**05**	**09**
	03	SCL	Sub Color Control	(NTSC/others)/WIDE(NTSC/others)				23	21	20	1E		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)								
Category	No	Name				Common	50NC	60NC	50VC	60VC	NTSC NON-STD	OTHERS NON-STD	NTSC STD	OTHERS STD
VP	00	EHT	EHT Comp	Normal(50/60)/Wide(50/60)	CXA2159S		**02**	**02**	**02**	**02**				
	01	GMA	Gamma Correction (separated in STANDARD mode)	NON-STD.(NTSC/others)/STD.(NTSC/others)							**02**	**02**	**01**	**01**
	02	APG	Gamma Control Switch for Intelligent Picture #3	NON-STD.(NTSC/others)/STD.(NTSC/others)							**00**	**00**	**00**	**00**

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			Common	SECAM	NTSC	PAL	DVD	TEXT
VP	03	YDL	Y Delay	PAL/SECAM/NTSC/DVD		**09**	**08**	**06**	**08**	
	04	SST	SECAM ID Start Position	SECAM&ATUTO/FORCED-PAL&NTSC		**01**		**01**		
	05	SSP	SECAM ID Stop Position	SECAM&ATUTO/FORCED-PAL&NTSC		**01**		**01**		
	06	RLM	RGB Limit		**00**					
	07	SLV	SECAM ID Level	SECAM&ATUTO/FORCED-PAL&NTSC		**02**		**02**		
	08	SBF	SECAM BELL for	SECAM&ATUTO/FORCED-PAL&NTSC		**22**		**22**		

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			Common	NTSC	Others	TV	Video	TEXT
VP	09	DYC	Dynamic Color on/off		**01**					
	0A	ABL	ABL Mode Switching (except STANDARD mode)	except STANDARD	**01**					
	0B	VTH	ABL Detection Vth Switching		**01**					
	0C	SF0	FO Switching for Sharpness	NTSC/others		**01**	**01**			
	0D	DCX	DC Trans. Ratio Switching		**01**					
	0E	SHT	Pre-/Overshoot ratio Switch	NTSC/others		**01**	**01**			
	0F	HDW	H Drive Pulse Width Switch		**00**					
	10	AFC	AFC Gain Control	TV/Video/Text				**01**	**00**	**01**
	11	HOS	H Oscillation		07					
	12	HSS	Slice Level of H Sync Sep.		**00**					
	13	VSS	Slice Level of V Sync Sep.		**00**					

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)								
Category	No	Name			Common	50NC	60NC	50VC	60VC	NTSCNC	OTHERSNC	NTSCVC	OTHERSVC
VP	14	HMS	Macro Vision C/m off/on	Normal(50/60)/Wide(50/60)		**01**	**01**	**01**	**01**				
	15	YUV	Y SEL		**00**								
	16	CDV	CD mode for Video and RF under no signal	video only	**01**								
	17	RON	R ON	not memorized	**01**								
	18	GON	G ON	not memorized	**01**								
	19	BON	B ON	not memorized	**01**								
	1A	PON	P ON	not memorized	**01**								
	1B	AXN	AXIS SW	(NTSC/others)/Wide(NTSC/others)[only DYNA]						**01**	**01**	**01**	**01**
	1C	RSL	RGB SEL		**00**								
	1D	VBW	VBLKW		**00**								
	1E	RFP	REFP		**00**								
	1F	VMC	VM Level		**00**								
	20	CBF	Chroma Bandpass Filter		**01**								
	21	CTO	Chroma Trap Off		**01**								

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)						
Category	No	Name			Common	Dynamic	Standard/Drama	Hi-Fine/Soft	Dyna bsw	Drama bsw	Soft bsw
AP2	00	BBS	Bass Boost Level Setting		**03**						
	01	BCB	Boost cut select for Sub Bass Control		**00**						
	02	SBS	Sub Bass Level Setting		**00**						
	03	BCT	Boost cut select for Sub Treble Control		**00**						
	04	STS	Sub Treble Level Setting		**00**						
	05	AGL	AGC Level Setting		**00**						
	06	BSW	Bass Boost ON/OFF Switch		**00**						
	07	BAS	Bass sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**13**	**01**	**01**	11	03	03
	08	TRE	Treble sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**01**	**01**	**07**	14	14	02
	09	BBE	BBE Sound mode Control	{BSW:1/0} * {dyna/drama/soft}		**9D**	**7F**	**00**	89	6C	00

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)
Category	No	Name				Common
MSP	00	WST	W/G Stereo Threshold		MSP3415D	**15**
	01	WBT	W/G Bilingual Threshold			**EC**
	02	WLL	W/G Monaural Threshold			**05**
	03	WAC	W/G Agreement Count			**01**
	04	WDL	W/G Search Delay			**30**
	05	NDL	NICAM Search Delay			**20**
	06	SDL	Stereo status Read Delay			**10**
	07	AGC	AGC Switch Auto/Constant			**01**
	08	REL	AGC Gain at Constant Mode			**28**
	09	CRM	Carrier muting on/off			**00**
	0A	ACO	Audio Clock out on/off			**01**
	0B	FP	FM Prescale for non-M system			**1B**
	0C	FPM	FM Prescale for M system			**32**
	0D	FH	FM Prescale for HDEV			**36**
	0E	FHM	FM Prescale for HDEV and M			**65**
	0F	WGP	W/G Prescale			**1C**
	10	NIP	NICAM Prescale			**7F**
	11	ERR	Auto FM switch Threshold			**50**
	12	VOL	Loud Speaker gain 7000h to 7ff0h			**6D**

TVG	Functionality		Function	Device Name	Initial Value (Detailed)
Category	No	Name			Common
PIP	00	PRO	Progreeive Scan Mode Enable	SDA9288X	00
	01	RED	Read Double Mode		00
	02	FEI	Field Select		00
	03	HPS	Horizontal Picture Position		33
	04	VPS	Vertical Picture Position		1B
	05	HFP	Horizontal Fine Positioning		08
	06	VFP	Vertical Fine Positioning		00
	07	DIS	Display standard		00
	08	HOS	Horizontal Size		00
	09	VES	Vertical Size		00
	0A	FPS	Force Parent Standard		00
	0B	HZM	Horizontal Zoom		00
	0C	VSP	Vertical Sync Pule Noise Reduction		01
	0D	VDL	Vertical Sync Pulse Delay		00
	0E	FRH	Frame Width Horizontal		05
	0F	FWV	Frame Width Vertical		02
	10	VRD	Reduction		00
	11	VBK	Vertical Blanking		00
	12	DLY	Select Delay		01
	13	PCR	Position Correction		00
	14	AGM	AGC Mode		03
	15	AGC	Automatic Gain Control Value		09
	16	CVB	CVBS Select		00
	17	CPD	CLAMPING Duration		01
	18	CPT	CLAMPING Pulse start		01
	19	LUM	Luminance offset		00

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			SECAM	NTSC	PAL	TV	Video	DVD
PIP	1A	PLL	Insert PLL Time Constant	TV/Video				00	00	
	1B	YCD	Y/C Delay	PAL/SECAM/NTSC/DVD	08	08	08			08
	1C	NSR	Noise Reduction for inset PII	TV/Video				00	00	

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)		
Category	No	Name			Common	50	60
PIP	1D	LSP	Standard Identification Speed		00		
	1E	KIL	Color Killer Threshold		02		
	1F	BGP	Burst Gate Position		01		
	20	SEC	SECAM Identification Level		01		
	21	DEM	Deemphasw selection		01		
	22	CMA	Chroma Bandwith		00		
	23	IFC	IF Compensation Filter		02		
	24	HUE	Hue		00		
	25	SCA	Color Subcarrier Adjustment		06		
	26	CON	Contrast Adjustment		00		
	27	BLR	Blanking Level Red Channel		00		
	28	BRT	Brightness Adjustment		03		
	29	BLG	Blanking Level Green Channel		00		
	2A	BIR	Blanking Inversion Red Channel		00		
	2B	BIB	Blanking Inversion Blue Channel		00		
	2C	BLB	Blanking Level Blue Channel		00		
	2D	INT	Refresh Interval		00		
	2E	PKR	Peak Level Red Channel		85		
	2F	PKG	Peak Level Green Channel		85		
	30	PKB	Peak Level Blue Channel		85		
	31	FRY	Frame Color Y		09		
	32	OUT	Output Format		01		
	33	FRU	Frame Color U		00		
	34	FRV	Frame Color V		00		
	35	SAT	Color Saturation Adjustment		09		
	36	YPK	Y Peak Adjustment		03		
	37	YCO	Y Coring Enable		01		
	38	PAL	PAL ID Level		03		
	39	POV	Position Offset Vertical		00		
	3A	POH	Position Offset Horizontal		00		
	3B	VSH	Vertical Shrink		00		
	3C	HSH	H Shrink		00		
	3D	CPL	CLAMPING Pulse Length		01		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)			
Category	No	Name				COMMON	S-INPUT	TV	VIDEO
YCT	00	SHU	Sub Hue Adjustment	TV/Video	CXA2163AQ			0E	12
	01	PNG	PAL/NTSC Gate Width			**01**			
	02	PNI	PAL/NTSC Sensitivity SW			**00**			

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)						
Category	No	Name			COMMON	50TV	50VIDEO	50DVD	60TV	60VIDEO	60DVD
YCT	03	SCL	Sub Color Control	50/60*TV/Video		**05**	**07**		**05**	**07**	
	04	SCT	Sub Contrast Control	50-60*TV/Video		**05**	**08**		**05**	**08**	
	05	SF0	Sharpness Center Frequency Changing		**02**						
	06	SEQ	Sharpness Equalizer Characteristic		**00**						
	07	SHG	Sharpness Gain Control	50/60*TV/Video/DVD		**06**	**07**	**09**	**06**	**07**	**09**
	08	YOL	Y-output Level Control		21						
	09	BSP	Black Stretch Start Point Changing		**00**						

TVG	Functionality		Function	Table & Note	Initial Value (Detailed)					
Category	No	Name			COMMON	S-INPUT	TV	VIDEO	DVD	OTHERS
YCT	0A	COL	Cb/Cr Output Level Control	DVD/others					**27**	**1E**
	0B	DCR	DC Restoration Ratio Adjustment		**00**					
	0C	BF0	BPF/TQF F0 Adjustment		**01**					
	0D	BFQ	BPF/TQF Q Adjustment		**02**					
	0E	FSW	BPF/TQF Switch		**01**					
	0F	SDT	SECAM Double Trap Switch		**01**					
	10	LPF	Y/Cb/Cr LPF Switch		**01**					
	11	YDL	Y-DL Time Adjustment	TV/Video/S-input/DVD		**05**	**06**	**05**	**05**	
	12	CMT	Cb/Cr Output Mute Switch		**00**					
	13	B01	Cb Offset1 Adjustment (main route)		**07**					
	14	RO1	Cr Offset1 Adjustment		**07**					
	15	CDF	V Count Down Frequency Switch	forced 50Hz for no signal	**00**					
	16	CDM	V Count Down Judge Switch		**00**					
	17	AFC	AFC Sensitivity Switch	(TV/)Video/DVD				**00**	**00**	
	18	MVM	Macrovision Mask + AFC Mask		**01**					
	19	SRY	SECAM R-Y Black Adjustment		**07**					
	1A	SBY	SECAM B-Y Black Adjustment		**01**					
	1B	BEL	SECAM BELL/HPF Switching		**02**					
	1C	BLF	BELL f0 Adjustment		**00**					
	1D	SVI	SECAM V-ID Switch		**00**					
	1E	SGP	SECAM Gate Position Adjustment		**00**					
	1F	SID	SECAM Sensitivity Switch	except SECAM	**01**					
	20	SIH	SECAM Inhibition Switch		**00**					
	21	STP	Y Black Level Setup for PAL plus		**00**					
	22	ASW	Auto Video Select Mode SW		**01**					
	23	WSH	Sharpness Gain Step for noise reduction		**00**					
	24	WCO	Cb/Cr Output Level Step for noise reduction		**00**					
	25	CB2	Cb2 offset adjustment (YCbCr2 input)		**07**					
	26	CR2	Cr2 offset adjustment (YCbCr2 input)		**07**					
	27	HPH	HS Output phase switch		**00**					
	28	VPH	Switch for VP output phase		**00**					
	29	NCM	NTSC COMB		**00**					

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)		
Category	No	Name				COMMON	NTSC	OTHERS
TE	00	NR0	NR	NTSC/Others	DTE		**01**	**01**
	01	TC0	TE Coring	NTSC/Others			**05**	**05**
	02	TG0	TE Gain	NTSC/Others			**05**	**05**
	03	STH	Forced TE bypass 1:TE bypass			**00**		
	04	COF	Color Component OFF 1:OFF (512)			**00**		
	05	YOF	Luminance Component OFF 1:OFF			**00**		
	06	VJR	V jitter control 0:ON 1:SP1 2:SP2 3:SP2			**00**		
	07	TOF	TE OFF 1:TE OFF			**00**		
	08	DOF	Dot NR OFF 1:Dot NR OFF			**00**		
	09	FOF	TE LPF OFF 1:LPF OFF			**01**		
	0A	CTH	Color TE OFF 1:OFF			**00**		
	0B	PSL	TE Parameter Selection			**02**		
	0C	CLP	Input Clamp Level			**08**		
	0D	CL2	Output Clamp Level			**08**		
	0E	LA1	Level depend Gain (+, White)			**00**		
	0F	LA2	Level depend Gain (+, Black)			**01**		
	10	LA3	Level depend Gain (-, White)			**0F**		
	11	LA4	Level depend Gain (-, Black)			**01**		
	12	CRW	TE Y/C compensation ratio			**04**		
	13	YCD	TE Y/C output delay adjustment			**04**		
	14	OSO	XXX			**00**		
NR	00	DMO	NR Demo Mode ON/OFF (1=Demo Mode)		DTE	**00**		
	01	THV	Offset of Noise Threshold level for vertical direction			**03**		
	02	THH	Offset of level Threshold level for horizontal direction			**11**		
	03	BLL	Offset of Level detection for Black Level			**07**		
	04	CST	Offset of Level detection for Color Level			**07**		
	05	THC	Offset of Edge Detection Threshold			**09**		
	06	NRF	NR0 always Rank = 0			**00**		
	07	DIG	A/D In or Digital In (1=Digital In)			**00**		
TXT	00	TXH	Teletext Horizontal Position		SAA5261	**00**		
	01	TXV	Teletext Vertical Position			**00**		

TVG	Functionality		Function	Table & Note	Device Name	Initial Value (Detailed)		
Category	No	Name				COMMON	NTSC	Others
OPM	00	OSH	OSD H Position	Option - Misc	CXP750097	0F		
	01	COM	Selection (0: None, 1:NTSC, 2:Multi, 3:3D) [NON-DTE]/(0:None, 1:Multi, 2:3D, 3: None)[DTE]			**01**		
	02	APC	APC Switch			**01**		
	03	TSY	TV Sys at Auto TV Sys			**00**		
	04	MUT	No Signal Mute			**01**		
	05	AFM	Auto FM switch			**01**		
	06	RFB	C-BPF Control			**00**		
	07	TVO	Tilt to V-Angle offset			**01**		
	08	DBL	Disable Blueback Function			**00**		
	09	SSO	Speed Search Option (0: Off, 1: 4x, 2: 6x, 3:8x)			**01**		
	0A	SCH	CH Selection for Shipping Condition	NTSC Models only		**07**		
	0B	SCA	Cable/Air selection for shipping condition	NTSC Models only		**01**		
	0C	POR	Power On Reset Dectection From YCT			**00**		
	0D	NRC	N-Det Counter for PICSI			**1F**		
	0E	RUC	RF Signal Change Counter after Unlocked			**0F**		
	0F	RLC	RF Signal Change Counter after Locked			**0F**		
	10	BYP	DTE ON/OFF Blanking			**00**		
	11	PBL	XXX			**00**		
OPB	00	OP1	Optional Bits 1 (see page 60)	Option - Bits	CXP750097	**E1**		
	01	OP2	Optional Bits 2 (see page 60)			**07**		
	02	OP3	Optional Bits 3 (see page 60)			**E9**		
	03	OP4	Optional Bits 4 (see page 60)			**92**		

NOTE

- shaded items are fixed data.
- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory. In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

ITEM INFORMATION

No. OPB0 OP1

Item	XTAL 4.43	XTAL 3.58	SECAM	AR34/29*	B/G	I	D/K	M	HEX
KV-AR25M66	1	1	1	0	1	1	1	1	EF
KV-AR25M60	1	1	1	0	1	1	1	1	EF
KV-AR25M80 (E)	1	1	1	0	1	1	1	1	EF
KV-AR25M80 (ME)	1	1	1	0	1	1	1	1	EF
KV-AR25N90 (Philippines)	1	1	1	0	0	0	0	1	E1
KV-AR25N90 (Taiwan)	1	1	1	0	0	0	0	1	E1

AR34/29* SHG offset in YCT 0 = AR29/25, 1 = AR34

No. OPB1 OP2

Item	TOP	NICAM	HDEV	Thai Bil	PIP 4	DVD Input	AV Input		HEX
KV-AR25M66	0	1	1	0	1	1	1	1	6F
KV-AR25M60	0	1	1	0	0	1	1	1	67
KV-AR25M80 (E)	0	0	0	0	0	1	1	1	07
KV-AR25M80 (ME)	0	0	0	0	0	1	1	1	07
KV-AR25N90 (Philippines)	0	0	0	0	0	1	1	1	07
KV-AR25N90 (Taiwan)	0	0	0	0	0	1	1	1	07

AV Input 00 = no AV Input 01 = 1 AV Input
10 = 2 AV Input 11 = 3 AV Input

DVD Input Effective only when "AV Input" is set to 3 AV Input

PIP 4 PIP 4 0 = disabled, 1 = enabled

No. OPB2 OP3

Item	Initial menu	AP2	Auto PIC	A-TVsys	US ST	DTE	Forced 50/60	Colour SW*2	HEX
KV-AR25M66	1	1	1	1	0	1	0	1	F5
KV-AR25M60	1	1	1	1	0	0	0	1	F1
KV-AR25M80 (E)	1	1	1	0	0	0	0	1	E1
KV-AR25M80 (ME)	1	1	1	0	0	0	0	1	E1
KV-AR25N90 (Philippines)	1	1	1	0	1	0	0	1	E9
KV-AR25N90 (Taiwan)	1	1	1	0	1	0	0	1	E9

Initial Menu Initial Menu Setup 0 = disabled, 1 = enabled

AP2 Auto Processor Selection 0 = AP, 1 = AP2.

Auto PIC*3 Auto Picture Improvement 0 = off PNC1/PNC2
1 = activate PNC1/PNC2

A-TVsys Auto TV System in Auto Program 0 = disabled, 1 = enabled

US ST* USA Stereo 0 = disabled, 1 = enabled

DTE DTE Model Selection 0 = Non DTE, 1 = DTE

Forced 50/60 Forced to 50/60 Hz during no signal condition 0=60Hz, 1=50Hz

Color SW*2 Color Data Selection in Dynamic Mode 0 = 65 (No PIP), 1 = 57 (PIP)

Note: *1 - For XA21/XH29 Models Only
*2 - For XA34/29/25 Models Only
*3 - For PNC3, the enables are from service item APG and APB.

No. OPB3 *OP4

Item	PNC2	Korean ST	Vid NTSC3.58	Wide	Video3	Chinese(multi mdl)	Arabic/C.Chinese	Thai/Korean	HEX
KV-AR25M66	0	0	0	1	0	1	1	1	17
KV-AR25M60	1	0	0	1	0	1	1	1	97
KV-AR25M80 (E)	1	0	0	1	0	1	1	1	97
KV-AR25M80 (ME)	1	0	0	1	0	1	1	1	97
KV-AR25N90 (Philippines)	1	0	0	1	0	0	1	0	92
KV-AR25N90 (Taiwan)	1	0	0	1	0	0	1	0	92

APPLICABLE TO XS ONLY - Sub Language Selection (Bit 0 - Bit 2)

Korean Stereo*	Korean Stereo	0 = disabled, 1 = enabled
PNC2*2	Enable switch of PNC2	0 = disable, 1 = enable
Video NTSC3.58*	Video Color System	0 = Multi System, 1 = Single System (NTSC3.58)
Wide	Enable wide mode	0 = disable, 1 = enable

Note : *APPLICABLE FOR NTSC MODELS ONLY

4-3. ADJUSTMENT FOR NON DIGITAL TEXTURE ENHANCER (DTE) MODEL (Except KV-AR25M66)

SUB COLOR ADJUSTMENT

1. Select Video.
2. Input PAL Color Bar
3. Set to following condition PICTURE 100%, BRIGHTNESS 50%, Color 50%.
4. Connect an oscilloscope to pin ① (BOUT) of CN305, A Board.
5. Set the service mode and select SAJ 3 'SCL' with [1] and [4] of the commander then adjust the VB2=VB3=VB4 [3] and [6].
6. Press [MUTING] → [0] of the commander to write the data.
7. Input NTSC Color Bar to set and repeat items (3 to 7).
8. Select "WIDE" mode, write the "SAME DATA- 3 STEPS" for both PAL and NTSC Color Bar input.

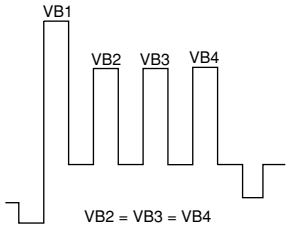

VB2 = VB3 = VB4 (FOR PAL SUB COLOR ADJUSTMENT)
(Difference is within 70mV)
VB1 = VB4 (FOR NTSC SUB COLOR ADJUSTMENT)
(Difference is within 70mV)

SUB HUE ADJUSTMENT

1. Select Video 1.
2. Input a NTSC 3.58 color-bar, video into Video 1.
3. Set the following condition:
   PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN305, A board.
5. Select SAJ 1 "SHU" with [1] and [4] of the commander by setting to Service Mode and adjust to VB1=VB2=VB3=VB4 with [3] and [6].

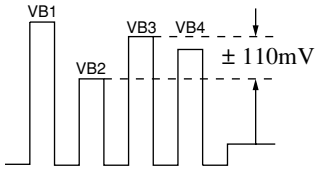

The highest level of VB1,VB2,VB3,VB4 must be aligned at the same line.
Ideal difference level between VB2 and VB3 should be within ± 110mV.

6. Press [MUTING] → [0] of the commander to write the data.
7. Adjust SAJ 1 "SHU" as step 3 to 6 when receiving TV mode.

4-4. ADJUSTMENT FOR DIGITAL TEXTURE ENHANCER (DTE) MODEL (KV-AR25M66)

Y LEVEL ADJUSTMENT

1. Select Video.
2. Input PAL Color Bar to TV set (white reference 100%).
3. Set the following condition:
   DTE : ON
   Picture Mode : Dynamic
4. Connect an oscilloscope to pin ① (CV/Y in) of CN106, A Board.
5. Set to Service Mode and YCT 08 'YOL' with [1] and [4] of the commander then adjust to VY within spec with [3] and [6].
6. Then press [MUTING] → [0] to write the data.
7. Select RF.
8. Repeat item [2] to [4].
9. Set to Service Mode and YCT 04 'SCT' with 1 and 4 of the commander then adjust to VY within spec with [3] to [6].
10. Copy SCT data to NTSC (RF).

SCT Setting (Video Mode) : 07h (NTSC & PAL)

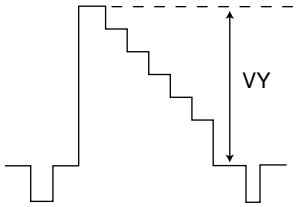

SPEC: VY : 1.2 Vpp ± 0.05m Vpp

SUB COLOR (YCT) ADJUSTMENT

1. Select Video.
2. Input NTSC Color Bar.
3. Set the following condition:
   DTE : ON
   Picture Mode : Dynamic
   NTSC 75% Color Bar
4. Connect an oscilloscope to pin ② (B-Y in) of CN303, A Board.
5. Set to Service Mode and YCT 0A 'COL' with [1] and [4] of the commander then adjust to VB within spec with [3] and [6].
6. Then press [MUTING] → [0] to write the data.
7. Select RF.
8. Repeat item no [2] to [4].
9. Set to Service Mode and YCT 03 'COL' with [1] and [4] of the commander then adjust the waveform within spec with [3] and [6].
10. Then press [MUTING] → [0] to write the data.
11. Input PAL Color Bar (75%) and repeat item no 8 to 10.

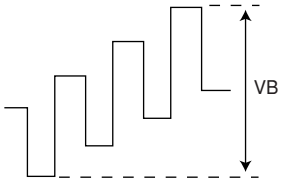

SPEC :
VIDEO : VB = 0.931 Vpp ± 50 mVpp
RF : VB = 0.931 Vpp ± 50 mVpp

SUB COLOR (YCJ) ADJUSTMENT

1. Select Video.
2. Input PAL Color Bar to TV set.
3. Set the following condition:
   Pic: 100%, Col: 50%, Brightness: 50%, DTE: OFF
4. Connect an oscilloscope to pin ② (B output) of CN305, A Board.
5. Set to Service Mode and SAJ 03 'SCL' with [1] and [4] of the commander then adjust to VB2 = VB3 = VB4 = with [3] and [6].
6. Then press [MUTING] → [0] to write the data.
7. Add offset steps and save the data.
   Offset: 25... 0*
   29... 0* + 3 steps
   34... 0* + 6 steps 0* : Adjusted data
8. Input NTSC color bar to TV set and repeat item no 3 to 7.
10. Select "WIDE" mode, write the "SAME DATA - 3 STEPS" for both PAL and NTSC input.

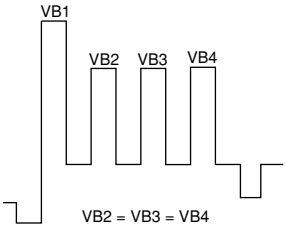

VB2 = VB3 = VB4 (FOR PAL SUB COLOR ADJUSTMENT)
(Difference is within 70mV)
VB1 = VB4 (FOR NTSC SUB COLOR ADJUSTMENT)

Caution : Offset steps of Sub color data should be added only after SUB HUE adjustment is completed.

SUB HUE ADJUSTMENT

1. Select Video.
2. Input NTSC 3.58 Color Bar to TV Set.
3. Set the following condition:
   Pic: 100%, Col: 50%, Brightness: 50%, DTE: OFF
4. Connect an oscilloscope to pin ① (B output) of CN305, A Board.
5. Set to Service Mode and YCT 00 'SHU' with [1] and [4] of the commander then adjust to VB1 = VB2 = VB3 = VB4 = with [3] and [6].
6. Then press [MUTING] → [0] to write the data.
7. Select RF.
8. Input NTSC 3.58 and repeat item no 3 and 6.

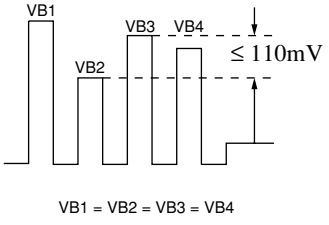

The highest level of VB1, VB2, VB3, VB4 must be aligned at the same time.
Ideal difference level between VB2 and VB3 should be within ± 110 mVpp.

PMX ADJUSTMENT

1. Select Video (Wide mode: OFF).
2. Input PAL Color Bar to TV set.
3. Set the following condition:
   Pic: 100%, Col: 50%, Brightness: 50%, DTE: OFF
4. Connect an oscilloscope to pin ③ (R output) of CN305, A Board.
5. Set to Service Mode and SAJ 00 'PMX' with [1] and [4] of the commander then adjust to VR within spec with [3] and [6].
6. Then press [MUTING] → [0] to write the data.
7. Select "Wide" mode, write the "SAME DATA- 5 STEPS".

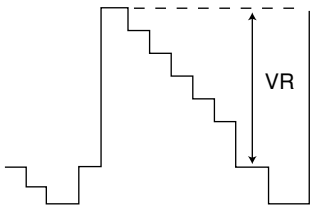

VR = 2.35 Vpp (Difference is within 50 mVpp)

VP 06 RLM : 03H
17 R ON : 01H
18 G ON : 00H
19 B ON : 00H
After adjustment, these adjustment parameters must be recovered to the original condition.

4-5. DISPLAY POSITION ADJUSTMENT (KV-AR25M66 only)

PIP POSITION

1. Input a PAL color-bar.
2. Press PIP button of the remote commander to set the PIP picture.
3. Set to Service Mode.
4. Use [1] and [4] of the remote commander to select PIP 03 "HPS" and use [3] and [6] to set data "15".
5. Select PIP 04 "VPS" to set data "2E".
6. Press [MUTING] → [0] of the remote commander to write the data.
7. Use the screen display menu changing the PIP position to check the PIP position.

4-6. DEFLECTION ADJUSTMENT

NORMAL MODE (50Hz)

1. Set Video Mode.
2. Using the [1] and [4] button, select category GEO (Service Mode).
3. Raise/lower the data using the [3] and [6] buttons. Select and adjust the following items to obtain optimum image.

Service Item

GEO :	00	HPS	H POSITION
	01	HSZ	H SIZE
	02	PAP	PIN AMP
	03	TLT	TILT
	04	VPS	V POSITION
	05	VSZ	V SIZE
	06	SCO	S CORRECTION
	07	VLN	V LINEARITY
	08	BOW	AFC BOW
	09	AGL	AFC ANGLE
	0A	UPN	UPPER CORNER PIN
	0B	LPN	LOWER CORNER PIN

WIDE MODE (50Hz)

4. Input PAL color bar.
5. Adjust condition change to WIDE MODE : ON.
6. Using the [1] and [3] button, select category GEO (Service Mode).
7. Copy (item from normal mode (50Hz)) adjusted data for the following item:

Service Item

GEO :	01	HSZ	H POSITION
	05	VSZ	V POSITION
	06	SCO	S CORRECTION
	07	VLN	V LINEARITY

8. Raise/lower data using [3] and [6] buttons, select and adjust the following items to obtain optimum image.

Service Item

GEO :	00	HPS	H POSITION
	02	PAP	PIN AMP
	03	TLT	TILT
	04	VPS	V POSITION
	08	BOW	AFC BOW
	09	AGL	AFC ANGLE
	0A	UPN	UPPER CORNER PIN
	0B	LPN	LOWER CORNER PIN

9. After confirm WIDE MODE : ON – OFF.
10. Repeat same steps for NTSC input signal.

NORMAL MODE (60Hz)

1. Set to Service Mode.
2. Using the [1] and [4] buttons select category GEO (Service Mode).
3. Select and adjust the following items to obtain obtimum image. Raise/lower the data with the [3] and [6] buttons.

Service Item

GEO :	00	HPS	H POSITION
	01	HSZ	H SIZE
	02	PAP	PIN AMP
	03	TLT	TILT
	04	VPS	V POSITION
	05	VSZ	V SIZE
	06	SCO	S CORRECTION
	07	VLN	V LINEARITY
	08	BOW	AFC BOW
	09	AGL	AFC ANGLE
	0A	UPN	UPPER CORNER PIN
	0B	LPN	LOWER CORNER PIN

WIDE MODE (60Hz)

4. Input monoscope signal.
5. Adjust condition change to WIDE MODE: ON.
6. Using the [1] and [4] button select category GEO (Service Mode).
7. Copy (item from NORMAL MODE (60Hz)) adjusted data for the following items:

Service Item

GEO :	01	HSZ	H SIZE
	05	VSZ	V SIZE
	06	SCO	S CORRECTION
	07	VLN	V LINEARITY

8. Raise/lower the data with the [3] and [6] buttons. Select and adjust the following items to obtain optimum image.

Service Item

GEO :	00	HPS	H POSITION
	02	PAP	PIN AMP
	03	TLT	TILT
	04	VPS	V POSITION
	08	BOW	AFC BOW
	09	AGL	AFC ANGLE
	0A	UPN	UPPER CORNER PIN
	0B	LPN	LOWER CORNER PIN

9. After confirm WIDE MODE : ON – OFF.

Note:
For Deflection Adjustment, set PICTURE MODE to "SOFT".

4-7. H-TRAPEZOID ADJUSTMENT

1. Receive cross hatch/dot signal.
2. Adjust RV1801 on C6 board to make H-Trapezoid distortion best.

4-8. A BOARD ADJUSTMENT AFTER IC003 (MEMORY) REPLACEMENT

1. Enter to Service Mode.
2. Press commander buttons [5] and [0] (Data Initialize), and [2] and [0] (Data Copy) to initialize the data.
3. Call each item number and check if the respective screen shows the normal picture.
   In cases where items are not well adjusted, rectify the fine adjustment.
   Write the data per each item number ([MUTING] → [0]).
4. Select item numbers "OPB00" (OP1), "OPB01" (OP2), "OPB 02" (OP3) and "OPB 03" (OP4) respectively set the bit per model with command buttons [3] and [6].
5. Press commander buttons [8] and [0] (Test Normal) to return to the data that was set on the shipment from the factory.
   (This will also cancel Service Mode.)

4-9. PICTURE DISTORTION ADJUSTMENT (1)

Item Number 00 – 0B

GEO 0 HPS (H POSITION)



GEO 1 HSZ (H SIZE)



GEO 2 PAP (PIN AMP)



GEO 3 TLT (TRAPEZIUM)



GEO 4 VPS (V POSITION)



GEO 5 VSZ (V SIZE)



GEO 6 SCO (VERTICAL S-Correction)



GEO 7 VLN (V LINEARITY)



GEO 8 BOW (AFC. BOW)



GEO 9 AGL (AFC. ANGLE)



GEO 0A UPN (UPPER CORNER PIN)
GEO 0B LPN (LOWER CORNER PIN)



PICTURE DISTORTION ADJUSTMENT (2)

H-TRAPEZOID (ROTATE RVI801)



KV-AR25M66/AR25M60/AR25M80
RM-993
RM-995
KV-AR25N90
RM-996

SECTION 5
DIAGRAMS

5-1. BLOCK DIAGRAM

(Except KV-AR25M66)

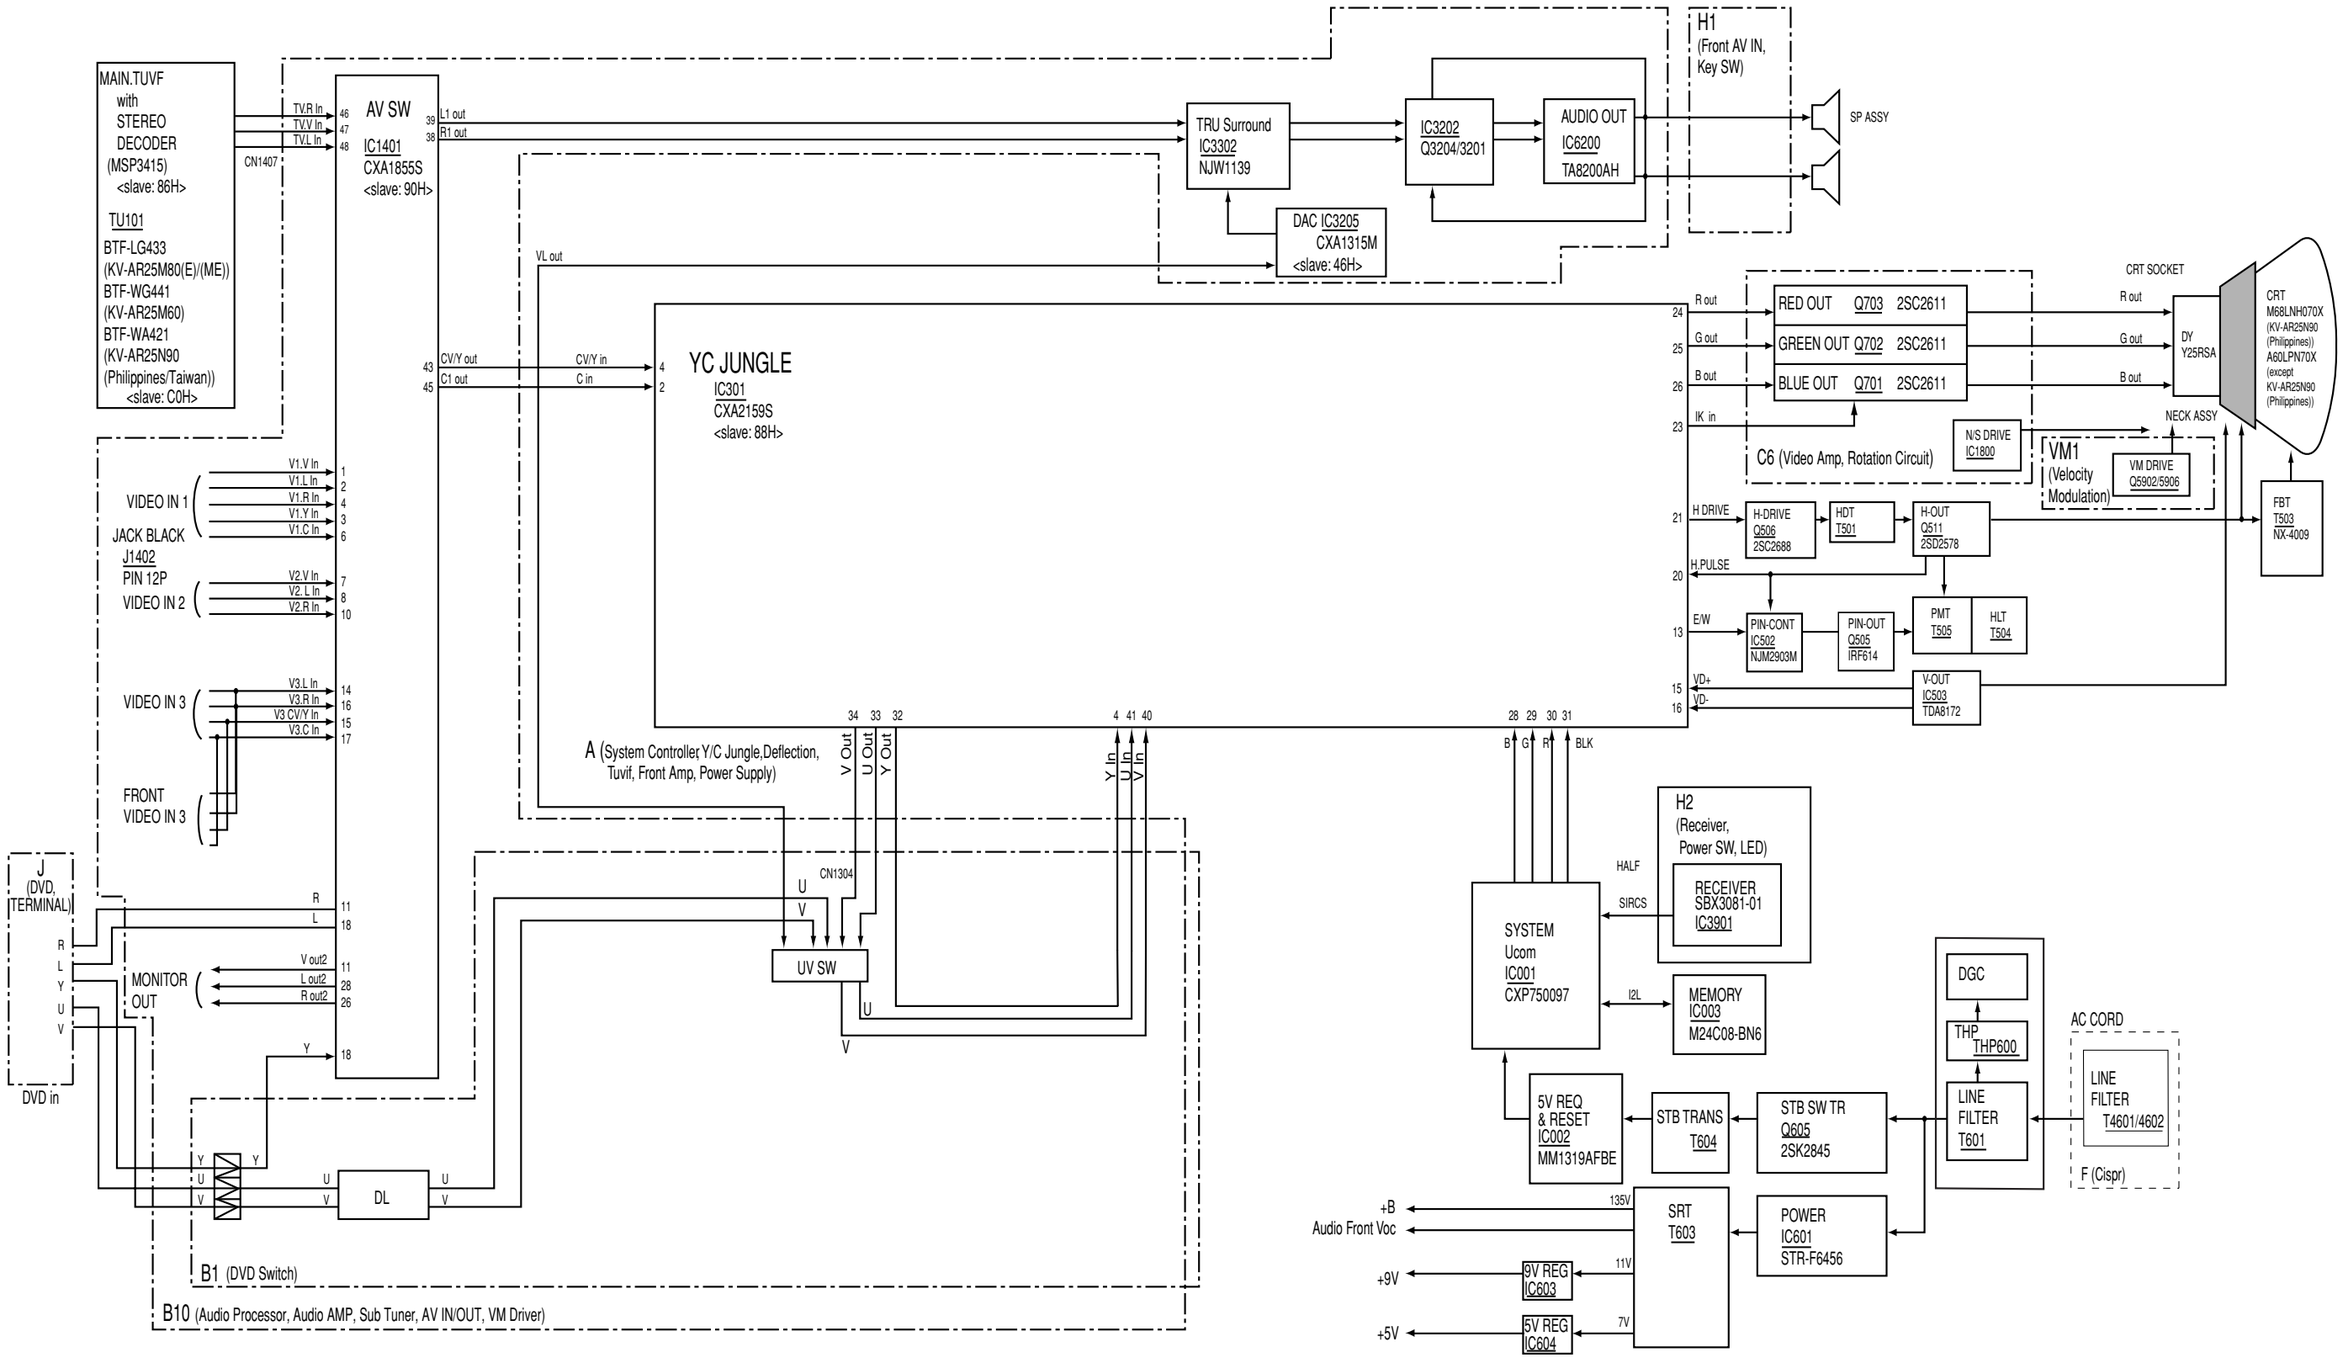

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

(KV-AR25M66 ONLY)

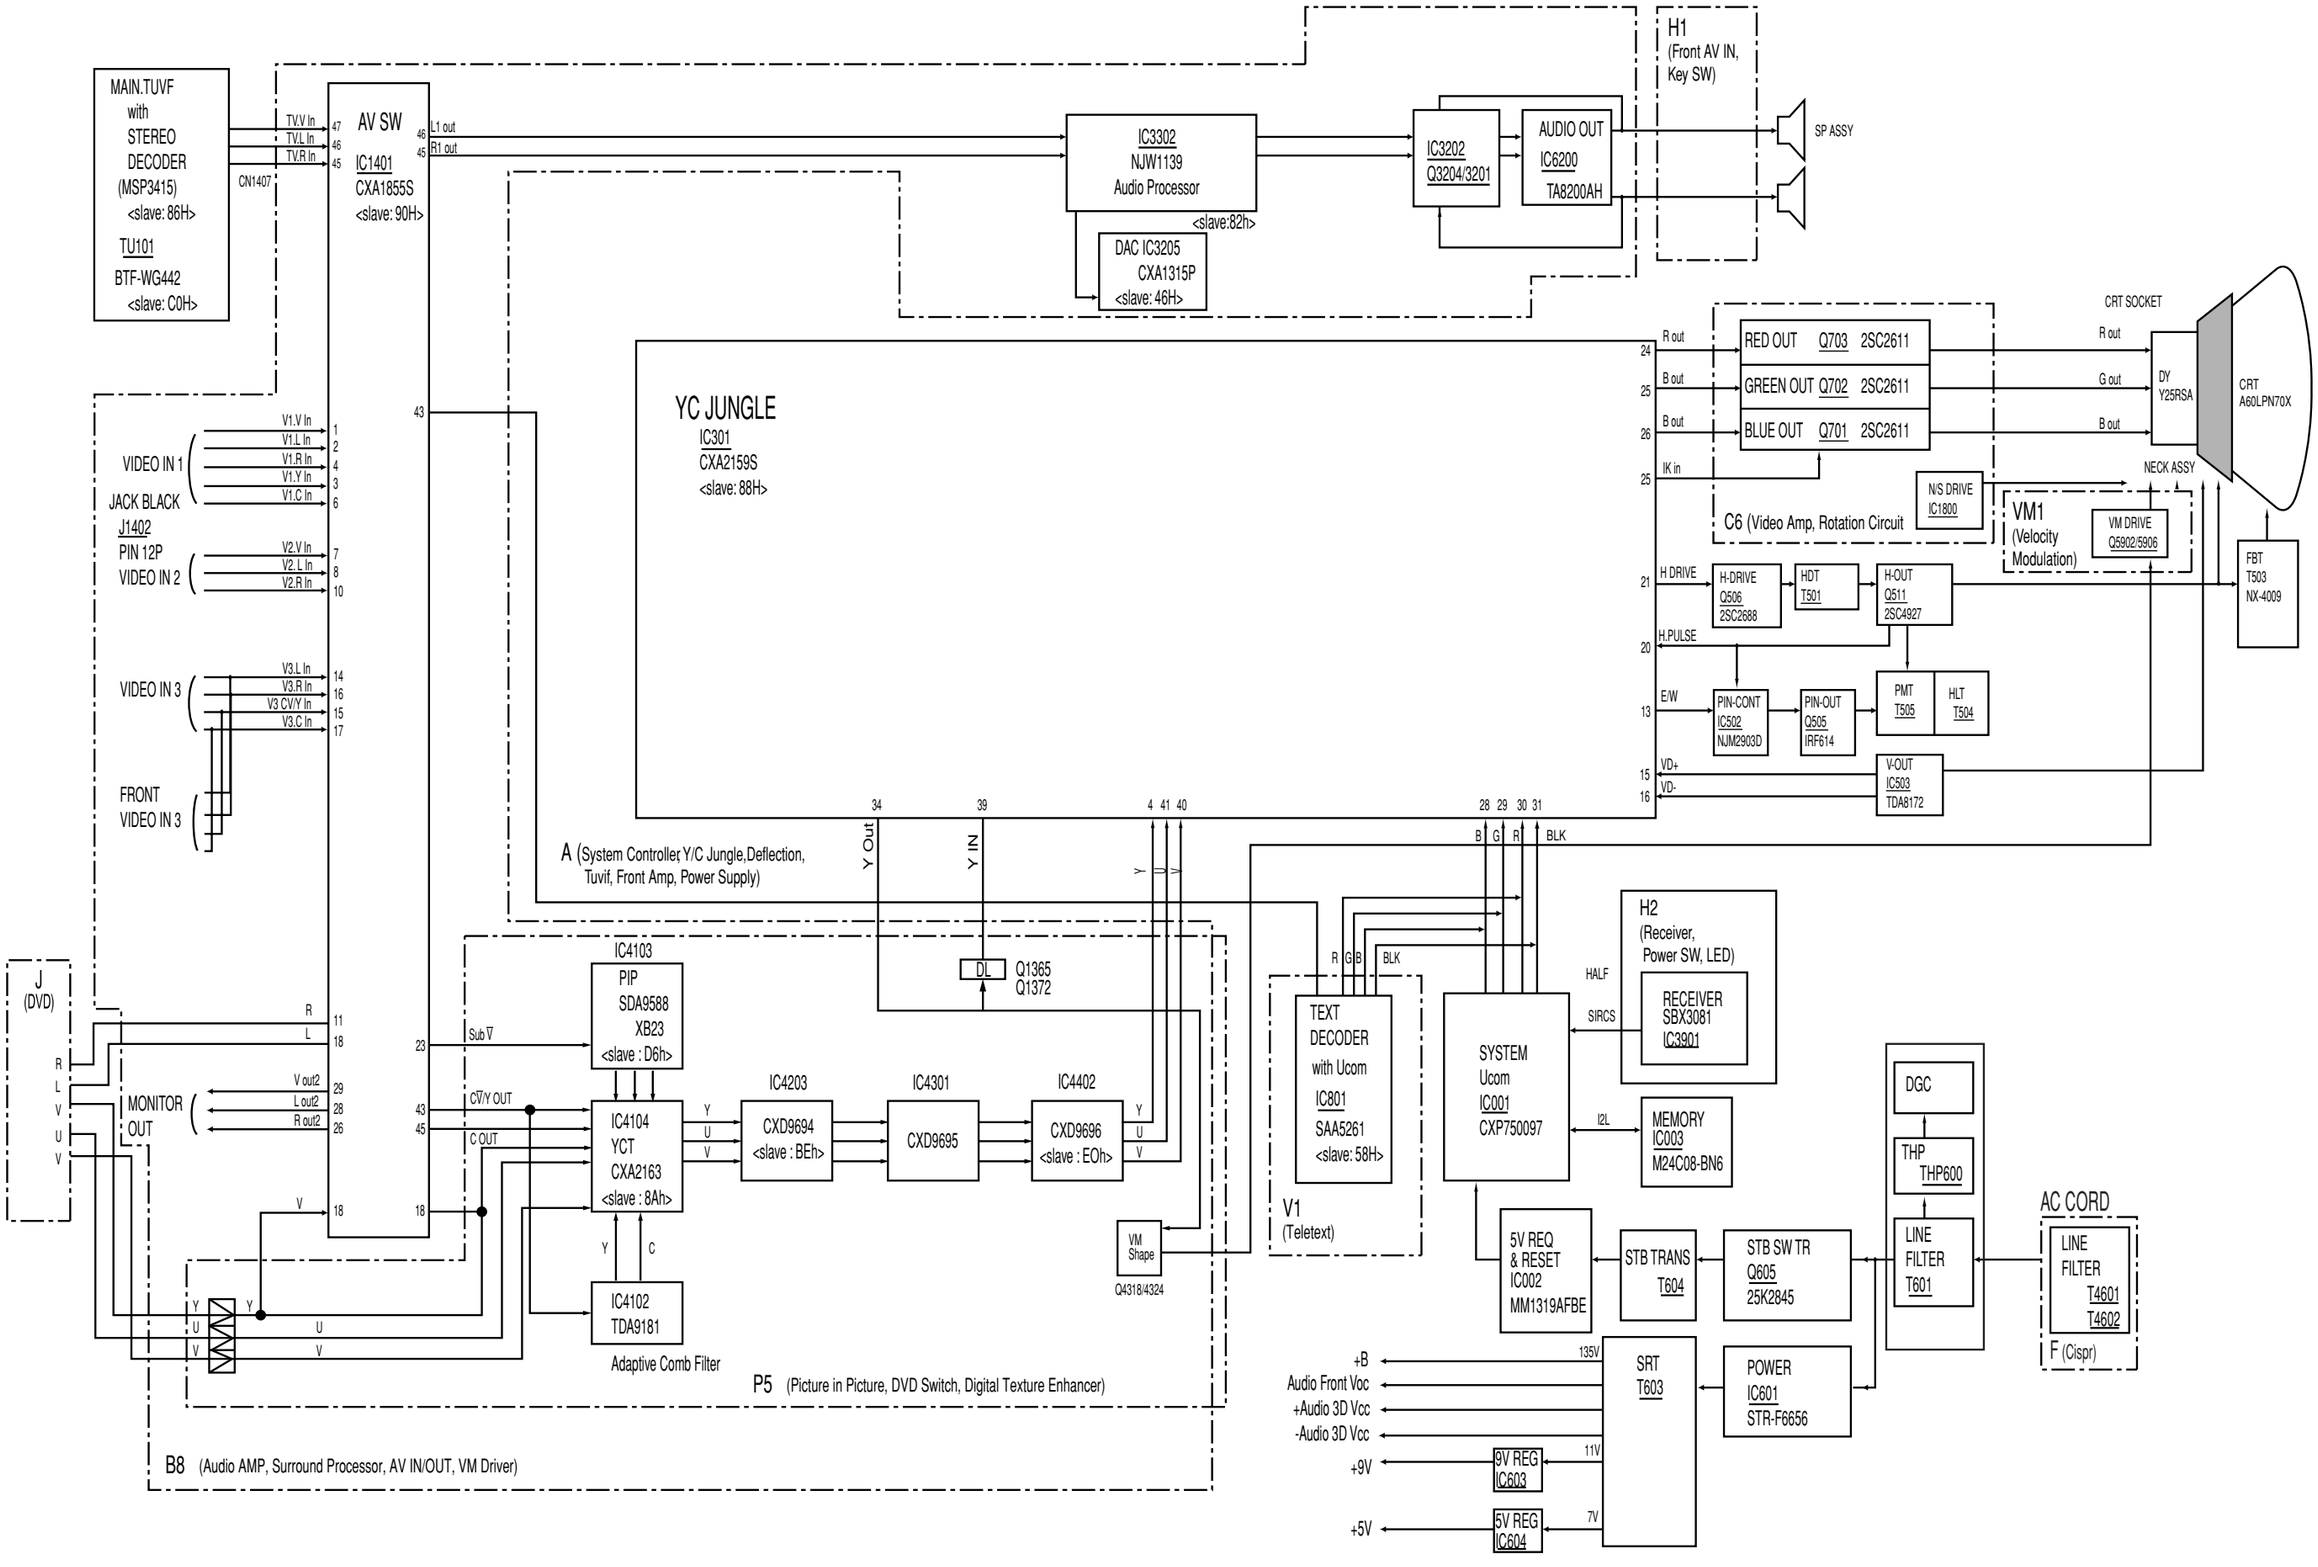

5-2. CIRCUIT BOARDS LOCATION

(FOR KV-AR25M66)

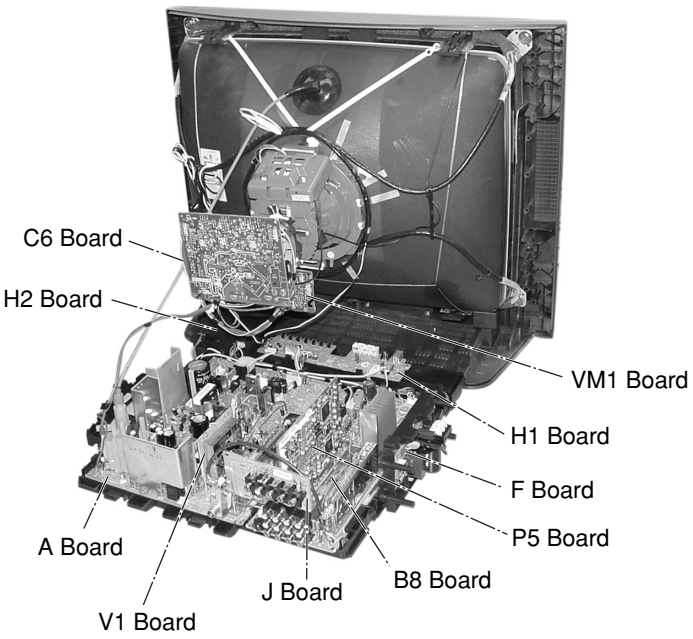

(Except KV-AR25M66)

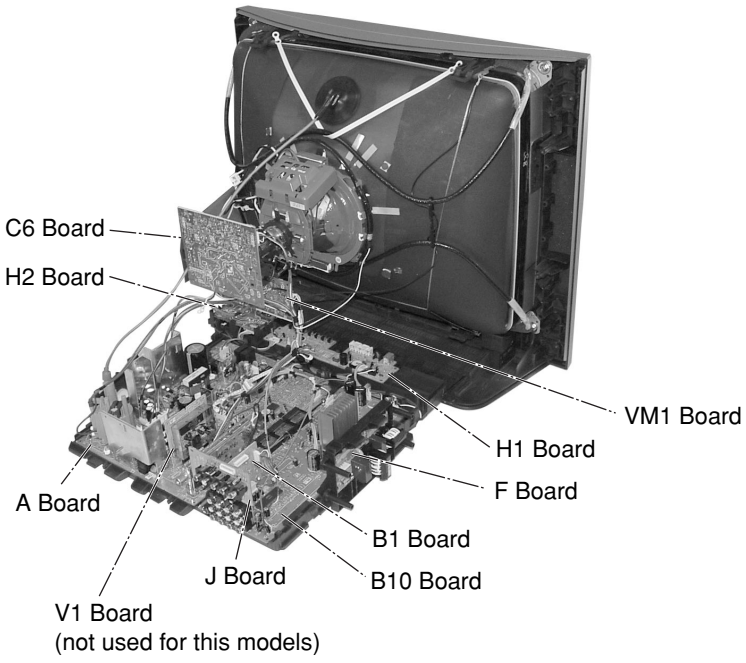

5-3. SCHEMATIC DIAGRAM

Note:

- All capacitors are in µF unless otherwise noted.
- All electrolytic capacitors are rated at 50V unless otherwise noted.
- All resistors are in ohms.
  kΩ = 1000Ω, MΩ = 1000kΩ
- Indication of resistance which does not have rating electrical power is as follows.

  Pitch: 5 mm
  Rating electrical power 1/4W (CHIP: 1/10W)

- : nonflammable resistor.
- △ : internal component.
- : panel designation or adjustment for rrepair.
- All variable and adjustable resistors have characteristic curve B unless otherwise noted.
- **Readings are taken with a color-bar signal input.**
  no mark : Common
  ( ) : PAL
  [ ] : NTSC 3.58
- **Readings are taken with a 10MΩ digital multimeter.**
- **Voltage are dc with respect to ground unless otherwise noted.**
- **Voltage variations may be noted due to normal production tolerances.**
- **All voltage are in V.**
- **✻ : Cannot be measured.**
- **Circled numbers are waveform references.**
- **: B +bus.**
- **: B –bus.**
- **: signal path.**

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: ✻	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The component identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

(1) A Board Schematic Diagram

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

A B C D E F G H I J

⚠A 1/2

(SYSTEM CONTROLLER,Y/C JUNGLE,DEFLECTION,TUVIF, FRONT AM,POWER SUPPLY)

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

⚠A 2/2

(SYSTEM CONTROLLER,Y/C JUNGLE,DEFLECTION,TUVIF, FRONT AM,POWER SUPPLY)

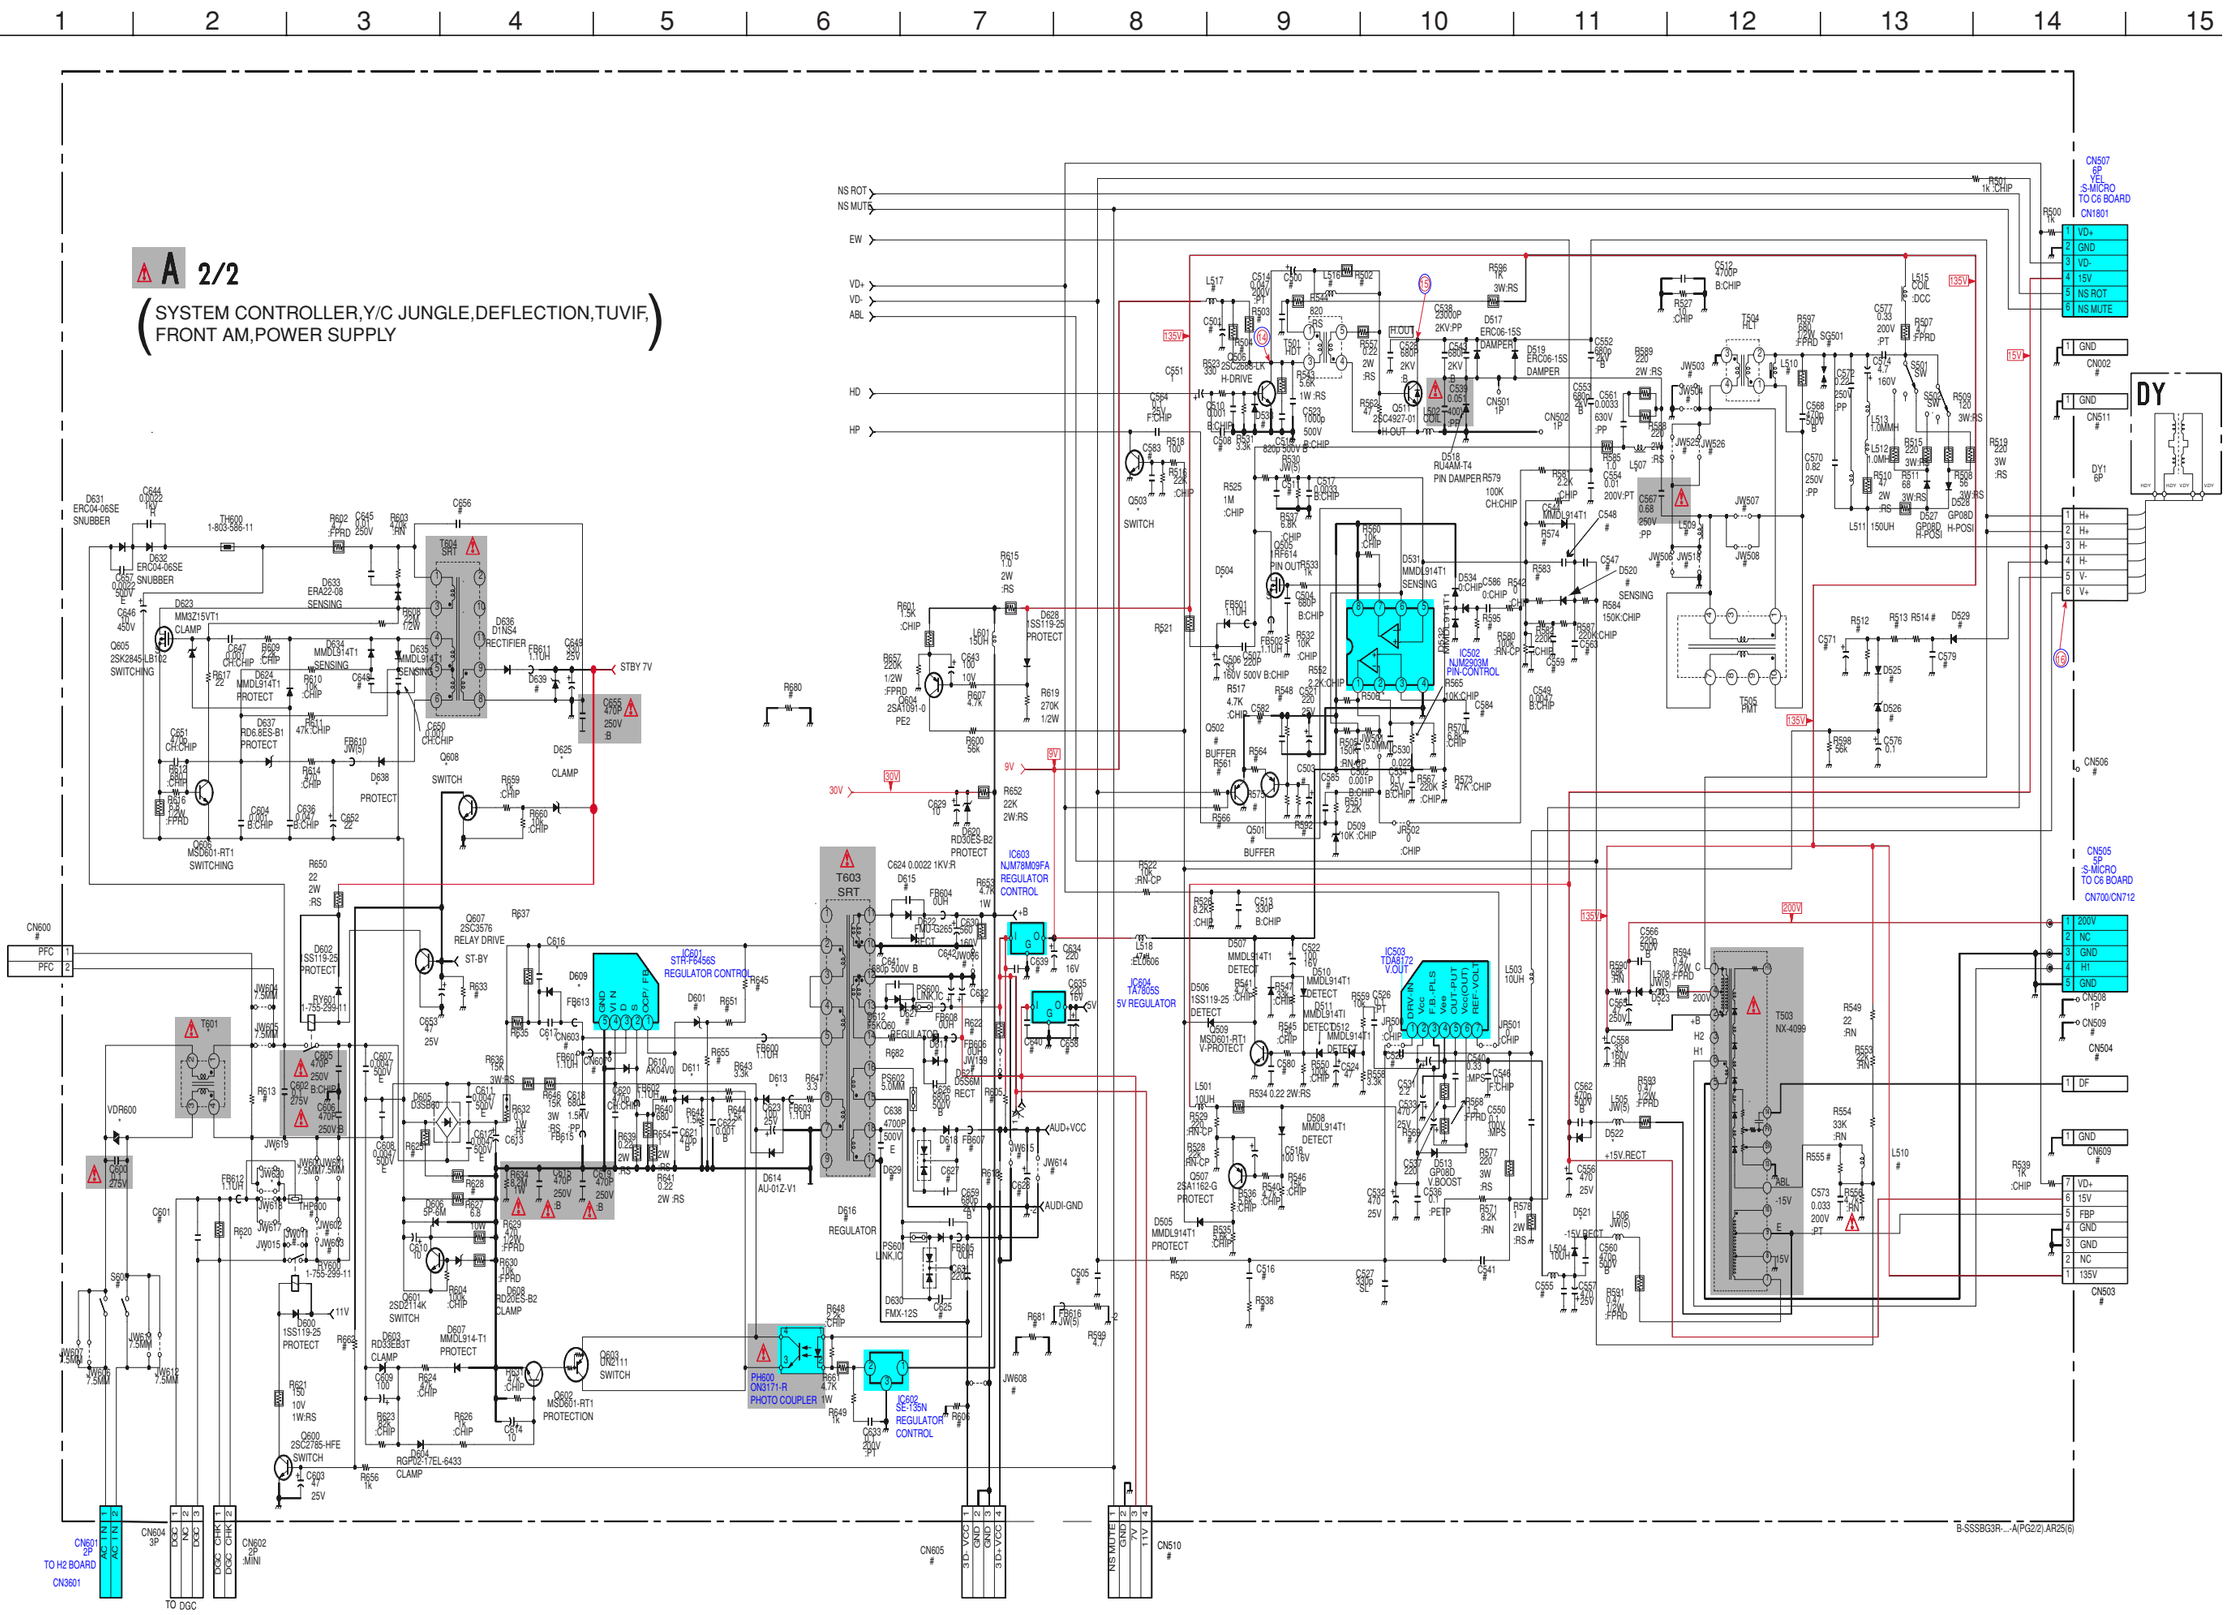

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

(2) B10 Board Schematic Diagram

(except KV-AR25M66)

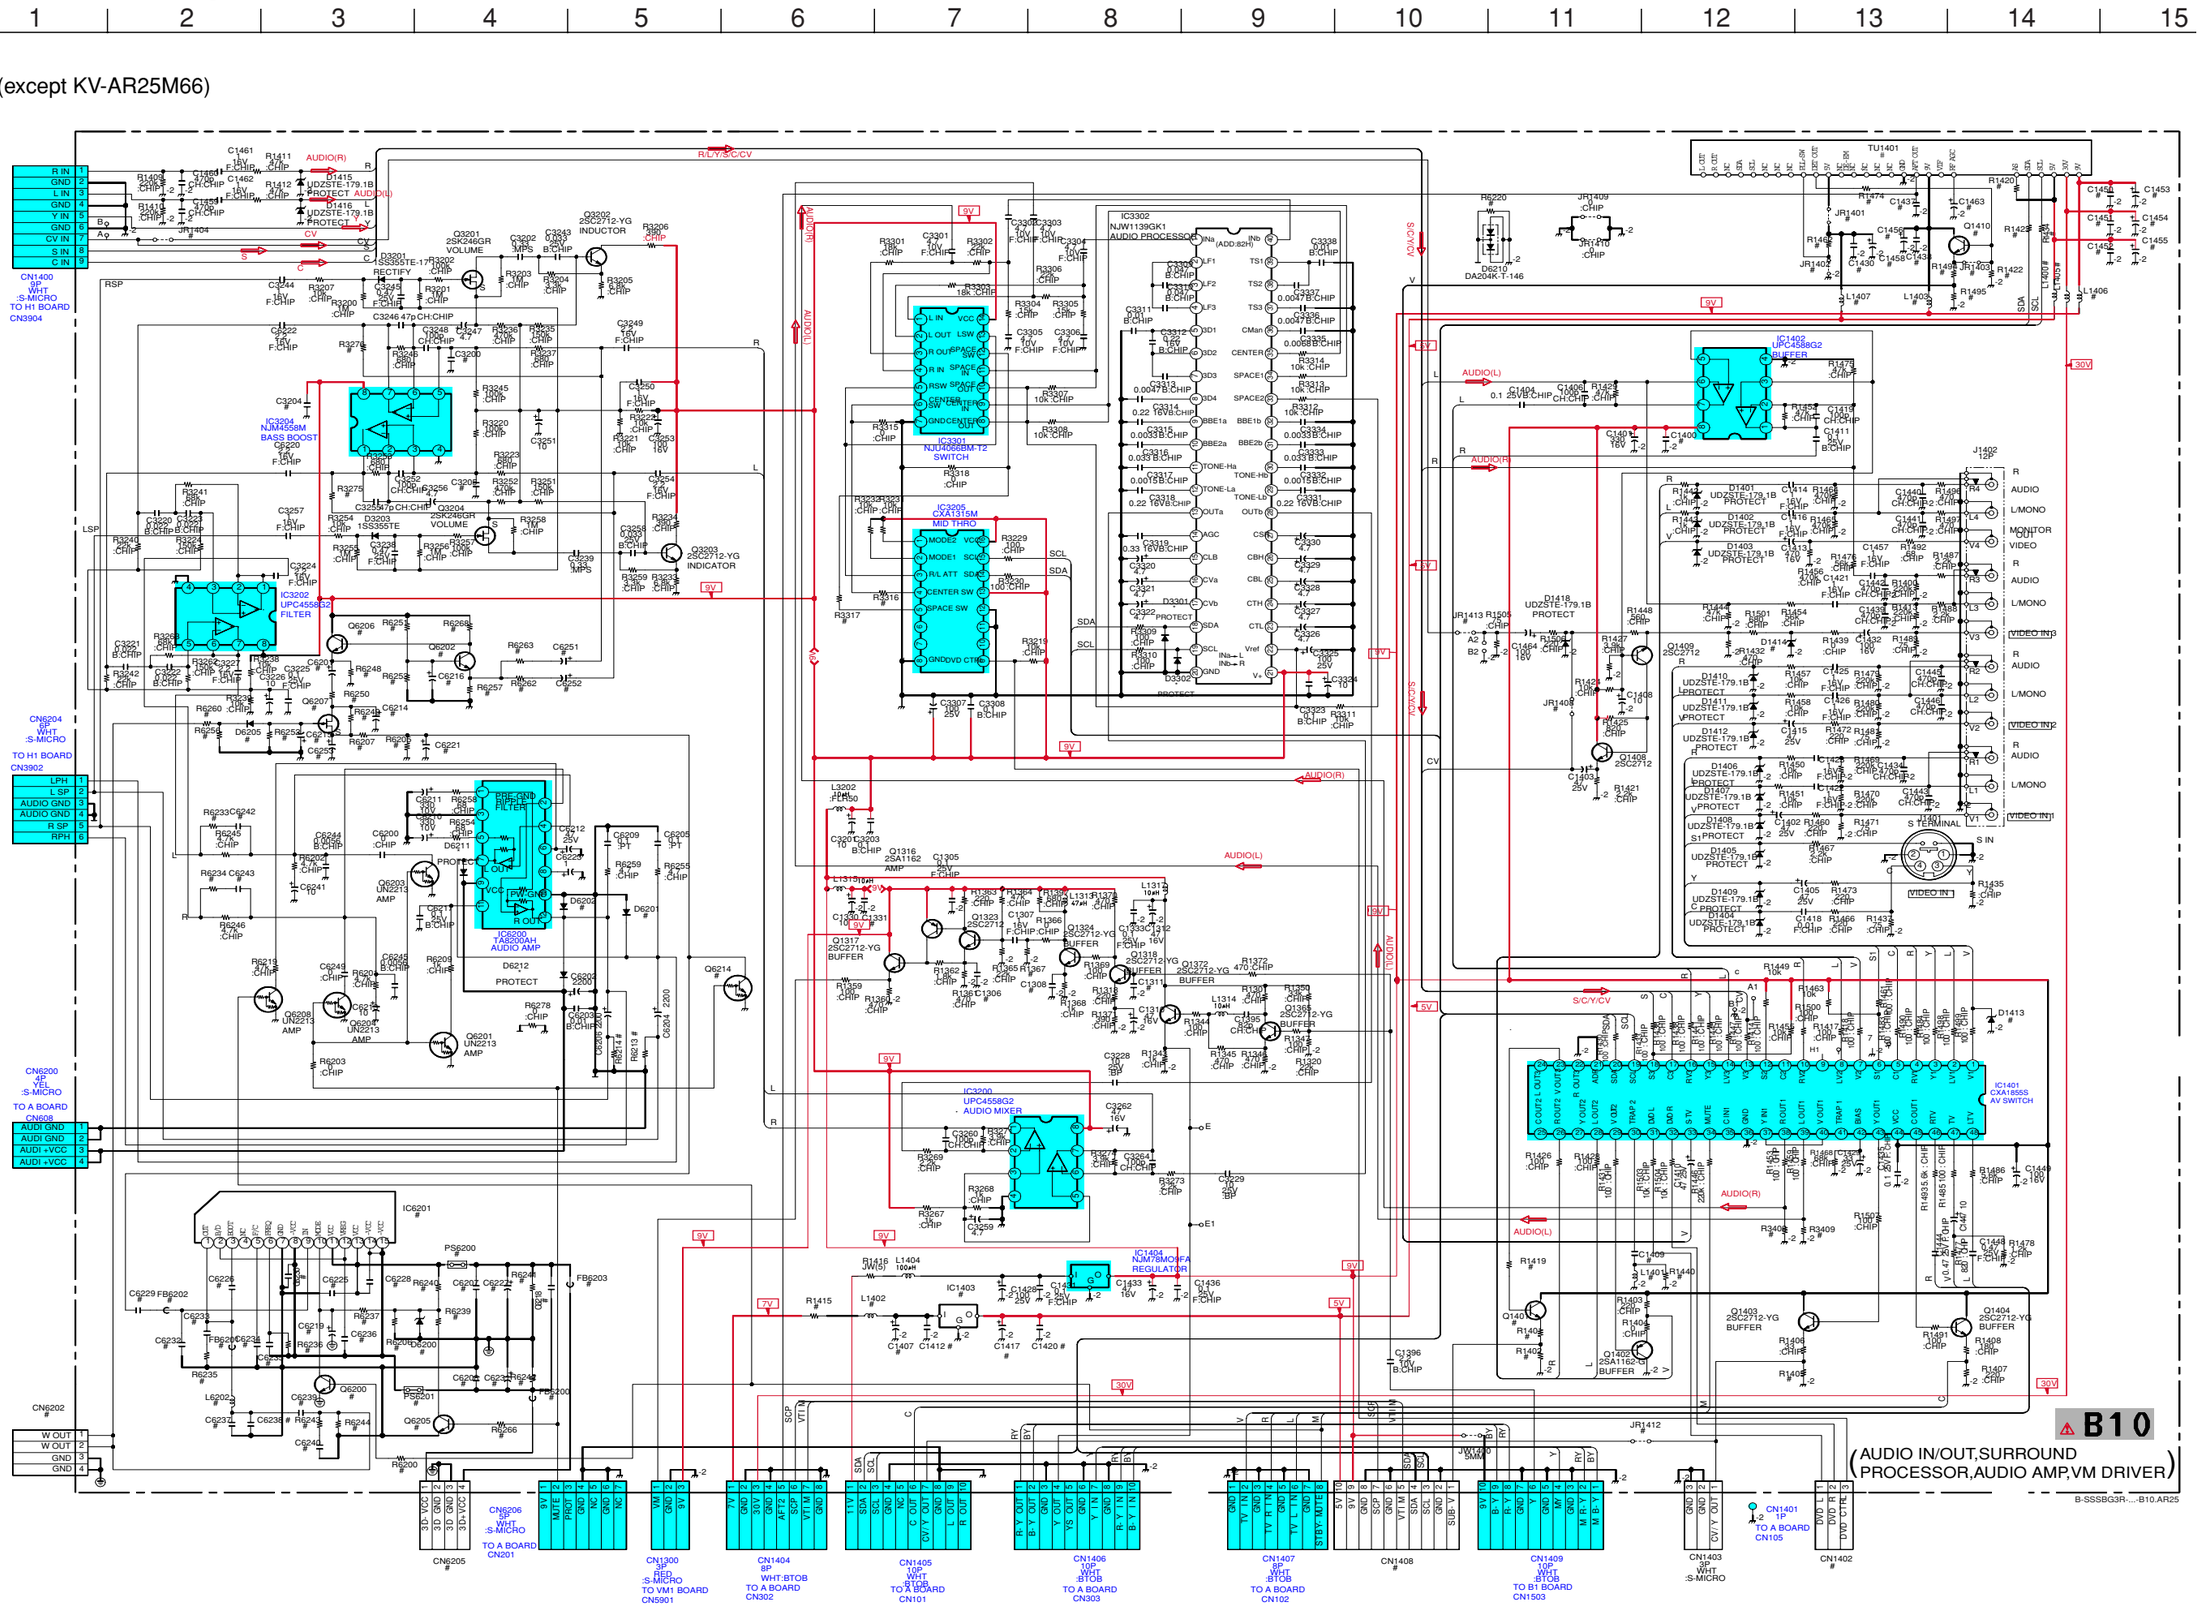

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

(3) B8 Board Schematic Diagram

(KV-AR25M66 ONLY)

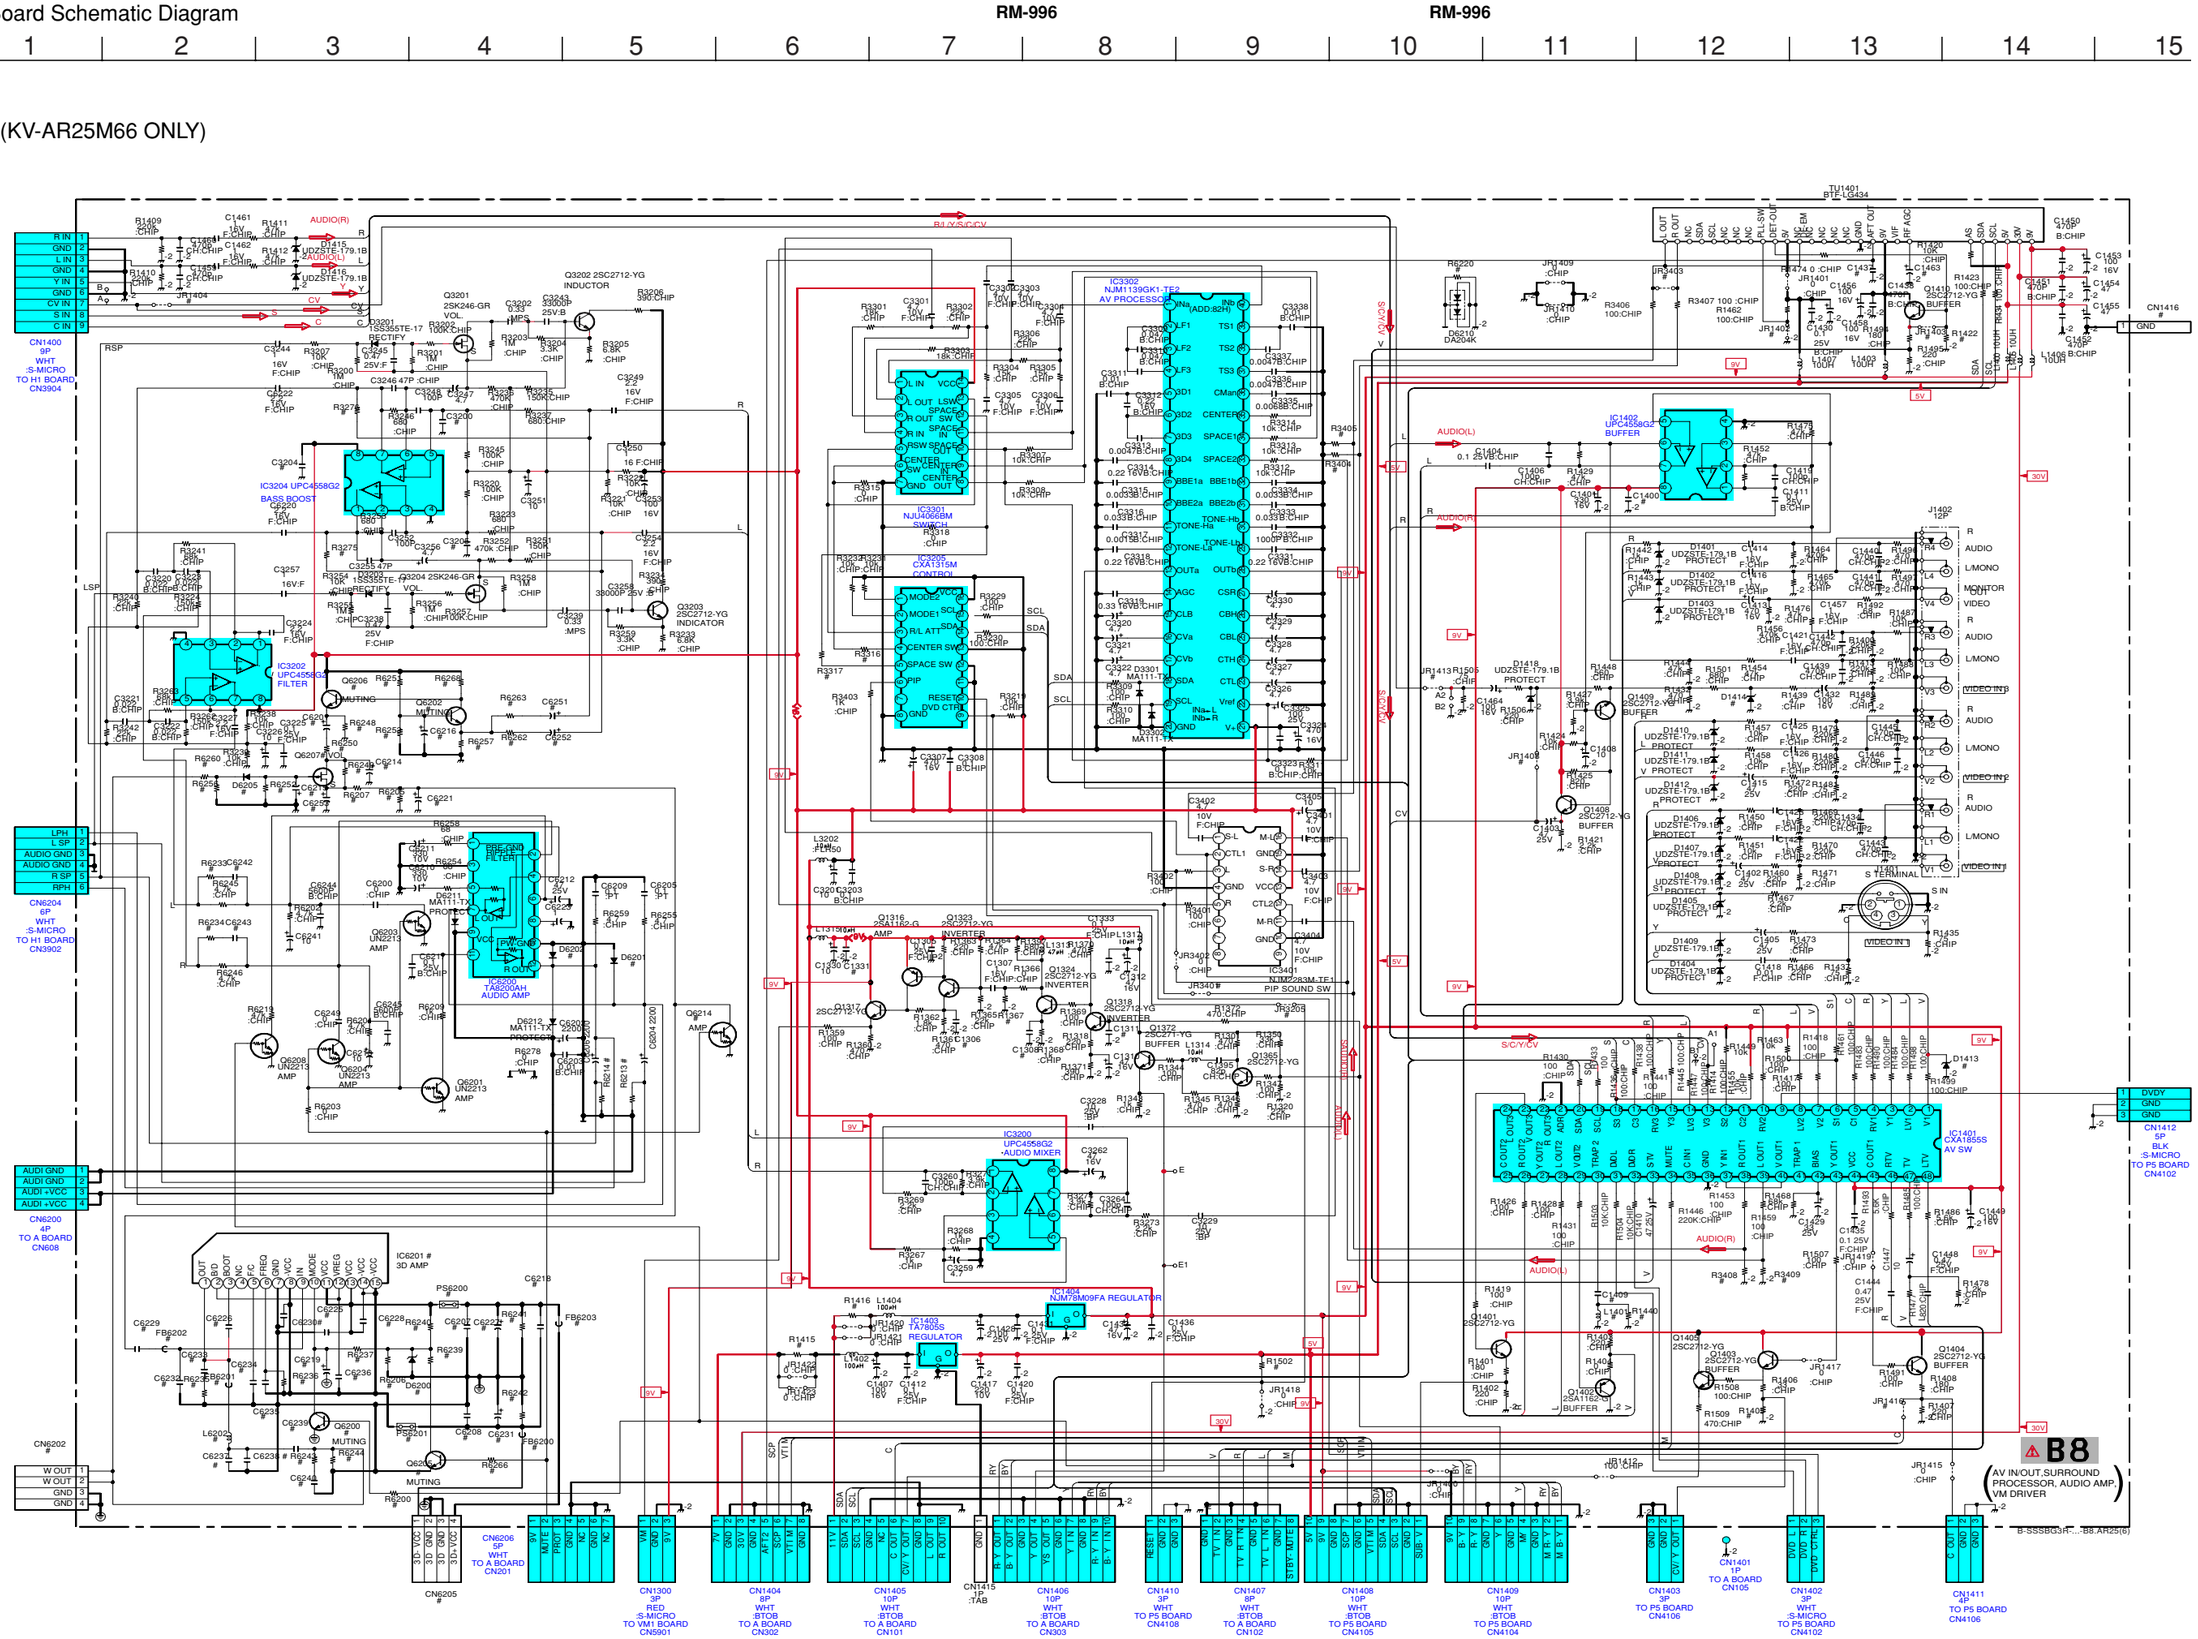
CN1400 9P WHT :S-MICRO TO H1 BOARD CN3904
CN6204 6P WHT :S-MICRO TO H1 BOARD CN3902
CN6200 4P TO A BOARD CN608
CN6202 W OUT 1 W OUT 2 GND 3 GND 4
CN6206 5P WHT TO A BOARD CN201
CN1300 3P RED :S-MICRO TO VM1 BOARD CN5901
CN1404 8P WHT :BTOB TO A BOARD CN302
CN1405 10P WHT :BTOB TO A BOARD CN101
CN1406 10P WHT :BTOB TO A BOARD CN303
CN1410 3P WHT TO P5 BOARD CN4108
CN1407 8P WHT :BTOB TO A BOARD CN102
CN1408 10P WHT :BTOB TO P5 BOARD CN4105
CN1409 10P WHT :BTOB TO P5 BOARD CN4104
CN1403 3P TO P5 BOARD CN4106
CN1402 3P WHT :S-MICRO TO P5 BOARD CN4102
CN1411 4P TO P5 BOARD CN4106
CN1412 5P BLK :S-MICRO TO P5 BOARD CN4102
CN1401 1P TO A BOARD CN105
IC3302 NJM1139GK1-TE2 AV PROCESSOR
IC3200 UPC4558G2 AUDIO MIXER
IC3202 UPC4558G2 BASS BOOST
IC3204 UPC4558G2 FILTER
IC3301 NJU4066BM SW CH
IC3299 CXA1315M CONTROL
IC6200 TA8200AH AUDIO AMP
IC6201 3D AMP
IC1402 UPC4558G2 BUFFER
IC1401 CXA1855S AV SW
IC1403 TA7805S REGULATOR
IC1404 NJM78M09FA REGULATOR
IC1401 UPC4558G2 PIP SOUND SW
B8
(AV IN/OUT,SURROUND PROCESSOR, AUDIO AMP, VM DRIVER)
B-SSSBG3H-...-B8.AR25(6)

KV-AR25M66/AR25M60/AR25M80
RM-993
RM-995
KV-AR25N90
RM-996

(4) V1 Board Schematic Diagram

(KV-AR25M66 ONLY)

V1

(TELE TEXT)

IC801
SAA5261
TEXT DECODER

CN801
7P
:BTOB
TO A BOARD
CN307

CN803
7P
:BTOB
TO A BOARD
CN301

B-SSSBG3R-...-V1.

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

(5) C6 Board Schematic Diagram

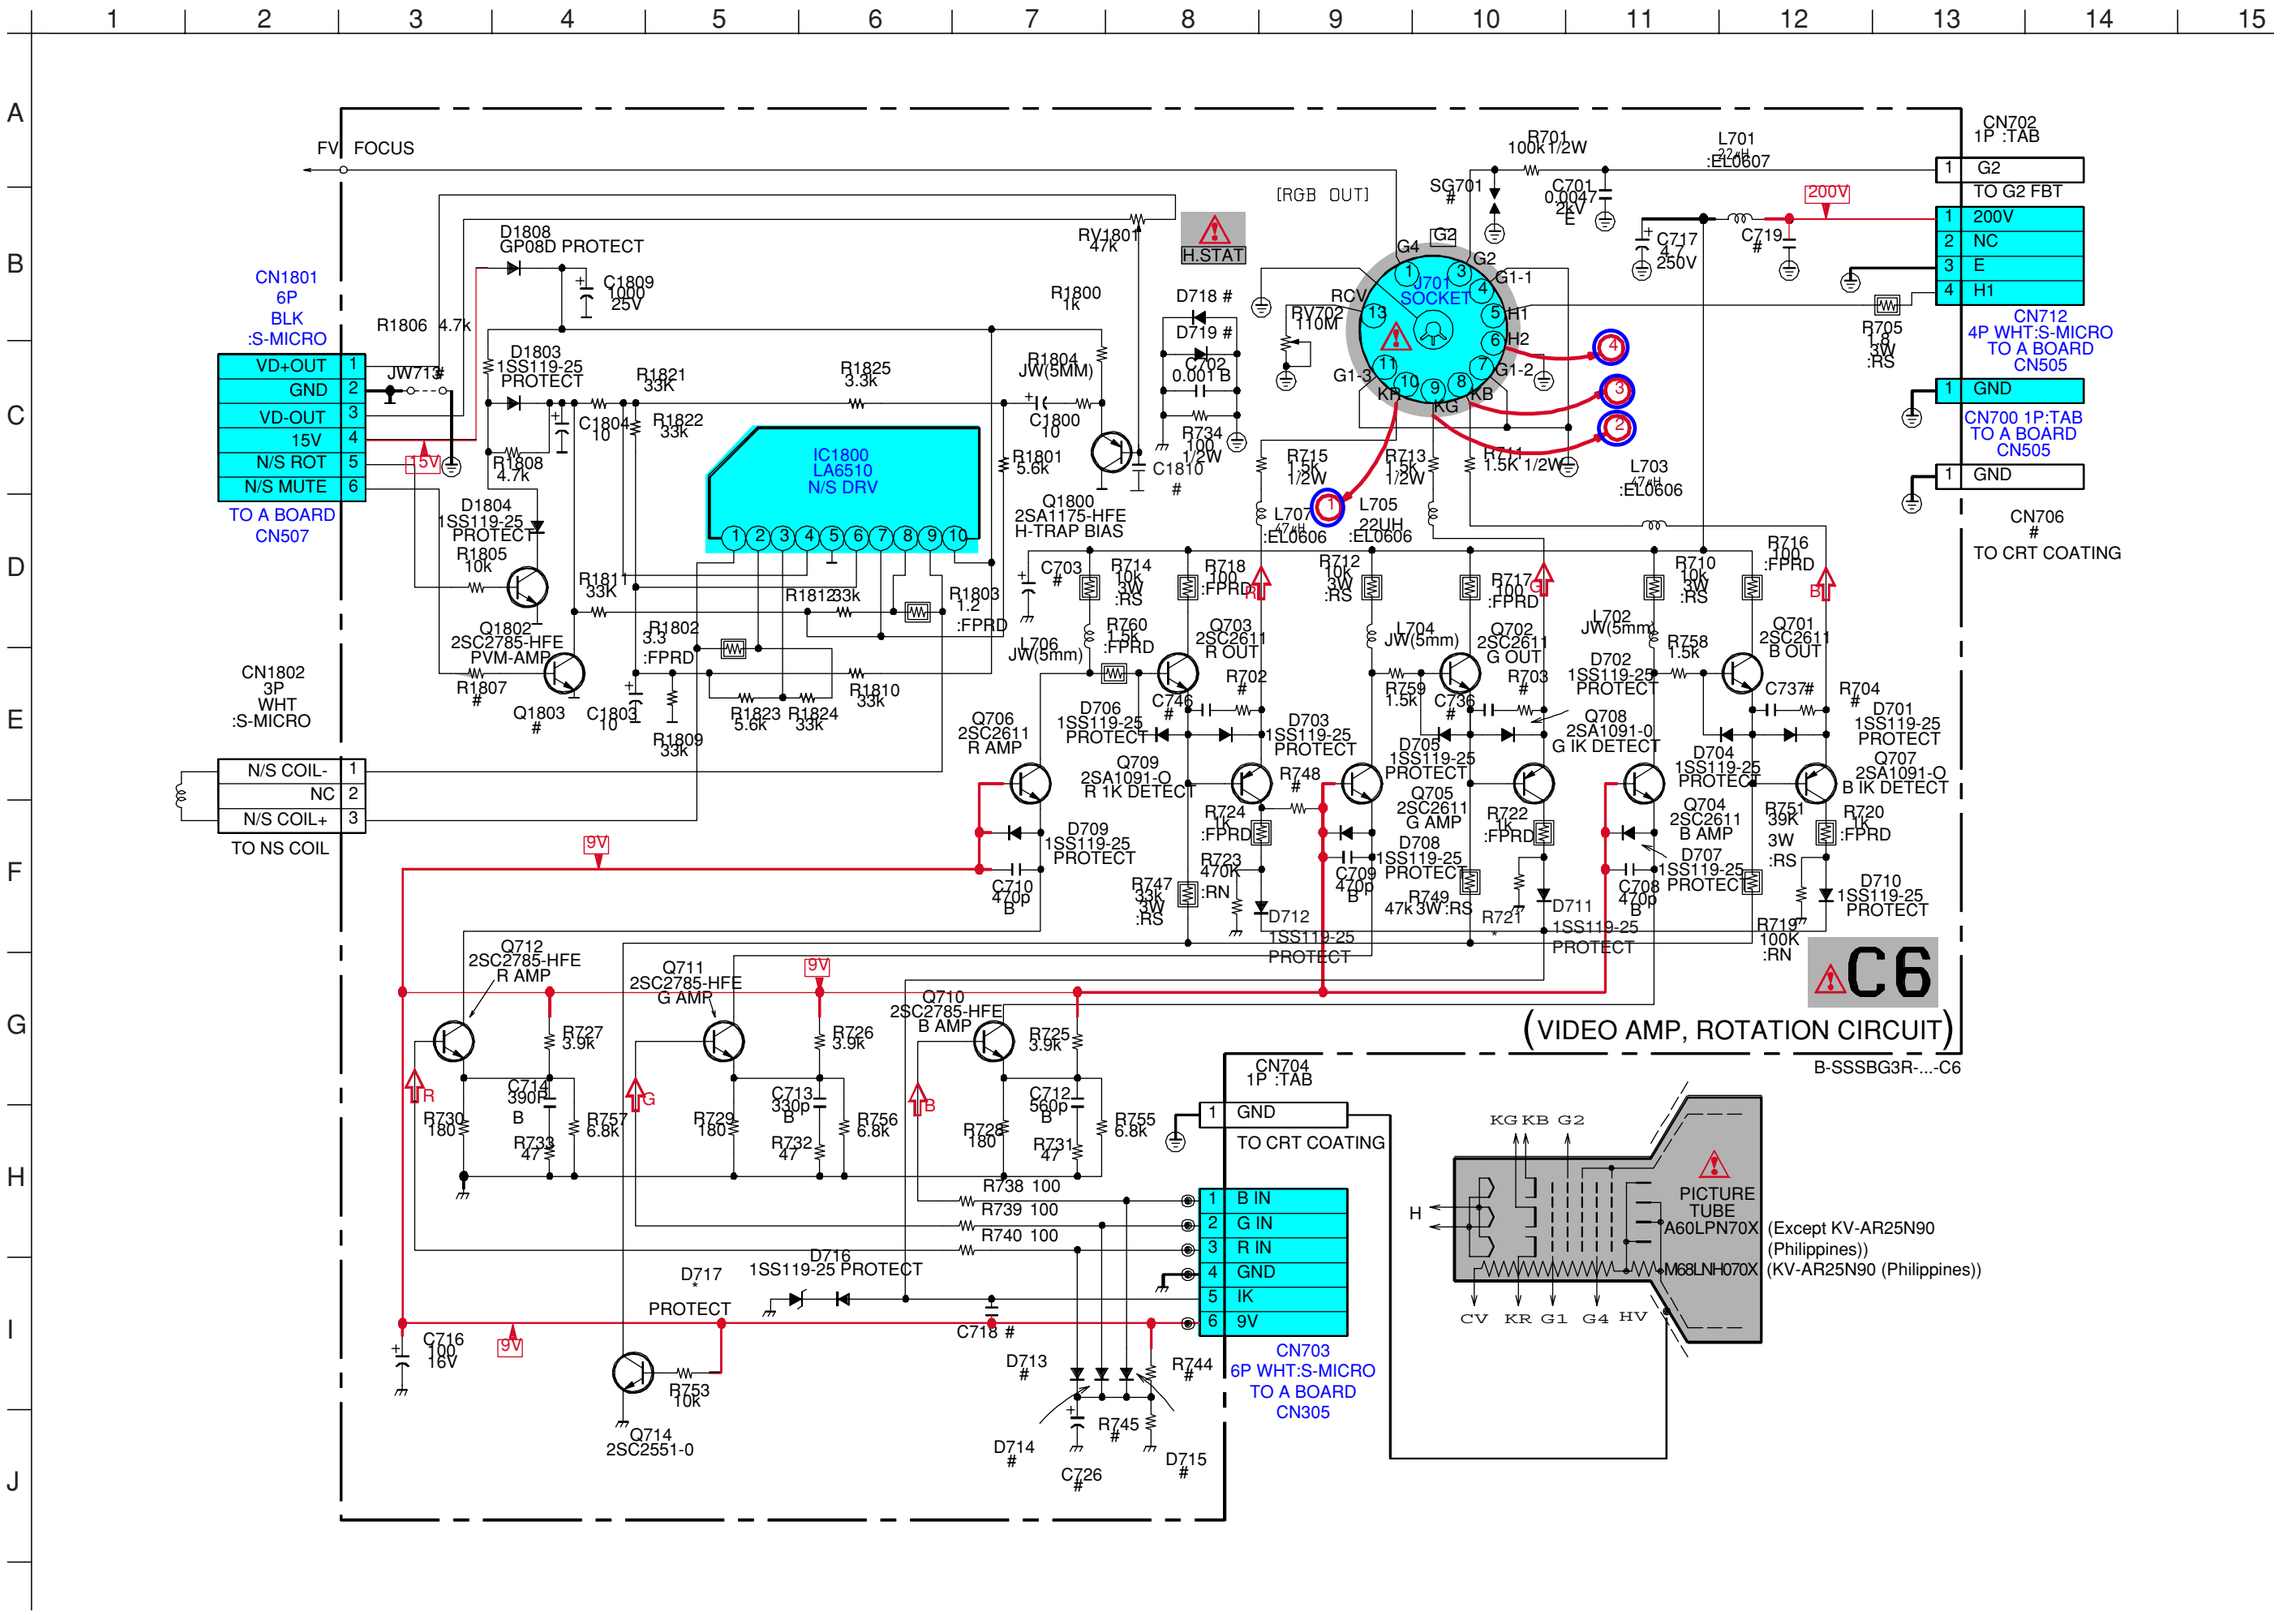

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

(6) H1 Board Schematic Diagram

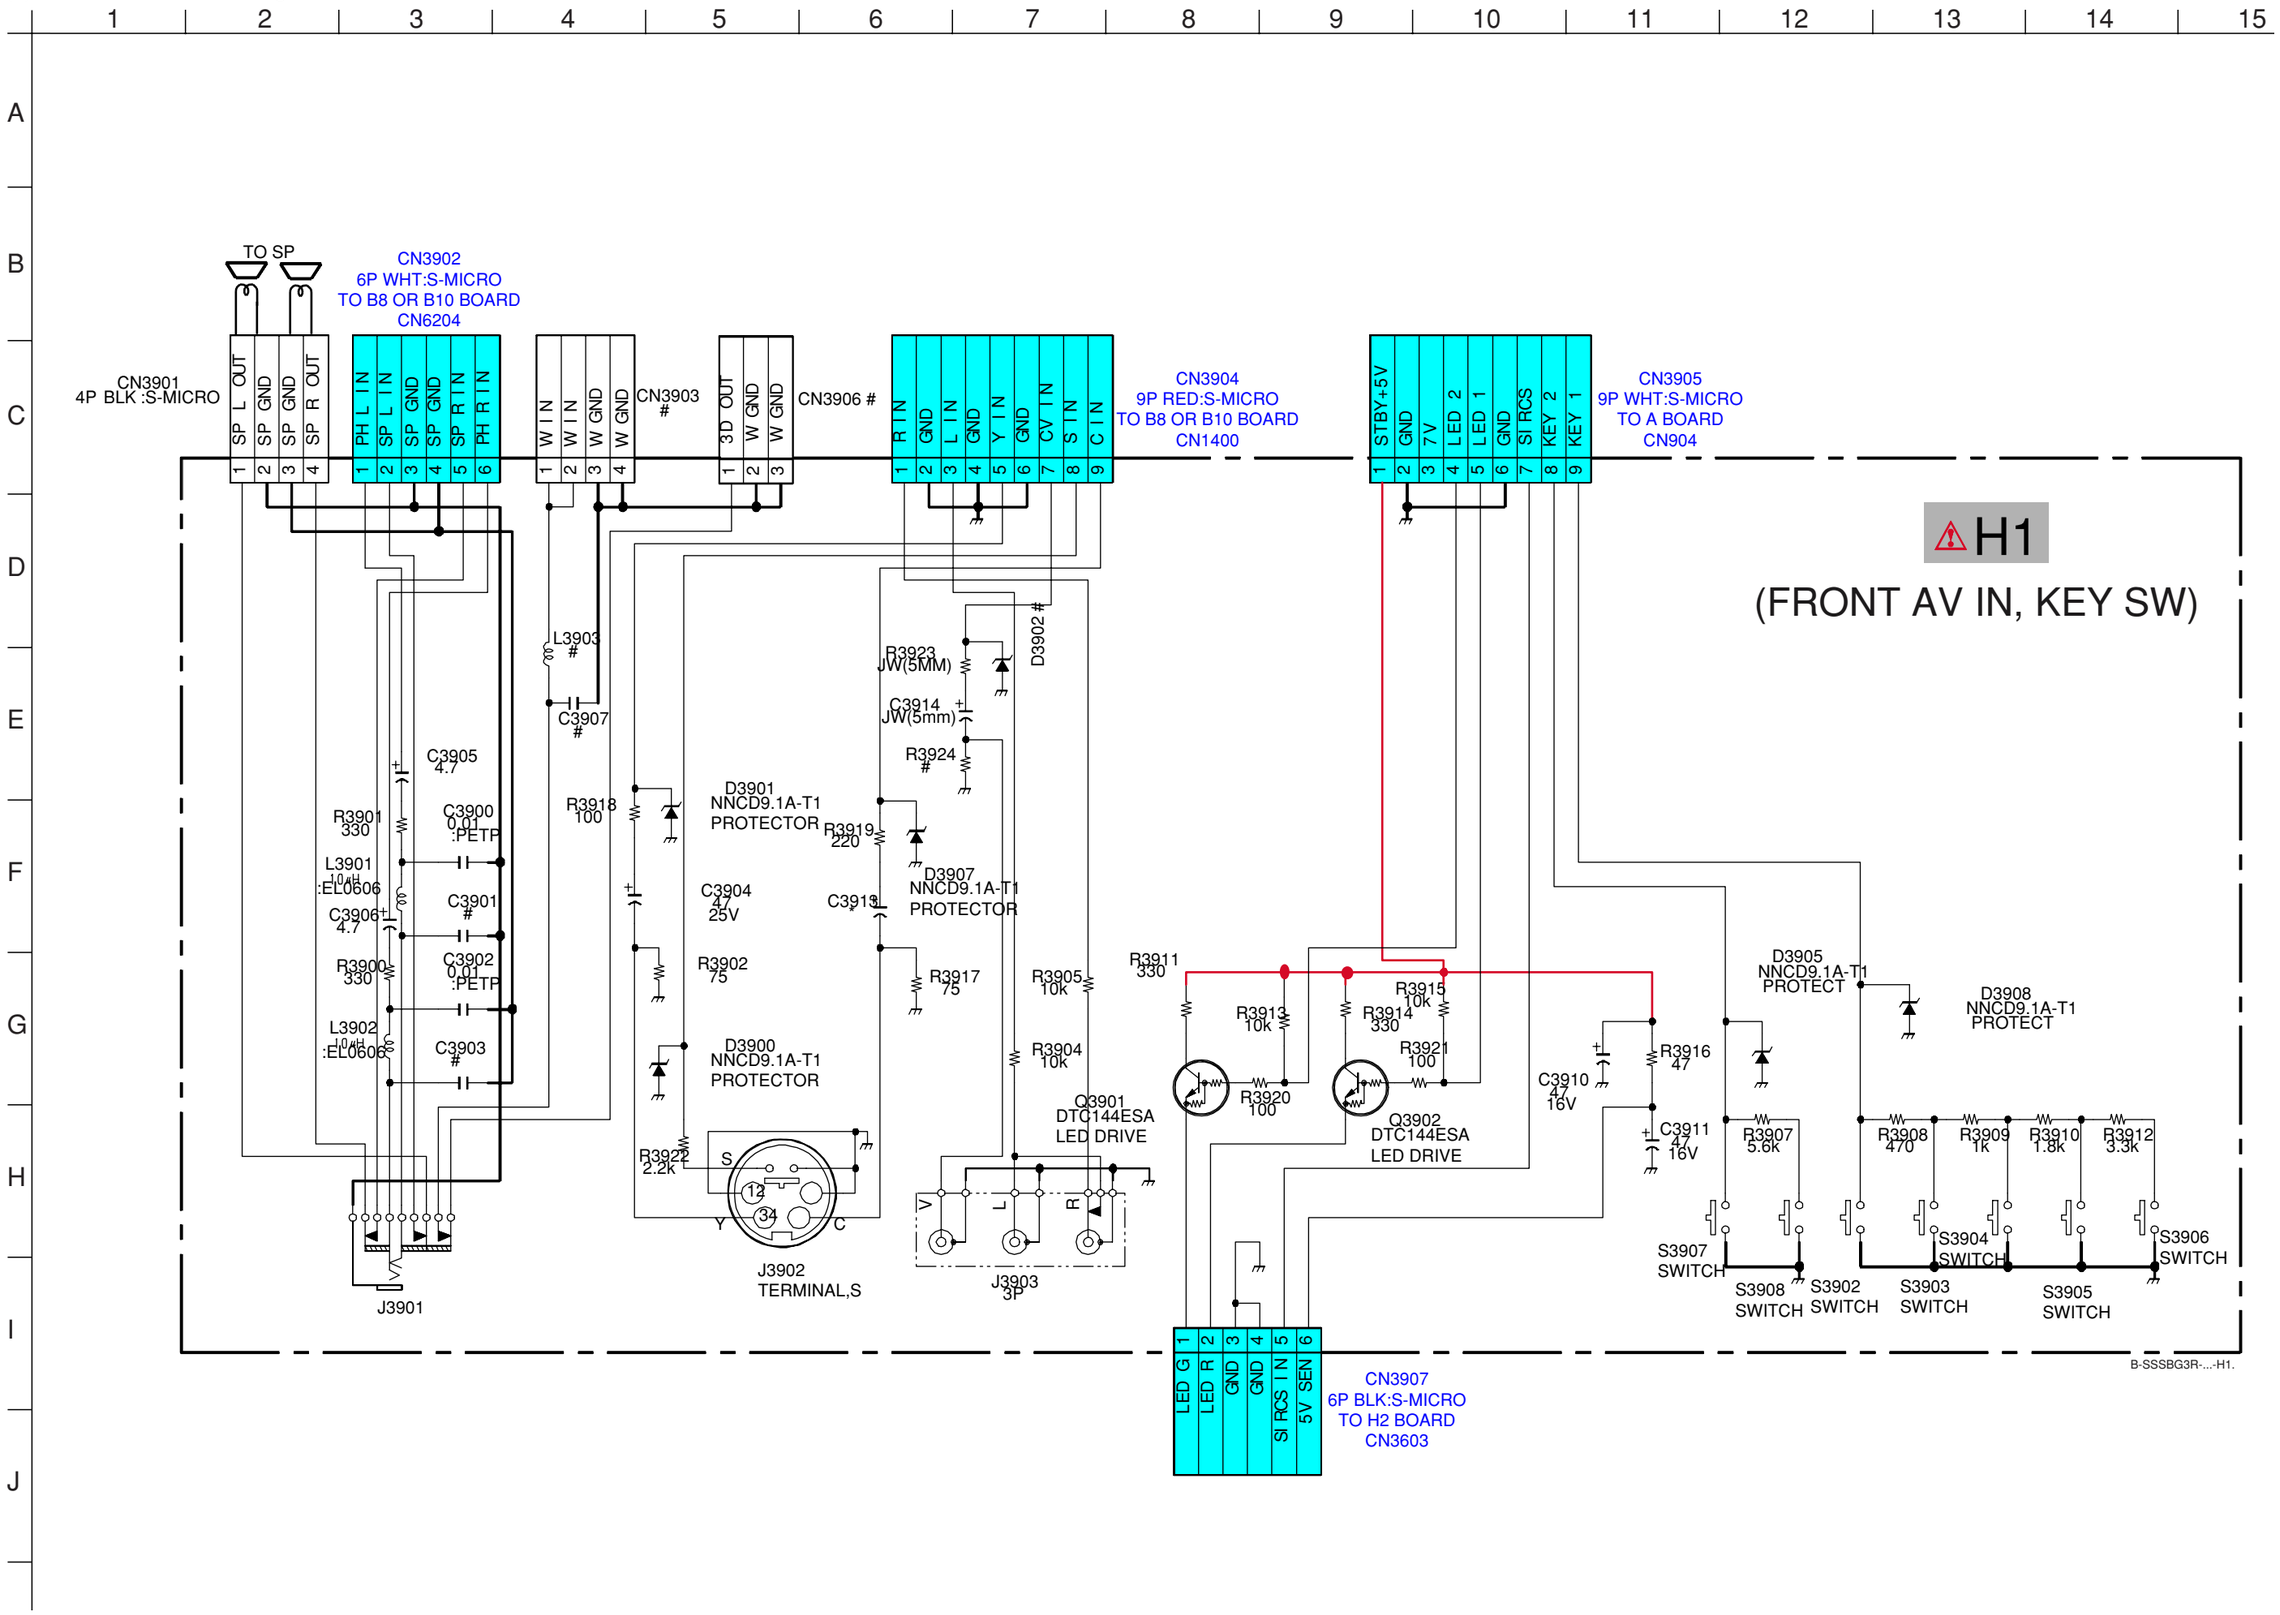

KV-AR25M66/AR25M60/AR25M80
RM-993
RM-995
KV-AR25N90
RM-996

(7) P5 Board Schematic Diagram

(KV-AR25M66 ONLY)

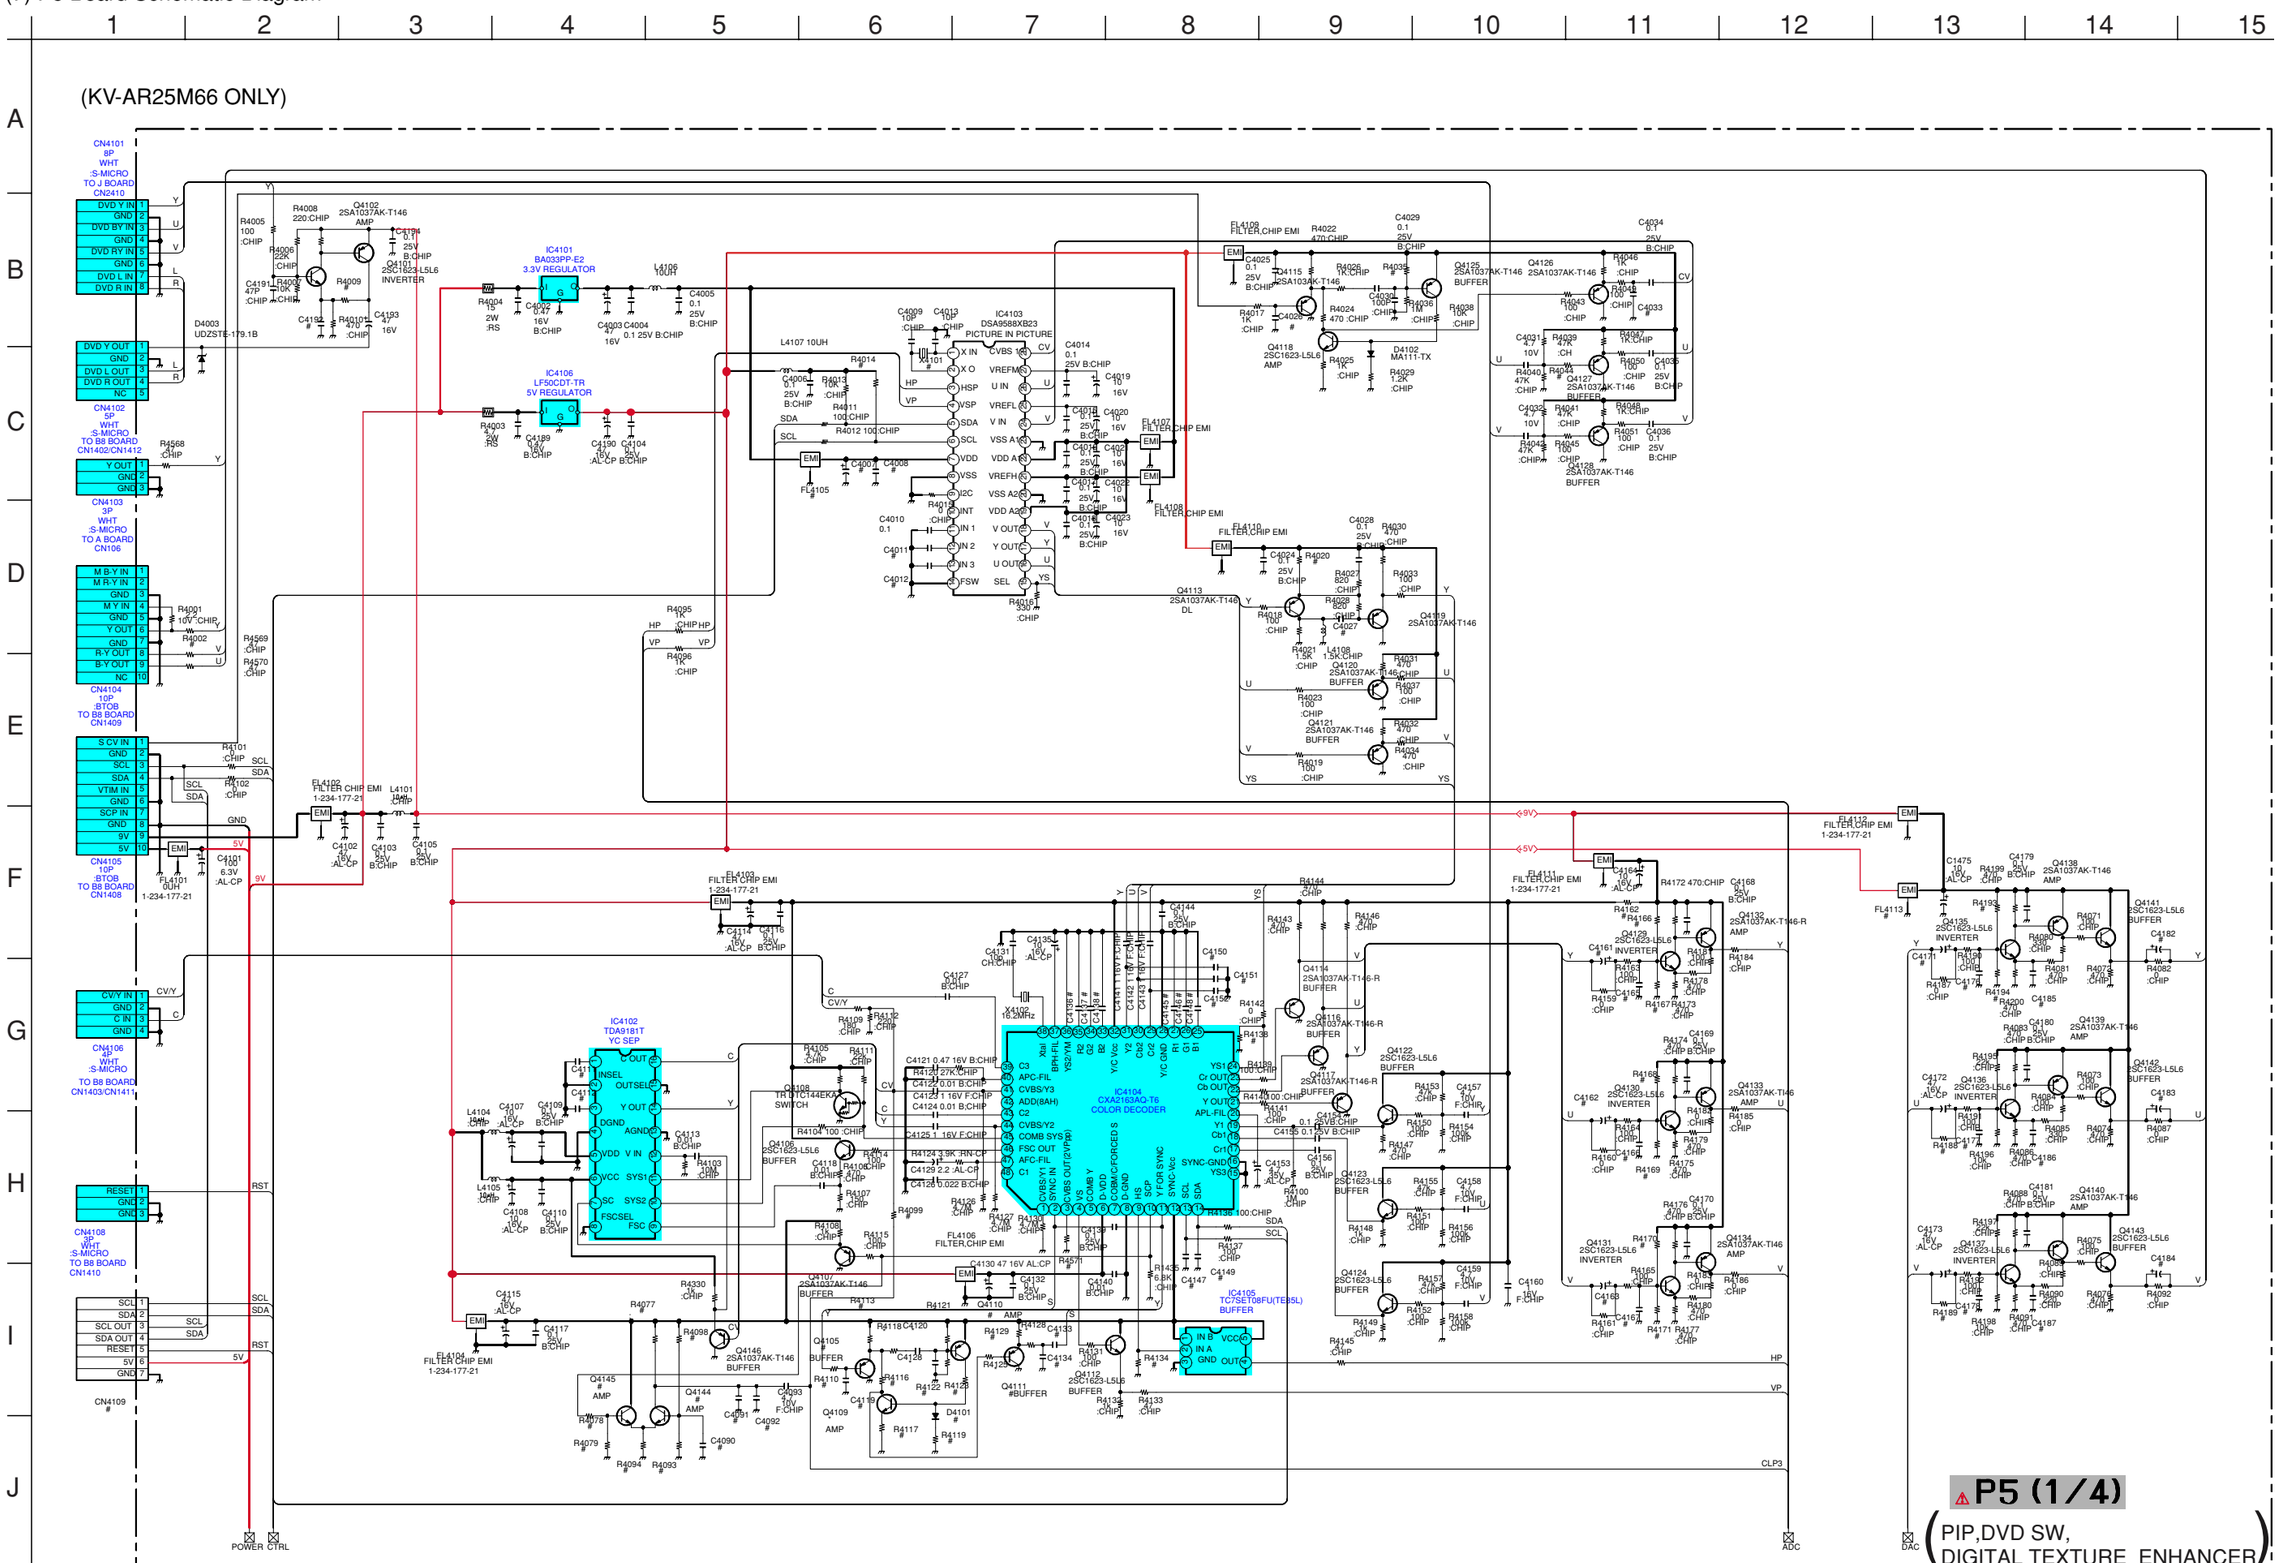

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

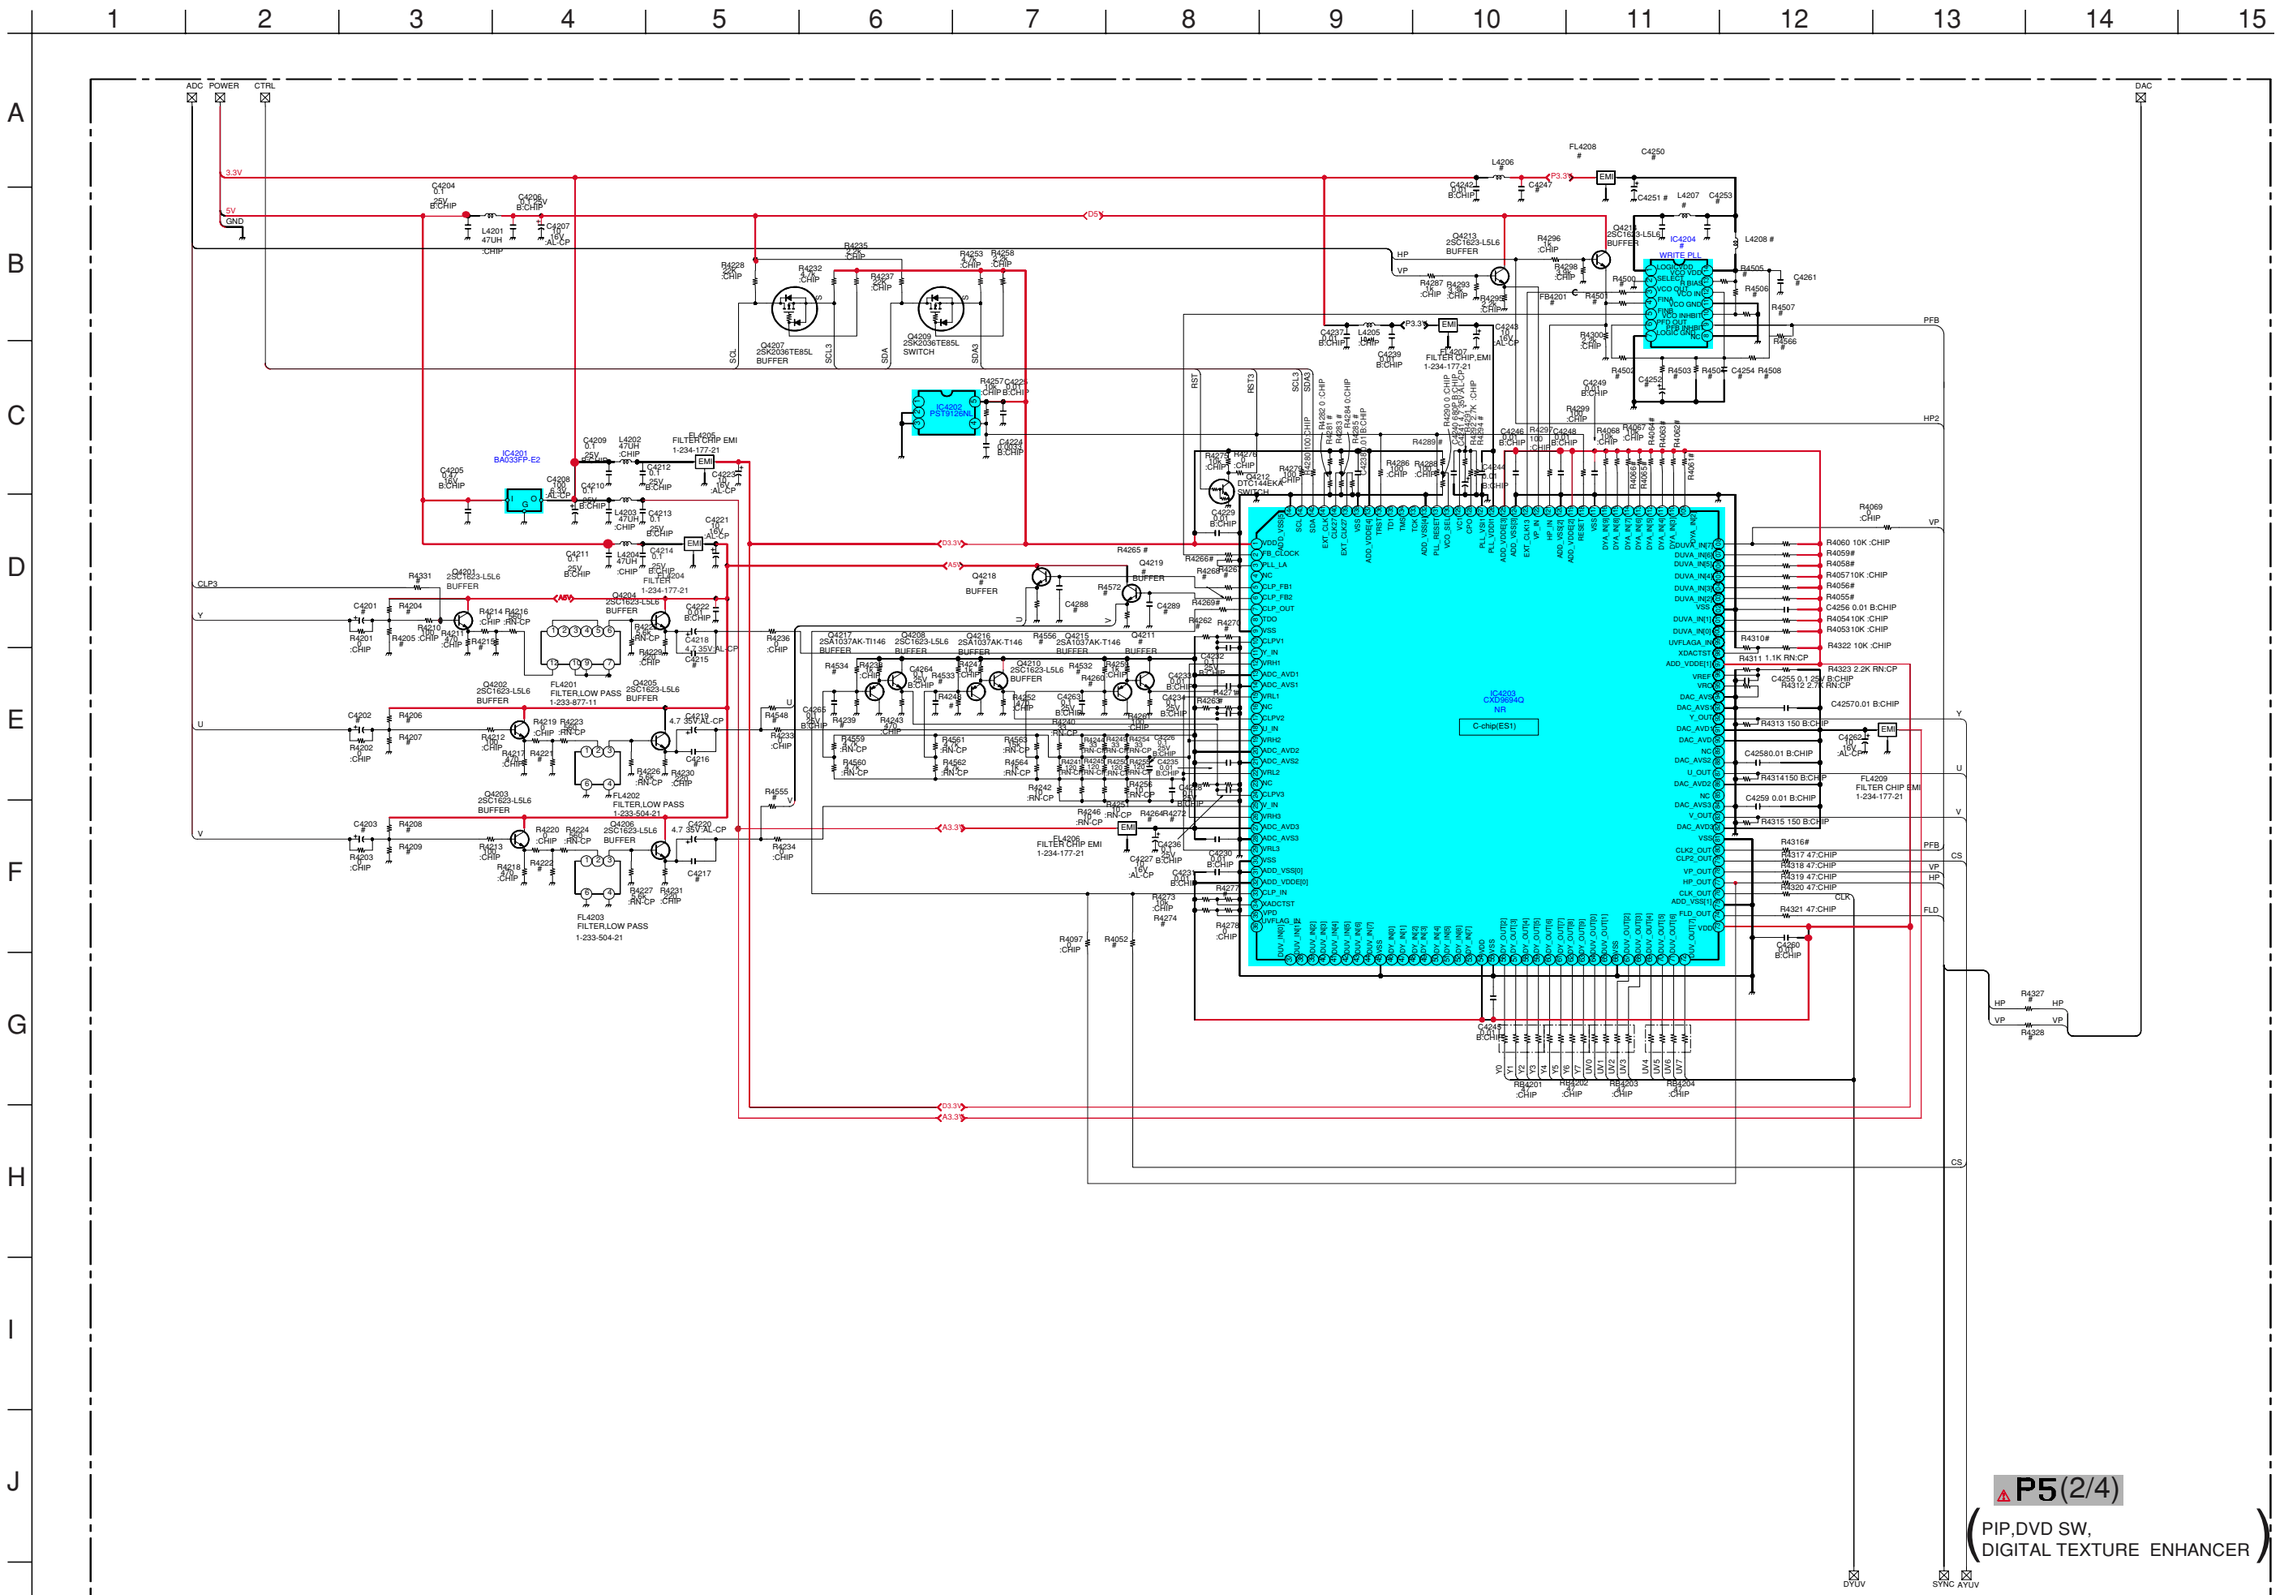

⚠P5(2/4)

(PIP,DVD SW,
DIGITAL TEXTURE ENHANCER)

B-SSSBG3R-...-P5.AR25(6)(PG2/4)

KV-AR25M66/AR25M60/AR25M80
RM-993
RM-995
KV-AR25N90
RM-996

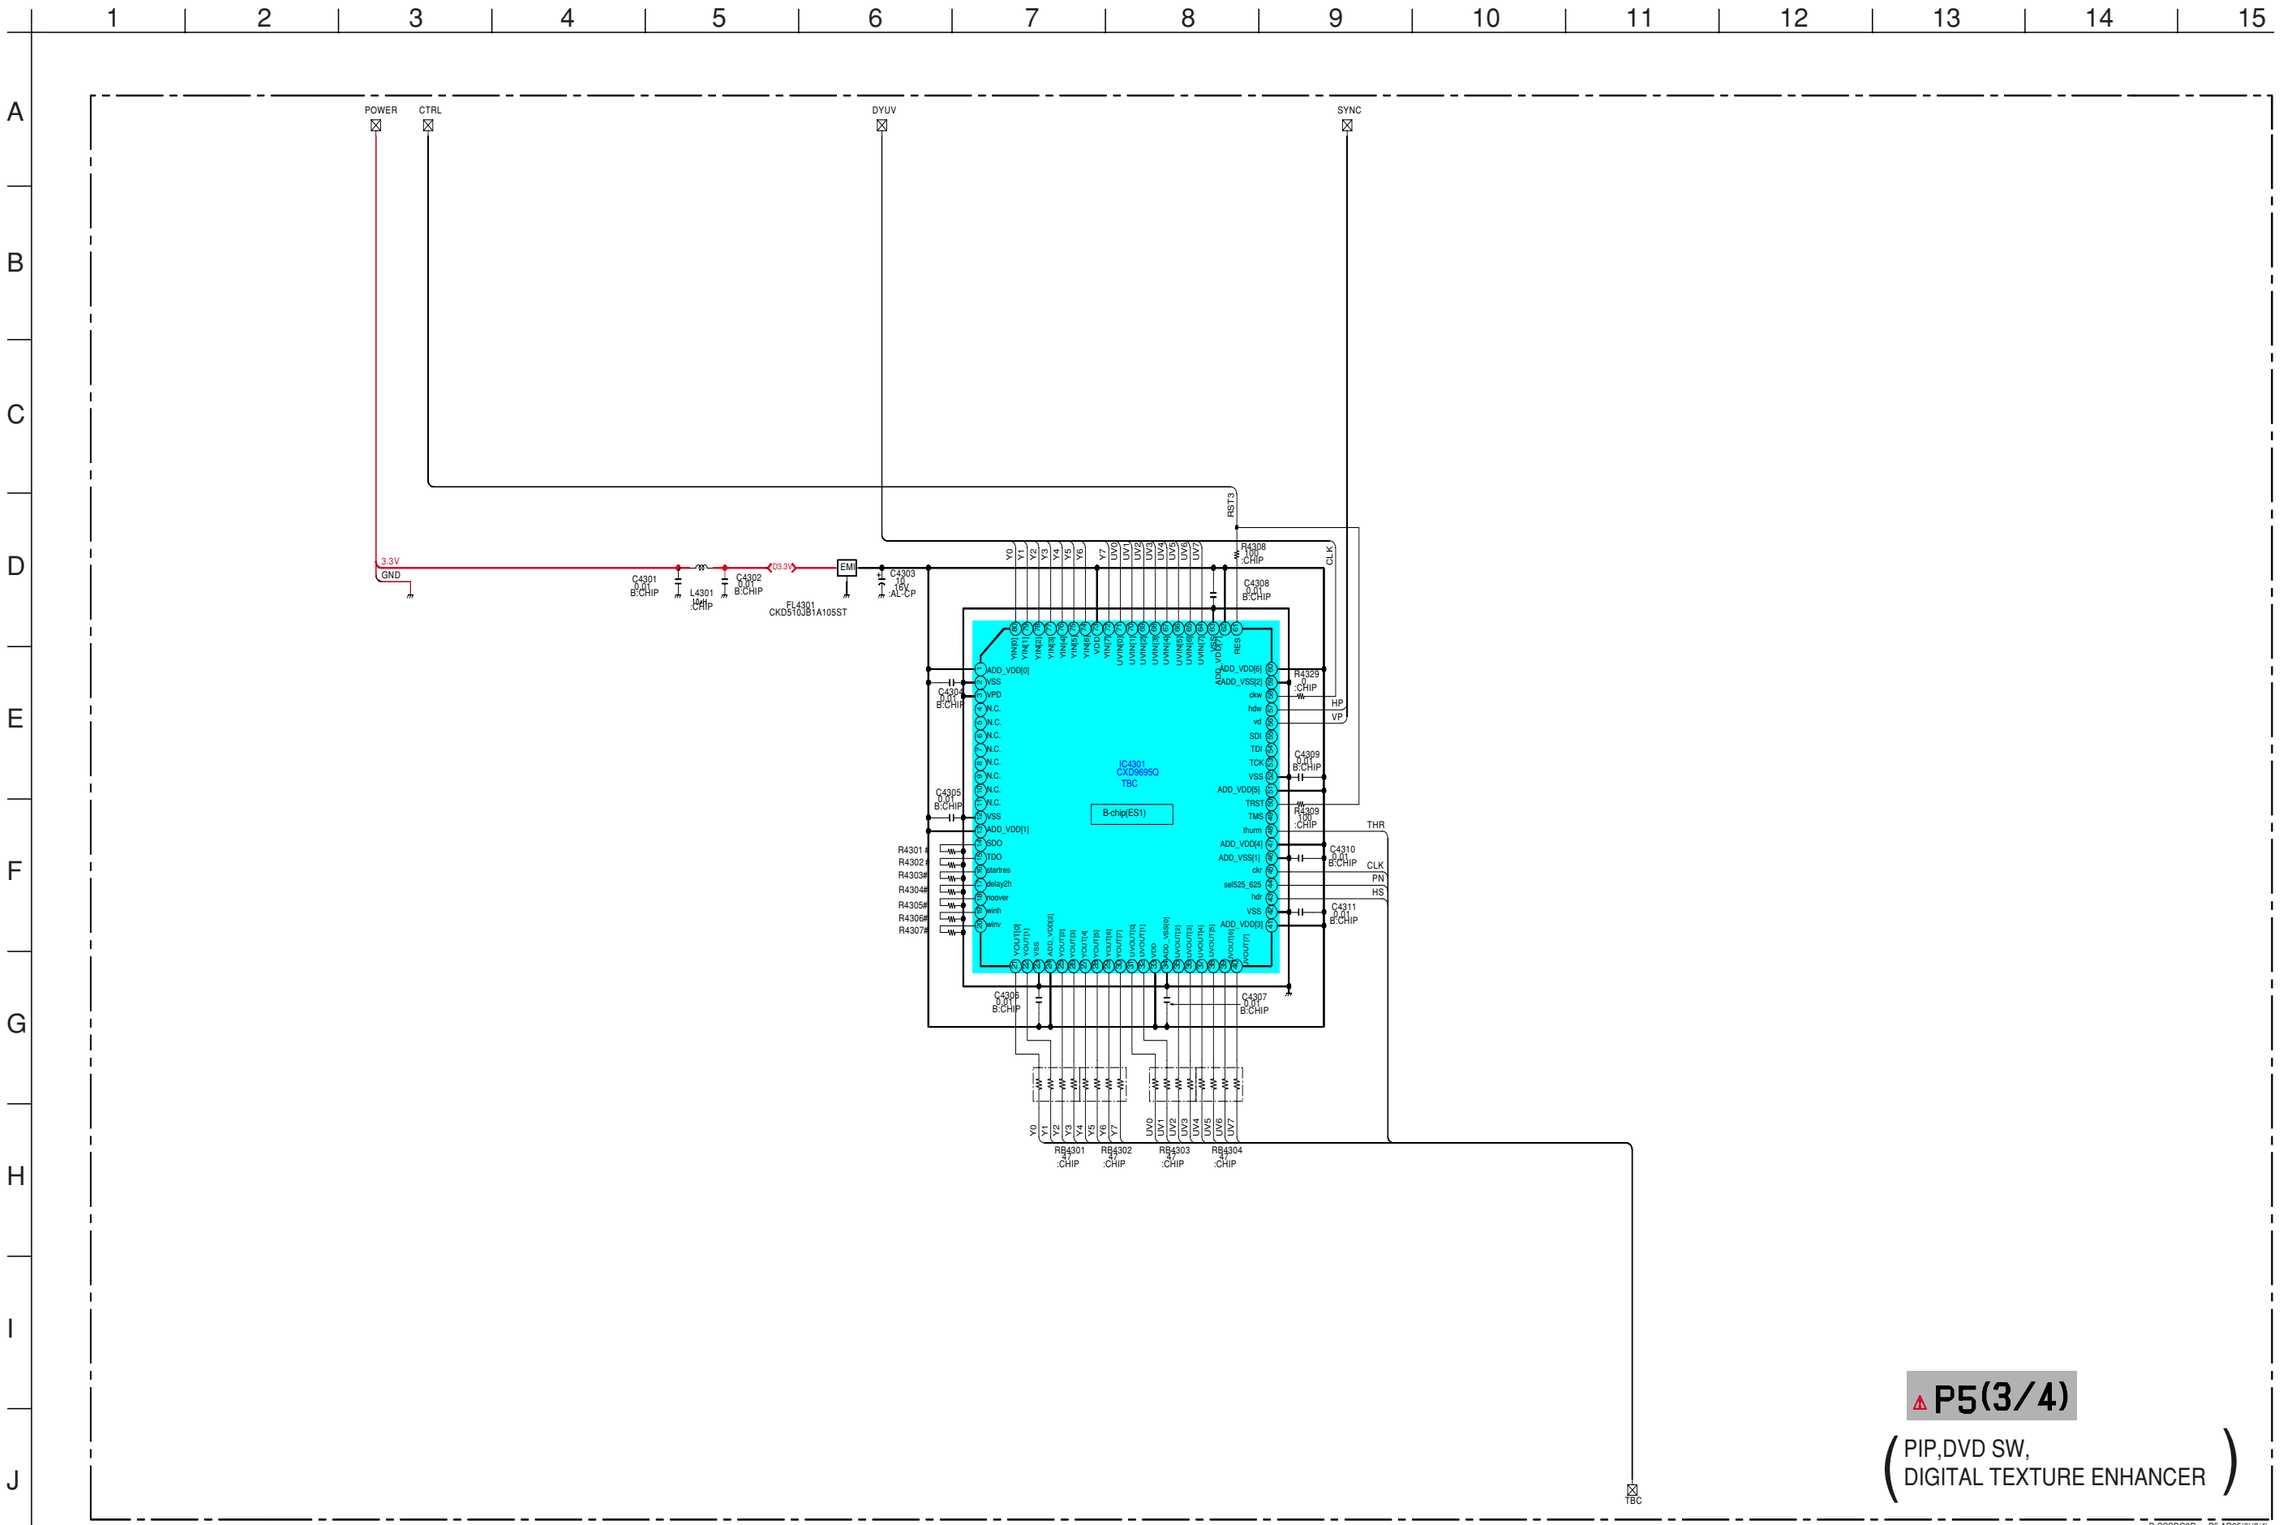

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

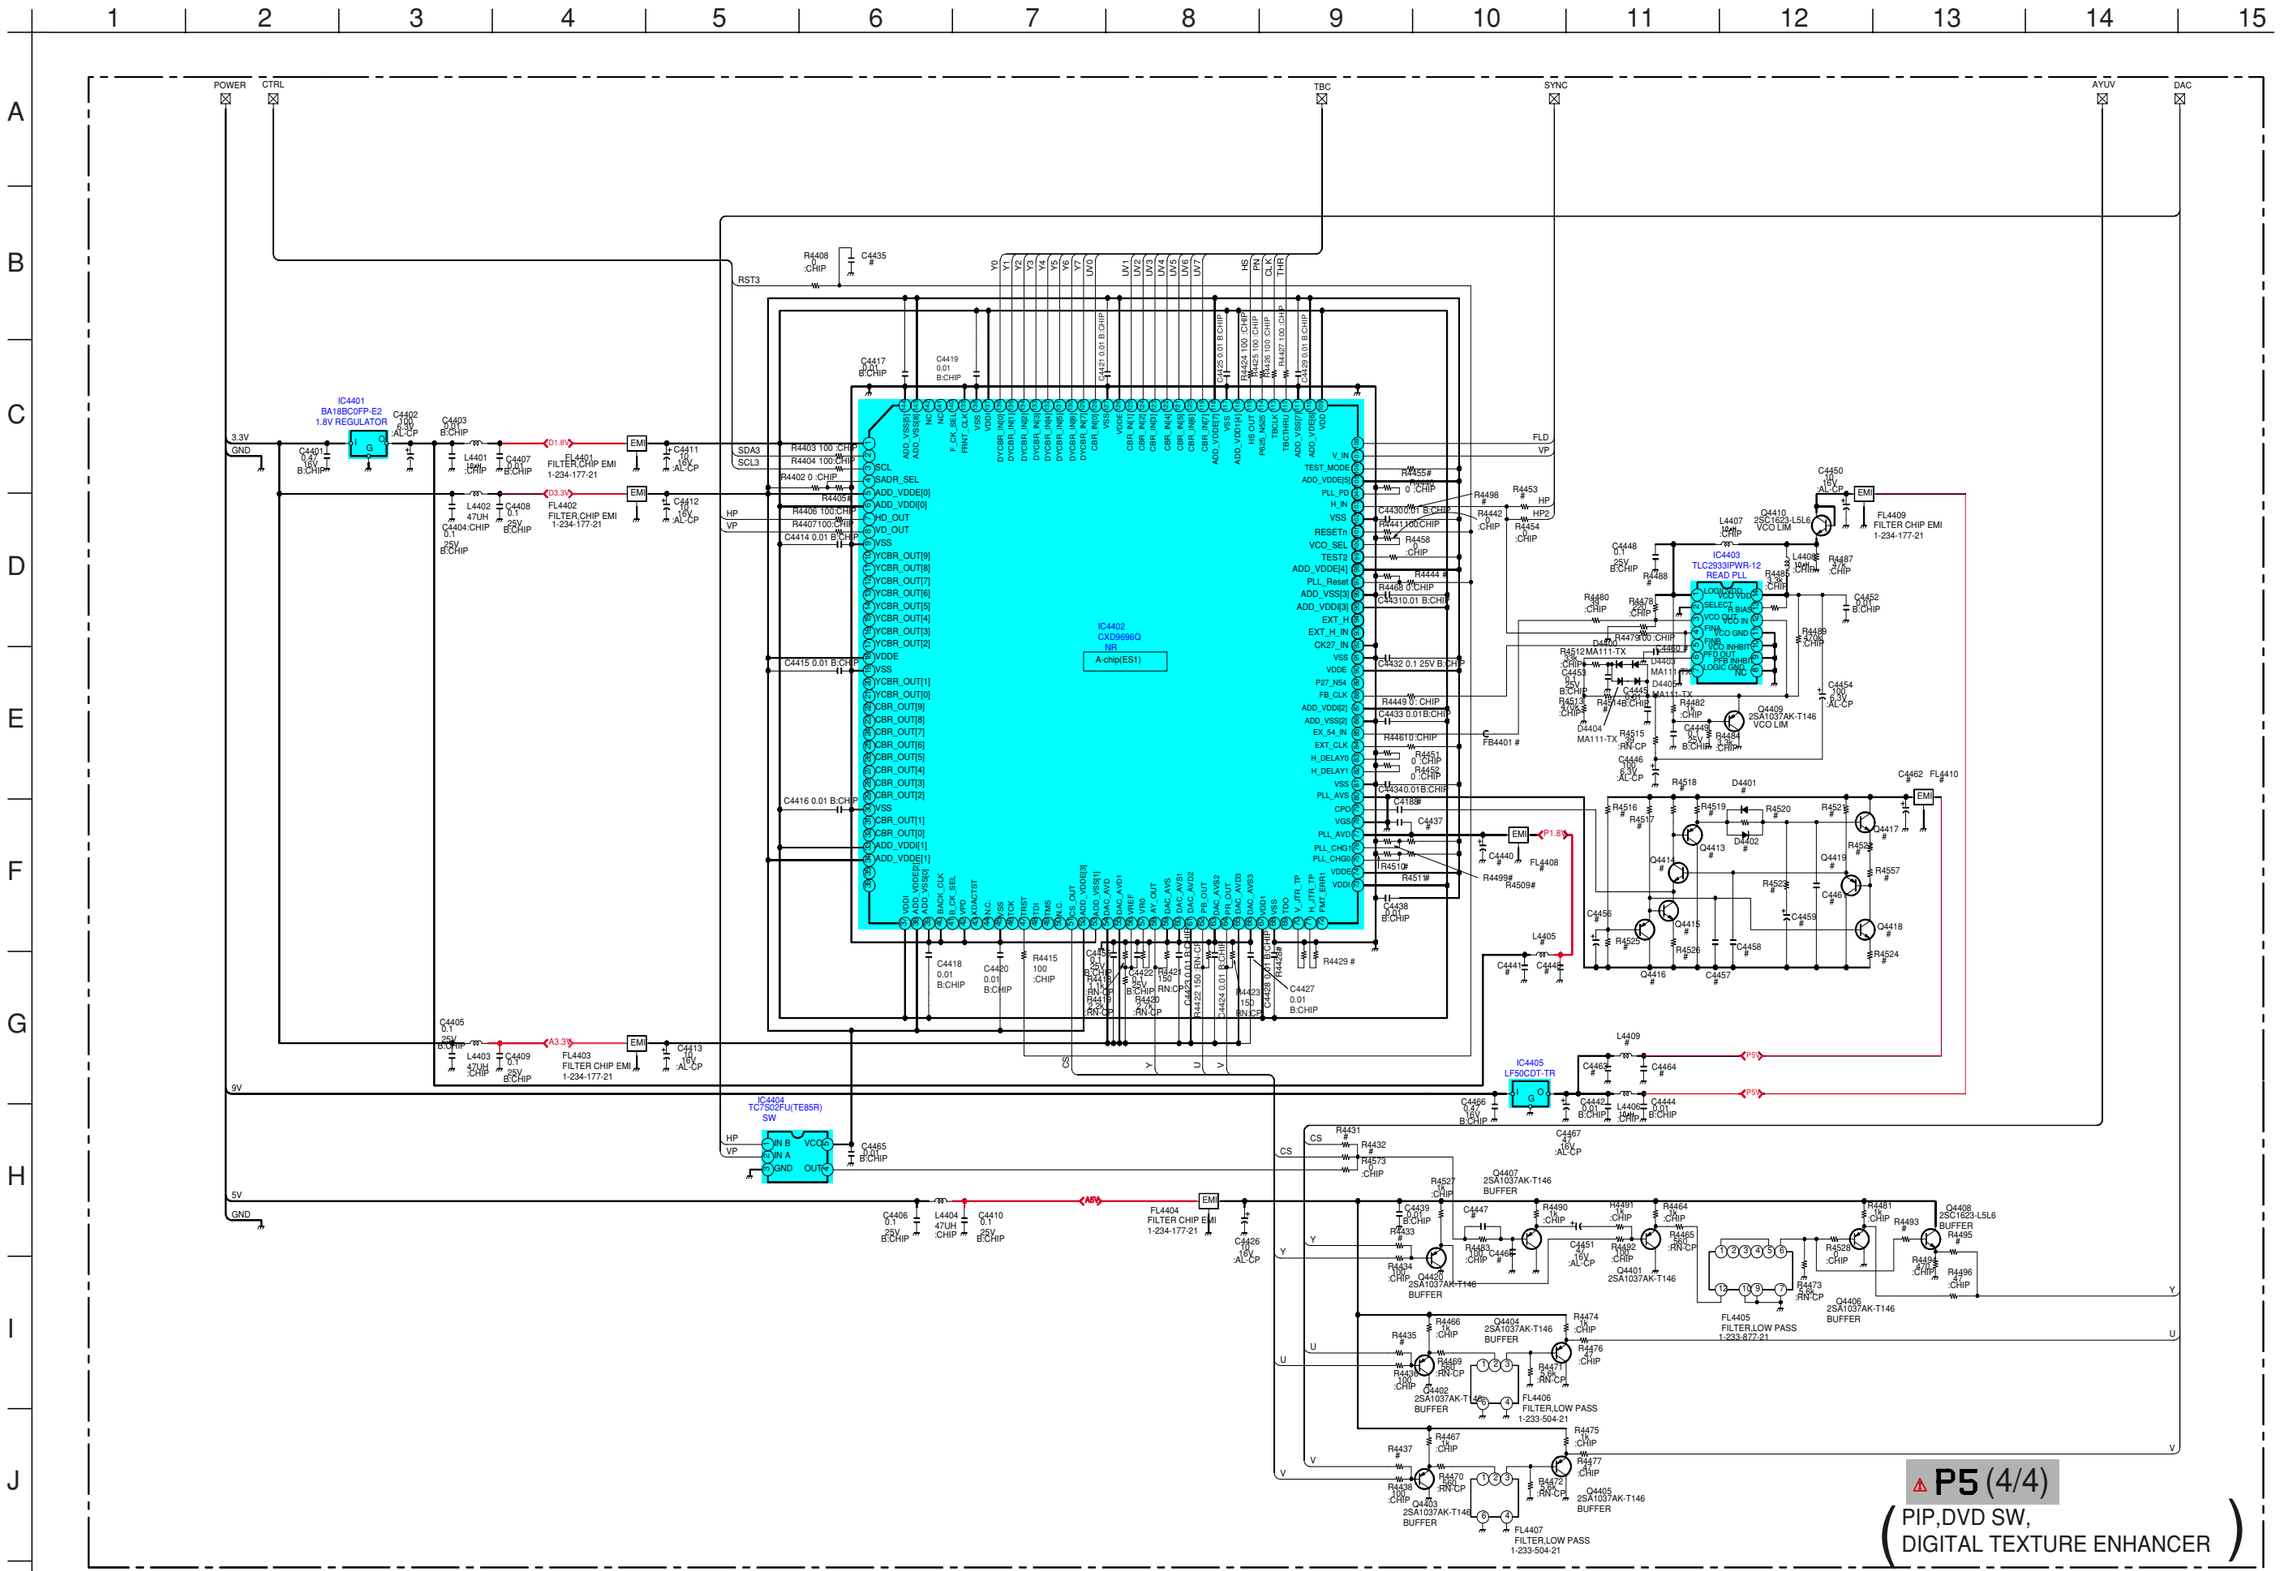

⚠ P5 (4/4)

(PIP,DVD SW,
DIGITAL TEXTURE ENHANCER)

B-SSSBG3R-...-A.AR25(6).PG4/4

(8) B1 Board Schematic Diagram

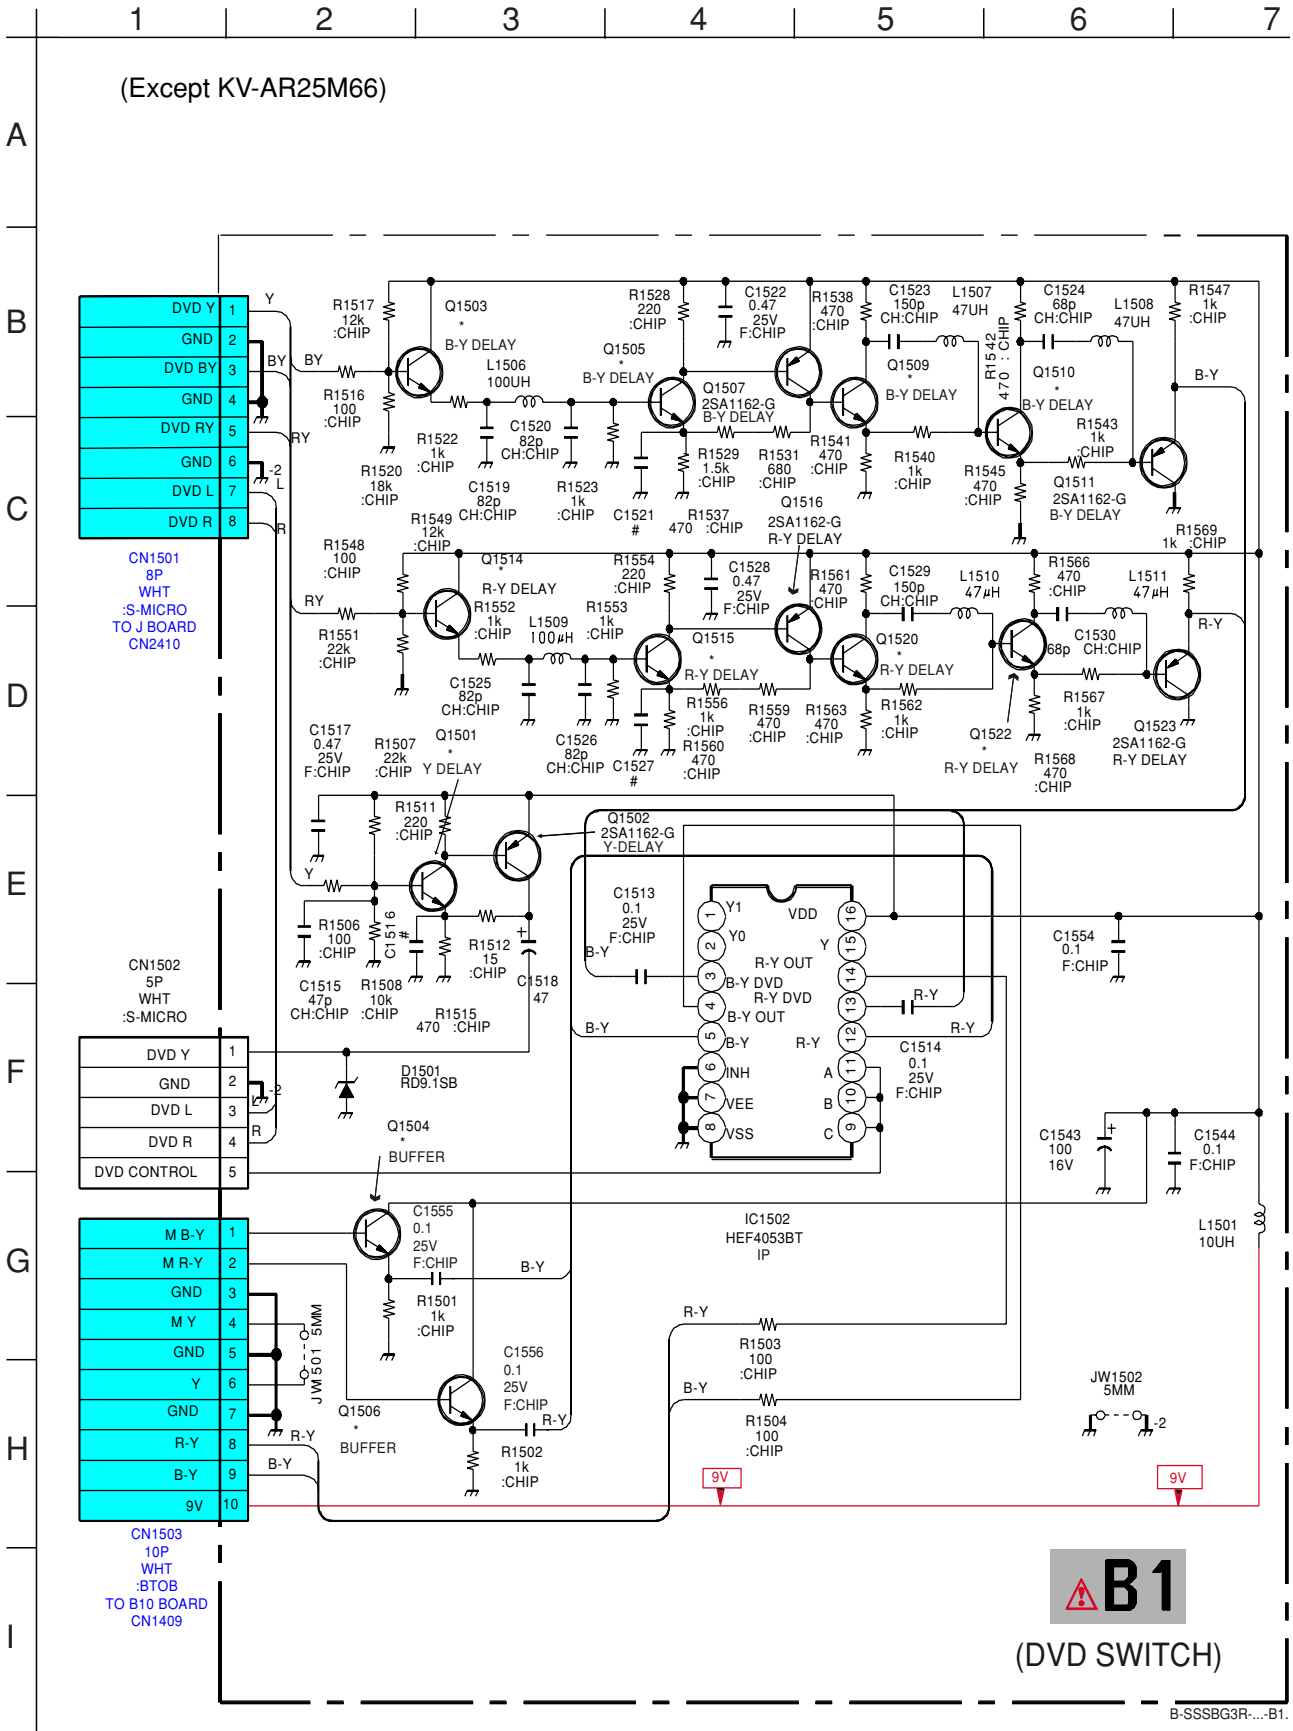

(9) H2 Board Schematic Diagram

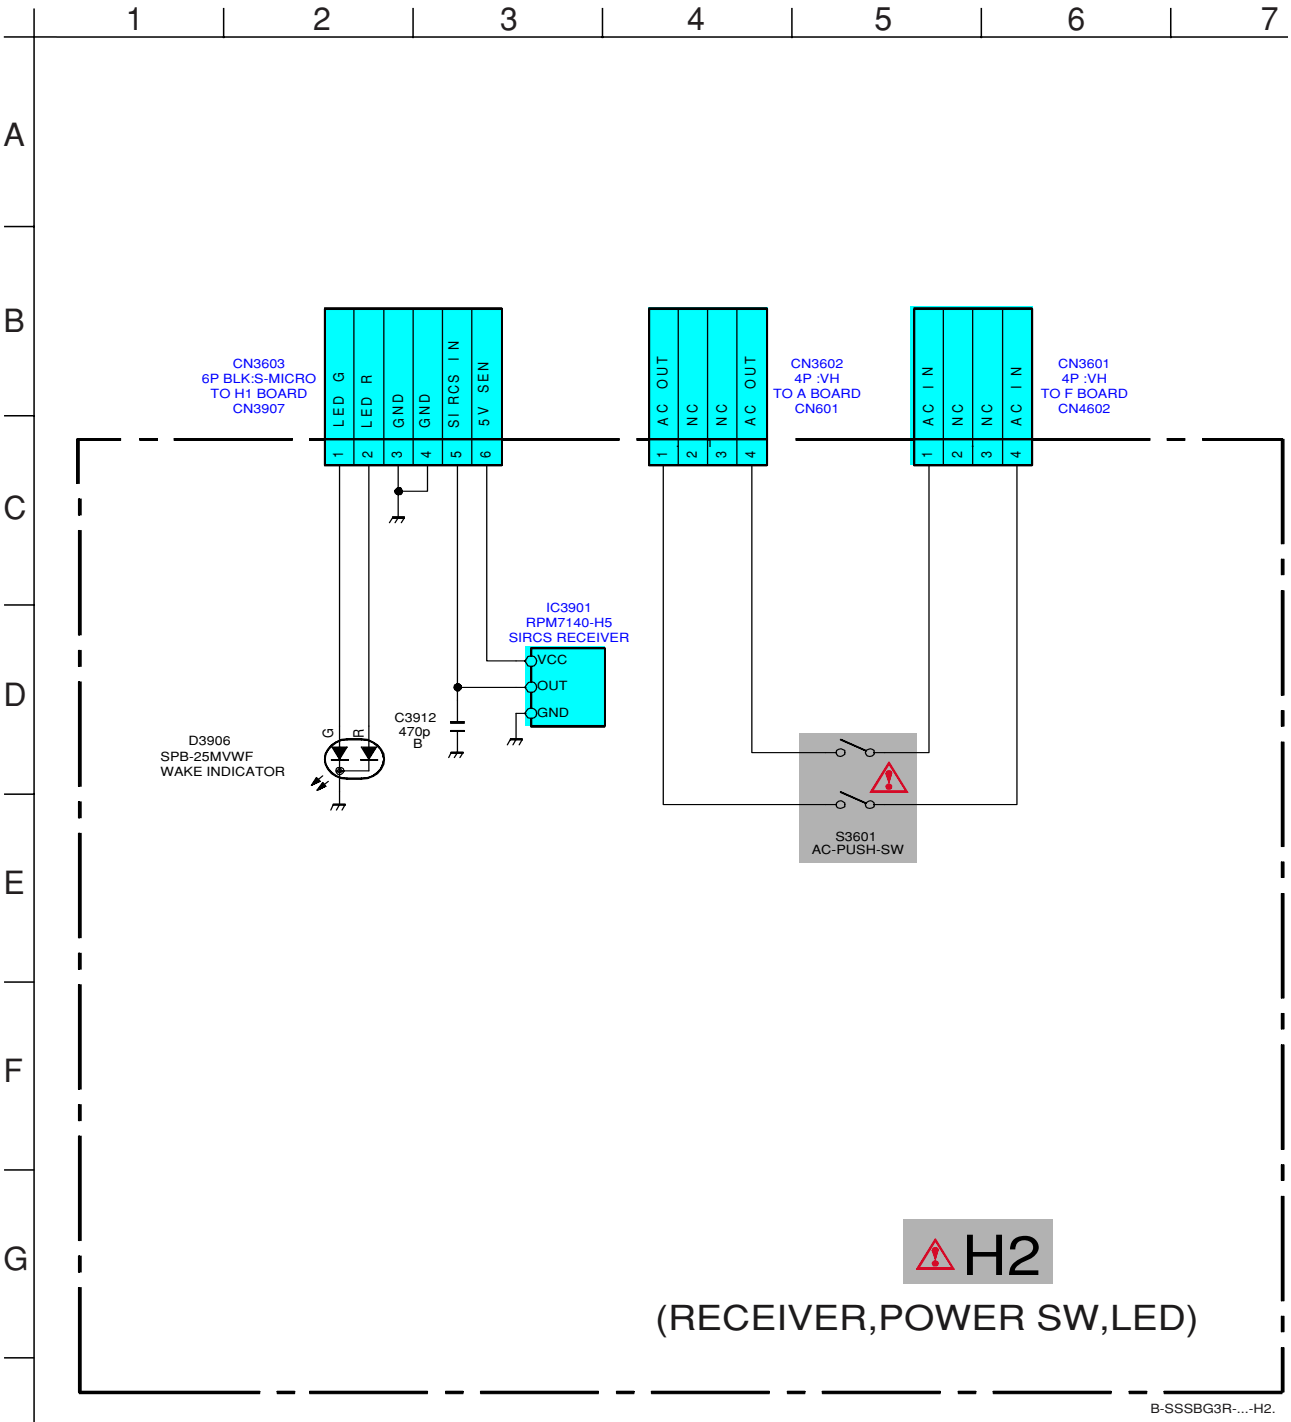

(10) J and F Boards Schematic Diagrams

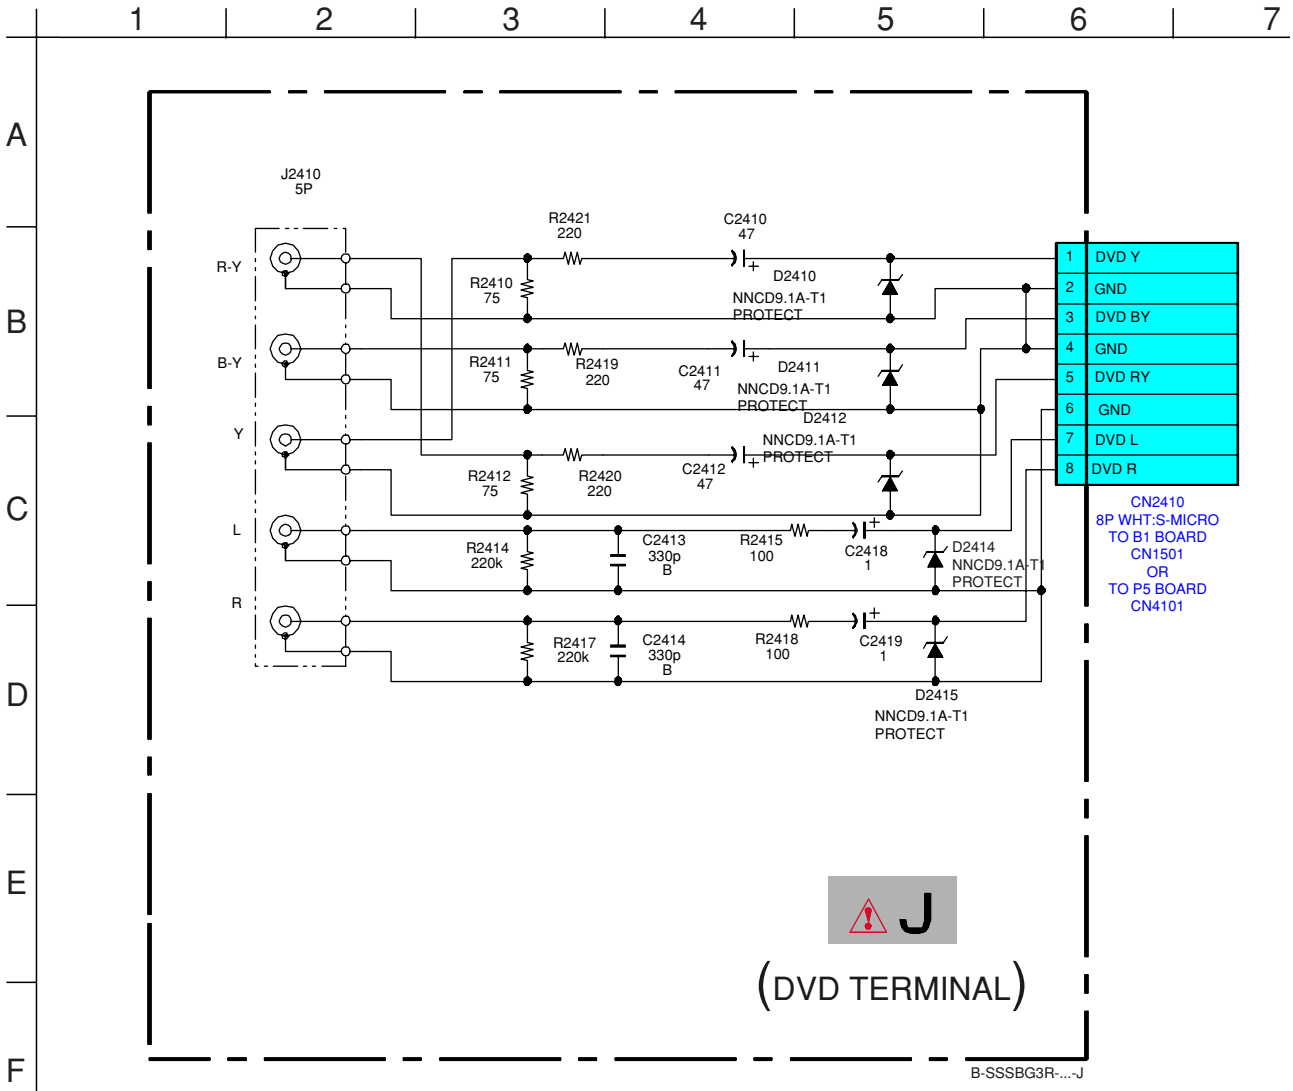

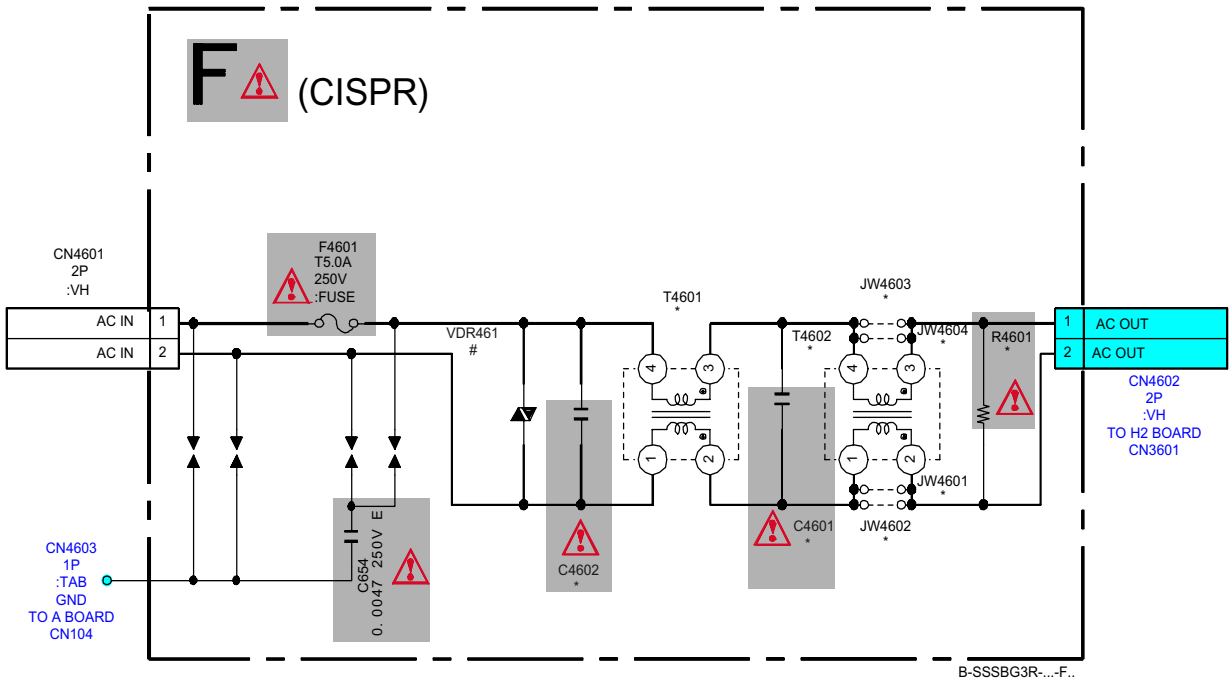

(11) VM1 Board Schematic Diagram

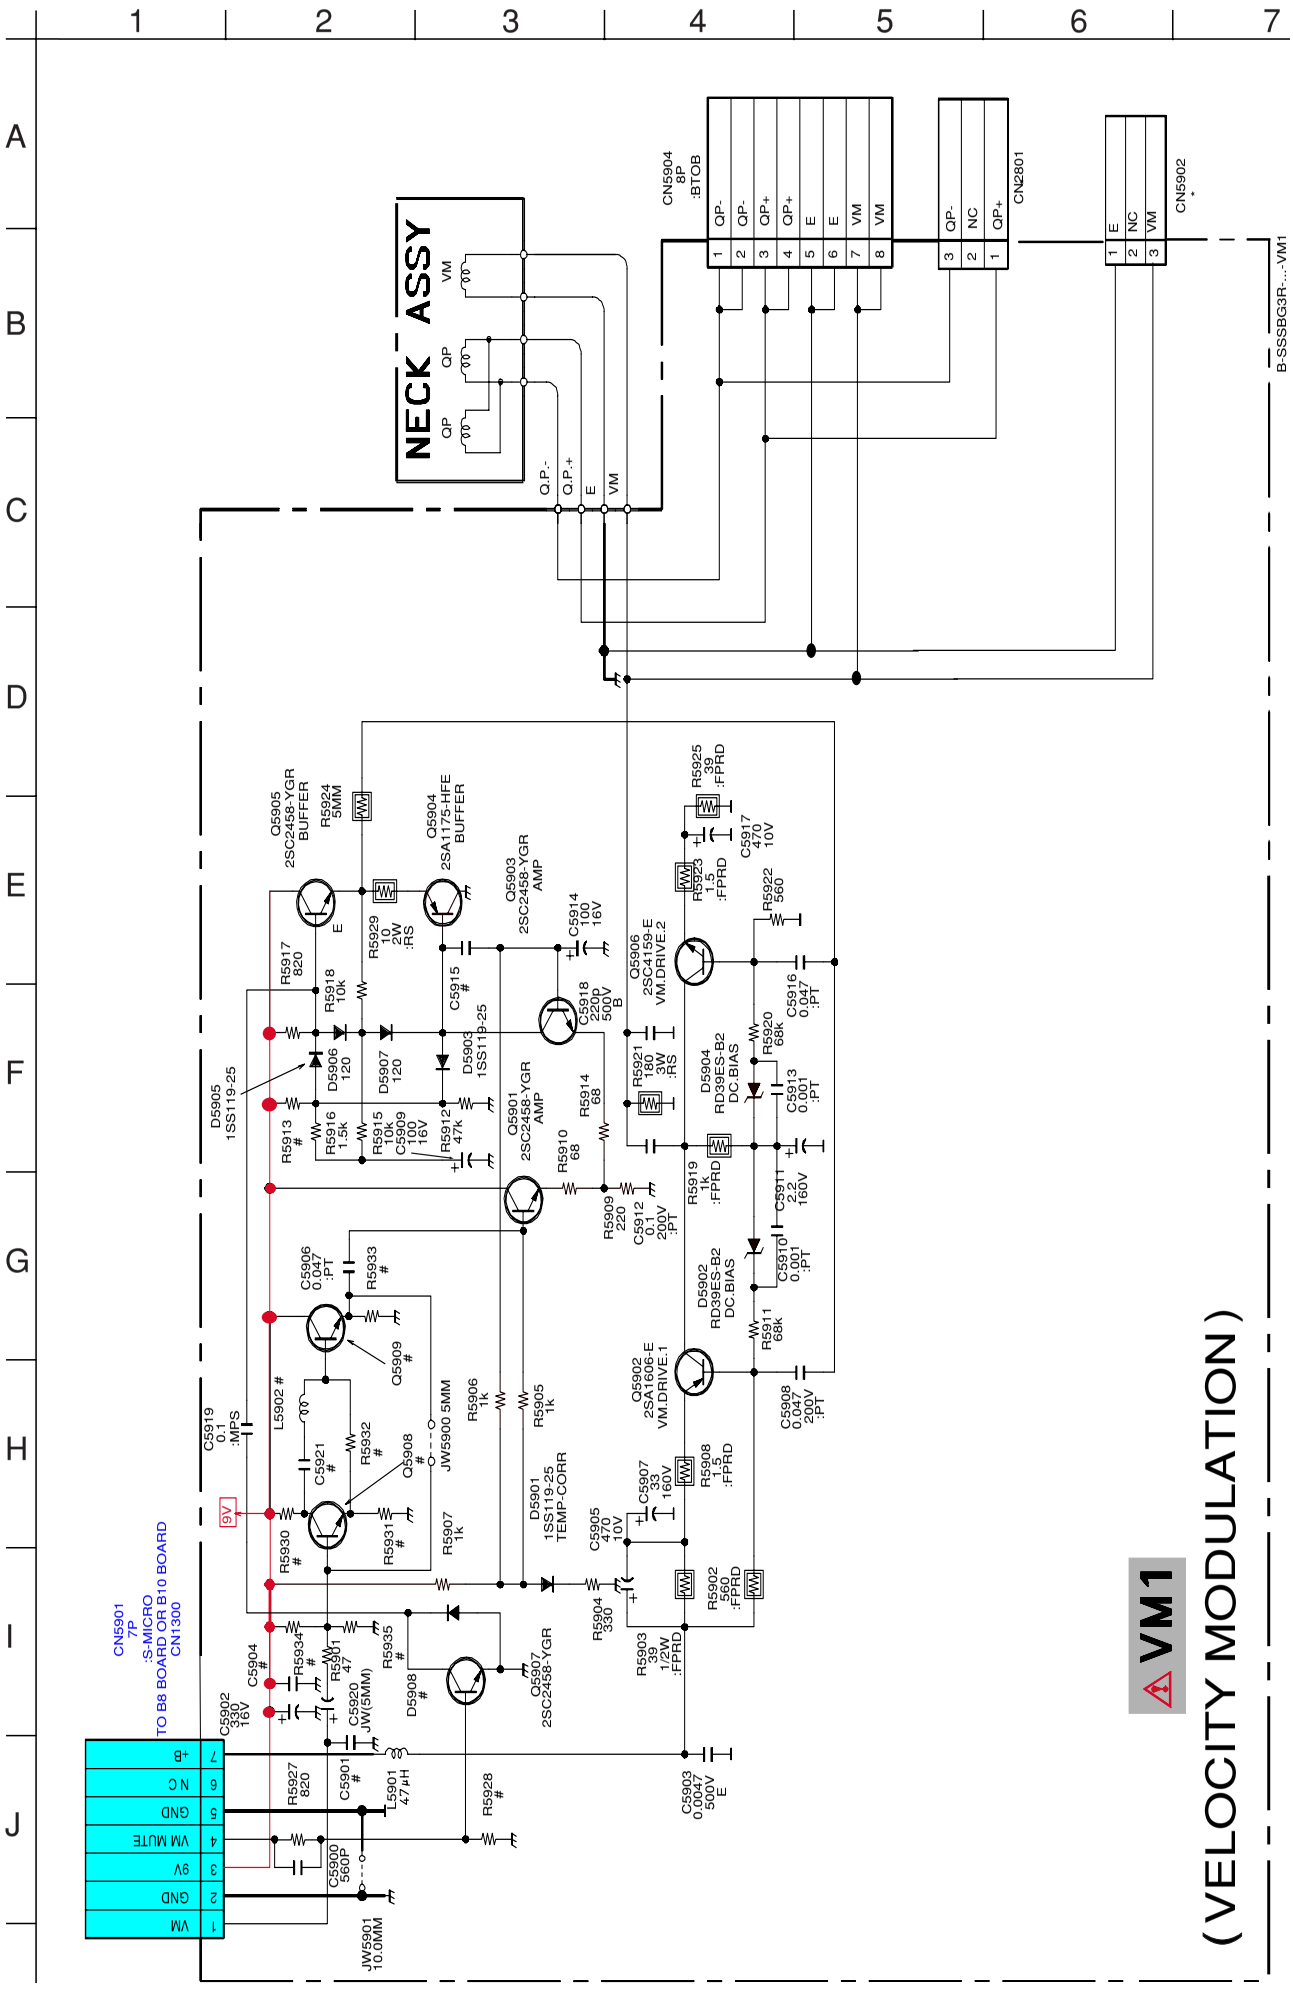

A Board ✲ Mark List

	KV-AR25M60	KV-AR25M66	KV-AR25M80(ME)	KV-AR25M80(E)	KV-AR25N90(Philippines)	KV-AR25N90(Taiwan)
C101	#	#	#	#	10	10
C106	#	#	#	#	0.047 F:CHIP	0.047 F:CHIP
C115	#	47	#	#	#	#
C116	#	0.1 25V B:CHIP	#	#	#	#
C117	#	0.1 25V B:CHIP	#	#	#	#
C300	2.2 16V F:CHIP	#	2.2 16V F:CHIP	2.2 16V F:CHIP	2.2 16V F:CHIP	2.2 16V F:CHIP
C329	4.7	#	4.7	4.7	4.7	4.7
C335	0.1 25V B:CHIP	#	0.1 25V B:CHIP	0.1 25V B:CHIP	0.1 25V B:CHIP	0.1 25V B:CHIP
C347	100 16V	#	100 16V	100 16V	100 16V	100 16V
C348	0.1 25V B:CHIP	#	0.1 25V B:CHIP	0.1 25V B:CHIP	0.1 25V B:CHIP	0.1 25V B:CHIP
C349	0.1 25V B:CHIP	#	0.1 25V B:CHIP	0.1 25V B:CHIP	0.1 25V B:CHIP	0.1 25V B:CHIP
C350	0.01 F:CHIP	#	0.01 F:CHIP	0.01 F:CHIP	#	#
C351	10	#	10	10	10	10
C352	0.1 25V B:CHIP	#	0.1 25V B:CHIP	0.1 25V B:CHIP	0.1 25V B:CHIP	0.1 25V B:CHIP
C613	560 450V	560 450V	560 450V	560 450V	560 450V	820 250V
C616	0.022 400V :PP	0.022 400V :PP	0.022 400V :PP	0.022 400V :PP	0.022 400V :PP	#
C617	100P 1KV :SL	100P 1KV :SL	100P 1KV :SL	100P 1KV :SL	100P 1KV :SL	#
C642	2200 25V	2200 25V	2200 25V	2200 25V	#	2200 25V
CN301	#	7P	#	#	#	#
CN302	#	8P	#	#	#	#
CN307	#	7P	#	#	#	#
CN602	#	2P	2P	2P	2P	2P
D100	MMDL914T1	MA111-TX	MA111-TX	MA111-TX	#	#
D309	UDZSTE-175.1B	RD5.1SB-T2	RD5.1SB-T2	RD5.1SB-T2	RD5.1SB-T2	RD5.1SB-T2
D504	FR104-A5	EL1Z	EL1Z	EL1Z	EL1Z	EL1Z
D521	FR104-A5	EL1Z	EL1Z	EL1Z	EL1Z	EL1Z
D522	FR104-A5	EL1Z	EL1Z	EL1Z	EL1Z	EL1Z
D523	FR104-A5	EL1Z	EL1Z	EL1Z	EL1Z	EL1Z
D609	RU-1P	RU-1P	RU-1P	RU-1P	RU-1P	#
D611	AU-01Z-V1	10ELS2N-TB5	10ELS2N-TB5	10ELS2N-TB5	10ELS2N-TB5	10ELS2N-TB5
D613	AU-01Z-V1	10ELS2N-TB5	10ELS2N-TB5	10ELS2N-TB5	10ELS2N-TB5	10ELS2N-TB5
D614	AU-01Z-V1	10ELS2N-TB5	10ELS2N-TB5	10ELS2N-TB5	10ELS2N-TB5	10ELS2N-TB5
D616	RN4Z	30DF2N-FC5	30DF2N-FC5	30DF2N-FC5	30DF2N-FC5	30DF2N-FC5
D625	DTZ10B	RD10S-B	RD10S-B	RD10S-B	RD10S-B	RD10S-B
D638	11ES2	D1N20R	D1N20R	D1N20R	D1N20R	D1N20R
FB101	#	0 :CHIP	#	#	#	#
FB102	#	0 :CHIP	#	#	#	#
FB613	1.1UH	1.1UH	1.1UH	1.1UH	1.1UH	#
FB615	1.1UH	1.1UH	1.1UH	1.1UH	#	1.1UH
IC001	CXP750097-605S	CXP750097-605S	CXP750097-605S	CXP750097-605S	CXP750097-604S	CXP750097-604S
IC003	M24C08-BN6	M24C16-BN6	M24C16-BN6	M24C16-BN6	M24C16-BN6	M24C16-BN6
IC100	S-80743AL-A7-S	S-80743AL-A7-S	S-80743AL-A7-S	S-80743AL-A7-S	#	#
IC302	TDA9181T	#	TDA9181T	TDA9181T	TDA9183TTDA9183T	
JR102	0 :CHIP	0 :CHIP	0 :CHIP	0 :CHIP	#	#
JR108	#	#	#	#	0 :CHIP	0 :CHIP
JR109	#	#	0 :CHIP	0 :CHIP	#	#
JR111	#	#	#	#	0 :CHIP	0 :CHIP
JR308	0 :CHIP	#	0 :CHIP	0 :CHIP	0 :CHIP	0 :CHIP
L303	100UH	#	100UH	100UH	100UH	100UH
L304	100UH	#	100UH	100UH	100UH	100UH
Q302	2SD601A-Q	#	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-G
Q303	2SA1162-G	#	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q305	2SA1162-G	#	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q306	2SD601A-Q	#	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-G
Q307	2SD601A-Q	#	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-G
Q309	UN2213	#	UN2213	UN2213	#	#
Q310	2SD601A-Q	#	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-G
Q314	2SA1162-G	#	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q316	2SA1162-G	#	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q317	2SA1162-G	#	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
R006	#	#	#	#	39K :CHIP	39K :CHIP
R007	#	#	#	#	220 :CHIP	220 :CHIP
R009	#	#	#	#	4.7K :CHIP	4.7K :CHIP
R017	#	1K :CHIP	#	#	#	#
R028	10K :CHIP	10K :CHIP	#	#	1K	1K
R030	#	#	#	#	100 :CHIP	100 :CHIP
R036	#	100 :CHIP	100 :CHIP	100 :CHIP	100 :CHIP	100 :CHIP
R037	100 :CHIP	100 :CHIP	100 :CHIP	100 :CHIP	15K :CHIP	15K :CHIP

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

A Board ✲ Mark List

	KV-AR25M60	KV-AR25M66	KV-AR25M80(ME)	KV-AR25M80(E)	KV-AR25N90(Philippines)	KV-AR25N90(Taiwan)
R038	1K :CHIP	1K :CHIP	1K :CHIP	1K :CHIP	#	#
R101	100 :CHIP	100 :CHIP	100 :CHIP	100 :CHIP	#	#
R102	100 :CHIP	100 :CHIP	100 :CHIP	100 :CHIP	#	#
R103	#	#	#	#	100 :CHIP	100 :CHIP
R104	#	#	#	#	100 :CHIP	100 :CHIP
R106	#	#	#	#	1K :CHIP	1K :CHIP
R114	#	#	#	#	4.7K :CHIP	4.7K :CHIP
R115	#	#	#	#	4.7K :CHIP	4.7K :CHIP
R311	470 :CHIP	#	470 :CHIP	470 :CHIP	470 :CHIP	470 :CHIP
R312	390 :CHIP	#	390 :CHIP	390 :CHIP	390 :CHIP	390 :CHIP
R313	330 :CHIP	#	330 :CHIP	330 :CHIP	330 :CHIP	330 :CHIP
R314	27K :CHIP	#	27K :CHIP	27K :CHIP	27K :CHIP	27K :CHIP
R316	330 :CHIP	#	330 :CHIP	330 :CHIP	330 :CHIP	330 :CHIP
R317	56K :CHIP	#	56K :CHIP	56K :CHIP	56K :CHIP	56K :CHIP
R318	390 :CHIP	#	390 :CHIP	390 :CHIP	390 :CHIP	390 :CHIP
R323	1.5K :CHIP	#	1.5K :CHIP	1.5K :CHIP	1.5K :CHIP	1.5K :CHIP
R324	1.5K :CHIP	#	1.5K :CHIP	1.5K :CHIP	1.5K :CHIP	1.5K :CHIP
R365	220 :CHIP	#	220 :CHIP	220 :CHIP	220 :CHIP	220 :CHIP
R366	10K :CHIP	#	10K :CHIP	10K :CHIP	10K :CHIP	10K :CHIP
R367	10K :CHIP	#	10K :CHIP	10K :CHIP	10K :CHIP	10K :CHIP
R371	27K :CHIP	#	27K :CHIP	27K :CHIP	27K :CHIP	27K :CHIP
R372	56K :CHIP	#	56K :CHIP	56K :CHIP	56K :CHIP	56K :CHIP
R375	#	100 :CHIP	#	#	#	#
R378	1.5K :CHIP	#	1.5K :CHIP	1.5K :CHIP	1.5K :CHIP	1.5K :CHIP
R379	10M :CHIP	#	10M :CHIP	10M :CHIP	10M :CHIP	10M :CHIP
R381	0 :CHIP	#	0 :CHIP	0 :CHIP	0 :CHIP	0 :CHIP
R382	4.7K :CHIP	#	4.7K :CHIP	4.7K :CHIP	#	#
R383	1K :CHIP	#	1K :CHIP	1K :CHIP	1K :CHIP	1K :CHIP
R384	470 :CHIP	#	470 :CHIP	470 :CHIP	470 :CHIP	470 :CHIP
R385	150 :CHIP	#	150 :CHIP	150 :CHIP	150 :CHIP	150 :CHIP
R391	0 :CHIP	#	0 :CHIP	0 :CHIP	0 :CHIP	0 :CHIP
R620	0.033 630V :PP	0.033 630V :PP	0.033 630V :PP	0.033 630V :PP	0.027 400V :PP	0.027 400V :PP
R635	82K 3W :RS	82K 3W :RS	82K 3W :RS	82K 3W :RS	82K 3W :RS	#
R637	82K 3W :RS	82K 3W :RS	82K 3W :RS	82K 3W :RS	82K 3W :RS	#
R682	0.1	5A 90V	0.1	0.1	0.1	0.1
T601	CLF	TLF	TLF	TLF	TLF	TLF
TU101	BTF-WG441	BTF-WG442	BTF-LG433	BTF-LG433	BTF-WA421	BTF-WA421
VDR600	ERZV14D21	ERZV14D21	ERZV14D21	ERZV14D21	ERZV14D21	TNR14V271K660

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

VM1 Board ✲ Mark List

	KV-AR25M60	KV-AR25M66	KV-AR25M80(ME)	KV-AR25M80(E)	KV-AR25N90(Philippines)	KV-AR25N90(Taiwan)
CN2801	3P	#	#	#	#	#
CN5902	#	3P	3P	3P	3P	3P

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

F Board ✲ Mark List

	KV-AR25M60	KV-AR25M66	KV-AR25M80(ME)	KV-AR25M80(E)	KV-AR25N90(Philippines)	KV-AR25N90(Taiwan)
C4601	0.47 250V	#	#	#	#	0.47 250V
C4602	0.68 250V :PP	#	#	#	#	0.68 250V :PP
T4601	CLF	#	#	#	#	TLF
T4602	CLF	#	#	#	#	TLF

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

C6 Board ✲ Mark List

	KV-AR25M60	KV-AR25M66	KV-AR25M80(ME)	KV-AR25M80(E)	KV-AR25N90(Philippines)	KV-AR25N90(Taiwan)
D717	NNCD9.1A-T21	HZS9.1NB2	HZS9.1NB2	HZS9.1NB2	HZS9.1NB2	HZS9.1NB2
R721	#	150K :RN	#	#	#	#
R723	470K :RN	100K :RN	470K :RN	470K :RN	470K :RN	470K :RN

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

B10 Board ✲ Mark List

	KV-AR25M60	KV-AR25M66	KV-AR25M80(ME)	KV-AR25M80(E)	KV-AR25N90(Philippines)	KV-AR25N90(Taiwan)
D3301	MMDL914T1	#	MA111-TX	MA111-TX	MA111-TX	MA111-TX
D3302	MMDL914T1	#	MA111-TX	MA111-TX	MA111-TX	MA111-TX
D6211	MMDL914T1	#	MA111-TX	MA111-TX	MA111-TX	MA111-TX
D6212	MMDL914T1	#	MA111-TX	MA111-TX	MA111-TX	MA111-TX

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

B1 Board ✲ Mark List

	KV-AR25M60	KV-AR25M66	KV-AR25M80(ME)	KV-AR25M80(E)	KV-AR25N90(Philippines)	KV-AR25N90(Taiwan)
Q1501	2SC2712-YG	#	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q1503	2SC2712-YG	#	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q1504	2SC2712-YG	#	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q1505	2SC2712-YG	#	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q1506	2SC2712-YG	#	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q1509	2SC2712-YG	#	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q1510	2SC2712-YG	#	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q1514	2SC2712-YG	#	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q1515	2SC2712-YG	#	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q1520	2SC2712-YG	#	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1
Q1522	2SC2712-YG	#	MSD601-RT1	MSD601-RT1	MSD601-RT1	MSD601-RT1

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

5-4. VOLTAGE LIST AND WAVEFORM

A BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC001	1	0
	2	5.0
	3	0.4
	4	0.4
	5	5.0
	6	5.0
	7	4.0
	8	(5)[4.8]
	9	0.3
	① 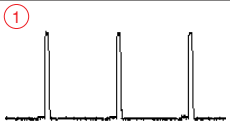 5.2Vp-p	
	10	5.0
	②  4.88Vp-p	
	11	5.0
	12	0
	13	2.1
	14	2.1
	③ PAL  3.92Vp-p	
	③ NTSC3.58 4.16Vp-p	
	15	5.0
	16	5.0
	17	0
	18	4.5
	19	(2.1)[2.4]
	20	3.0
	21	5.0
	22	0
	23	5.0
	24	0.4
	25	5.0
	26	5.0
	27	5.0
	28	5.0
	29	0
	30	0
	31	0
	32	0
	33	5.0
	34	0
	35	0
	36	2.3
	37	2.5
	38	5.0
	39	5.0
	40	0
	41	0.4
	42	0.4
	43	0
	44	5.0
	45	5.0
	46	4.4
	47	5.0
	48	4.4
	49	0
	50	2.1
	51	0
	52	0

Ref	Pin No.	Voltage[v]
IC002	1	0
	2	5.0
	3	5.0
	4	7.2
	5	5.0
	6	0
	7	0
IC003	1	0
	2	0
	3	0
	4	0
	5	5.0
	6	5.0
	7	0
	8	5.0
IC100	1	4.9
	2	4.8
	3	0
IC301	1	3.3
	2	5.0
	3	(4)[3.1]
	4	5.0
	5	4.8
	6	4.3
	7	0
	8	3.9
	9	5.0
	10	3.8
	11	5.0
	12	0
	13	4.0
	14	2.4
	15	3.6
	16	3.4
	④ PAL 640mVp-p	
	④ NTSC3.58 424mVp-p	
	17	5.4
	18	7.6
	19	0.8
	20	3.7
	21	3.1
	22	3.8
	23	3.0
	24	1.4
	⑤ PAL 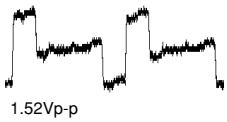 1.52Vp-p	
	⑤ NTSC3.58 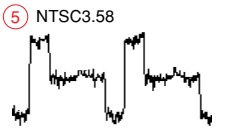 1.22Vp-p	
	25	1.3
	⑥ 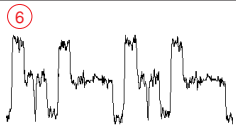 1.42Vp-p	

Ref	Pin No.	Voltage[v]
	26	1.6
	⑦ PAL 544mVp-p	
	⑦ NTSC3.58 1.024Vp-p	
	27	0
	28	4.5
	29	4.5
	30	4.5
	31	8.7
	32	4.1
	⑧ 210mVp-p	
	33	4.1
	⑨ 5.1Vp-p	
	34	3.5
	⑩ PAL  3.04Vp-p	
	⑩ NTSC3.58 3.6Vp-p	
	35	8.7
	36	4.5
	37	4.5
	38	4.6
	39	4.5
	⑪ 2.7Vp-p	
	40	5.1
	⑫ PAL 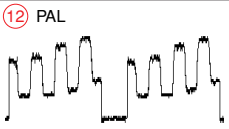 3.44Vp-p	
	⑫ NTSC3.58  3.68Vp-p	

A BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
	41	5.1
	⑬ 1.36Vp-p	
	42	0
	43	5.0
	44	4.4
	45	(8.6)[8.3]
	46	5.0
	47	8.8
	48	0.2
	49	(5)[4.4]
	50	0
	51	0
	52	(3.0)[2.7]
IC302	1	0.5
	2	0
	3	0.6
	4	0
	5	0.2
	6	0
	7	3.0
	8	0
	9	0
	10	2.2
	11	2.2
	12	2.2
	13	0
	14	0.2
	15	0
	16	0
IC502	1	1.1
	2	3.6
	3	1.5
	4	0
	5	3.0
	6	2.3
	7	6.3
	8	8.9
IC503	1	1.6
	2	13
	3	-14
	4	-15
	5	(0.5)[0.3]
	6	13
	7	1.6
IC601	1	1.9
	2	0
	3	264
	4	16.7
	5	0
IC602	1	120
	2	135
	3	0
IC603	I	12.0
	G	0
	O	8.8
IC604	I	7.6
	G	0
	O	5.0
IC901	1	5
	2	0
	3	0
PH600	1	72
	2	70.8
	3	3.9
	4	16.7
Q001	B	0.4
	C	0
	E	5.0
Q002	B	0
	C	5.0
	E	0
Q005	B	4.8
	C	0
	E	4.8
Q101	B	2.2
	C	8.8
	E	2.8
Q301	B	12.0
	C	0
	E	12.0
Q302	B	0
	C	8.8
	E	(0)[0.5]
Q303	B	8.8
	C	0
	E	8.8
Q304	B	4.1
	C	0
	E	3.5
Q305	B	8.8
	C	0
	E	8.7
Q306	B	0
	C	8.8
	E	(0)[0.5]
Q307	B	2.7
	C	8.8
	E	4.3
Q308	B	0.8
	C	0.3
	E	3.5
Q309	B	0
	C	0
	E	3.0
Q310	B	0
	C	2.2
	E	0.4
Q311	B	0
	C	8.8
	E	0
Q312	B	(8.6)[8.4]
	C	0
	E	5.2
Q313	B	0
	C	12.0
	E	0
Q314	B	2.2
	C	0
	E	1.7
Q315	B	0
	C	3.1
	E	0
Q316	B	4.7
	C	0
	E	4.1
Q317	B	4.7
	C	0
	E	4.1
Q501	B	6.4
	C	0
	E	22
Q502	B	0
	C	2.3
	E	0
Q503	B	0
	C	3.6
	E	0
Q505	S	0
	G	6.3
	D	22
Q506	B	0.6
	C	82
	⑭ PAL  164.0Vp-p	
	⑭ NTSC3.58  166.0Vp-p	
	E	0
Q507	B	13
	C	0.2
	E	12
Q509	B	0
	C	0.1
	E	0.6
Q511	B	-0.2
	C	100
	⑮ PAL  344.0Vp-p	
	⑮ NTSC3.58  320.0Vp-p	
	E	0
Q600	B	0
	C	12
	E	0
Q601	B	-0.7
	C	-0.4
	E	-0.8
Q602	B	0
	C	16.7
	E	0
Q603	B	16.7
	C	3.9
	E	16.7
Q604	B	134
	C	0
	E	134
Q605	S	-0.7
	G	0.2
	D	277
Q606	B	-0.7
	C	0.2
	E	-0.2
Q607	B	0.8
	C	0
	E	0
Q608	B	0
	C	0.8
	E	0
	⑯ PAL 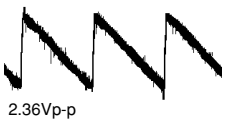 2.36Vp-p	
	⑯ NTSC3.58  2.16Vp-p	

C6 BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC1800	1	6.4
	2	6.4
	3	6.4
	4	6.4
	5	0
	6	6.4
	7	6.4
	8	6.4
	9	6.4
	10	13
J701	KR	(140)[136]
	① 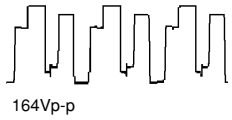 164Vp-p	
	KG	(150)[147]
	② 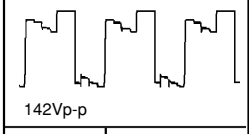 142Vp-p	

Ref	Pin No.	Voltage[v]
	KB	(149)[144]
	③ 146Vp-p	
	H2	*
	④ 24.4Vp-p	
	G2	(275)[272]
Q701	B	(160)[154]
	C	(204)[202]
	E	160
Q702	B	170
	C	204
	E	170
Q703	B	(164)[160]
	C	203
	E	(170)[160]
Q704	B	8.9
	C	(160)[155]
	E	8.3
Q705	B	8.9
	C	170
	E	8.3

Ref	Pin No.	Voltage[v]
Q706	B	(8.8)[8.1]
	C	(165)[160]
	E	8.3
Q707	B	160
	C	(4.1)[4.4]
	E	(156)[153]
Q708	B	170
	C	4.0
	E	(165)[163]
Q709	B	(165)[160]
	C	4.2
	E	(163)[160]
Q710	B	1.5
	C	8.3
	E	1.1
Q711	B	1.3
	C	8.3
	E	1.0
Q712	B	1.4
	C	8.3
	E	1.1
Q714	B	0.7
	C	0.2
	E	0
Q1800	B	3.4
	C	0
	E	4.5
Q1802	B	0.4
	C	3.5
	E	0
Q1803	B	0
	C	6.4
	E	0

VM1 BOARD VOLTAGE LIST

Ref	Pin No.	Voltage[v]
Q5901	B	2.7
	C	8.8
	E	2.0
Q5902	B	135
	C	(67)[70]
	E	135
Q5903	B	2.7
	C	4.6
	E	2.0
Q5904	B	4.6
	C	0
	E	5.1
Q5905	B	5.6
	C	8.8
	E	5.1

Ref	Pin No.	Voltage[v]
Q5906	B	0.3
	C	(67)[70]
	E	0.2
Q5907	B	0
	C	(0.3)[0.5]
	E	0
Q5908	B	3.2
	C	0
	E	0
Q5909	B	0
	C	8.8
	E	3.4

B10 BOARD VOLTAGE LIST (Except KV-AR25M66)

Ref	Pin No.	Voltage[v]
IC1401	1	3.8
	2	3.9
	3	3.8
	4	3.9
	5	3.8
	6	8.2
	7	3.8
	8	3.9
	9	3.8
	10	3.9
	11	3.8
	12	8.2
	13	3.9
	14	3.9
	15	3.8
	16	3.9
	17	3.8
	18	8.1
	19	4.3
	20	4.4
	21	0
	22	3.9
	23	3.8
	24	3.9
	25	3.8
	26	3.9
	27	3.8
	28	3.9
	29	3.8
	30	3.8
	31	3.9
	32	3.9
	33	3.8
	34	0
	35	3.8
	36	0
	37	3.8
	38	3.9
	39	3.9
	40	3.8
	41	3.8
	42	3.9
	43	3.7
	44	8.8
	45	3.8
	46	3.9
	47	3.9
	48	3.8
IC1402	1	4.9
	2	2.5
	3	2.5
	4	0
	5	8.8
	6	5.0
	7	2.5
	8	2.5
IC1404	I	12.1
	G	0
	O	8.8
IC3200	1	4.4
	2	4.4
	3	4.4
	4	0
	5	4.4
	6	4.4
	7	4.4
	8	8.9
IC3202	1	4.4
	2	4.4
	3	4.4
	4	0
	5	4.4
	6	4.4
	7	4.4
	8	8.9
IC3204	1	4.5
	2	4.5
	3	4.4
	4	0
	5	4.4
	6	4.5
	7	4.5
	8	8.8
IC3205	1	8.8
	2	0.1
	3	0.4
	4	0.4
	5	0.4
	6	0.4
	7	0.3
	8	0
	9	0.1
	10	2.4
	11	0
	12	0
	13	8.7
	14	4.4
	15	4.4
	16	8.8
IC3301	1	2.7
	2	2.6
	3	3.0
	4	3.0
	5	0.4
	6	0
	7	0
	8	0
	9	4.5
	10	4.5
	11	4.5
	12	0
	13	0.4
	14	8.8
IC3302	1	4.4
	2	4.5
	3	4.5
	4	4.5
	5	4.5
	6	4.5
	7	4.5
	8	4.5
	9	4.5
	10	4.4
	11	4.4
	12	4.5
	13	4.5
	14	1.5
	15	1.7
	16	2.7
	17	2.7
	18	4.4
	19	*
	20	0
	21	8.9
	22	4.5
	23	2.5
	24	2.1
	25	2.1
	26	2.1
	27	2.0
	28	4.5
	29	4.4
	30	4.3
	31	4.4
	32	4.5
	33	4.4
	34	4.5
	35	4.5
	36	4.4
	37	4.4
	38	4.5
	39	4.4
	40	4.4
IC6200	1	1.5
	2	0
	3	0
	4	0
	5	1.6
	6	8.7
	7	12.3
	8	5.0
	9	25.8
	10	0
	11	4.2
	12	12.0
Q1316	B	8.8
	C	4.6
	E	8.2
Q1317	B	3.9
	C	8.7
	E	4.6
Q1318	B	3.5
	C	6.1
	E	4.2
Q1323	B	2.0
	C	8.2
	E	2.7
Q1324	B	5.4
	C	8.8
	E	6.1
Q1365	B	3.5
	C	5.3
	E	4.2
Q1372	B	2.8
	C	8.8
	E	3.5
Q1401	B	0
	C	8.8
	E	0
Q1402	B	4.5
	C	0
	E	3.8
Q1403	B	3.1
	C	8.8
	E	3.7
Q1404	B	3.2
	C	8.8
	E	3.8
Q1408	B	5.2
	C	8.8
	E	5.8
Q1409	B	1.8
	C	5.8
	E	2.5
Q3201	S	4.4
	G	4.2
	D	4.3
Q3202	B	3.6
	C	8.6
	E	4.1
Q3203	B	3.6
	C	8.6
	E	4.1
Q3204	S	3.6
	G	4.0
	D	4.4
Q6201	B	0
	C	4.2
	E	0
Q6206	B	0
	C	8.8
	E	0
Q6208	B	0
	C	8.6
	E	0

V1 BOARD VOLTAGE LIST (KV-AR25M66)

Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]
IC801	1	0.5		30	2.0	Q803	B	0
	2	4.8		31	2.0		C	0.01
	3	(0.4)[0.7]		32	0.02		E	0.6
	4	(0.4)[0.7]		33	0.02	Q805	B	0
	5	4.8		34	0.02		C	1.0
	6	(0.3)[0.9]		35	0		E	0.3
	7	(0.3)[0.9]		36	1.0	Q806	B	0
	8	(0.3)[0.9]		37	0.2		C	4.8
	9	0		38	4.8		E	0.02
	10	0		39	4.8	Q807	B	0
	11	0		40	0.02		C	4.8
	12	0		41	2.2		E	0.02
	13	0		42	2.2	Q808	B	0
	14	0		43	0.02		C	4.8
	15	0		44	4.6		E	0.02
	16	0		45	0	Q810	B	0
	17	0		46	0		C	4.0
	18	0		47	4.8		E	0.2
	19	0		48	0	Q811	B	4.8
	20	1.1		49	4.3		C	6.5
	21	1.1		50	4.5		E	5.5
	22	0		51	0	Q815	B	0
	23	2.1		52	0		C	4.8
	24	1.2	Q801	B	0		E	0.03
	25	2.0		C	4.8	Q817	B	0
	26	2.4		E	0.02		C	0.2
	27	0.02	Q802	B	2.0		E	2.8
	28	0		C	4.9			
	29	0.9		E	0			

B1 BOARD VOLTAGE LIST (Except KV-AR25M66)

Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]
IC1502	1	3.1	Q1502	B	2.3	Q1514	B	0.6
	2	3.0		C	2.3		C	0.6
	3	3.2		E	2.5		E	0.6
	4	4.6	Q1503	B	0.6	Q1515	B	0.6
	5	4.6		C	0.6		C	0.6
	6	0		E	0.6		E	0.6
	7	0	Q1505	B	0.6	Q1516	B	0.5
	8	0		C	0.8		C	0.5
	9	8.1		E	0		E	0.5
	10	7.9	Q1507	B	0.7	Q1520	B	0.5
	11	7.9		C	0.8		C	0.4
	12	7.6		E	0.7		E	0
	13	7.6	Q1509	B	0.8	Q1522	B	0.4
	14	7.3		C	0.8		C	0
	15	7.6		E	0		E	0.5
	16	7.6	Q1510	B	0.7	Q1523	B	0.4
Q1501	B	2.5		C	0.7		C	0
	C	2.4		E	0		E	0.5
	E	2.4	Q1511	B	0.7			
				C	0.7			
				E	0			

H1 BOARD VOLTAGE LIST

Ref	Pin No.	Voltage[v]
Q3901	B	0.1
	C	5.0
	E	0.1
Q3902	B	(4.7)[0]
	C	(2.3)[4.9]
	E	(1.8)[0]

H2 BOARD VOLTAGE LIST

Ref	Pin No.	Voltage[v]
IC3901	I	5.0
	G	0
	O	5.0

P5 BOARD VOLTAGE LIST (KV-AR25M66)

Ref	Pin No.	Voltage[v]
IC4101	1	3.3
	2	0
	3	7.9
IC4102	1	0.9
	2	0
	3	1.3
	4	0
	5	4.9
	6	5.0
	7	1.4
	8	0
	9	0.7
	10	(3.6)[0]
	11	(0)[4.9]
	12	1.5
	13	0
	14	1.5
	15	0
	16	1.5
IC4104	1	2.0
	2	1.9
	3	1.4
	4	0.2
	5	2.1
	6	5.0
	7	2.5
	8	0
	9	0.3
	10	0.8
	11	2.3
	12	5.0
	13	4.4
	14	4.6
	15	0
	16	0
	17	2.5
	18	2.5
	19	1.4
	20	2.3
	21	1.6
	22	1.8
	23	1.8
	24	0.1
	25	2.2
	26	2.1
	27	2.1
	28	0
	29	2.3
	30	2.2
	31	1.4
	32	5.0
	33	2.2
	34	2.3
	35	2.3
	36	0
	37	1.1
	38	4.0
	39	1.7
	40	3.5
	41	2.3
	42	2.5
	43	1.7
	44	2.2
	45	(3.6)[0]
	46	(2.2)[3.1]
	47	3.7
	48	1.7
IC4105	1	5.0
	2	0.3
	3	0
	4	0.3
	5	5.0
IC4106	I	5.1
	G	0
	O	7.9
IC4201	I	3.3
	G	0
	O	4.9
IC4202	1	0
	2	0
	3	0
	4	3.3
	5	3.3
IC4203	1	3.3
	2	1.7
	3	3.3
	4	0
	5	3.3
	6	3.3
	7	0.1
	8	0.5
	9	0
	10	0.4
	11	1.3
	12	2.5
	13	3.3
	14	0
	15	0.2
	16	0
	17	1.3
	18	1.3
	19	2.4
	20	3.3
	21	0
	22	0.2
	23	0
	24	1.3
	25	1.5
	26	2.5
	27	3.2
	28	0
	29	0.2
	30	0
	31	0
	32	3.3
	33	0
	34	3.3
	35	0
	36	3.3
	37	3.3
	38	3.3
	39	3.3
	40	3.3
	41	3.3
	42	3.3
	43	3.3
	44	3.3
	45	0
	46	3.3
	47	3.3
	48	3.3
	49	3.3
	50	3.3
	51	3.3
	52	3.3
	53	3.3
	54	(0)[3.3]
	55	0
	56	0
	57	2
	58	1.3
	59	1.3
	60	2.4
	61	2.3
	62	(2.0)[1.9]
	63	1.4
	64	1.5
	65	1.5
	66	0
	67	(2.0)[1.9]
	68	0.1
	69	1.5
	70	1.5
	71	1.6
	72	1.8
	73	3.4
	74	0
	75	0
	76	1.4
	77	0.2
	78	0.1
	79	1.8
	80	0
	81	0
	82	3.3
	83	(0.1)[0]
	84	0
	85	(0)[3.3]
	86	3.3
	87	0.4
	88	0
	89	(0.1)[0]
	90	3.3
	91	3.3
	92	0.3
	93	0
	94	0
	95	1.1
	96	1.1
	97	3.3
	98	3.3
	99	0
	100	2.7
	101	2.7
	102	0
	103	0
	104	0
	105	2.7
	106	0
	107	0
	108	0.1
	109	0
	110	0
	111	0
	112	0
	113	0
	114	0
	115	2.7
	116	2.7
	117	0
	118	3.3
	119	3.3
	120	0
	121	0.4
	122	0.2
	121	0.7
	124	0
	125	3.3
	126	3.3
	127	0
	128	1.5
	129	1.5
	130	0
	131	3.3
	132	0
	133	3.3
	134	3.3
	135	3.3
	136	3.3
	137	3.3
	138	0
	139	0.7
	140	0
	141	0
	142	3
	143	3
	144	0
IC4204	1	3.3
	2	0
	3	1.5
	4	0.4
	5	1.7
	6	1.6
	7	0
	8	0
	9	0

P5 BOARD VOLTAGE LIST (KV-AR25M66)

Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]
	10	0		76	1.4		73	1.8
	11	0		77	2.2		74	3.3
	12	1.6		78	1.3		75	0
	13	2.1		79	1.9		76	0
	14	3.3		80	(2.1)[1.9]		77	1.8
IC4301	1	3.3	IC4401	I	1.8		78	0
	2	0		G	0		79	0.5
	3	0		O	3.3		80	0
	4	0	IC4402	1	1.7		81	0
	5	0		2	3.1		82	0
	6	0		3	3		83	0
	7	0		4	3.3		84	3.3
	8	0		5	3.3		85	2.2
	9	0		6	1.7		86	0
	10	0		7	0.2		87	1.7
	11	0		8	0		88	1.7
	12	0		9	0		89	0
	13	3.3		10	1.7		90	3.3
	14	2.5		11	1.6		91	0
	15	0.7		12	1.7		92	0
	16	3.3		13	(2.1)[1.8]		93	0.7
	17	3.3		14	1.8		94	0
	18	0		15	1.7		95	1.7
	19	0.2		16	1.7		96	0
	20	0		17	1.5		97	0
	21	1.5		18	3.4		98	3.3
	22	(1.8)[2.0]		19	0		99	3.3
	23	0		20	0		100	0
	24	3.3		21	0		101	3.3
	25	1.3		22	1.5		102	0
	26	(2.1)[1.9]		23	1.6		103	0.3
	27	1.3		24	1.9		104	0
	28	1.5		25	1.7		105	3.3
	29	2.4		26	1.8		106	0
	30	1.5		27	1.7		107	0.1
	31	1.7		28	1.6		108	0
	32	1.9		29	1.5		109	1.7
	33	3.3		30	0		110	3.3
	34	0		31	1.0		111	0
	35	(2.0)[1.9]		32	1.4		112	0
	36	(2.0)[1.9]		33	1.8		113	1.4
	37	(2.0)[1.9]		34	3.4		114	(3.3)[0]
	38	2.0		35	1.5		115	(0.2)[0.3]
	39	(2.1)[1.8]		36	0		116	1.7
	40	1.3		37	#		117	0
	41	3.3		38	#		118	3.3
	42	0		39	#		119	1.2
	43	0.3		40	#		120	(2.2)[1.8]
	44	(3.3)[0]		41	#		121	2.1
	45	1.5		42	#		122	(2.0)[1.8]
	46	0		43	#		123	(2.1)[1.8]
	47	3.3		44	#		124	(2.1)[1.8]
	48	0		45	#		125	(2.0)[1.7]
	49	3.3		46	#		126	3.4
	50	3.3		47	#		127	0
	51	3.3		48	#		128	1.7
	52	0		49	#		129	1.4
	53	3.3		50	#		130	2.1
	54	3.3		51	#		131	2.3
	55	3.3		52	#		132	1.4
	56	0.1		53	#		133	2.1
	57	0.3		54	#		134	2.1
	58	1.5		55	#		135	1.8
	59	0		56	#		136	1.7
	60	3.3		57	#		137	1.8
	61	3.3		58	#		138	0
	62	3.3		59	#		139	0
	63	0		60	#		140	0
	64	1.3		61	#		141	0
	65	(2.2)[1.8]		62	#		142	0
	66	2.1		63	#		143	3.4
	67	(2.1)[1.8]		64	#		144	0
	68	(2.1)[1.8]		65	#	IC4403	1	4.3
	69	(2)[1.8]		66	#		2	0
	70	1.9		67	#		3	2.1
	71	1.7		68	#		4	0.3
	72	1.6		69	#		5	1.7
	73	3.4		70	#		6	2.0
	74	2.5		71	#		7	0
	75	1.2		72	#		8	0

P5 BOARD VOLTAGE LIST (KV-AR25M66)

Ref	Pin No.	Voltage[v]
	9	0
	10	0
	11	0
	12	2.1
	13	2.3
	14	4.3
IC4404	1	0.3
	2	0
	3	0
	4	3
	5	3.3
IC4405	1	5.0
	2	0
	3	8.8
Q4105	B	5.0
	C	0
	E	4.4
Q4106	B	(1.4)[2.3]
	C	4.9
	E	(2.2)[3.0]
Q4107	B	1.4
	C	0
	E	1
Q4108	B	0
	C	(0)[4.9]
	E	0
Q4109	B	0
	C	4.9
	E	0.3
Q4110	B	5.0
	C	0.4
	E	4.5
Q4111	B	4.9
	C	0
	E	4.9
Q4112	B	0.1
	C	4.9
	E	0.2
Q4114	B	2.5
	C	0
	E	1.8
Q4116	B	2.5
	C	0
	E	1.8
Q4117	B	2.3
	C	0
	E	1.7
Q4122	B	2.4
	C	4.9
	E	3.0
Q4123	B	2.4
	C	5.0
	E	3.0
Q4124	B	2.4
	C	5.0
	E	3.0
Q4129	B	1.7
	C	8.2
	E	2.3
Q4130	B	1.8
	C	8.2
	E	2.4
Q4131	B	1.8
	C	8.2
	E	0
Q4132	B	8.8
	C	2.9
	E	8.2
Q4133	B	8.8
	C	3.0
	E	8.2
Q4134	B	8.8
	C	3.0
	E	8.2
Q4135	B	1.5
	C	8.2
	E	2.2
Q4136	B	2.1
	C	8.2
	E	2.7
Q4137	B	2.1
	C	8.2
	E	2.7
Q4138	B	8.8
	C	3.2
	E	8.2
Q4139	B	8.9
	C	3.9
	E	8.2
Q4140	B	8.9
	C	3.3
	E	8.2
Q4141	B	2.5
	C	8.8
	E	3.2
Q4142	B	3.3
	C	8.8
	E	4.0
Q4143	B	2.7
	C	8.9
	E	3.3
Q4144	B	4.9
	C	0
	E	4.9
Q4145	B	0
	C	4.9
	E	0.2
Q4201	B	2.3
	C	4.9
	E	2.9
Q4202	B	2.4
	C	4.9
	E	3.0
Q4203	B	2.4
	C	4.9
	E	3.0
Q4204	B	1.3
	C	4.9
	E	2.0
Q4205	B	1.5
	C	4.9
	E	2.1
Q4206	B	1.5
	C	4.9
	E	2.1
Q4207	B	3.0
	C	4.5
	E	3.3
Q4208	B	1.3
	C	3.3
	E	2.0
Q4209	B	3.0
	C	4.5
	E	3.3
Q4210	B	1.3
	C	3.3
	E	2.0
Q4211	B	0.4
	C	3.3
	E	1.0
Q4212	B	0
	C	3.3
	E	0
Q4213	B	0.2
	C	4.9
	E	0.1
Q4214	B	0.4
	C	5.0
	E	0.3
Q4215	B	1.3
	C	0
	E	0.4
Q4216	B	2.0
	C	0
	E	1.4
Q4217	B	1.9
	C	0
	E	1.4
Q4218	B	2.7
	C	4.9
	E	3.3
Q4219	B	2.7
	C	4.9
	E	3.3
Q4401	B	1.7
	C	0
	E	1.0
Q4402	B	1.1
	C	0
	E	0.4
Q4403	B	1.1
	C	0
	E	0.4
Q4404	B	1.6
	C	0
	E	1.0
Q4405	B	1.6
	C	0
	E	1.0
Q4406	B	2.2
	C	0
	E	1.5
Q4407	B	3.7
	C	0
	E	3.1
Q4408	B	0
	C	4.9
	E	0.5
Q4409	B	2.1
	C	0
	E	3.3
Q4410	B	4.3
	C	5.0
	E	5.0
Q4413	B	3.6
	C	0
	E	3.0
Q4414	B	1.6
	C	2.9
	E	0
Q4415	B	0.1
	C	1.6
	E	0.7
Q4416	B	0.7
	C	0
	E	0.1
Q4417	B	2.8
	C	5
	E	3.5
Q4418	B	0.1
	C	1.7
	E	0.7
Q4419	B	2.2
	C	0
	E	1.6
Q4420	B	1.0
	C	0
	E	0.4

B8 BOARD VOLTAGE LIST (KV-AR25M66)

Ref	Pin No.	Voltage[v]
IC1401	1	3.9
	2	3.9
	3	3.9
	4	3.9
	5	3.9
	6	8.1
	7	3.8
	8	3.9
	9	3.9
	10	3.9
	11	3.9
	12	8.2
	13	3.9
	14	3.9
	15	3.9
	16	3.9
	17	3.9
	18	8.1
	19	4.5
	20	4.5
	21	0
	22	3.9
	23	3.8
	24	3.9
	25	3.8
	26	3.9
	27	3.8
	28	3.9
	29	3.7
	30	3.8
	31	3.8
	32	3.8
	33	3.8
	34	0
	35	3.8
	36	0
	37	3.8
	38	3.9
	39	3.9
	40	3.8
	41	3.8
	42	3.9
	43	3.7
	44	8.8
	45	3.8
	46	3.8
	47	3.8
	48	3.8
IC1402	1	(4.4)[4.8]
	2	2.4
	3	2.4
	4	0
	5	2.4
	6	2.4
	7	4.8
	8	8.8
IC1403	I	8.0
	G	0
	O	5
IC1404	I	12.5
	G	0
	O	8.8
IC3200	1	4.4
	2	4.4
	3	4.4
	4	0
	5	4.4
	6	4.4
	7	4.4
	8	8.8
IC3202	1	4.4
	2	4.4
	3	4.3
	4	0
	5	4.3
	6	4.4
	7	4.4
	8	8.8
IC3204	1	4.4
	2	4.4
	3	4.3
	4	0
	5	4.3
	6	4.4
	7	4.4
	8	8.8
IC3205	1	0.1
	2	0.1
	3	8.7
	4	0.4
	5	0.4
	6	0.4
	7	0.3
	8	0
	9	0
	10	2.3
	11	0
	12	0
	13	8.8
	14	4.0
	15	4.5
	16	8.8
IC3301	1	2.9
	2	2.7
	3	2.9
	4	2.8
	5	8.7
	6	0
	7	0
	8	4.4
	9	4.4
	10	4.4
	11	4.4
	12	0
	13	8.7
	14	8.8
IC3302	1	4.3
	2	4.4
	3	4.4
	4	4.4
	5	4.4
	6	4.4
	7	4.4
	8	4.4
	9	4.4
	10	4.4
	11	4.4
	12	4.4
	13	4.4
	14	0.6
	15	1.3
	16	1.5
	17	1.5
	18	4.6
	19	4.5
	20	0
	21	8.8
	22	4.4
	23	3.7
	24	3.7
	25	3.7
	26	4.8
	27	0.5
	28	4.4
	29	4.4
	30	4.4
	31	4.4
	32	4.4
	33	4.4
	34	4.4
	35	4.4
	36	4.4
	37	4.4
	38	4.4
	39	4.4
	40	4.3
IC6200	1	1.6
	2	0
	3	0
	4	0
	5	1.6
	6	8.9
	7	12.3
	8	4.9
	9	26.5
	10	0
	11	4.0
	12	12.0
Q1316	B	8.2
	C	3.8
	E	8.8
Q1317	B	3.8
	C	8.8
	E	3.1
Q1318	B	4.1
	C	6.1
	E	3.5
Q1323	B	2.5
	C	8.2
	E	1.8
Q1324	B	6.1
	C	8.8
	E	5.4
Q1365	B	4.2
	C	5.3
	E	3.5
Q1372	B	3.5
	C	8.8
	E	2.8
Q1401	B	0
	C	8.8
	E	0
Q1402	B	3.8
	C	0
	E	4.4
Q1403	B	3.7
	C	8.8
	E	3.1
Q1404	B	3.8
	C	8.8
	E	3.1
Q1408	B	5.8
	C	8.8
	E	5.1
Q1409	B	2.4
	C	5.8
	E	1.7
Q3201	S	4.2
	G	3.9
	D	4.3
Q3202	B	3.9
	C	8.6
	E	3.3
Q3203	B	3.9
	C	8.6
	E	3.9
Q3204	S	4.3
	G	4.0
	D	4.3
Q6201	B	0
	C	4.1
	E	0
Q6203	B	0
	C	0
	E	0
Q6204	B	0
	C	0
	E	0
Q6208	B	0
	C	8.9
	E	0

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

5-5. PRINTED WIRING BOARDS AND PARTS LOCATION

PRINTED WIRING BOARDS

A [SYSTEM CONTROLLER, Y/C JUNGLE, DEFLECTION, TUVIF, FRONT AMP, POWER SUPPLY]

NOTE:
The circuit indicated at left contains high voltage of over 1220 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

– A Board – (Except KV-AR25M60)

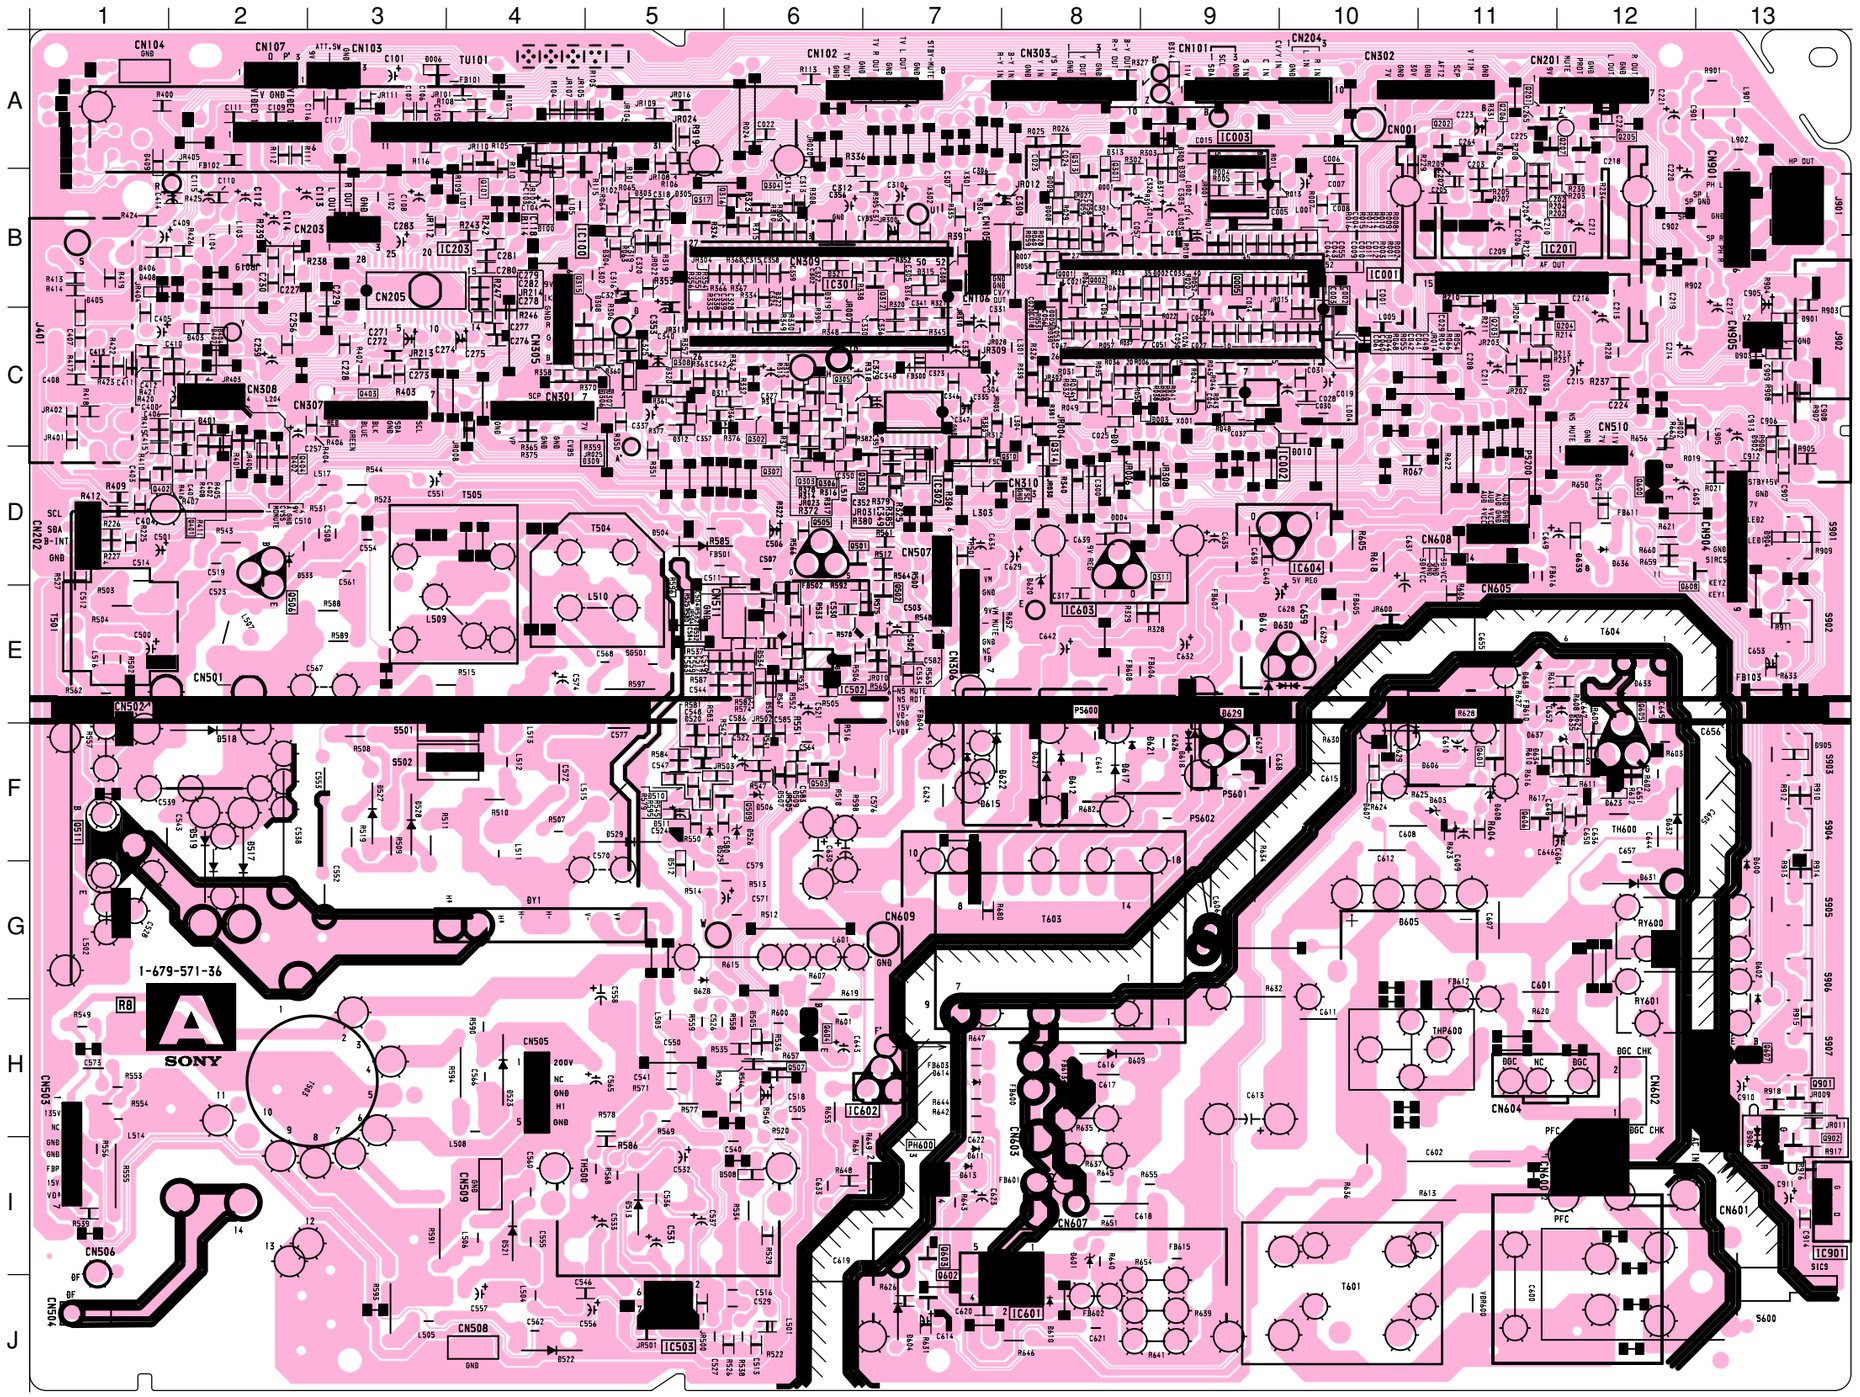

A BOARD

IC					
IC001	B-10	D409	A-1	D638	E-11
IC002	D-10	D504	D-5	D639	D-12
IC003	A-9	D505	H-6	D901	C-13
IC100	B-4	D506	F-6	D902	C-13
IC201	B-12	D507	F-6	D903	C-13
IC203	B-4	D508	I-6	D904	D-13
IC301	B-6	D509	F-6	D905	F-13
IC302	D-7	D510	F-5	D906	I-13
IC502	E-6	D511	F-5	**TRANSISTOR**	
IC503	J-5	D512	G-5		
IC601	J-8	D513	I-5	Q001	B-8
IC602	H-7	D517	F-2	Q002	B-8
IC603	E-8	D518	F-2	Q005	B-9
IC604	D-10	D519	F-2	Q101	B-4
IC901	I-13	D520	E-5	Q201	A-11
DIODE		D521	I-4	Q202	A-11
		D522	J-4	Q203	C-11
D001	B-8	D525	F-5	Q204	C-12
D002	B-9	D526	F-6	Q205	A-12
D003	C-9	D527	F-3	Q206	A-11
D004	D-8	D528	F-3	Q207	A-12
D005	B-8	D529	F-5	Q301	B-8
D006	A-3	D531	E-6	Q302	C-6
D007	B-8	D532	E-5	Q303	D-6
D008	B-8	D523	H-4	Q304	B-6
D009	B-8	D533	D-2	Q305	C-6
D010	D-10	D534	E-6	Q306	D-6
D011	C-8	D600	G-13	Q307	D-6
D100	B-4	D601	I-8	Q308	C-5
D203	C-11	D602	G-13	Q309	D-6
D300	A-9	D603	F-11	Q310	D-8
D301	B-9	D604	J-7	Q311	D-9
D303	B-5	D605	G-10	Q312	B-7
D304	B-5	D606	F-11	Q313	A-8
D305	B-5	D607	F-10	Q314	D-8
D306	C-5	D608	F-11	Q315	B-4
D307	C-5	D609	H-8	Q316	B-5
D308	B-5	D610	J-8	Q317	B-5
D309	D-5	D611	I-7	Q401	D-2
D311	C-5	D612	F-8	Q402	D-1
D312	C-5	D613	I-7	Q403	C-3
D313	A-8	D615	F-7	Q404	D-2
D314	A-9	D616	E-9	Q501	D-6
D315	B-7	D617	F-8	Q502	E-7
D316	B-7	D618	F-9	Q503	F-6
D317	B-9	D620	E-8	Q505	D-6
D319	B-6	D621	F-9	Q506	E-2
D320	C-5	D622	F-8	Q507	H-6
D321	B-6	D623	F-12	Q509	F-6
D322	B-6	D624	E-12	Q511	F-1
D360	C-5	D625	D-12	Q600	D-12
D401	C-2	D627	F-8	Q601	F-11
D402	D-2	D628	G-5	Q602	I-7
D403	C-2	D629	E-9	Q603	I-7
D404	C-2	D630	E-10	Q604	H-6
D405	B-1	D631	G-12	Q605	E-12
D406	B-1	D632	F-12	Q606	F-11
D407	C-2	D633	E-12	Q607	H-13
D408	B-1	D634	F-11	Q608	E-12
		D635	E-12	Q901	H-13
		D636	D-12	Q902	I-13
		D637	F-11		

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

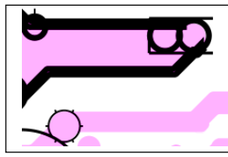

NOTE:
The circuit indicated at left contains high voltage of over 1220 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

PRINTED WIRING BOARDS

A [SYSTEM CONTROLLER, Y/C JUNGLE, DEFLECTION, TUVIF, FRONT AMP, POWER SUPPLY]

– A Board – (KV-AR25M60 Only)

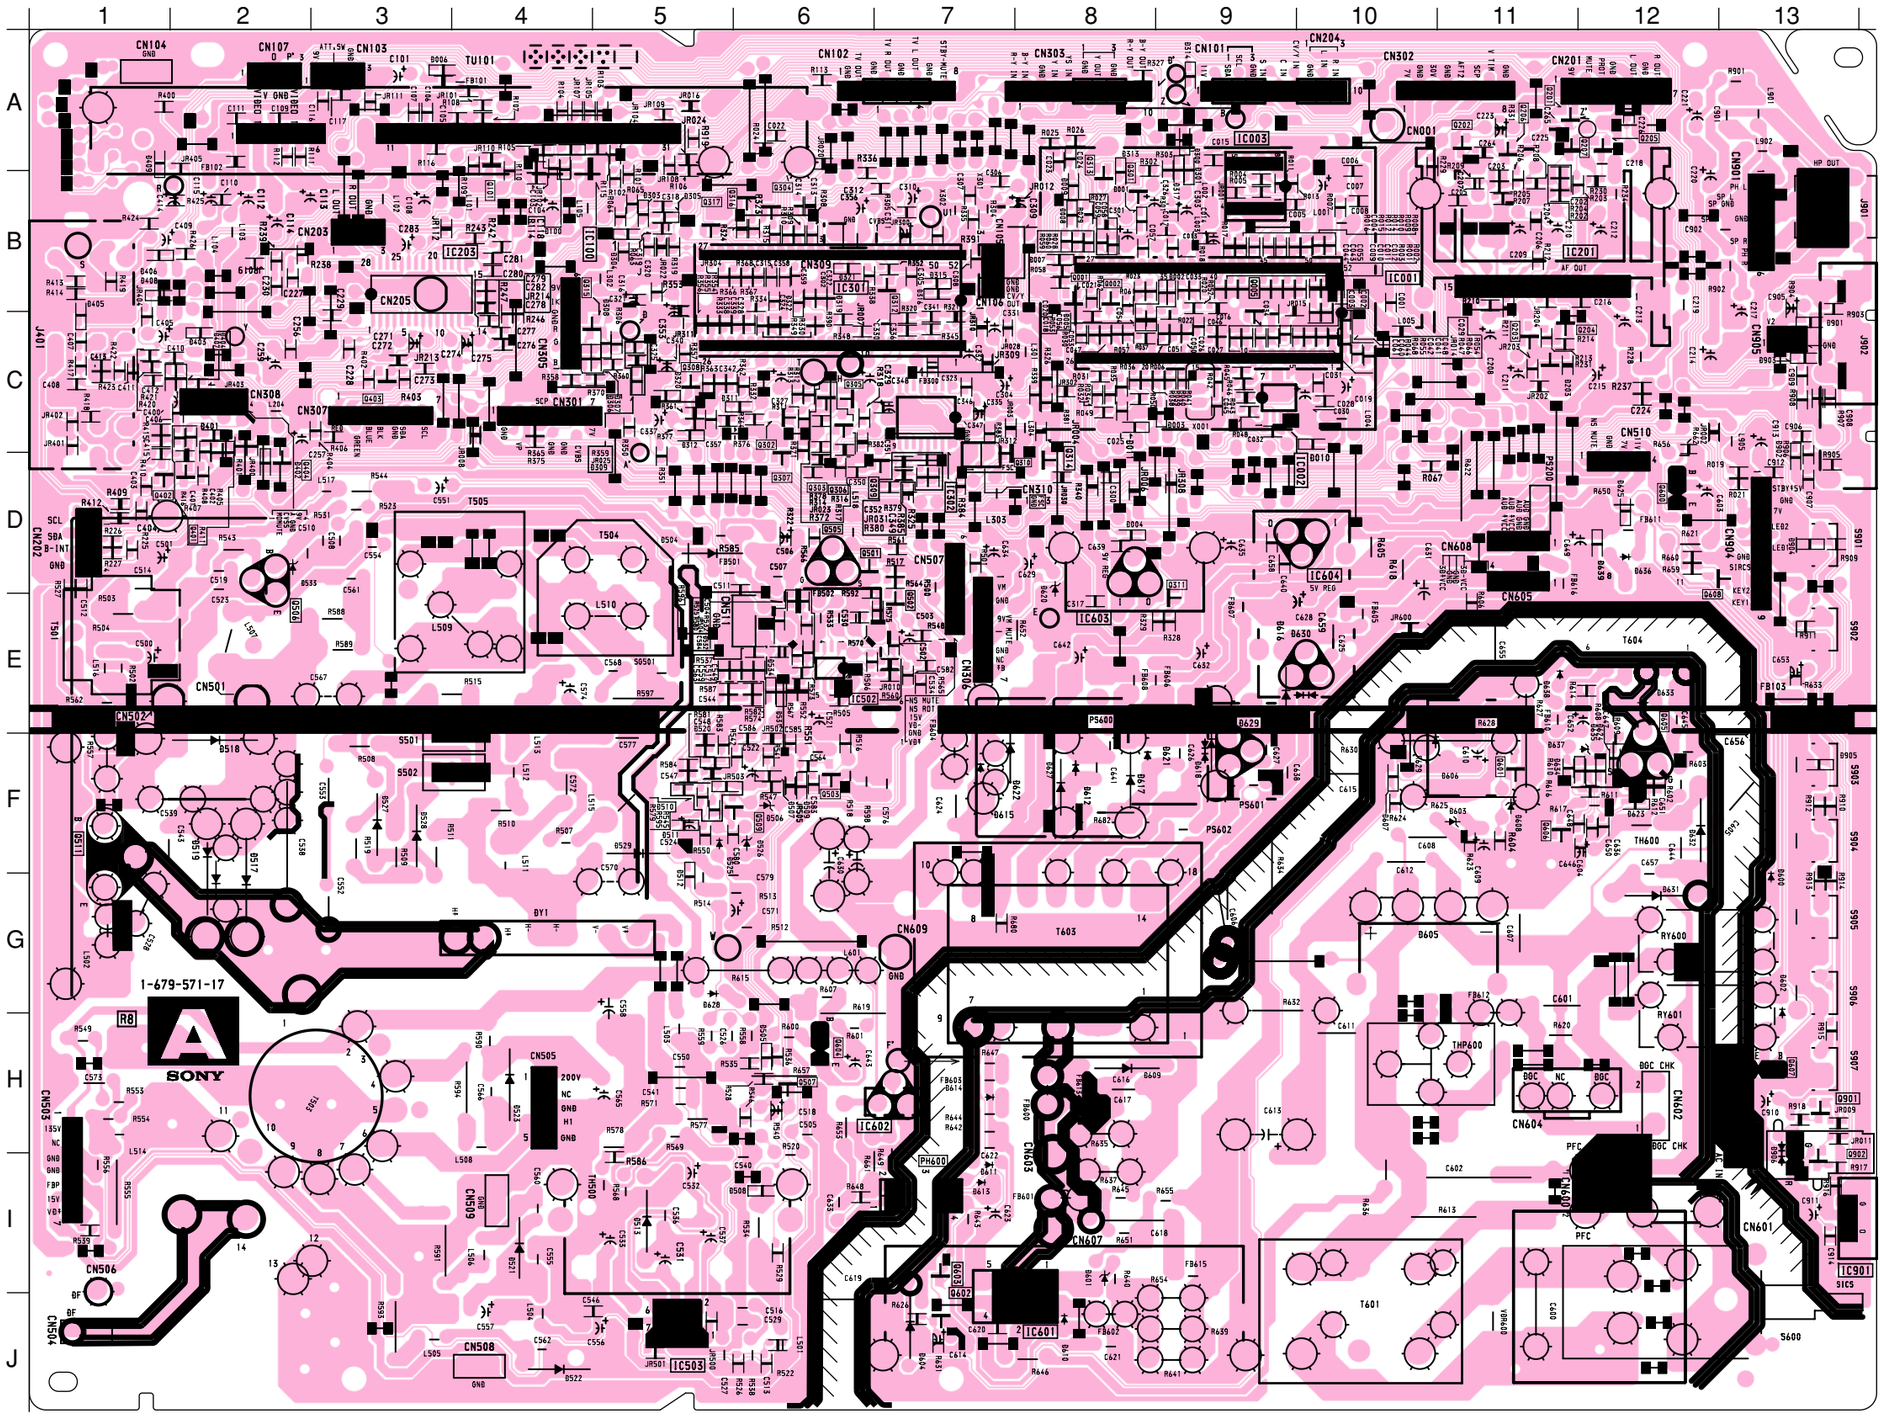

A BOARD

IC

IC001	B-10
IC002	D-9
IC003	A-9
IC100	B-4
IC201	B-11
IC203	B-4
IC301	B-6
IC302	D-7
IC502	E-6
IC503	J-5
IC601	J-8
IC602	H-6
IC603	E-8
IC604	D-10
IC901	I-13

TRANSISTOR

Q001	B-8
Q002	B-8
Q005	B-9
Q101	B-4
Q201	A-11
Q202	A-11
Q203	C-11
Q204	C-12
Q205	A-12
Q206	A-11
Q207	A-12
Q301	A-8
Q302	C-6
Q303	D-6
Q304	B-6
Q305	C-6
Q306	D-6
Q307	D-6
Q308	C-5
Q309	D-6
Q310	D-8
Q311	D-9
Q312	B-7
Q313	A-8
Q314	D-8
Q315	B-4
Q316	B-5
Q317	B-5
Q401	D-2
Q402	D-1
Q403	C-3
Q404	D-2
Q501	D-6
Q502	E-7
Q503	F-6
Q505	D-6
Q506	E-2
Q507	H-6
Q509	F-6
Q511	F-1
Q600	D-12
Q601	F-11
Q602	J-7
Q603	I-7
Q604	H-6
Q605	E-12
Q606	F-11
Q607	H-13
Q608	E-12
Q901	H-13
Q902	I-13

DIODE

D001	B-8
D002	B-9
D003	C-9
D004	D-8
D005	B-8
D006	A-3
D007	B-8
D008	B-8
D009	B-8
D010	C-10
D011	C-8
D100	B-4
D203	C-11
D300	A-9
D301	B-9
D303	B-5
D304	B-5
D305	B-5
D306	C-5
D307	C-5
D308	B-5
D309	C-13
D311	C-5
D312	C-5
D313	A-8
D314	A-9
D315	B-7
D316	B-7
D317	B-9
D319	B-6
D320	C-5
D321	B-6
D322	B-6
D401	C-2
D402	D-2
D403	C-2
D404	C-2
D405	B-1
D406	B-1
D407	C-2
D408	B-1
D409	A-1
D504	D-5
D505	H-6
D506	F-6
D507	F-6
D508	I-5
D509	F-6
D510	F-5
D511	F-5
D512	F-5
D513	I-5
D517	F-2
D518	F-2
D519	F-2
D520	E-5
D521	I-4
D522	J-4
D523	H-4
D525	F-5
D526	F-6
D527	F-3
D528	F-3
D529	F-5
D531	E-6
D532	E-5
D533	D-2
D534	E-6
D600	G-13
D601	I-8
D602	G-13
D603	F-11
D604	J-7
D605	G-10
D606	I-11
D607	F-10
D608	F-11
D609	H-8
D610	J-8
D611	I-7
D612	F-8
D613	I-7
D614	H-7
D615	F-7
D616	E-9
D617	F-8
D618	F-9
D620	D-8
D621	F-9
D622	F-7
D623	F-12
D624	E-12
D625	D-12
D627	F-8
D628	G-5
D629	E-9
D630	E-9
D631	G-12
D632	F-12
D633	E-12
D634	F-11
D635	E-12
D636	D-12
D637	E-11
D638	E-11
D639	D-12
D901	C-13
D902	C-13
D903	C-13
D904	D-13
D905	F-13
D906	I-13
PH600	I-7

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

PRINTED WIRING BOARDS

B10 [AUDIO PROCESSOR, AUDIO AMP, SUB TUNER, AV IN/OUT, VM DRIVER]

H1 [FRONT AV IN, KEY SW]

J [DVD TERMINAL]

– B10 Board – (Except KV-AR25M66)

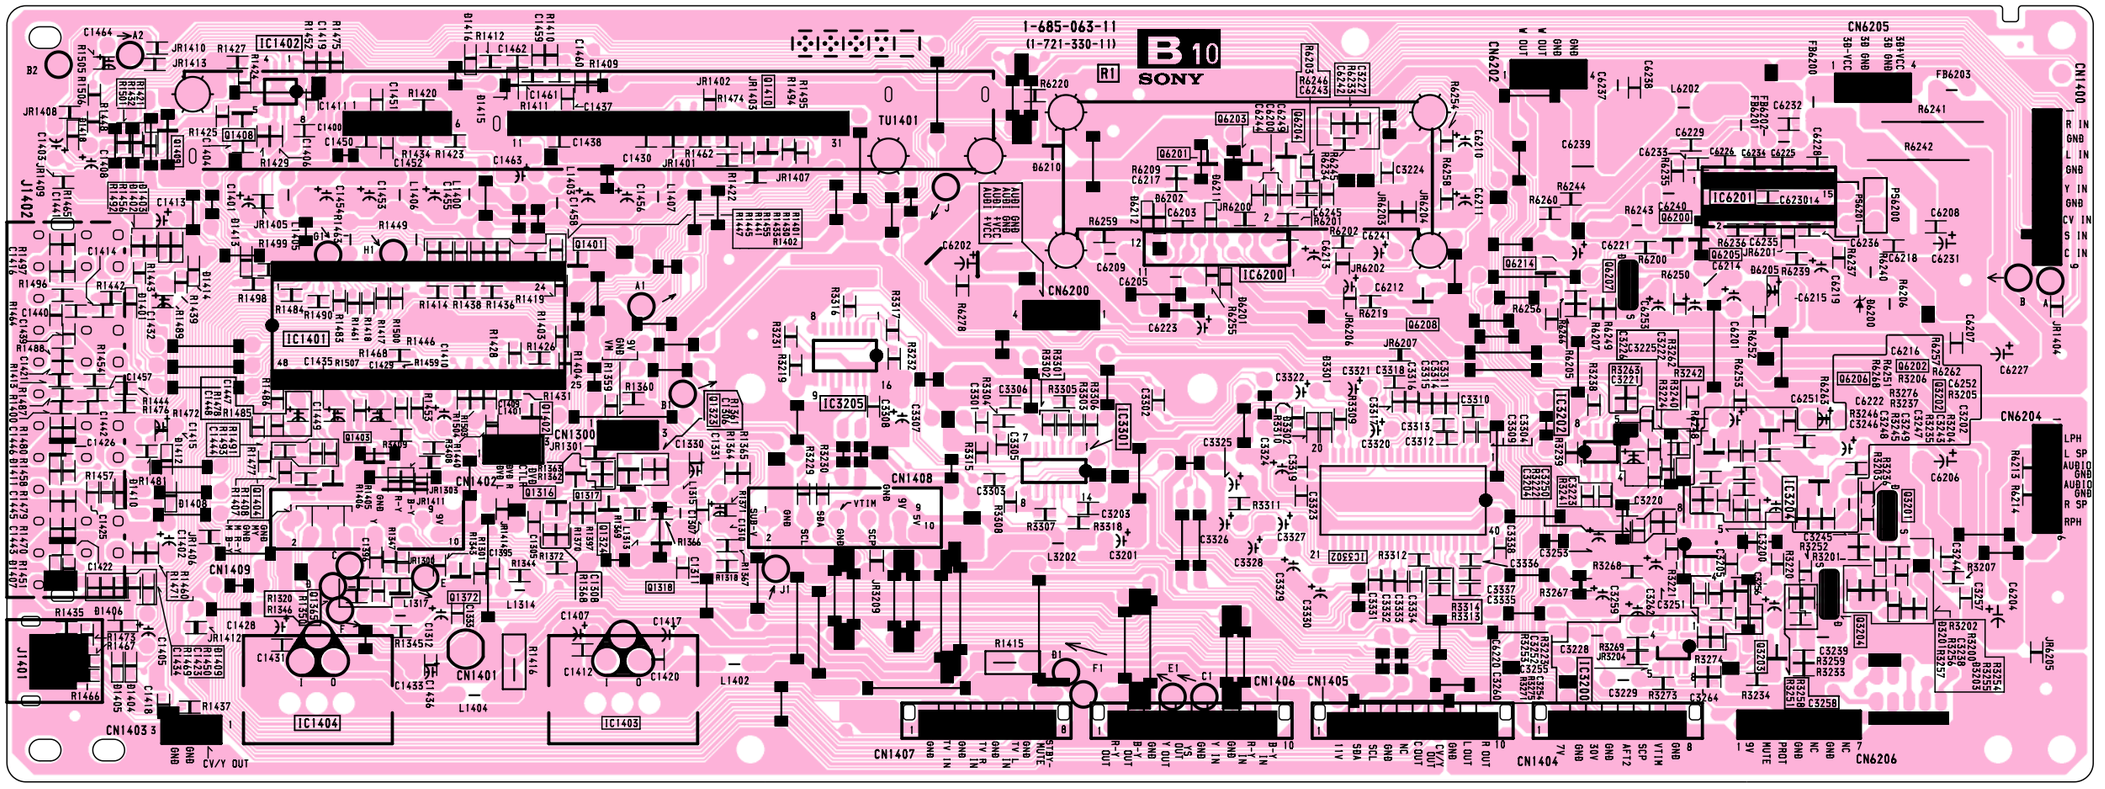

– H1 Board –

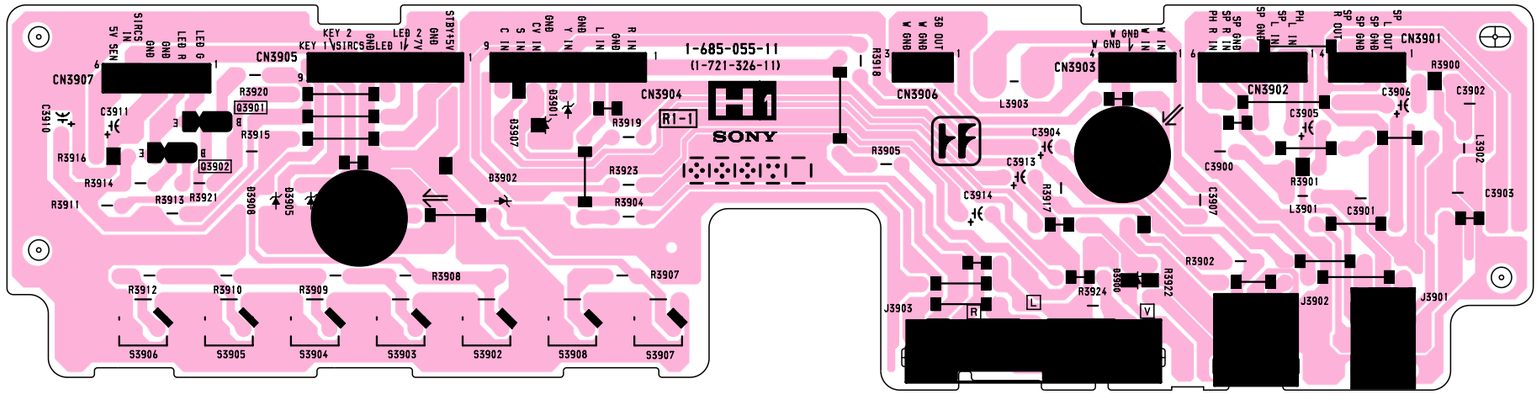

– J Board –

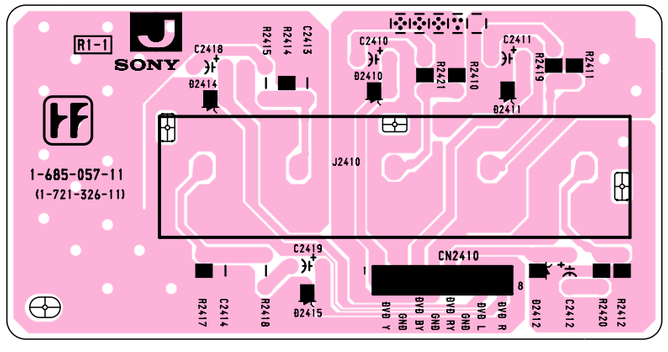

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

PRINTED WIRING BOARDS

B8 [AUDIO AMP, SURROUND PROCESSOR, AV IN/OUT, VM DRIVER]

– B8 Board – (Component Side) (KV-AR25M66)

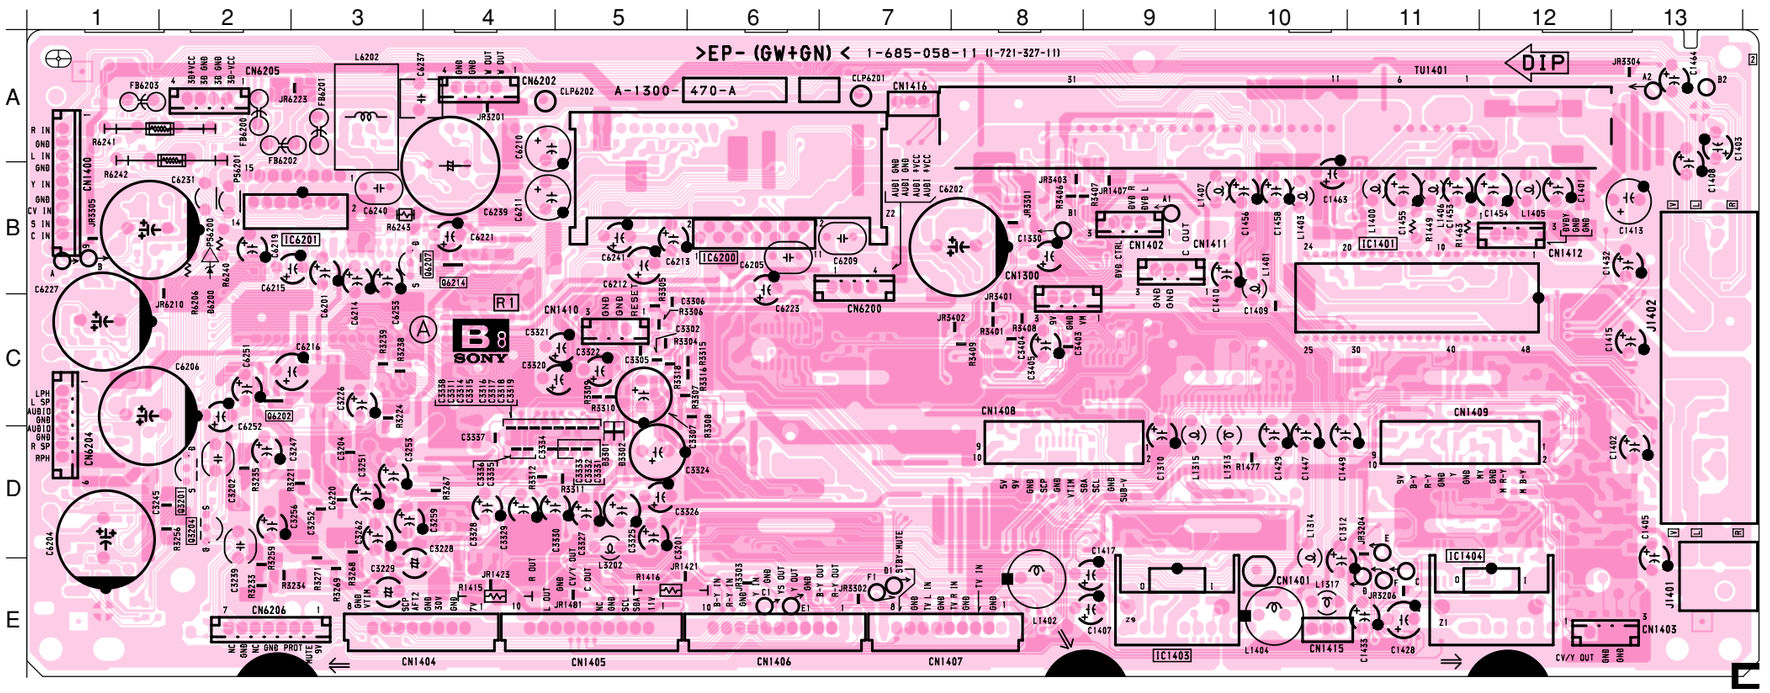

– B8 Board – (Conductor Side) (KV-AR25M66)

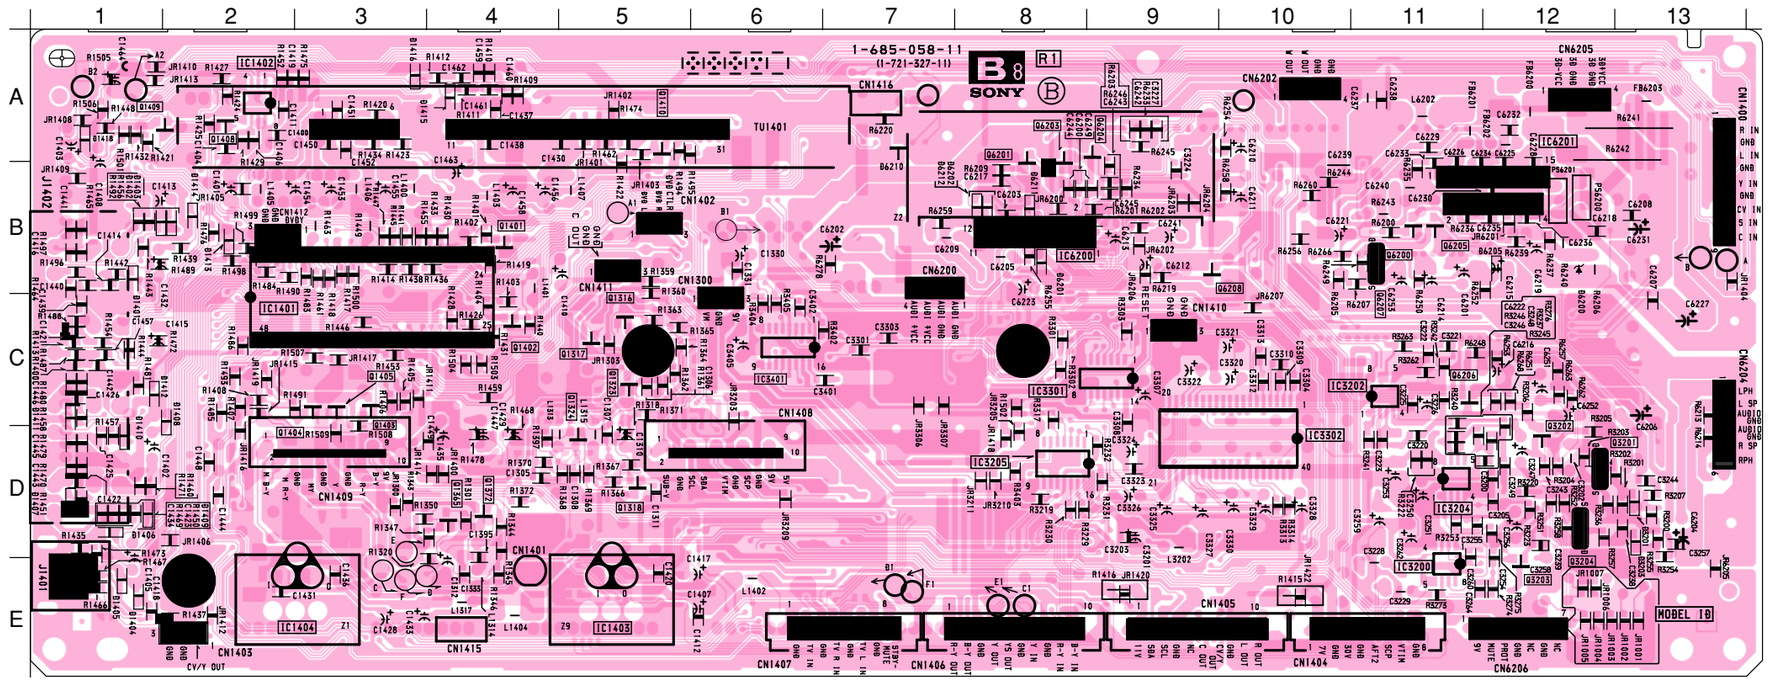

B8 BOARD (Component Side)

IC		TRANSISTOR		DIODE	
IC1401	B-1	Q3201	D-2		
IC1403	E-9	Q3204	D-2		
IC1404	E-11	Q6202	C-2		
IC6200	B-6	Q6207	B-4		
IC6201	B-3	Q6214	B-4		

B8 BOARD (Conductor Side)

IC		TRANSISTOR		DIODE	
IC1401	C-2	Q1316	C-5	D1401	C-1
IC1402	A-2	Q1317	C-5	D1402	B-1
IC1403	E-5	Q1318	D-5	D1403	B-1
IC1404	E-3	Q1323	C-5	D1404	E-1
IC3200	E-11	Q1324	C-5	D1405	E-1
IC3202	C-10	Q1365	D-4	D1406	D-1
IC3204	D-11	Q1372	D-4	D1407	D-1
IC3205	D-8	Q1401	B-4	D1408	C-2
IC3301	C-8	Q1402	C-4	D1409	D-2
IC3302	D-10	Q1403	C-3	D1410	C-1
IC3401	C-6	Q1404	D-2	D1411	C-1
IC6200	B-8	Q1405	C-3	D1412	C-2
IC6201	A-12	Q1408	A-2	D1413	B-2
		Q1409	A-1	D1414	B-2
		Q1410	A-5	D1415	A-3
		Q3201	D-13	D1416	A-3
		Q3202	C-12	D1418	A-1
		Q3203	E-12	D3201	D-13
		Q3204	E-12	D3203	E-13
		Q6200	B-11	D6200	C-1
		Q6201	A-8	D6201	B-8
		Q6203	A-8	D6202	B-7
		Q6204	A-9	D6205	B-12
		Q6205	B-11	D6210	B-7
		Q6206	C-11	D6211	B-8
		Q6207	C-11	D6212	B-7
		Q6208	B-10		

- :Pattern from the side which enables seeing.
- :Pattern from the rear side.

KV-AR25M66/AR25M60/AR25M80
RM-993 RM-995
KV-AR25N90
RM-996

PRINTED WIRING BOARDS

P5 [PICTURE IN PICTURE, DVD SWITCH, DIGITAL TEXTURE ENHANCER]

B1 [DVD SWITCH]

F [CISPR]

– P5 Board – (Component Side) (KV-AR25M66)

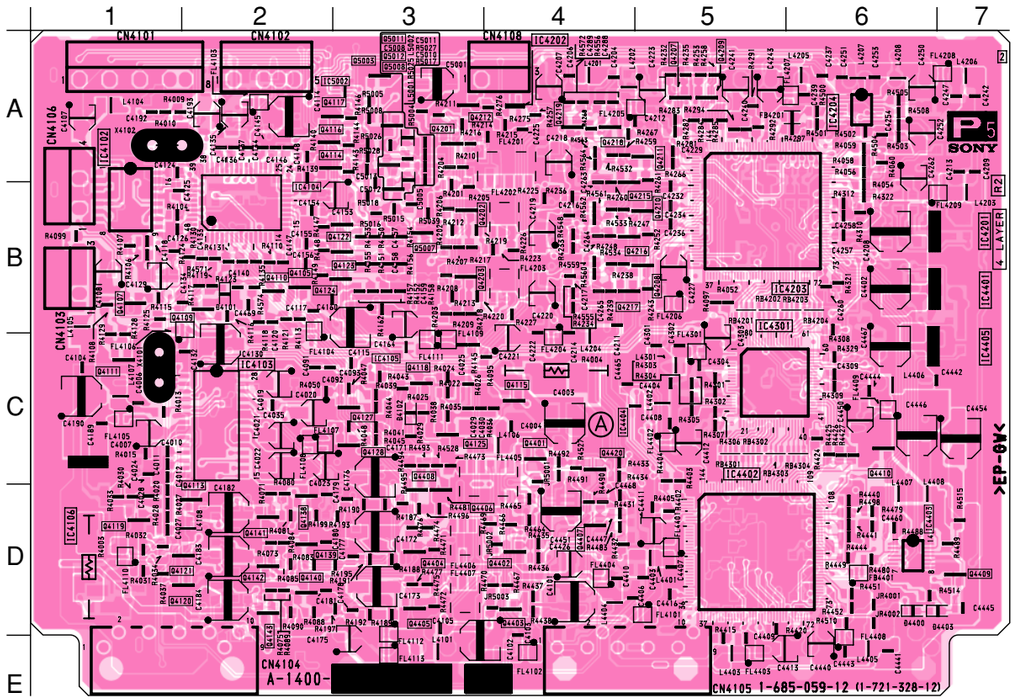

– P5 Board – (Conductor Side) (KV-AR25M66)

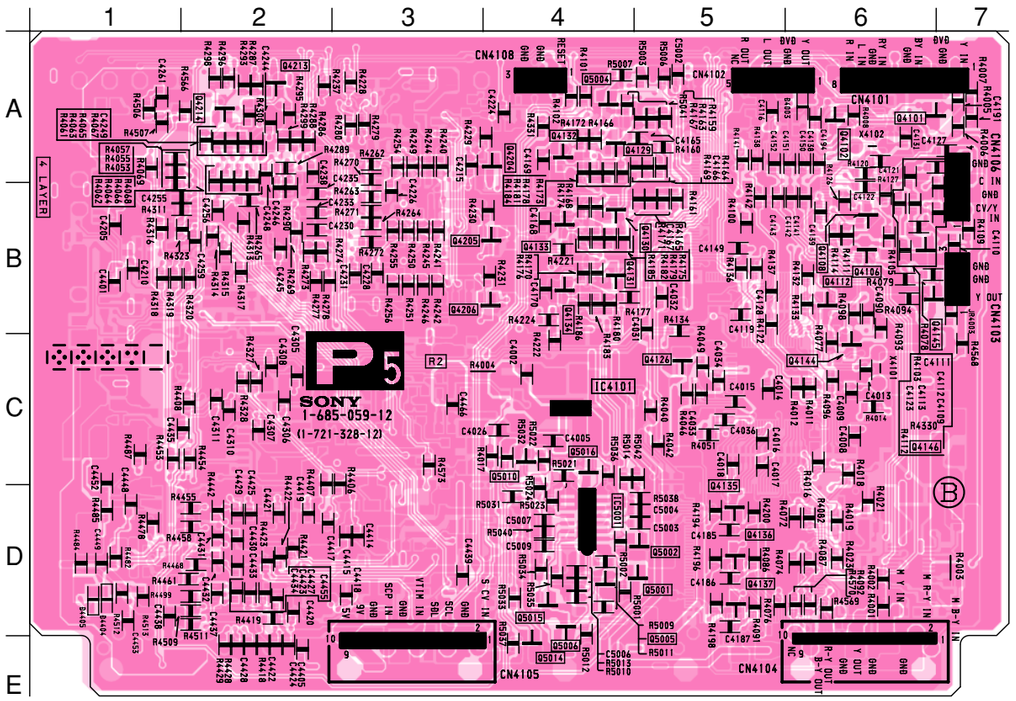

– B1 Board – (Except KV-AR25M66)

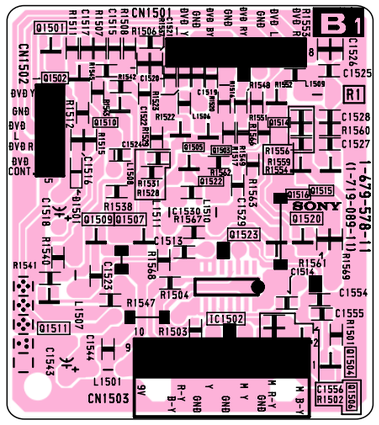

– F Board –

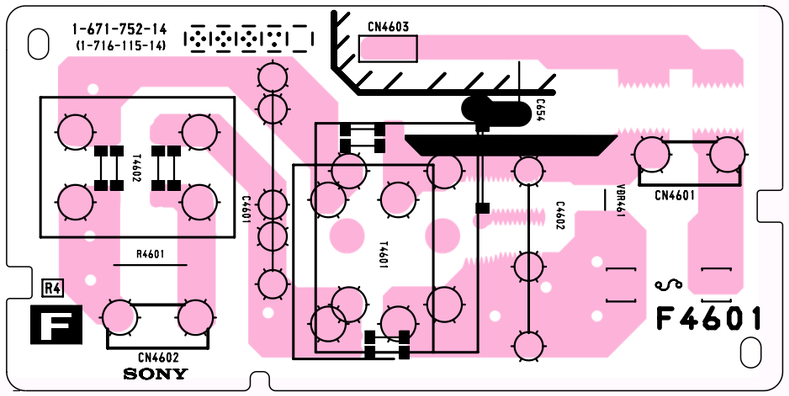

P5 BOARD (Component Side)

IC		Q4114 A-2	Q4210 B-5
IC4102 A-1		Q4115 C-4	Q4211 A-5
IC4103 C-2		Q4116 A-2	Q4212 A-3
IC4104 B-2		Q4117 A-3	Q4215 B-5
IC4105 C-3		Q4118 C-3	Q4216 B-5
IC4106 D-1		Q4119 D-1	Q4217 B-4
IC4201 B-7		Q4120 D-2	Q4218 A-4
IC4202 A-4		Q4121 D-2	Q4219 A-4
IC4203 B-5		Q4122 B-3	Q4401 C-4
IC4204 A-6		Q4123 B-3	Q4402 D-4
IC4301 B-5		Q4124 B-2	Q4403 D-4
IC4401 B-7		Q4125 C-3	Q4404 D-3
IC4402 C-5		Q4127 C-3	Q4405 D-3
IC4403 D-6		Q4128 C-3	Q4406 D-4
IC4404 C-4		Q4138 D-2	Q4407 D-4
IC4405 C-7		Q4139 D-2	Q4408 C-3
TRANSISTOR		Q4140 D-2	Q4409 D-7
Q4105 B-2		Q4141 D-2	Q4410 C-6
Q4107 B-1		Q4142 D-2	Q4420 C-4
Q4109 B-2		Q4143 E-2	**DIODE**
Q4110 B-2		Q4201 A-3	D4101 B-2
Q4111 C-1		Q4202 B-4	D4400 D-6
Q4113 D-2		Q4203 B-4	
		Q4207 A-5	
		Q4208 B-5	
		Q4209 A-5	

P5 BOARD (Conductor Side)

IC		Q4134 B-4
IC4101 C-4		Q4135 D-5
TRANSISTOR		Q4136 D-5
		Q4137 D-5
Q4101 A-6		Q4144 C-6
Q4102 A-6		Q4145 B-7
Q4106 B-6		Q4146 C-6
Q4108 B-6		Q4204 A-4
Q4112 B-6		Q4205 B-3
Q4126 C-5		Q4206 B-3
Q4129 A-5		Q4213 A-2
Q4130 B-5	**DIODE**	
Q4131 B-5		
Q4132 A-4	D4003 A-5	
Q4133 B-4	D4404 D-1	
	D4405 D-1	

- :Pattern from the side which enables seeing.
- :Pattern from the rear side.

PRINTED WIRING BOARDS

C6 [VIDEO AMP, ROTATION CIRCUIT]

– C6 Board – (Except KV-AR25M66)

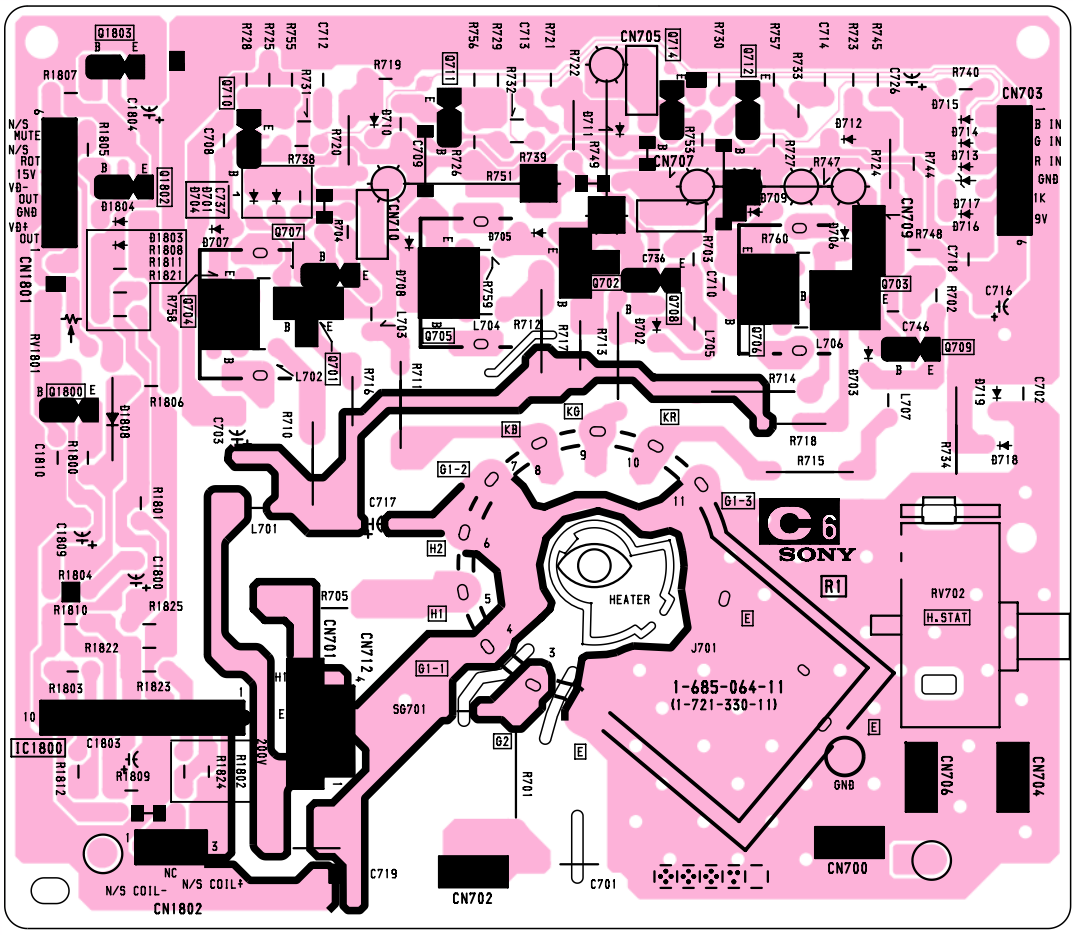

PRINTED WIRING BOARDS

C6 [VIDEO AMP, ROTATION CIRCUIT]

V1 [TELETEXT]

– C6 Board – (KV-AR25M66)

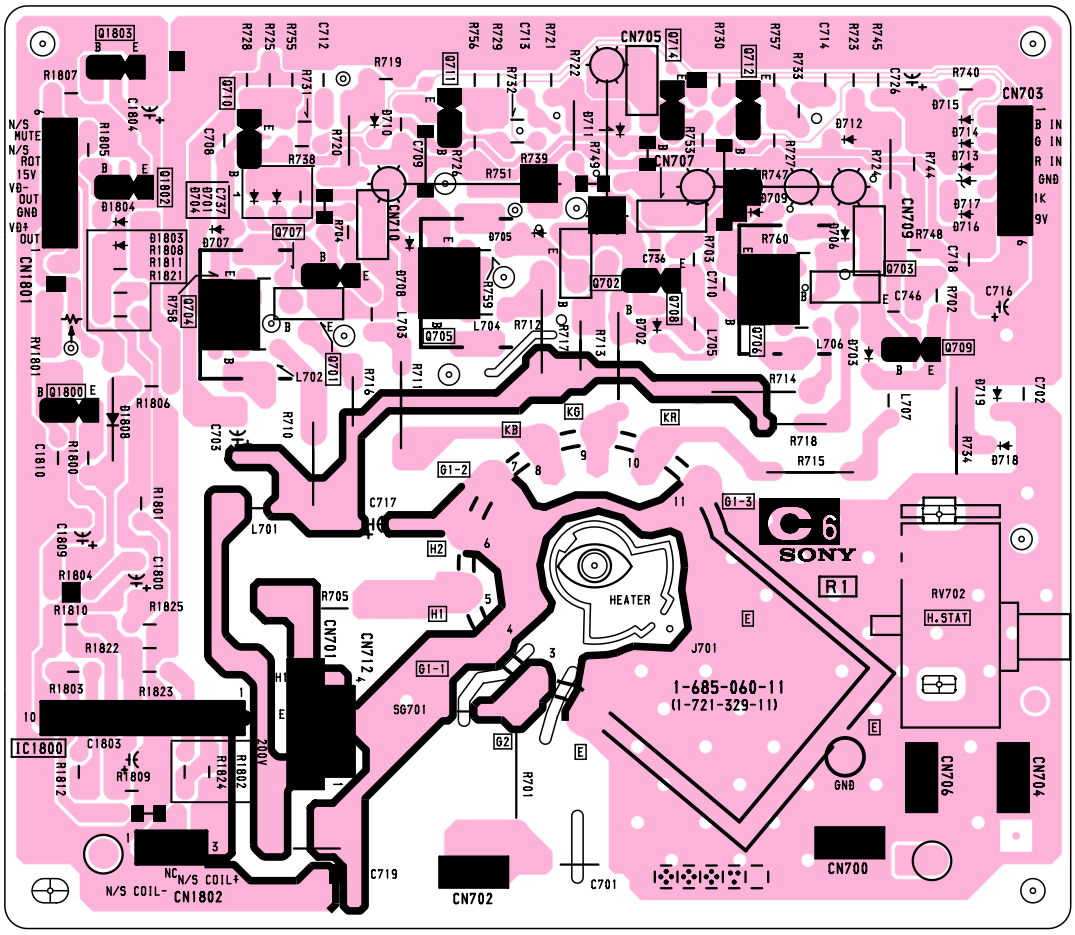

– V1 Board – (KV-AR25M66)

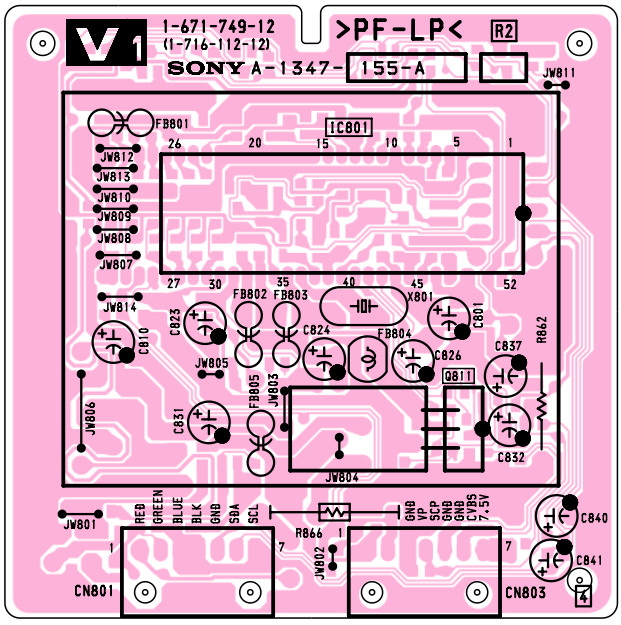

PRINTED WIRING BOARDS

H2 [RECEIVER, POWER SW, LED]

VM1 [VELOCITY MODULATION]

– H2 Board –

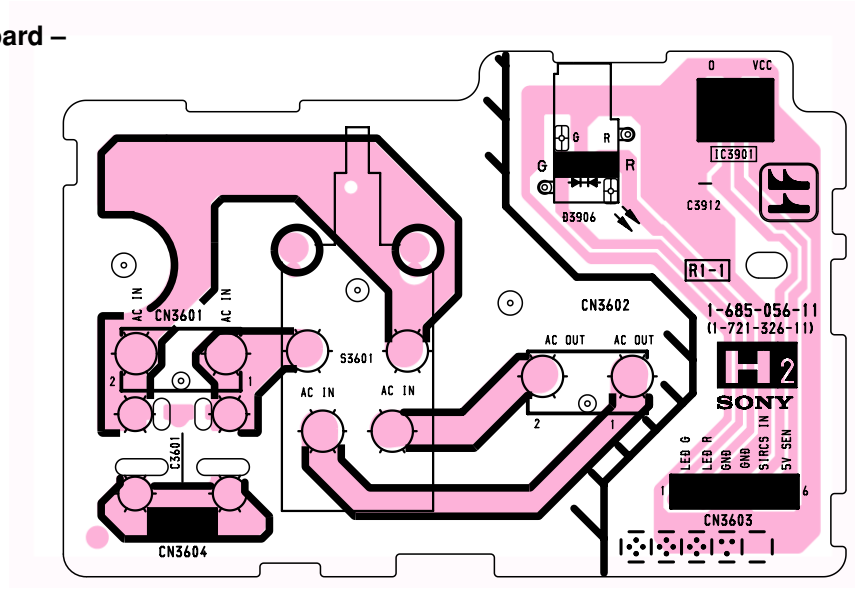

– VM1 Board – (Except KV-AR25M66)

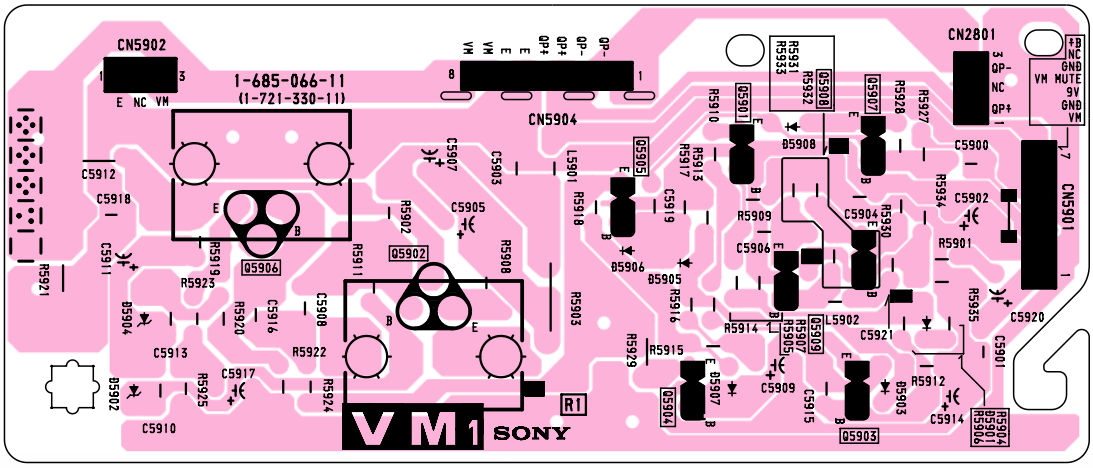

– VM1 Board – (KV-AR25M66)

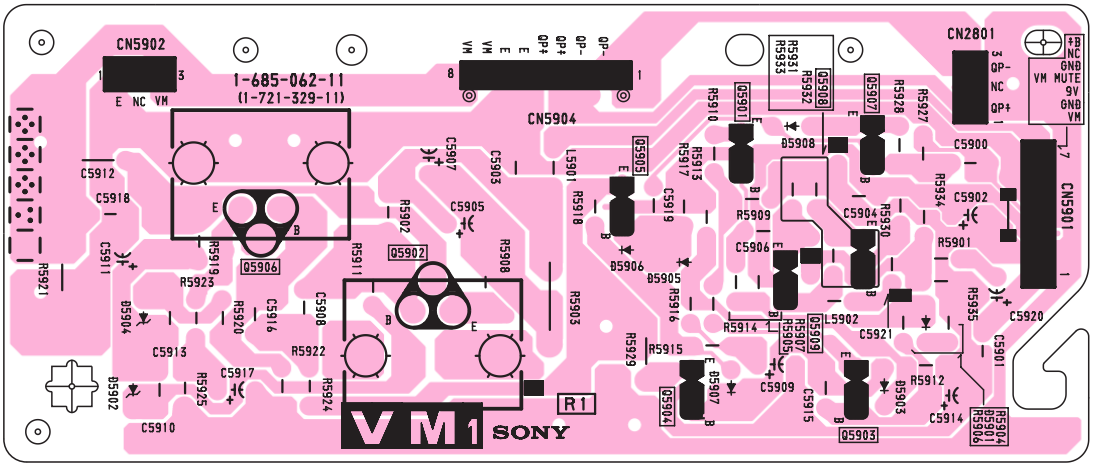

5-6. SEMICONDUCTORS

TRANSISTOR

	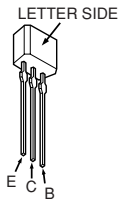	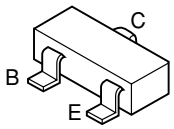			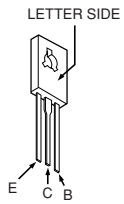
2SK2845-LB102	DTC144ESA 2SA1175-HFE 2SC2785-HFE	MSD601-RT1 DTA114TKA-T146 UN2111 UN2211 UN2213 2SA1037AK-T146	2SA1162-G 2SC1623-L5L6 2SC2712-YG 2SD2114K 2SD601A-QRS	2SC2458-YGR 2SC3576	2SC2611 2SC2688-LK

			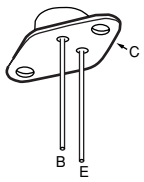		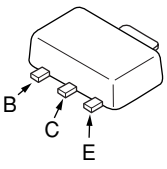
IRF614	2SA1606-E 2SC4159-E 2SD2394-EF	2SA1091-0 2SC2551-0	2SD2578-CA	2SK246-GR	2SK2036 (TE85L)

DIODE

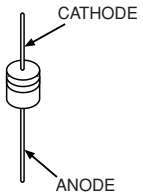	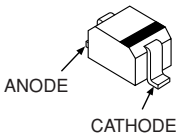	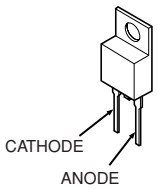	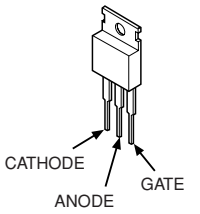	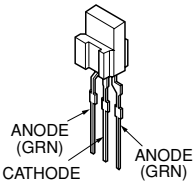	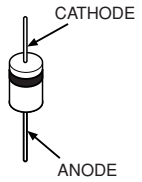
D1N20R D1NS4 HZS9.1NB2 RD39ES-B RD6.8ES-B1 RD20ES-B2 RD30ES-B2 1SS119-25 11ES2	MA111-TX RD5.1SB-T2 RD7.5SB1-T1 RD9.1S-B RD10S-B UDZSTE-17.9-1B UDZSTE-175.1B 1SS355TE-17 DTZ10B	D5S6M	5P-6M	SPB-25MVWF	ERC04-06SE RU4AM-T4 30DF2N-FCS

	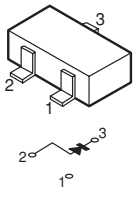	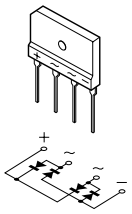	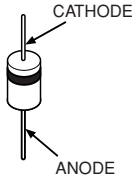		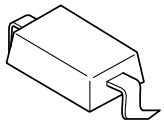
ON3171-R	RD3.3M-B2 RD5.6M-B2	D3SB60	AK04V0 AU-01Z-V1 ERA22-08 EL1Z FR104-A5 GP08D NNCD9.1A-T1	RD33EB3T RGP02-17EL-6433 10ELS2N-TB5	MM3Z15VTI MMDL914T1

DIODE

IC

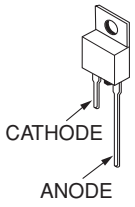		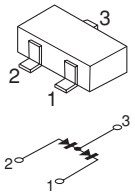	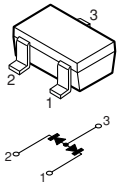	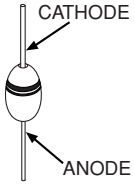	
F5KQ60	FMU-G26S	DA204K	DAP202U	ERC06-15S	SE-135N

DIP  TOP VIEW Dual In-line Package Pin 6~98		MARKING SIDE VIEW 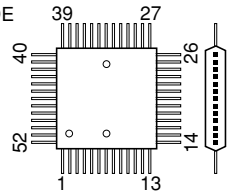			
CXA2159S TDA9181T SAA5261 CXA1855S CXP750097-603S CXP750097-604S CXP750097-605S		RU-1P		TDA8172	SBX3081-21

SOP 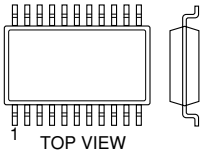 TOP VIEW Single In -line Package Pin 8~98		MARKING SIDE VIEW 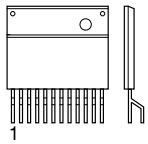 Zig-zag In -line Package Pin 6~99			
CXA1315M HEF4053BT MM1319AFBE M24C08-BN6(A) M24C16-BN6 NJM2903M NJU4066BM	TDA9183T TLC29331PWR-12 UPC4588G2	STR-F6456S		KIA7805API	TA7805S NJM78M09FA

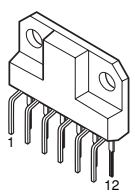			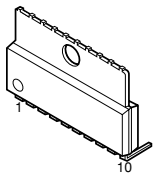	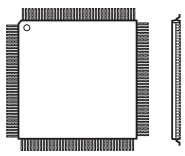	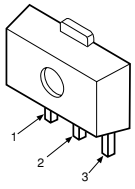
TA8200AH	CXA2163AQ-T6	BA033FP-E2 BA18BCOFP-E2 LF50CDT-TR	LA6510	CXD9694Q CXD9695Q CXD9696Q	S-80743AL-A7-S

IC

		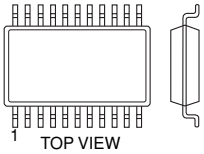 Small Outline L-leaded Package Pin 8 ~ 98	
TC7S02FU(TE85R) TC7SET08FU(TE85) PST9126NL	RPM7140-H5	NJW1139GK1-TE2 NJM2283M-TE1 SDA9588XB23	

SECTION 6
EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

6-1. SPEAKER BLOCK

■ : 7-685-663-71 SCREW +BVTP 4 × 16
▲ : 7-685-661-14 SCREW +BVTP 4 × 12

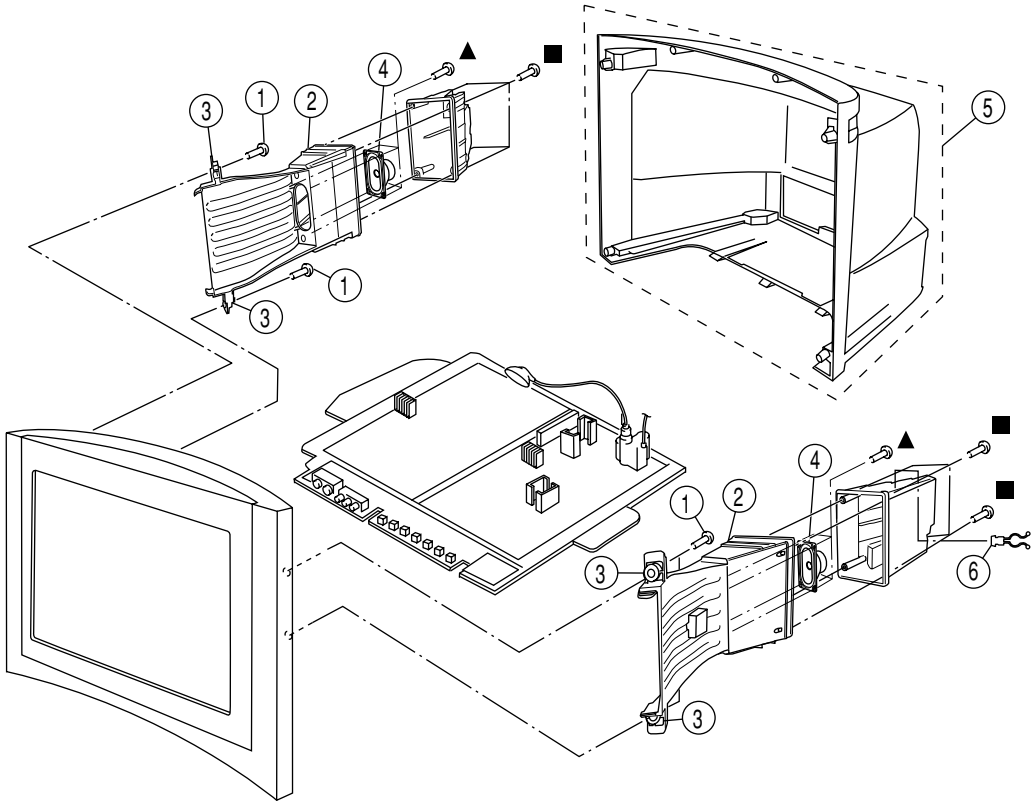

REF. NO.		PART NO.	DESCRIPTION	REMARK
1		4-384-096-01	SCREW (4 x 16) TAPPING +P	
2	*	4-088-703-01	BAFFLE	
3		4-374-745-21	CUSHION A	
4		1-825-220-11	LOUD SPEAKER (15 x 6.5 CM)	
5		X-4040-830-1	REAR COVER ASSY	
6	*	4-082-205-01	LOCK, PURSE	

6-2. CHASSIS

● : 7-685-648-79 SCREW +BVTP 3 × 12
■ : 7-685-663-71 SCREW +BVTP 4 × 16

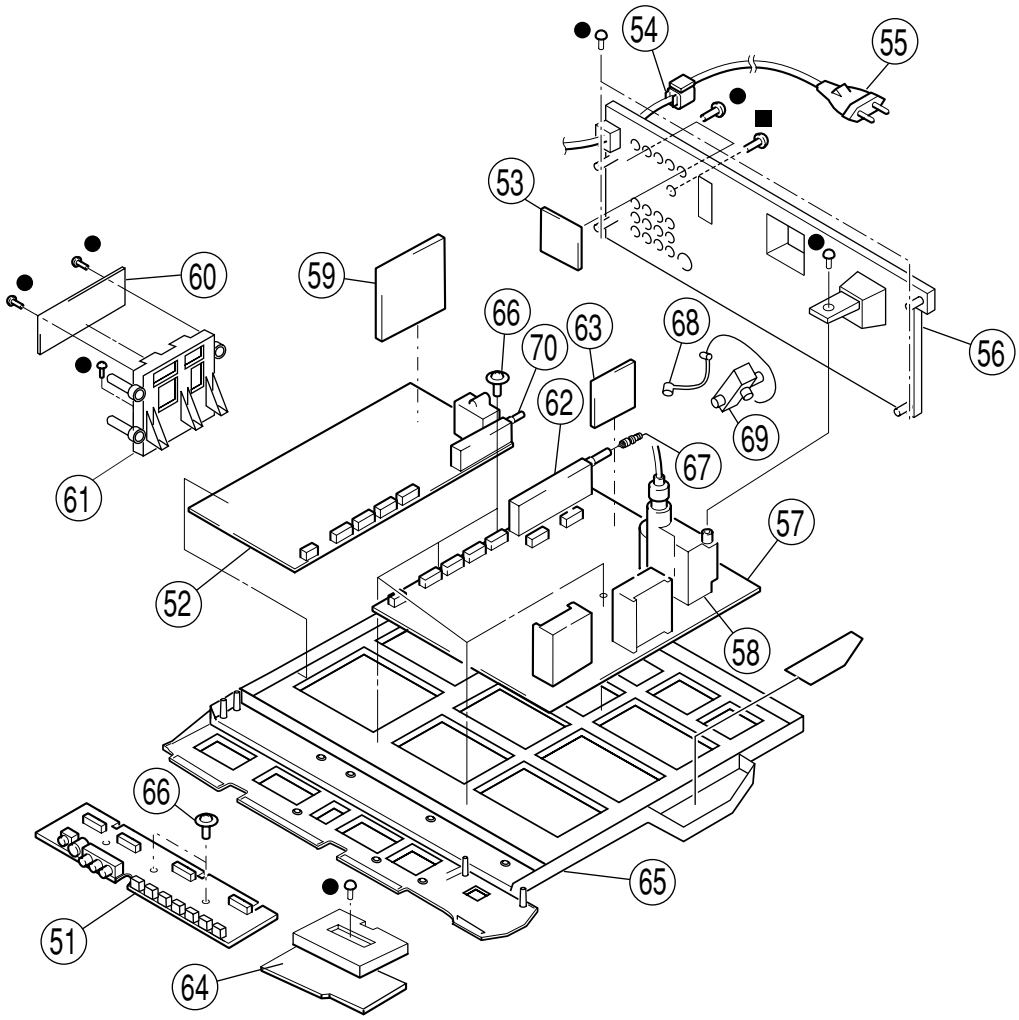

REF. NO.		PART NO.	DESCRIPTION	REMARK
51	*	A-1400-972-A	H1 BOARD, MOUNTED (Except KV-AR25M60)	
	*	A-1401-322-A	H1 BOARD, MOUNTED (KV-AR25M60)	
52	*	A-1300-868-A	B10 BOARD, COMPLETE (KV-AR25M60)	
	*	A-1300-516-A	B10 BOARD, COMPLETE (KV-AR25M80/N90)	
	*	A-1300-810-A	B8 BOARD, COMPLETE (KV-AR25M66)	
53	*	A-1400-975-A	J BOARD, MOUNTED (Except KV-AR25M60)	
	*	A-1401-328-A	J BOARD, MOUNTED (KV-AR25M60)	
54	⚠	4-022-115-00	HOLDER, AC CORD (Except KV-AR25M60)	
	⚠	4-022-115-21	HOLDER, AC CORD (KV-AR25M60)	
55	⚠	1-823-479-11	CORD, AC POWER (WITH CONNECTOR) (KV-AR25M80/M66)	
	⚠	1-790-130-31	CORD, AC POWER (WITH CONNECTOR) (KV-AR25N90)	
	⚠	1-824-642-11	CORD, POWER (WITH CONNECTOR) (KV-AR25M60)	
56	*	4-081-023-23	BRACKET, TERMINAL (KV-AR25N90)	
	*	4-081-023-03	BRACKET, TERMINAL (KV-AR25M80/AR25M60)	
	*	4-066-684-02	BRACKET, TERMINAL (KV-AR25M66 (GE))	
57	*	A-1300-835-A	A BOARD COMPLETE (KV-AR25M80)	
	*	A-1300-921-A	A BOARD COMPLETE (KV-AR25N90 (Philippines))	
	*	A-1300-852-A	A BOARD COMPLETE (KV-AR25N90 (Taiwan))	
	*	A-1300-910-A	A BOARD COMPLETE (KV-AR25M66 (GE))	
	*	A-1300-867-A	A BOARD COMPLETE (KV-AR25M60 (Thailand))	
58	⚠	1-453-284-21	TRANSFORMER ASSY, FLYBACK (NX-4009//M314)	
59	*	A-1131-652-A	B1 BOARD MOUNTED (KV-AR25N80/AR25M90)	
	*	A-1131-665-A	B1 BOARD MOUNTED (KV-AR25M60 (Thailand))	
	*	A-1401-241-A	P5 BOARD MOUNTED (KV-AR25M66)	
60	*	A-1241-493-A	F BOARD MOUNTED (KV-AR25M80/M66/N90 (Philippines))	
	*	A-1241-456-A	F BOARD MOUNTED (KV-AR25N90 (Taiwan))	
	*	A-1401-345-A	F BOARD MOUNTED (KV-AR25M60 (Thailand))	
61	*	4-066-682-01	BRACKET F PWB	
62	⚠	8-598-449-10	TUNER, BTF-LG433 (KV-AR25M80)	
	⚠	8-598-452-20	TUNER, FSS BTF-WG442 (KV-AR25M66)	
	⚠	8-598-451-20	TUNER, FSS BTF-WG441 (KV-AR25M60)	
	⚠	8-598-593-20	TUNER, FSS BTF-WA421 (KV-AR25N90)	
63	*	A-1347-164-A	V1 BOARD COMPLETE (KV-AR25M66)	
64	*	A-1400-973-A	H2 BOARD MOUNTED (Except KV-AR25M60)	
	*	A-1401-323-A	H2 BOARD MOUNTED (KV-AR25M60)	
65		4-088-700-01	BRACKET MAIN	
66		4-046-797-01	SCREWS (3 x 12), (+) BVTAP (Except KV-AR25M60(Thailand))	
		4-046-797-21	SCREWS (3 x 12), (+) BVTAP (KV-AR25M60 (Thailand))	
67		1-573-657-21	PLUG, F-PIN (KV-AR25N90 (Philippines/Taiwan))	
68		1-251-658-21	SPLITTER RF (KV-AR25M66 (GE))	
69		1-555-110-00	P-P CABLE (KV-AR25M66 (GE))	
70		8-598-450-10	TUNER, FSS BTF LG434 (KV-AR25M66 ONLY)	

6-3. PICTURE TUBE

● : 7-685-648-79 SCREW +BVTP 3 × 12
■ : 7-685-663-71 SCREW +BVTP 4 × 16

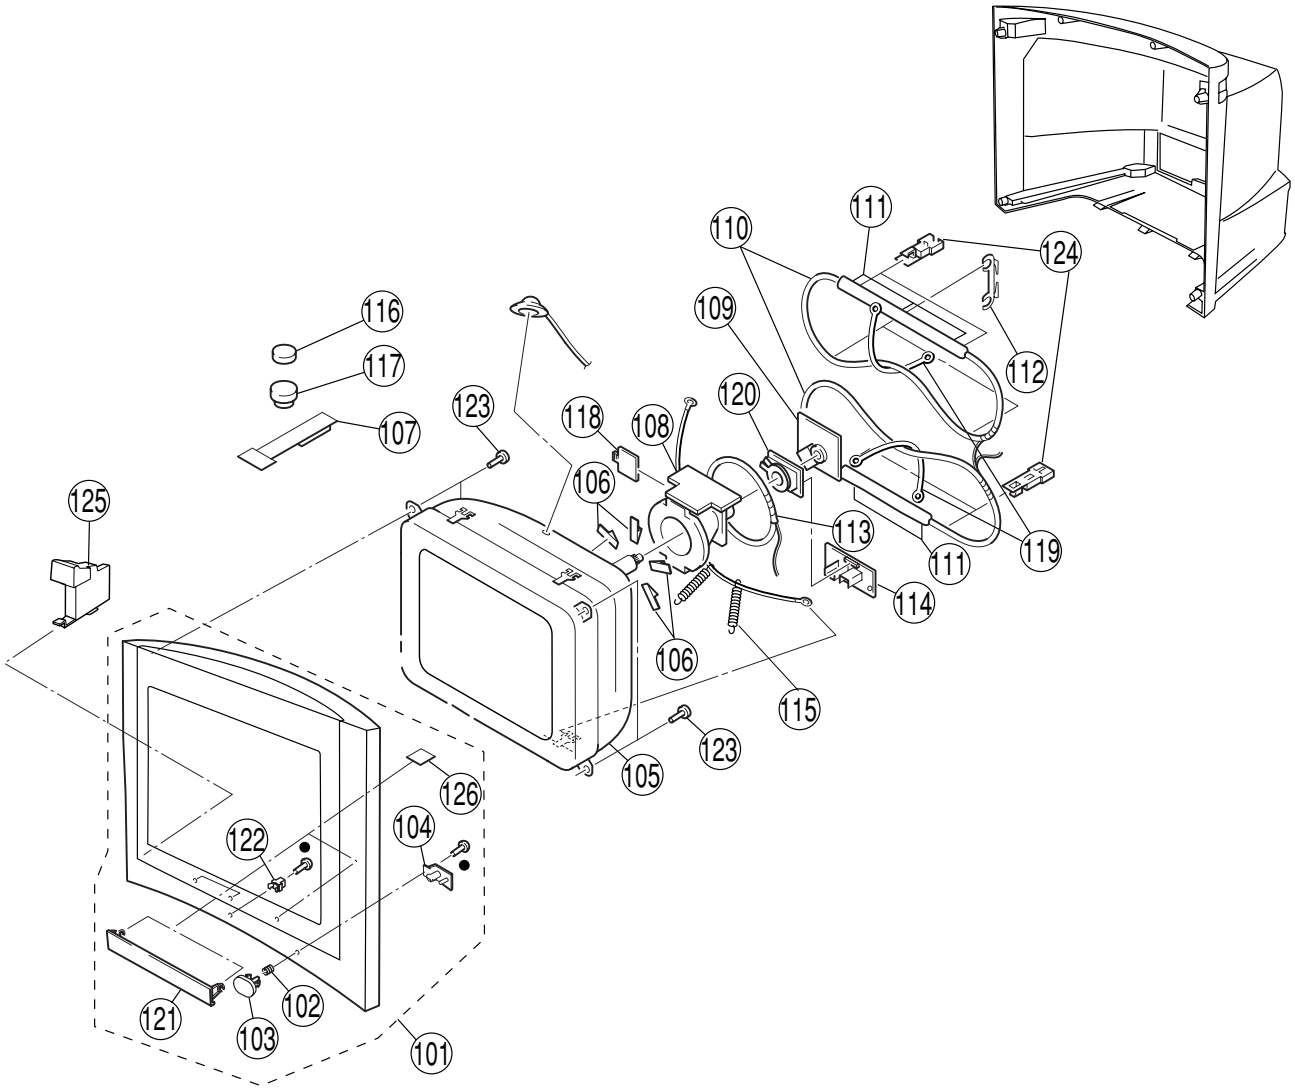

REF. NO.		PART NO.	DESCRIPTION	REMARK
101		X-4040-799-1	BEZNET ASSY (KV-AR25M80)	102-104, 121-123,128
		X-4040-800-1	BEZNET ASSY (KV-AR25N90)	
		X-4040-801-1	BEZNET ASSY (KV-AR25M66)	
		X-4040-919-1	BEZNET ASSY (KV-AR25M60)	
102		4-036-405-11	SPRING, COMPRESSION (Except KV-AR25M60)	
		4-036-405-21	SPRING, COMPRESSION (KV-AR25M60)	
103		4-086-448-01	BUTTON, POWER	
104	*	4-086-707-01	GUIDE, LIGHT	
105	⚠	8-733-250-05	PICTURE TUBE (A60LPN70X) (Except KV-AR25N90)	
	⚠	8-733-250-05	PICTURE TUBE (M68LNH070X) (KV-AR25N90)	
106		4-064-818-01	SPACER, DY (KV-AR25M60)	
		4-046-600-11	SPACER, DY (Except KV-AR25M60)	
107		X-4387-214-3	PERMALOY ASSY, CORRECTION (Except KV-AR25M60)	
108	⚠	1-451-475-11	DEFLECTION YOKE (Y25RSA)	
109	*	A-1400-971-A	C6 BOARD, MOUNTED (KV-AR25M80/AR25N90)	
	*	A-1401-671-A	C6 BOARD, MOUNTED (KV-AR25M66)	
	*	A-1401-808-A	C6 BOARD, MOUNTED (KV-AR25M60)	
110	⚠	1-419-086-21	COIL, DEGAUSSING (KV-AR25N90 (Taiwan))	
	⚠	1-419-322-11	COIL, DEGAUSSING (KV-AR25M80/M66/M60/N90 (Philippines))	
111	*	4-063-935-21	CUSHION (50 x 550), DGC	
112		4-064-883-03	HOLDER, DGC	
113		1-452-896-81	COIL, NA ROTATION (KV-AR25M60)	
		1-452-896-61	COIL, NA ROTATION (RT200) (Except KV-AR25M60)	
114	*	A-1400-974-A	VM1 BOARD, MOUNTED (KV-AR25M80/N90)	
	*	A-1401-349-A	VM1 BOARD, MOUNTED (KV-AR25M60)	
	*	A-1401-835-A	VM1 BOARD, MOUNTED (KV-AR25M66)	
115		4-369-318-41	SPRING, TENSION (KV-AR25M60)	
		4-369-318-61	SPRING, TENSION (Except KV-AR25M60)	
		*4-078-765-11	SPRING EXTENSION (KV-AR25M60)	
116		1-452-032-00	MAGNET, DISC	
117		1-452-094-00	CIRCULAR DISC MAGNET B	
118		4-051-734-42	PIECE B (120), COV, CORRECT (KV-AR25M60)	
		4-057-714-01	PIECE, TLH CONVERGENCE	
119		4-079-376-01	BAND, DGC	
120		8-453-011-61	NA299-C3 (Except KV-AR25M60)	
		8-453-011-21	NA299-S (KV-AR25M60)	
121		4-088-697-01	DOOR	
122		4-087-491-11	SPRING (DOOR) (Except KV-AR25M60)	
		4-087-491-21	SPRING (DOOR) (KV-AR25M60 ONLY)	
123		4-046-765-12	SCREW, TAPPING 7+ CROWN WASHER	
124	*	4-065-572-01	CLIP (25RSN), DGC	
125		4-085-483-01	SUPPORT, CRT	
126		4-068-502-41	CUSHION, DOOR (except KV-AR25M60)	
		4-068-502-51	CUSHION, DOOR (KV-AR25M60)	

SECTION 7
ELECTRICAL PARTS LIST

A

NOTE:

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All resistors are in ohms
- F : nonflammable

CAPACITORS
- MF : µF, PF : µµF

COILS
- MMH : mH, UH : µH

REF NO.	PART NO.	DESCRIPTION			REMARK
	* A-1300-867-A	A BOARD COMPLETE (KV-AR25M60)			
	* A-1300-910-A	A BOARD COMPLETE (KV-AR25M66)			
	* A-1300-835-A	A BOARD COMPLETE (KV-AR25M80(E/ME))			
	* A-1300-921-A	A BOARD COMPLETE (KV-AR25N90(PHILIPPINES))			
	* A-1300-852-A	A BOARD COMPLETE (KV-AR25N90(TAIWAN))			
		**********			
	* 4-040-983-22	TERMINAL BOARD (D) (KV-AR25M60 ONLY)			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
	4-382-854-21	SCREW (M3X14), P, SW (+)			
		<CAPACITOR>			
C004	1-163-001-11	CERAMIC CHIP	220PF	10.00%	50V
C005	1-163-001-11	CERAMIC CHIP	220PF	10.00%	50V
C006	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C007	1-126-947-11	ELECT	47UF	20.00%	16V
C013	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C014	1-126-947-11	ELECT	47UF	20.00%	25V
C015	1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C016	1-163-243-11	CERAMIC CHIP	47PF	5.00%	50V
C017	1-163-247-91	CERAMIC CHIP	68PF	5.00%	50V
C018	1-163-243-11	CERAMIC CHIP	47PF	5.00%	50V
C019	1-126-947-11	ELECT	47UF	20.00%	25V
C020	1-163-259-91	CERAMIC CHIP	220PF	5.00%	50V
C022	1-163-227-11	CERAMIC CHIP	10PF	0.50PF	50V
C023	1-163-227-11	CERAMIC CHIP	10PF	0.50PF	50V
C024	1-163-227-11	CERAMIC CHIP	10PF	0.50PF	50V
C026	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C027	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C028	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C030	1-126-965-91	ELECT	22UF	20.00%	50V
C031	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C032	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C034	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C041	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C042	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C043	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C044	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C047	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C048	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C050	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C051	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C053	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C056	1-163-263-11	CERAMIC CHIP	330PF	5.00%	50V
C061	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C101	1-126-964-11	ELECT (KV-AR25N90 ONLY)	10UF	20.00%	50V
C103	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C104	1-126-935-11	ELECT	470UF	20.00%	16V
C106	1-163-035-00	CERAMIC CHIP (KV-AR25N90 ONLY)	0.047UF		50V
C107	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C108	1-126-947-11	ELECT	47UF	20.00%	16V
C109	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C110	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C111	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C112	1-126-947-11	ELECT	47UF	20.00%	16V
C113	1-126-935-11	ELECT	470UF	20.00%	16V
C114	1-126-967-11	ELECT	47UF	20.00%	50V
C115	1-126-967-11	ELECT (KV-AR25M66 ONLY)	47UF	20.00%	50V
C116	1-164-004-11	CERAMIC CHIP (KV-AR25M66 ONLY)	0.1UF	10.00%	25V
C117	1-164-004-11	CERAMIC CHIP (KV-AR25M66 ONLY)	0.1UF	10.00%	25V
C118	1-110-501-11	CERAMIC CHIP	0.33UF	10.00%	16V
C300	1-164-505-11	CERAMIC CHIP (EXCEPT KV-AR25M66)	2.2UF		16V
C301	1-126-935-11	ELECT	470UF	20.00%	16V
C302	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C303	1-126-959-11	ELECT	0.47UF	20.00%	50V
C304	1-126-967-11	ELECT	47UF	20.00%	50V
C305	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C306	1-163-233-91	CERAMIC CHIP	18PF	5.00%	50V
C307	1-163-233-91	CERAMIC CHIP	18PF	5.00%	50V
C308	1-163-259-91	CERAMIC CHIP	220PF	5.00%	50V
C309	1-137-378-11	MYLAR	0.22UF	5.00%	50V
C311	1-126-964-11	ELECT	10UF	20.00%	50V
C312	1-164-346-11	CERAMIC CHIP	1UF		16V
C313	1-164-346-11	CERAMIC CHIP	1UF		16V
C314	1-164-346-11	CERAMIC CHIP	1UF		16V
C315	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C316	1-126-934-11	ELECT	220UF	20.00%	16V
C317	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C318	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C319	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C320	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C321	1-164-489-11	CERAMIC CHIP	0.22UF	10.00%	16V
C322	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C324	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C325	1-126-960-11	ELECT	1UF	20.00%	50V
C327	1-126-965-91	ELECT	22UF	20.00%	50V
C328	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C329	1-126-963-11	ELECT (EXCEPT KV-AR25M66)	4.7UF	20.00%	50V
C330	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C331	1-126-963-11	ELECT	4.7UF	20.00%	50V
C332	1-126-963-11	ELECT	4.7UF	20.00%	50V
C335	1-164-004-11	CERAMIC CHIP (EXCEPT KV-AR25M66)	0.1UF	10.00%	25V
C336	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C337	1-126-961-11	ELECT	2.2UF	20.00%	50V
C341	1-115-340-11	CERAMIC CHIP	0.22UF	10.00%	25V

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A

REF NO.		PART NO.	DESCRIPTION			REMARK
C342		1-163-259-91	CERAMIC CHIP	220PF	5.00%	50V
C347		1-126-933-11	ELECT (EXCEPT KV-AR25M66)	100UF	20.00%	16V
C348		1-164-004-11	CERAMIC CHIP (EXCEPT KV-AR25M66)	0.1UF	10.00%	25V
C349		1-164-004-11	CERAMIC CHIP (EXCEPT KV-AR25M66)	0.1UF	10.00%	25V
C350		1-163-031-91	CERAMIC CHIP (KV-AR25M60/AR25M80)	0.01UF		50V
C351		1-126-964-11	ELECT (EXCEPT KV-AR25M66)	10UF	20.00%	50V
C352		1-164-004-11	CERAMIC CHIP (EXCEPT KV-AR25M66)	0.1UF	10.00%	25V
C353		1-126-960-11	ELECT	1UF	20.00%	50V
C356		1-126-947-11	ELECT	47UF	20.00%	16V
C357		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C358		1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C359		1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C502		1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C506		1-107-638-11	ELECT	33UF	20.00%	160V
C507		1-161-830-00	CERAMIC	0.0047UF		500V
C510		1-102-112-00	CERAMIC	330PF	10.00%	50V
C512		1-163-989-11	CERAMIC CHIP	0.033UF	10.00%	25V
C513		1-163-263-11	CERAMIC CHIP	330PF	5.00%	50V
C514		1-106-383-00	MYLAR	0.047UF	10.00%	200V
C517		1-164-182-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C518		1-104-665-11	ELECT	100UF	20.00%	10V
C519		1-102-212-00	CERAMIC	820PF	10.00%	500V
C521		1-126-934-11	ELECT	220UF	20.00%	16V
C522		1-126-933-11	ELECT	100UF	20.00%	16V
C523		1-102-002-00	CERAMIC	680PF	10.00%	500V
C524		1-126-967-11	ELECT	47UF	20.00%	50V
C526		1-130-495-00	MYLAR	0.1UF	5.00%	50V
C527		1-102-820-00	CERAMIC	330PF	5.00%	50V
C528		1-161-754-00	CERAMIC	0.001UF	10.00%	2KV
C530		1-137-372-11	MYLAR	0.022UF	5.00%	50V
C531		1-107-903-11	ELECT	2.2UF	20.00%	50V
C532		1-126-941-11	ELECT	470UF	20.00%	25V
C533		1-126-941-11	ELECT	470UF	20.00%	25V
C534		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C536		1-130-495-00	MYLAR	0.1UF	5.00%	50V
C537		1-126-969-11	ELECT	220UF	20.00%	50V
C538		1-127-717-11	FILM	19000PF	3%	1.2KV
C539	⚠	1-130-118-61	FILM	0.051UF	5.00%	400V
C540		1-136-171-00	FILM	0.33UF	5.00%	50V
C546		1-165-319-11	CERAMIC CHIP	0.1UF		50V
C549		1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C550		1-106-220-00	MYLAR	0.1UF	10.00%	100V
C551		1-126-960-11	ELECT	1UF	20.00%	50V
C552		1-162-116-00	CERAMIC	680PF	10.00%	2KV
C553		1-162-116-00	CERAMIC	680PF	10.00%	2KV
C554		1-107-364-11	MYLAR	0.01UF	10.00%	200V
C556		1-126-941-11	ELECT	470UF	20.00%	25V
C557		1-126-941-11	ELECT	470UF	20.00%	25V
C558		1-123-024-21	ELECT	33UF		160V
C560		1-102-228-00	CERAMIC	470PF	10.00%	500V
C561		1-129-708-91	FILM	0.0033UF	5.00%	630V
C562		1-102-228-00	CERAMIC	470PF	10.00%	500V
C564		1-163-038-91	CERAMIC CHIP	0.1UF		25V
C565		1-107-655-11	ELECT	47UF	20.00%	250V
C566		1-102-244-00	CERAMIC	220PF	10.00%	500V
C567	⚠	1-115-520-21	FILM	0.68UF	5.00%	250V
C568		1-102-228-00	CERAMIC	470PF	10.00%	500V

REF NO.		PART NO.	DESCRIPTION			REMARK
C570		1-115-521-11	FILM	0.82UF	5.00%	250V
C572		1-107-846-11	FILM	0.1UF	5.00%	250V
C573		1-106-379-12	MYLAR	0.033UF	10.00%	200V
C574		1-104-709-11	ELECT	4.7UF		160V
C576		1-130-495-00	MYLAR	0.1UF	5.00%	50V
C577		1-106-395-00	MYLAR	0.15UF	10.00%	200V
C582		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C586		1-216-295-91	SHORT CHIP	0		
C600	⚠	1-115-165-11	MYLAR	0.1UF	20.00%	250V
C602	⚠	1-115-165-11	MYLAR	0.1UF	20.00%	250V
C603		1-126-947-11	ELECT	47UF	20.00%	25V
C604		1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C605	⚠	1-119-886-51	CERAMIC	470PF	10.00%	250V
C606	⚠	1-119-886-51	CERAMIC	470PF	10.00%	250V
C607		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C608		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C609		1-126-968-11	ELECT	100UF	20.00%	50V
C610		1-126-964-11	ELECT	10UF	20.00%	50V
C611		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C612		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C613		1-125-906-11	ELECT (EXCEPT KV-AR25N90(TAIWAN))	560UF	20.00%	450V
C613		1-113-611-11	ELECT (BLOCK) (KV-AR25N90(TAIWAN))	820UF	20.00%	250V
C614		1-126-964-11	ELECT	10UF	20.00%	50V
C615	⚠	1-119-886-51	CERAMIC	470PF	10.00%	250V
C616		1-130-202-00	FILM (EXCEPT KV-AR25N90(TAIWAN))	0.022UF	5.00%	400V
C617		1-107-792-11	CERAMIC (EXCEPT KV-AR25N90(TAIWAN))	100PF	5.00%	1KV
C618		1-125-893-11	FILM	680PF	3.00%	1.5KV
C619	⚠	1-119-886-51	CERAMIC	470PF	10.00%	250V
C620		1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C621		1-102-114-00	CERAMIC	470PF	10.00%	50V
C622		1-102-074-00	CERAMIC	0.001UF	10.00%	50V
C623		1-104-665-11	ELECT	100UF	20.00%	25V
C624		1-104-331-11	CERAMIC	0.0022UF	10.00%	1KV
C626		1-102-002-00	CERAMIC	680PF	10.00%	500V
C629		1-107-906-11	ELECT	10UF	20.00%	50V
C630		1-125-494-11	ELECT(BLOCK)	560UF	20.00%	160V
C631		1-128-550-11	ELECT	2200UF	20.00%	50V
C632		1-126-936-11	ELECT	3300UF	20.00%	16V
C633		1-104-999-11	MYLAR	0.1UF	10.00%	200V
C634		1-126-933-11	ELECT	100UF	20.00%	16V
C635		1-126-934-11	ELECT	220UF	20.00%	16V
C636		1-104-760-11	CERAMIC CHIP	0.047UF	10.00%	50V
C641		1-102-002-00	CERAMIC	680PF	10.00%	500V
C642		1-126-943-11	ELECT (EXCEPT KV-AR25N90(PHILIPPINES))	2200UF	20.00%	25V
C643		1-104-665-11	ELECT	100UF	20.00%	10V
C644		1-104-331-11	CERAMIC	0.0022UF	10.00%	1KV
C645		1-137-605-11	MYLAR	0.01UF	10.00%	250V
C646		1-107-679-91	ELECT	10UF	20.00%	450V
C647		1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C649		1-126-940-11	ELECT	330UF	20.00%	25V
C650		1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C651		1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C652		1-126-965-91	ELECT	22UF	20.00%	50V
C653		1-126-947-11	ELECT	47UF	20.00%	25V
C655	⚠	1-119-886-51	CERAMIC	470PF	10.00%	250V
C657		1-101-821-00	CERAMIC	0.0022UF		500V
C659		1-162-116-00	CERAMIC	680PF	10.00%	2KV

REF NO.	PART NO.	DESCRIPTION	REMARK
C912	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
C913	1-104-665-11	ELECT 100UF	20.00% 10V
		<CONNECTOR>	
CN101	* 1-779-890-11	CONNECTOR, BOARD TO BOARD 10P	
CN102	* 1-779-889-11	CONNECTOR, BOARD TO BOARD 8P	
CN104	1-695-915-11	TAB (CONTACT)	
CN105	1-695-915-11	TAB (CONTACT)	
CN106	* 1-564-506-11	PLUG, CONNECTOR 3P	
CN201	* 1-564-508-11	PLUG, CONNECTOR 5P	
CN202	* 1-508-847-00	PIN, CONNECTOR 4P	
CN301	* 1-774-813-11	CONNECTOR, BOARD TO BOARD 7P (KV-AR25M66 ONLY)	
CN302	* 1-779-889-11	CONNECTOR, BOARD TO BOARD 8P (KV-AR25M66 ONLY)	
CN303	* 1-779-890-11	CONNECTOR, BOARD TO BOARD 10P	
CN305	* 1-564-509-11	PLUG, CONNECTOR 6P	
CN307	* 1-774-813-11	CONNECTOR, BOARD TO BOARD 7P (KV-AR25M66 ONLY)	
CN501	* 1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P	
CN502	* 1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P	
CN505	* 1-564-508-11	PLUG, CONNECTOR 5P	
CN507	* 1-564-509-11	PLUG, CONNECTOR 6P	
CN601	* 1-580-843-11	PIN, CONNECTOR (POWER)	
CN602	* 1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P (EXCEPT KV-AR25M60)	
CN604	* 1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P	
CN608	1-564-507-41	PLUG, CONNECTOR 4P	
CN904	* 1-564-512-11	PLUG, CONNECTOR 9P	
		<DIODE>	
D001	8-719-081-97	MMDL914T1	
D002	8-719-081-97	MMDL914T1	
D004	1-216-295-91	SHORT CHIP 0	
D005	8-719-081-97	MMDL914T1	
D006	8-719-081-97	MMDL914T1	
D007	8-719-081-97	MMDL914T1	
D008	8-719-081-97	MMDL914T1	
D009	8-719-081-97	MMDL914T1	
D010	8-719-158-35	RD9.1S-B	
D100	8-719-081-97	MMDL914T1 (KV-AR25M60)	
D100	8-719-404-50	MA111-TX (KV-AR25M66/AR25M80)	
D300	1-216-295-91	SHORT CHIP 0	
D301	8-719-081-97	MMDL914T1	
D306	8-719-081-97	MMDL914T1	
D307	8-719-081-97	MMDL914T1	
D308	8-719-081-97	MMDL914T1	
D309	8-719-069-54	UDZSTE-175.1B (KV-AR25M60)	
D309	8-719-159-10	RD5.1SB-T2 (EXCEPT KV-AR25M60)	
D311	8-719-081-97	MMDL914T1	
D312	8-719-081-97	MMDL914T1	
D313	8-719-081-97	MMDL914T1	
D315	8-719-081-97	MMDL914T1	
D316	8-719-037-06	RD7.5SB1-T1	
D319	8-719-158-35	RD9.1S-B	
D320	8-719-158-35	RD9.1S-B	
D321	8-719-158-35	RD9.1S-B	
D322	8-719-158-35	RD9.1S-B	
D504	8-719-075-05	DIODE FR104-A5 (KV-AR25M60)	
D504	8-719-302-43	EL1Z (EXCEPT KV-AR25M60)	
D505	8-719-081-97	MMDL914T1	
D506	8-719-911-19	1SS119-25	
D507	8-719-081-97	MMDL914T1	
D508	8-719-081-97	MMDL914T1	
D509	1-216-073-91	RES-CHIP 10K	5% 1/10W
D510	8-719-081-97	MMDL914T1	
D511	8-719-081-97	MMDL914T1	
D512	8-719-081-97	MMDL914T1	
D513	8-719-908-03	GP08D	
D517	8-719-945-80	ERC06-15S	
D518	8-719-074-35	RU4AM-T4	
D519	8-719-945-80	ERC06-15S	
D521	8-719-075-05	DIODE FR104-A5 (KV-AR25M60)	
D521	8-719-302-43	EL1Z (EXCEPT KV-AR25M60)	
D522	8-719-075-05	DIODE FR104-A5 (KV-AR25M60)	
D522	8-719-302-43	EL1Z (EXCEPT KV-AR25M60)	
D523	8-719-075-05	DIODE FR104-A5 (KV-AR25M60)	
D523	8-719-302-43	EL1Z (EXCEPT KV-AR25M60)	
D527	8-719-908-03	GP08D	
D528	8-719-908-03	GP08D	
D531	8-719-081-97	MMDL914T1	
D532	8-719-081-97	MMDL914T1	
D534	1-216-295-91	SHORT CHIP 0	
D600	8-719-911-19	1SS119-25	
D602	8-719-911-19	1SS119-25	
D603	8-719-150-92	RD33EB3T	
D604	8-719-028-72	RGP02-17EL-6433	
D605	8-719-510-22	D3SB60	
D606	8-719-108-18	5P-6M	
D607	8-719-081-97	MMDL914T1	
D608	8-719-110-53	RD20ES-B2	
D609	8-719-311-31	RU-1P (EXCEPT KV-AR25N90(TAIWAN))	
D610	8-719-043-76	AK04V0	
D611	8-719-046-74	AU-01Z-V1 (KV-AR25M60)	
D611	8-719-075-73	10ELS2N-TB5 (EXCEPT KV-AR25M60)	
D612	8-719-043-52	F5KQ60	
D613	8-719-046-74	AU-01Z-V1 (KV-AR25M60)	
D613	8-719-075-73	10ELS2N-TB5 (EXCEPT KV-AR25M60)	
D614	8-719-046-74	AU-01Z-V1 (KV-AR25M60)	
D614	8-719-075-73	10ELS2N-TB5 (EXCEPT KV-AR25M60)	
D616	8-719-067-18	RN4Z (KV-AR25M60)	
D616	8-719-083-56	DIODE 30DF2N-FC5 (EXCEPT KV-AR25M60)	
D620	8-719-110-72	RD30ESB2	
D621	8-719-071-38	D5S6M	
D622	8-719-177-49	DIODE FMU-G26S	
D623	8-719-082-03	DIODE MM3Z15VT1	
D624	8-719-081-97	MMDL914T1	
D625	8-719-977-28	DTZ10B (KV-AR25M60)	
D625	8-719-158-39	RD10S-B (EXCEPT KV-AR25M60)	
D628	8-719-911-19	1SS119-25	
D631	8-719-068-00	ERC04-06SE	
D632	8-719-068-00	ERC04-06SE	
D633	8-719-948-45	ERA22-08	
D634	8-719-081-97	MMDL914T1	
D635	8-719-081-97	MMDL914T1	
D636	8-719-510-02	D1NS4	
D637	8-719-109-96	RD6.8ES-B1	
D638	8-719-200-82	11ES2 (KV-AR25M60)	
D638	8-719-510-48	D1N20R (EXCEPT KV-AR25M60)	
		<CONNECTOR>	
DY1	* 1-580-798-11	CONNECTOR PIN (DY) 6P	

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK
		<FERRITE BEAD>	
FB101	1-216-295-91	SHORT CHIP	0 (KV-AR25M66 ONLY)
FB102	1-216-295-91	SHORT CHIP	0 (KV-AR25M66 ONLY)
FB300	1-412-911-31	FERRITE	0UH
FB501	1-410-397-21	FERRITE	1.1UH
FB502	1-410-397-21	FERRITE	1.1UH
FB600	1-410-397-21	FERRITE	1.1UH
FB601	1-410-397-21	FERRITE	1.1UH
FB602	1-410-397-21	FERRITE	1.1UH
FB603	1-410-397-21	FERRITE	1.1UH
FB604	1-412-911-31	FERRITE	0UH
FB605	1-410-397-21	FERRITE	1.1UH
FB606	1-412-911-31	FERRITE	0UH
FB608	1-412-911-31	FERRITE	0UH
FB611	1-410-397-21	FERRITE	1.1UH
FB612	1-410-397-21	FERRITE	1.1UH
FB613	1-410-397-21	FERRITE	1.1UH (EXCEPT KV-AR25N90(TAIWAN))
FB615	1-410-397-21	FERRITE	1.1UH (EXCEPT KV-AR25N90(PHILIPPINES))
		<IC>	
IC001	8-752-933-33	IC CXP750097-605S (EXCEPT KV-AR25N90)	
IC001	8-752-932-96	IC CXP750097-604S (KV-AR25N90)	
IC002	8-759-371-21	MM1319AFBE	
IC003	8-759-672-78	M24C08-BN6(A) (KV-AR25M60)	
IC003	8-759-527-72	M24C16-BN6 (EXCEPT KV-AR25M60)	
IC100	8-759-042-02	S-80743AL-A7-S (EXCEPT KV-AR25N90)	
IC301	8-752-095-72	CXA2159S	
IC302	8-759-666-90	IC TDA9181T (KV-AR25M60/AR25M80)	
IC302	8-759-672-27	TDA9183T (KV-AR25N90)	
IC502	8-759-700-07	NJM2903M	
IC503	8-759-980-58	TDA8172	
IC601	8-749-019-09	IC STR-F6456S	
IC602	8-749-920-61	SE-135N	
IC603	8-759-701-59	NJM78M09FA	
IC604	8-759-231-53	TA7805S	
		<CHIP CONDUCTOR>	
JR001	1-216-295-91	SHORT CHIP	0
JR002	1-216-295-91	SHORT CHIP	0
JR003	1-216-295-91	SHORT CHIP	0
JR004	1-216-295-91	SHORT CHIP	0
JR006	1-216-295-91	SHORT CHIP	0
JR007	1-216-295-91	SHORT CHIP	0
JR008	1-216-295-91	SHORT CHIP	0
JR010	1-216-295-91	SHORT CHIP	0
JR012	1-216-295-91	SHORT CHIP	0
JR014	1-216-295-91	SHORT CHIP	0
JR015	1-216-295-91	SHORT CHIP	0
JR016	1-216-295-91	SHORT CHIP	0
JR020	1-216-295-91	SHORT CHIP	0
JR022	1-216-295-91	SHORT CHIP	0
JR023	1-216-295-91	SHORT CHIP	0
JR024	1-216-295-91	SHORT CHIP	0
JR025	1-216-295-91	SHORT CHIP	0
JR028	1-216-295-91	SHORT CHIP	0
JR030	1-216-295-91	SHORT CHIP	0
JR031	1-216-295-91	SHORT CHIP	0
JR102	1-216-295-91	SHORT CHIP	0 (EXCEPT KV-AR25N90)
JR107	1-216-295-91	SHORT CHIP	0
JR108	1-216-295-91	SHORT CHIP	0 (KV-AR25N90)
JR109	1-216-295-91	SHORT CHIP	0 (KV-AR25M80 ONLY)
JR111	1-216-295-91	SHORT CHIP	0 (KV-AR25M80 ONLY)
JR304	1-216-295-91	SHORT CHIP	0
JR308	1-216-295-91	SHORT CHIP	0 (EXCEPT KV-AR25M66)
JR309	1-216-295-91	SHORT CHIP	0
JR310	1-216-295-91	SHORT CHIP	0
JR311	1-216-295-91	SHORT CHIP	0
JR500	1-216-295-91	SHORT CHIP	0
JR501	1-216-295-91	SHORT CHIP	0
JR503	1-216-295-91	SHORT CHIP	0
JR505	1-216-295-91	SHORT CHIP	0
JR600	1-216-295-91	SHORT CHIP	0
		<COIL>	
L002	1-414-856-11	INDUCTOR	10UH
L003	1-414-180-11	INDUCTOR	3.3UH
L004	1-249-395-11	CARBON	15 5% 1/4W
L005	1-414-233-22	FERRITE	0UH
L101	1-414-856-11	INDUCTOR	10UH
L102	1-414-189-31	INDUCTOR	100UH
L103	1-414-856-11	INDUCTOR	10UH
L104	1-414-856-11	INDUCTOR	10UH
L105	1-414-185-41	INDUCTOR	22UH
L301	1-414-189-31	INDUCTOR	100UH
L302	1-414-185-41	INDUCTOR	22UH
L303	1-414-189-31	INDUCTOR	100UH (EXCEPT KV-AR25M66)
L304	1-414-189-31	INDUCTOR	100UH *(EXCEPT KV-AR25M66)
L501	1-412-525-31	INDUCTOR	10UH
L502	1-422-613-11	COIL, AIR CORE	
L503	1-412-525-31	INDUCTOR	10UH
L504	1-412-525-31	INDUCTOR	10UH
L507	1-459-111-00	INDUCTOR	10MH
L511	1-406-978-11	INDUCTOR	150UH
L513	1-412-551-31	INDUCTOR	1.5MH
L515	1-459-104-00	COIL, WITH CORE	
L518	1-414-187-11	INDUCTOR	47UH
L601	1-412-527-11	INDUCTOR	15UH
L905	1-414-856-11	INDUCTOR	10UH
		<PHOTO COUPLER>	
PH600	⚠ 8-749-924-35	ON3171-R	
		<IC LINK>	
PS600	1-533-597-41	IC LINK	5A 90V
PS601	1-533-597-41	IC LINK	5A 90V
		<TRANSISTOR>	
Q001	8-729-216-22	2SA1162-G	
Q002	8-729-010-25	MSD601-RT1	
Q005	8-729-027-24	DTA114TKA-T146	
Q101	8-729-010-25	MSD601-RT1	
Q301	8-729-216-22	2SA1162-G	
Q302	8-729-422-27	2SD601A-Q (KV-AR25M60)	
Q302	8-729-230-49	2SC2712-YG (KV-AR25M80/AR25N90)	
Q303	8-729-216-22	2SA1162-G (EXCEPT KV-AR25M66)	

A

REF NO.	PART NO.	DESCRIPTION	REMARK
Q304	8-729-216-22	2SA1162-G	
Q305	8-729-216-22	2SA1162-G (EXCEPT KV-AR25M66)	
Q306	8-729-422-27	2SD601A-Q (KV-AR25M60)	
Q306	8-729-230-49	2SC2712-YG (KV-AR25M80/AR25N90)	
Q307	8-729-422-27	2SD601A-Q (KV-AR25M60)	
Q307	8-729-230-49	2SC2712-YG (KV-AR25M80/AR25N90)	
Q308	8-729-216-22	2SA1162-G	
Q309	8-729-421-19	UN2213 (KV-AR25M60/AR25M80)	
Q310	8-729-422-27	2SD601A-Q (KV-AR25M60)	
Q310	8-729-230-49	2SC2712-YG (KV-AR25M80/AR25N90)	
Q311	8-729-010-25	MSD601-RT1	
Q312	8-729-216-22	2SA1162-G	
Q313	8-729-010-25	MSD601-RT1	
Q314	8-729-216-22	2SA1162-G (EXCEPT KV-AR25M66)	
Q315	8-729-421-19	UN2213	
Q316	8-729-216-22	2SA1162-G (EXCEPT KV-AR25M66)	
Q317	8-729-216-22	2SA1162-G (EXCEPT KV-AR25M66)	
Q503	8-729-010-25	MSD601-RT1	
Q505	8-729-931-45	IRF614	
Q506	8-729-119-80	2SC2688-LK	
Q507	8-729-216-22	2SA1162-G	
Q509	8-729-010-25	MSD601-RT1	
Q511	8-729-048-07	2SD2578-CA	
Q600	8-729-119-78	2SC2785-HFE	
Q601	8-729-023-22	2SD2114K	
Q602	8-729-010-25	MSD601-RT1	
Q603	8-729-424-08	UN2111	
Q604	8-729-200-17	2SA1091-O	
Q605	8-729-044-30	2SK2845-LB102	
Q606	8-729-010-25	MSD601-RT1	
Q607	8-729-823-22	2SC3576	
Q608	8-729-010-25	MSD601-RT1	

<RESISTOR>

REF NO.	PART NO.	DESCRIPTION			
R001	1-414-233-22	FERRITE	0UH		
R002	1-216-025-11	RES-CHIP	100	5%	1/10W
R003	1-216-073-91	RES-CHIP	10K	5%	1/10W
R004	1-216-025-11	RES-CHIP	100	5%	1/10W
R005	1-216-025-11	RES-CHIP	100	5%	1/10W
R006	1-216-689-11	RES-CHIP (KV-AR25N90)	39K	5%	1/10W
R007	1-216-033-00	RES-CHIP (KV-AR25N90)	220	5%	1/10W
R008	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R009	1-216-065-91	RES-CHIP (KV-AR25N90)	4.7K	5%	1/10W
R010	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R011	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R012	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R013	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R014	1-216-025-11	RES-CHIP	100	5%	1/10W
R015	1-216-025-11	RES-CHIP	100	5%	1/10W
R017	1-216-049-11	RES-CHIP (KV-AR25M66)	1K	5%	1/10W
R018	1-216-033-00	RES-CHIP	220	5%	1/10W
R019	1-216-073-91	RES-CHIP	10K	5%	1/10W
R020	1-216-045-00	RES-CHIP	680	5%	1/10W
R021	1-216-073-91	RES-CHIP	10K	5%	1/10W
R022	1-216-025-11	RES-CHIP	100	5%	1/10W
R023	1-216-049-11	RES-CHIP	1K	5%	1/10W
R024	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R025	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R026	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R027	1-216-049-11	RES-CHIP	1K	5%	1/10W
R028	1-216-073-91	RES-CHIP (KV-AR25M60/AR25M66)	10K	5%	1/10W
R028	1-216-049-11	RES-CHIP (KV-AR25N90)	1K	5%	1/10W
R029	1-216-049-11	RES-CHIP	1K	5%	1/10W
R030	1-216-025-11	RES-CHIP (KV-AR25N90)	100	5%	1/10W
R031	1-216-049-11	RES-CHIP	1K	5%	1/10W
R032	1-216-025-11	RES-CHIP	100	5%	1/10W
R034	1-216-049-11	RES-CHIP	1K	5%	1/10W
R035	1-216-025-11	RES-CHIP	100	5%	1/10W
R036	1-216-025-11	RES-CHIP (EXCEPT KV-AR25M60)	100	5%	1/10W
R037	1-216-025-11	RES-CHIP (EXCEPT KV-AR25N90)	100	5%	1/10W
R037	1-216-077-91	RES-CHIP (KV-AR25N90)	15K	5%	1/10W
R038	1-216-049-11	RES-CHIP (EXCEPT KV-AR25N90)	1K	5%	1/10W
R040	1-216-025-11	RES-CHIP	100	5%	1/10W
R041	1-216-025-11	RES-CHIP	100	5%	1/10W
R042	1-216-295-91	SHORT CHIP	0		
R043	1-216-049-11	RES-CHIP	1K	5%	1/10W
R044	1-216-025-11	RES-CHIP	100	5%	1/10W
R045	1-414-233-22	FERRITE	0UH		
R046	1-216-049-11	RES-CHIP	1K	5%	1/10W
R047	1-414-233-22	FERRITE	0UH		
R048	1-216-073-91	RES-CHIP	10K	5%	1/10W
R050	1-216-073-91	RES-CHIP	10K	5%	1/10W
R053	1-216-049-11	RES-CHIP	1K	5%	1/10W
R058	1-216-295-91	SHORT CHIP	0		
R059	1-216-295-91	SHORT CHIP	0		
R060	1-216-295-91	SHORT CHIP	0		
R061	1-216-295-91	SHORT CHIP	0		
R062	1-216-041-00	RES-CHIP	470	5%	1/10W
R063	1-216-041-00	RES-CHIP	470	5%	1/10W
R064	1-216-041-00	RES-CHIP	470	5%	1/10W
R065	1-216-041-00	RES-CHIP	470	5%	1/10W
R066	1-216-049-11	RES-CHIP	1K	5%	1/10W
R067	1-216-049-11	RES-CHIP	1K	5%	1/10W
R068	1-216-041-00	RES-CHIP	470	5%	1/10W
R101	1-216-025-11	RES-CHIP (EXCEPT KV-AR25N90)	100	5%	1/10W
R102	1-216-025-11	RES-CHIP (EXCEPT KV-AR25N90)	100	5%	1/10W
R103	1-216-025-11	RES-CHIP (KV-AR25N90)	100	5%	1/10W
R104	1-216-025-11	RES-CHIP (KV-AR25N90)	100	5%	1/10W
R105	1-216-295-91	SHORT CHIP	0		
R106	1-216-049-11	RES-CHIP (KV-AR25N90)	1K	5%	1/10W
R109	1-216-041-00	RES-CHIP	470	5%	1/10W
R111	1-216-025-11	RES-CHIP	100	5%	1/10W
R112	1-216-025-11	RES-CHIP	100	5%	1/10W
R113	1-216-025-11	RES-CHIP	100	5%	1/10W
R114	1-216-065-91	RES-CHIP (KV-AR25N90)	4.7K	5%	1/10W
R115	1-216-065-91	RES-CHIP (KV-AR25N90)	4.7K	5%	1/10W
R225	1-216-033-00	RES-CHIP	220	5%	1/10W
R226	1-216-033-00	RES-CHIP	220	5%	1/10W
R227	1-216-033-00	RES-CHIP	220	5%	1/10W

A

REF NO.	PART NO.	DESCRIPTION			REMARK
R237	1-216-295-91	SHORT CHIP	0		
R301	1-216-113-00	RES-CHIP	470K	5%	1/10W
R302	1-216-295-91	SHORT CHIP	0		
R303	1-216-049-11	RES-CHIP	1K	5%	1/10W
R304	1-216-073-91	RES-CHIP	10K	5%	1/10W
R308	1-216-025-11	RES-CHIP	100	5%	1/10W
R309	1-216-025-11	RES-CHIP	100	5%	1/10W
R310	1-216-025-11	RES-CHIP	100	5%	1/10W
R311	1-216-041-00	RES-CHIP	470	5%	1/10W
		(EXCEPT KV-AR25M66)			
R312	1-216-039-00	RES-CHIP	390	5%	1/10W
		(EXCEPT KV-AR25M66)			
R313	1-216-037-00	RES-CHIP	330	5%	1/10W
		(EXCEPT KV-AR25M66)			
R314	1-216-083-00	RES-CHIP	27K	5%	1/10W
		(EXCEPT KV-AR25M66)			
R315	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R316	1-216-037-00	RES-CHIP	330	5%	1/10W
		(EXCEPT KV-AR25M66)			
R317	1-216-091-00	RES-CHIP	56K	5%	1/10W
		(EXCEPT KV-AR25M66)			
R318	1-216-039-00	RES-CHIP	390	5%	1/10W
		(EXCEPT KV-AR25M66)			
R319	1-216-025-11	RES-CHIP	100	5%	1/10W
R320	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R321	1-216-073-91	RES-CHIP	10K	5%	1/10W
R322	1-216-033-00	RES-CHIP	220	5%	1/10W
R323	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
		(EXCEPT KV-AR25M66)			
R324	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
		(EXCEPT KV-AR25M66)			
R326	1-216-029-00	RES-CHIP	150	5%	1/10W
R327	1-216-033-00	RES-CHIP	220	5%	1/10W
R328	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R329	1-216-041-00	RES-CHIP	470	5%	1/10W
R331	1-216-295-91	SHORT CHIP	0		
R332	1-216-033-00	RES-CHIP	220	5%	1/10W
R335	1-216-045-00	RES-CHIP	680	5%	1/10W
R338	1-216-037-00	RES-CHIP	330	5%	1/10W
R339	1-216-033-00	RES-CHIP	220	5%	1/10W
R340	1-216-025-11	RES-CHIP	100	5%	1/10W
R345	1-216-081-00	RES-CHIP	22K	5%	1/10W
R348	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R349	1-216-073-91	RES-CHIP	10K	5%	1/10W
R350	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R351	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R354	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R355	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R356	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R357	1-216-079-00	RES-CHIP	18K	5%	1/10W
R358	1-216-049-11	RES-CHIP	1K	5%	1/10W
R359	1-216-033-00	RES-CHIP	220	5%	1/10W
R360	1-216-033-00	RES-CHIP	220	5%	1/10W
R361	1-216-073-91	RES-CHIP	10K	5%	1/10W
R362	1-216-075-00	RES-CHIP	12K	5%	1/10W
R363	1-216-079-00	RES-CHIP	18K	5%	1/10W
R364	1-216-295-91	SHORT CHIP	0		
R365	1-216-033-00	RES-CHIP	220	5%	1/10W
		(EXCEPT KV-AR25M66)			
R366	1-216-073-91	RES-CHIP	10K	5%	1/10W
		(EXCEPT KV-AR25M66)			
R367	1-216-073-91	RES-CHIP	10K	5%	1/10W
		(EXCEPT KV-AR25M66)			
R368	1-216-073-91	RES-CHIP	10K	5%	1/10W
R370	1-216-033-00	RES-CHIP	220	5%	1/10W
R371	1-216-083-00	RES-CHIP	27K	5%	1/10W
		(EXCEPT KV-AR25M66)			
R372	1-216-091-00	RES-CHIP	56K	5%	1/10W
		(EXCEPT KV-AR25M66)			
R375	1-216-025-11	RES-CHIP	100	5%	1/10W
		(KV-AR25M66)			
R376	1-216-081-00	RES-CHIP	22K	5%	1/10W
R377	1-216-121-11	RES-CHIP	1M	5%	1/10W
R378	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
		(EXCEPT KV-AR25M66)			
R379	1-218-179-11	RES-CHIP	10M	5%	1/10W
		(EXCEPT KV-AR25M66)			
R381	1-216-295-91	SHORT CHIP	0 (EXCEPT KV-AR25M66)		
R382	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
		(KV-AR25M60/AR25M80)			
R383	1-216-049-11	RES-CHIP	1K	5%	1/10W
		(EXCEPT KV-AR25M66)			
R384	1-216-041-00	RES-CHIP	470	5%	1/10W
		(EXCEPT KV-AR25M66)			
R385	1-216-029-00	RES-CHIP	150	5%	1/10W
		(EXCEPT KV-AR25M66)			
R391	1-216-295-91	SHORT CHIP	0 (EXCEPT KV-AR25M66)		
R500	1-249-417-11	CARBON	1K	5%	1/4W
R501	1-216-049-11	RES-CHIP	1K	5%	1/10W
R505	1-218-756-11	METAL CHIP	150K	0.5%	1/10W
R506	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R507	1-249-389-11	CARBON	4.7	5%	1/4W
R508	1-216-473-11	METAL OXIDE	56	5%	3W
R509	1-216-475-11	METAL OXIDE	120	5%	3W
R510	1-215-884-11	METAL OXIDE	47	5%	2W
R511	1-215-910-00	METAL OXIDE	68	5%	3W
R515	1-215-913-11	METAL OXIDE	220	5%	3W
R516	1-216-081-00	RES-CHIP	22K	5%	1/10W
R518	1-247-807-31	CARBON	100	5%	1/4W
R519	1-215-913-11	METAL OXIDE	220	5%	3W
R520	1-215-445-00	METAL	10K	1%	1/4W
R520	1-249-429-11	CARBON	10K	5%	1/4W
R522	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R522	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R523	1-249-411-11	CARBON	330	5%	1/4W
R526	1-208-804-11	METAL CHIP	8.2K	0.5%	1/10W
R527	1-216-001-00	RES-CHIP	10	5%	1/10W
R528	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R529	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R531	1-247-843-11	CARBON	3.3K	5%	1/4W
R533	1-249-417-11	CARBON	1K	5%	1/4W
R534	1-216-361-00	METAL OXIDE	0.22	5%	2W
R535	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R536	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R537	1-208-802-11	METAL CHIP	6.8K	0.5%	1/10W
R540	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R541	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R542	1-216-295-91	SHORT CHIP	0		
R543	1-216-437-00	METAL OXIDE	5.6K	5%	1W
R544	1-215-917-11	METAL OXIDE	1K	5%	3W
R545	1-216-077-91	RES-CHIP	15K	5%	1/10W
R546	1-216-077-91	RES-CHIP	15K	5%	1/10W
R547	1-216-085-91	RES-CHIP	33K	5%	1/10W
R549	1-215-453-00	METAL	22K	1%	1/4W
R550	1-216-097-11	RES-CHIP	100K	5%	1/10W
R551	1-249-421-11	CARBON	2.2K	5%	1/4W
R552	1-216-057-00	RES-CHIP	2.2K	5%	1/10W

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
R553	1-215-453-00	METAL	22K	1%	1/4W
R554	1-215-457-00	METAL	33K	1%	1/4W
R556	1-215-437-00	METAL	4.7K	1%	1/4W
R558	1-247-843-11	CARBON	3.3K	5%	1/4W
R559	1-249-429-11	CARBON	10K	5%	1/4W
R560	1-216-073-91	RES-CHIP	10K	5%	1/10W
R562	1-249-401-11	CARBON	47	5%	1/4W
R565	1-216-073-91	RES-CHIP	10K	5%	1/10W
R567	1-216-105-91	RES-CHIP	220K	5%	1/10W
R568	1-249-383-11	CARBON	1.5	5%	1/4W
R570	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R571	1-215-443-00	METAL	8.2K	1%	1/4W
R573	1-216-089-91	RES-CHIP	47K	5%	1/10W
R577	1-215-913-11	METAL OXIDE	220	5%	3W
R578	1-216-369-00	METAL OXIDE	1	5%	2W
R579	1-216-097-11	RES-CHIP	100K	5%	1/10W
R580	1-208-830-11	METAL CHIP	100K	0.5%	1/10W
R581	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R582	1-218-760-11	METAL CHIP	220K	0.5%	1/10W
R584	1-208-834-11	METAL CHIP	150K	0.5%	1/10W
R585	1-249-385-11	CARBON	2.2	5%	1/4W
R587	1-218-760-11	METAL CHIP	220K	0.5%	1/10W
R588	1-215-888-00	METAL OXIDE	220	5%	2W
R589	1-215-888-00	METAL OXIDE	220	5%	2W
R590	1-215-465-00	METAL	68K	1%	1/4W
R591	1-260-288-11	CARBON	0.47	5%	1/2W
R593	1-260-288-11	CARBON	0.47	5%	1/2W
R594	1-260-288-11	CARBON	0.47	5%	1/2W
R596	1-215-917-11	METAL OXIDE	1K	5%	3W
R597	1-247-750-11	CARBON	680	5%	1/2W
R598	1-249-438-11	CARBON	56K	5%	1/4W
R599	1-249-389-11	CARBON	4.7	5%	1/4W
R600	1-249-438-11	CARBON	56K	5%	1/4W
R601	1-249-419-11	CARBON	1.5K	5%	1/4W
R602	1-249-389-11	CARBON	4.7	5%	1/4W
R603	1-215-485-00	METAL	470K	1%	1/4W
R604	1-216-097-11	RES-CHIP	100K	5%	1/10W
R607	1-249-425-11	CARBON	4.7K	5%	1/4W
R608	1-240-205-91	METAL	22M	5%	1/2W
R609	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R610	1-216-073-91	RES-CHIP	10K	5%	1/10W
R611	1-216-089-91	RES-CHIP	47K	5%	1/10W
R612	1-216-045-00	RES-CHIP	680	5%	1/10W
R614	1-216-041-00	RES-CHIP	470	5%	1/10W
R615	1-216-369-00	METAL OXIDE	1	5%	2W
R616	1-260-302-51	CARBON	6.8	5%	1/2W
R617	1-247-791-91	CARBON	22	5%	1/4W
R619	1-260-128-11	CARBON	270K	5%	1/2W
R620	1-129-720-00	FILM (EXCEPT KV-AR25N90)	0.033UF	5.00%	630V
R620	1-129-719-00	FILM (KV-AR25N90)	0.027UF	5.00%	400V
R621	1-215-864-00	METAL OXIDE	150	5%	1W
R623	1-216-095-00	RES-CHIP	82K	5%	1/10W
R624	1-216-089-91	RES-CHIP	47K	5%	1/10W
R626	1-216-049-11	RES-CHIP	1K	5%	1/10W
R627	1-240-251-11	CEMENTED	6.8	5%	10W
R629	1-247-747-11	CARBON	470	5%	1/2W
R630	1-249-429-11	CARBON	10K	5%	1/4W
R631	1-216-089-91	RES-CHIP	47K	5%	1/10W
R632	1-220-886-11	FUSIBLE	0.1	10%	1W
R634	⚠ 1-240-917-91	METAL	8.2M	5%	1W

REF NO.	PART NO.	DESCRIPTION		REMARK	
R635	1-216-492-11	METAL OXIDE (EXCEPT KV-AR25N90(TAIWAN))	82K	5%	3W
R636	1-215-924-00	METAL OXIDE	15K	5%	3W
R637	1-216-492-11	METAL OXIDE (EXCEPT KV-AR25N90(TAIWAN))	82K	5%	3W
R639	1-216-361-00	METAL OXIDE	0.22	5%	2W
R640	1-249-415-11	CARBON	680	5%	1/4W
R641	1-216-361-00	METAL OXIDE	0.22	5%	2W
R642	1-249-419-11	CARBON	1.5K	5%	1/4W
R643	1-247-843-11	CARBON	3.3K	5%	1/4W
R644	1-249-419-11	CARBON	1.5K	5%	1/4W
R646	1-215-924-00	METAL OXIDE	15K	5%	3W
R647	1-249-387-11	CARBON	3.3	5%	1/4W
R648	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R649	1-249-417-11	CARBON	1K	5%	1/4W
R650	1-215-882-00	METAL OXIDE	22	5%	2W
R652	1-215-900-11	METAL OXIDE	22K	5%	2W
R653	1-215-873-00	METAL OXIDE	4.7K	5%	1W
R654	1-216-369-00	METAL OXIDE	1	5%	2W
R656	1-249-417-11	CARBON	1K	5%	1/4W
R657	1-260-127-11	CARBON	220K	5%	1/2W
R659	1-216-049-11	RES-CHIP	1K	5%	1/10W
R660	1-216-073-91	RES-CHIP	10K	5%	1/10W
R661	1-215-873-00	METAL OXIDE	4.7K	5%	1W
R682	1-219-134-11	FUSIBLE (EXCEPT KV-AR25M66)	0.1	10%	1/4W
R682	1-533-597-41	IC LINK (KV-AR25M66)		5A	90V
R909	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R910	1-216-065-91	RES-CHIP	4.7K	5%	1/10W

<RELAY>

RY600	1-755-214-11	RELAY, AC POWER
RY601	1-755-214-11	RELAY, AC POWER

<SWITCH>

S501	1-572-707-11	SWITCH, LEVER
S502	1-572-707-11	SWITCH, LEVER

<TRANSFORMER>

T501	1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE
T503	⚠ 1-453-284-21	TRANSFORMER, ASSY FLYBACK (NX-4009//M314)
T504	1-431-693-11	TRANSFORMER, HORIZONTAL LINEAR
T505	1-435-869-11	TRANSFORMER, FERRITE (PMT)
T601	⚠ 1-419-819-11	COIL, LINE FILTER (KV-AR25M60)
T601	⚠ 1-419-819-11	TRANSFORMER, LINE FILTER (EXCEPT KV-AR25M60)
T603	⚠ 1-431-976-41	TRANSFORMER, CONVERTER (SRT)
T604	⚠ 1-431-852-11	TRANSFORMER, CONVERTER (SRT)

<THERMISTOR>

TH600	1-803-586-11	THERMISTOR, NTC

<THERMISTOR>

THP600	1-803-540-11	THERMISTOR

A B1 (EXCEPT KV-AR25M66)

REF NO.	PART NO.	DESCRIPTION	REMARK
		<TUNER>	
TU101	8-598-451-00	TUNER, FSS BTF-WG441 (KV-AR25M60)	
TU101	8-598-452-20	TUNER, FSS BTF-WG442 (KV-AR25M66)	
TU101	8-598-449-10	TUNER, FSS BTF-LG433 (KV-AR25M80)	
TU101	8-598-593-20	TUNER, FSS BTF-WA421 (KV-AR25N90)	
		<VARISTOR>	
VDR600	1-803-830-11	VARISTOR (ERZV14D621) (EXCEPT KV-AR25N90(TAIWAN))	
VDR600	1-801-451-51	VARISTOR TNR14V271K660 (KV-AR25N90(TAIWAN))	
		<CRYSTAL>	
X001	1-781-174-21	VIBRATOR, CERAMIC	
X301	1-781-134-21	VINRATOR, CRYSTAL	
X302	1-781-132-21	VIBRATOR, CRYSTAL	
**********			
*	A-1131-665-A	B1 BOARD MOUNTED (KV-AR25M60)	
*	A-1131-652-A	B1 BOARD MOUNTED (KV-AR25M80/AR25N90)	
		**********	
		<CAPACITOR>	
C1513	1-163-038-91	CERAMIC CHIP 0.1UF 25V	
C1514	1-163-038-91	CERAMIC CHIP 0.1UF 25V	
C1515	1-163-243-11	CERAMIC CHIP 47PF 5.00% 50V	
C1517	1-164-005-11	CERAMIC CHIP 0.47UF 25V	
C1518	1-126-967-11	ELECT 47UF 20.00% 50V	
C1519	1-163-249-11	CERAMIC CHIP 82PF 5.00% 50V	
C1520	1-163-249-11	CERAMIC CHIP 82PF 5.00% 50V	
C1522	1-164-005-11	CERAMIC CHIP 0.47UF 25V	
C1523	1-163-255-11	CERAMIC CHIP 150PF 5.00% 50V	
C1524	1-163-247-91	CERAMIC CHIP 68PF 5.00% 50V	
C1525	1-163-249-11	CERAMIC CHIP 82PF 5.00% 50V	
C1526	1-163-249-11	CERAMIC CHIP 82PF 5.00% 50V	
C1528	1-164-005-11	CERAMIC CHIP 0.47UF 25V	
C1529	1-163-255-11	CERAMIC CHIP 150PF 5.00% 50V	
C1530	1-163-247-91	CERAMIC CHIP 68PF 5.00% 50V	
C1543	1-126-933-11	ELECT 100UF 20.00% 16V	
C1544	1-165-319-11	CERAMIC CHIP 0.1UF 50V	
C1554	1-165-319-11	CERAMIC CHIP 0.1UF 50V	
C1555	1-163-038-91	CERAMIC CHIP 0.1UF 25V	
C1556	1-163-038-91	CERAMIC CHIP 0.1UF 25V	
		<CONNECTOR>	
CN1501 *	1-564-511-11	PLUG, CONNECTOR 8P	
CN1502 *	1-564-508-11	PLUG, CONNECTOR 5P	
CN1503	1-764-811-11	CONNECTOR, BOARD TO BOARD 10P	
		<DIODE>	
D1501	8-719-158-35	RD9.1S-B	
		<IC>	
IC1502	8-759-439-64	HEF4053BT	

REF NO.	PART NO.	DESCRIPTION	REMARK
		<COIL>	
L1501	1-414-856-11	INDUCTOR 10UH	
L1506	1-414-857-11	INDUCTOR 100UH	
L1507	1-414-187-11	INDUCTOR 47UH	
L1508	1-414-187-11	INDUCTOR 47UH	
L1509	1-414-857-11	INDUCTOR 100UH	
L1510	1-414-187-11	INDUCTOR 47UH	
L1511	1-414-187-11	INDUCTOR 47UH	
		<TRANSISTOR>	
Q1501	8-729-230-49	2SC2712-YG (KV-AR25M60)	
Q1501	8-729-010-25	MSD601-RT1 (KV-AR25M80/AR25N90)	
Q1502	8-729-216-22	2SA1162-G	
Q1503	8-729-230-49	2SC2712-YG (KV-AR25M60)	
Q1503	8-729-010-25	MSD601-RT1 (KV-AR25M80/AR25N90)	
Q1504	8-729-230-49	2SC2712-YG (KV-AR25M60)	
Q1504	8-729-010-25	MSD601-RT1 (KV-AR25M80/AR25N90)	
Q1505	8-729-230-49	2SC2712-YG (KV-AR25M60)	
Q1505	8-729-010-25	MSD601-RT1 (KV-AR25M80/AR25N90)	
Q1506	8-729-230-49	2SC2712-YG (KV-AR25M60)	
Q1506	8-729-010-25	MSD601-RT1 (KV-AR25M80/AR25N90)	
Q1507	8-729-216-22	2SA1162-G	
Q1509	8-729-230-49	2SC2712-YG (KV-AR25M60)	
Q1509	8-729-010-25	MSD601-RT1 (KV-AR25M80/AR25N90)	
Q1510	8-729-230-49	2SC2712-YG (KV-AR25M60)	
Q1510	8-729-010-25	MSD601-RT1 (KV-AR25M80/AR25N90)	
Q1511	8-729-216-22	2SA1162-G	
Q1514	8-729-230-49	2SC2712-YG (KV-AR25M60)	
Q1514	8-729-010-25	MSD601-RT1 (KV-AR25M80/AR25N90)	
Q1515	8-729-230-49	2SC2712-YG (KV-AR25M60)	
Q1515	8-729-010-25	MSD601-RT1 (KV-AR25M80/AR25N90)	
Q1516	8-729-216-22	2SA1162-G	
Q1520	8-729-230-49	2SC2712-YG (KV-AR25M60)	
Q1520	8-729-010-25	MSD601-RT1 (KV-AR25M80/AR25N90)	
Q1522	8-729-230-49	2SC2712-YG (KV-AR25M60)	
Q1522	8-729-010-25	MSD601-RT1 (KV-AR25M80/AR25N90)	
Q1523	8-729-216-22	2SA1162-G	
		<RESISTOR>	
R1501	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R1502	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R1503	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1504	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1506	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1507	1-216-081-00	RES-CHIP 22K 5% 1/10W	
R1508	1-216-073-91	RES-CHIP 10K 5% 1/10W	
R1511	1-216-033-00	RES-CHIP 220 5% 1/10W	
R1512	1-216-005-00	RES-CHIP 15 5% 1/10W	
R1515	1-216-041-00	RES-CHIP 470 5% 1/10W	
R1516	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1517	1-216-075-00	RES-CHIP 12K 5% 1/10W	
R1520	1-216-079-00	RES-CHIP 18K 5% 1/10W	
R1522	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R1523	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R1528	1-216-033-00	RES-CHIP 220 5% 1/10W	
R1529	1-216-053-00	RES-CHIP 1.5K 5% 1/10W	
R1531	1-216-045-00	RES-CHIP 680 5% 1/10W	
R1537	1-216-041-00	RES-CHIP 470 5% 1/10W	
R1538	1-216-041-00	RES-CHIP 470 5% 1/10W	

B1 (EXCEPT KV-AR25M66) **B8 (KV-AR25M66 ONLY)**

REF NO.	PART NO.	DESCRIPTION		REMARK	
R1540	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1541	1-216-041-00	RES-CHIP	470	5%	1/10W
R1542	1-216-041-00	RES-CHIP	470	5%	1/10W
R1543	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1545	1-216-041-00	RES-CHIP	470	5%	1/10W
R1547	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1548	1-216-025-11	RES-CHIP	100	5%	1/10W
R1549	1-216-075-00	RES-CHIP	12K	5%	1/10W
R1551	1-216-081-00	RES-CHIP	22K	5%	1/10W
R1552	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1553	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1554	1-216-033-00	RES-CHIP	220	5%	1/10W
R1556	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1559	1-216-041-00	RES-CHIP	470	5%	1/10W
R1560	1-216-041-00	RES-CHIP	470	5%	1/10W
R1561	1-216-041-00	RES-CHIP	470	5%	1/10W
R1562	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1563	1-216-041-00	RES-CHIP	470	5%	1/10W
R1566	1-216-041-00	RES-CHIP	470	5%	1/10W
R1567	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1568	1-216-041-00	RES-CHIP	470	5%	1/10W
R1569	1-216-049-11	RES-CHIP	1K	5%	1/10W

****

* A-1300-810-A B8 BOARD COMPLETE (KV-AR25M66 ONLY)
****

4-382-854-11 SCREW (M3X10), P, SW (+)

<CAPACITOR>

C1305	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1307	1-164-346-11	CERAMIC CHIP	1UF		16V
C1310	1-126-786-11	ELECT	47UF	20.00%	16V
C1312	1-126-947-11	ELECT	47UF	20.00%	16V
C1330	1-126-964-11	ELECT	10UF	20.00%	50V
C1333	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1395	1-163-249-11	CERAMIC CHIP	82PF	5.00%	50V
C1401	1-104-661-91	ELECT	330UF	20.00%	16V
C1402	1-126-947-11	ELECT	47UF	20.00%	25V
C1403	1-126-947-11	ELECT	47UF	20.00%	25V
C1404	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C1405	1-126-947-11	ELECT	47UF	20.00%	25V
C1406	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C1407	1-126-934-11	ELECT	220UF	20.00%	16V
C1408	1-126-964-11	ELECT	10UF	20.00%	50V
C1410	1-126-947-11	ELECT	47UF	20.00%	25V
C1411	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C1412	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1413	1-126-935-11	ELECT	470UF	20.00%	16V
C1414	1-164-346-11	CERAMIC CHIP	1UF		16V
C1415	1-126-947-11	ELECT	47UF	20.00%	25V
C1416	1-164-346-11	CERAMIC CHIP	1UF		16V
C1417	1-126-934-11	ELECT	220UF	20.00%	10V
C1418	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C1419	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C1420	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1421	1-164-346-11	CERAMIC CHIP	1UF		16V
C1422	1-164-346-11	CERAMIC CHIP	1UF		16V
C1423	1-164-346-11	CERAMIC CHIP	1UF		16V
C1425	1-164-346-11	CERAMIC CHIP	1UF		16V
C1426	1-164-346-11	CERAMIC CHIP	1UF		16V
C1428	1-104-665-11	ELECT	100UF	20.00%	25V
C1429	1-126-789-11	ELECT	33UF	20.00%	25V
C1430	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C1431	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1432	1-126-933-11	ELECT	100UF	20.00%	16V
C1433	1-126-947-11	ELECT	47UF	20.00%	16V
C1434	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1435	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1436	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1438	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C1439	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1440	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1441	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1442	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1443	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1444	1-164-005-11	CERAMIC CHIP	0.47UF		25V
C1445	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1446	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1447	1-126-795-11	ELECT	10UF	20.00%	50V
C1448	1-164-005-11	CERAMIC CHIP	0.47UF		25V
C1449	1-126-933-11	ELECT	100UF	20.00%	16V
C1450	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C1451	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C1452	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C1453	1-126-933-11	ELECT	100UF	20.00%	16V
C1454	1-126-967-11	ELECT	47UF	20.00%	50V
C1455	1-126-967-11	ELECT	47UF	20.00%	50V
C1456	1-126-933-11	ELECT	100UF	20.00%	16V
C1457	1-164-346-11	CERAMIC CHIP	1UF		16V
C1458	1-126-933-11	ELECT	100UF	20.00%	16V
C1459	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1460	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1461	1-164-346-11	CERAMIC CHIP	1UF		16V
C1462	1-164-346-11	CERAMIC CHIP	1UF		16V
C1464	1-126-933-11	ELECT	100UF	20.00%	16V
C3201	1-126-964-11	ELECT	10UF	20.00%	50V
C3202	1-136-171-00	FILM	0.33UF	5.00%	50V
C3203	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C3220	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C3221	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C3222	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C3223	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C3224	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C3225	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C3226	1-126-964-11	ELECT	10UF	20.00%	50V
C3227	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C3228	1-107-698-11	ELECT	10UF	20.00%	25V
C3229	1-107-698-11	ELECT	10UF	20.00%	25V
C3238	1-164-005-11	CERAMIC CHIP	0.47UF		25V
C3239	1-136-171-00	FILM	0.33UF	5.00%	50V
C3243	1-163-989-11	CERAMIC CHIP	0.033UF	10.00%	25V
C3244	1-164-346-11	CERAMIC CHIP	1UF		16V
C3245	1-164-005-11	CERAMIC CHIP	0.47UF		25V
C3246	1-163-243-11	CERAMIC CHIP	47PF	5.00%	50V
C3247	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3248	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C3249	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C3250	1-164-346-11	CERAMIC CHIP	1UF		16V
C3251	1-126-964-11	ELECT	10UF	20.00%	50V
C3252	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C3253	1-126-933-11	ELECT	100UF	20.00%	16V

B8 (KV-AR25M66 ONLY)

REF NO.	PART NO.	DESCRIPTION		REMARK
C3254	1-164-505-11	CERAMIC CHIP	2.2UF	16V
C3255	1-163-243-11	CERAMIC CHIP	47PF 5.00%	50V
C3256	1-126-963-11	ELECT	4.7UF 20.00%	50V
C3257	1-164-346-11	CERAMIC CHIP	1UF	16V
C3258	1-163-989-11	CERAMIC CHIP	0.033UF 10.00%	25V
C3259	1-126-963-11	ELECT	4.7UF 20.00%	50V
C3260	1-163-251-11	CERAMIC CHIP	100PF 5.00%	50V
C3262	1-126-947-11	ELECT	47UF 20.00%	16V
C3264	1-163-251-11	CERAMIC CHIP	100PF 5.00%	50V
C3301	1-117-720-11	CERAMIC CHIP	4.7UF	10V
C3302	1-117-720-11	CERAMIC CHIP	4.7UF	10V
C3303	1-117-720-11	CERAMIC CHIP	4.7UF	10V
C3304	1-117-720-11	CERAMIC CHIP	4.7UF	10V
C3305	1-117-720-11	CERAMIC CHIP	4.7UF	10V
C3306	1-117-720-11	CERAMIC CHIP	4.7UF	10V
C3307	1-126-935-11	ELECT	470UF 20.00%	16V
C3308	1-115-339-11	CERAMIC CHIP	0.1UF 10.00%	50V
C3309	1-104-760-11	CERAMIC CHIP	0.047UF 10.00%	50V
C3310	1-104-760-11	CERAMIC CHIP	0.047UF 10.00%	50V
C3311	1-163-021-91	CERAMIC CHIP	0.01UF 10.00%	50V
C3312	1-164-489-11	CERAMIC CHIP	0.22UF 10.00%	16V
C3313	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00%	50V
C3314	1-164-489-11	CERAMIC CHIP	0.22UF 10.00%	16V
C3315	1-164-182-11	CERAMIC CHIP	0.0033UF 10.00%	50V
C3316	1-115-185-11	CERAMIC CHIP	0.033UF 10.00%	50V
C3317	1-163-009-91	CERAMIC CHIP	0.001UF 10.00%	50V
C3318	1-164-489-11	CERAMIC CHIP	0.22UF 10.00%	16V
C3319	1-110-501-11	CERAMIC CHIP	0.33UF 10.00%	16V
C3320	1-126-963-11	ELECT	4.7UF 20.00%	50V
C3321	1-126-963-11	ELECT	4.7UF 20.00%	50V
C3322	1-126-963-11	ELECT	4.7UF 20.00%	50V
C3323	1-115-339-11	CERAMIC CHIP	0.1UF 10.00%	50V
C3324	1-126-935-11	ELECT	470UF 20.00%	16V
C3325	1-104-665-11	ELECT	100UF 20.00%	25V
C3326	1-126-963-11	ELECT	4.7UF 20.00%	50V
C3327	1-126-963-11	ELECT	4.7UF 20.00%	50V
C3328	1-126-963-11	ELECT	4.7UF 20.00%	50V
C3329	1-126-963-11	ELECT	4.7UF 20.00%	50V
C3330	1-126-963-11	ELECT	4.7UF 20.00%	50V
C3331	1-164-489-11	CERAMIC CHIP	0.22UF 10.00%	16V
C3332	1-163-009-91	CERAMIC CHIP	0.001UF 10.00%	50V
C3333	1-115-185-11	CERAMIC CHIP	0.033UF 10.00%	50V
C3334	1-164-182-11	CERAMIC CHIP	0.0033UF 10.00%	50V
C3335	1-163-019-00	CERAMIC CHIP	0.0068UF 10.00%	50V
C3336	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00%	50V
C3337	1-163-017-00	CERAMIC CHIP	0.0047UF 10.00%	50V
C3338	1-163-021-91	CERAMIC CHIP	0.01UF 10.00%	50V
C3401	1-117-720-11	CERAMIC CHIP	4.7UF	10V
C3402	1-117-720-11	CERAMIC CHIP	4.7UF	10V
C3403	1-117-720-11	CERAMIC CHIP	4.7UF	10V
C3404	1-117-720-11	CERAMIC CHIP	4.7UF	10V
C3405	1-126-964-11	ELECT	10UF 20.00%	50V
C6200	1-216-295-91	SHORT CHIP	0	
C6202	1-128-550-11	ELECT	2200UF 20.00%	50V
C6203	1-163-021-91	CERAMIC CHIP	0.01UF 10.00%	50V
C6204	1-128-550-11	ELECT	2200UF 20.00%	50V
C6205	1-130-495-00	MYLAR	0.1UF 5.00%	50V
C6206	1-128-550-11	ELECT	2200UF 20.00%	50V
C6209	1-130-495-00	MYLAR	0.1UF 5.00%	50V
C6210	1-126-924-11	ELECT	330UF 20.00%	10V
C6211	1-126-924-11	ELECT	330UF 20.00%	10V
C6212	1-126-947-11	ELECT	47UF 20.00%	25V
C6213	1-126-964-11	ELECT	10UF 20.00%	50V
C6217	1-164-004-11	CERAMIC CHIP	0.1UF 10.00%	25V
C6220	1-164-505-11	CERAMIC CHIP	2.2UF	16V
C6222	1-164-505-11	CERAMIC CHIP	2.2UF	16V
C6223	1-126-960-11	ELECT	1UF 20.00%	50V
C6241	1-126-964-11	ELECT	10UF 20.00%	50V
C6244	1-163-018-00	CERAMIC CHIP	0.0056UF 10.00%	50V
C6245	1-163-018-00	CERAMIC CHIP	0.0056UF 10.00%	50V
C6249	1-216-295-91	SHORT CHIP	0	

<CONNECTOR>

CN1300	*	1-564-506-11	PLUG, CONNECTOR 3P
CN1400	*	1-564-512-11	PLUG, CONNECTOR 9P
CN1401	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN1404	*	1-779-891-11	CONNECTOR, BOARD TO BOARD 8P
CN1405	*	1-779-892-11	CONNECTOR, BOARD TO BOARD 10P
CN1406	*	1-779-892-11	CONNECTOR, BOARD TO BOARD 10P
CN1407	*	1-779-891-11	CONNECTOR, BOARD TO BOARD 8P
CN1408		1-764-818-11	CONNECTOR, BOARD TO BOARD 10P
CN1409		1-764-818-11	CONNECTOR, BOARD TO BOARD 10P
CN1415		1-695-915-11	TAB (CONTACT)
CN6200	*	1-564-507-11	PLUG, CONNECTOR 4P
CN6204	*	1-564-509-11	PLUG, CONNECTOR 6P
CN6206	*	1-564-508-11	PLUG, CONNECTOR 5P

<DIODE>

D1401	8-719-069-60	UDZSTE-179.1B
D1402	8-719-069-60	UDZSTE-179.1B
D1403	8-719-069-60	UDZSTE-179.1B
D1404	8-719-069-60	UDZSTE-179.1B
D1405	8-719-069-60	UDZSTE-179.1B
D1406	8-719-069-60	UDZSTE-179.1B
D1407	8-719-069-60	UDZSTE-179.1B
D1408	8-719-069-60	UDZSTE-179.1B
D1409	8-719-069-60	UDZSTE-179.1B
D1410	8-719-069-60	UDZSTE-179.1B
D1411	8-719-069-60	UDZSTE-179.1B
D1412	8-719-069-60	UDZSTE-179.1B
D1415	8-719-069-60	UDZSTE-179.1B
D1416	8-719-069-60	UDZSTE-179.1B
D1418	8-719-069-60	UDZSTE-179.1B
D3201	8-719-988-61	1SS355TE-17
D3203	8-719-988-61	1SS355TE-17
D3301	8-719-081-97	MMDL914T1
D3301	8-719-404-50	MA111-TX
D3302	8-719-081-97	MMDL914T1
D3302	8-719-404-50	MA111-TX
D6210	8-719-914-42	DA204K
D6211	8-719-404-50	MA111-TX
D6211	8-719-081-97	MMDL914T1
D6212	8-719-404-50	MA111-TX
D6212	8-719-081-97	MMDL914T1

<IC>

IC1401	8-752-068-46	CXA1855S
IC1402	8-759-100-96	UPC4558G2
IC1403	8-759-231-53	TA7805S
IC1404	8-759-701-59	NJM78M09FA
IC3200	8-759-100-96	UPC4558G2

B8 (KV-AR25M66 ONLY)

REF NO.	PART NO.	DESCRIPTION			REMARK
IC3202	8-759-100-96	UPC4558G2			
IC3204	8-759-100-96	UPC4558G2			
IC3205	8-752-058-68	CXA1315M			
IC3301	8-759-711-10	NJU4066BM			
IC3302	6-702-145-01	IC NJW1139GK1-TE2			
IC3401	8-759-443-11	NJM2283M-TE1			
IC6200	8-759-168-24	TA8200AH			
		<JACK>			
J1401	1-784-646-11	TERMINAL, S			
J1402	1-778-387-11	JACK BLOCK, PIN 12P			
		<CHIP CONDUCTOR>			
JR1303	1-216-295-91	SHORT CHIP	0		
JR1400	1-216-295-91	SHORT CHIP	0		
JR1401	1-216-295-91	SHORT CHIP	0		
JR1405	1-216-295-91	SHORT CHIP	0		
JR1406	1-216-295-91	SHORT CHIP	0		
JR1407	1-216-295-91	SHORT CHIP	0		
JR1409	1-216-295-91	SHORT CHIP	0		
JR1410	1-216-295-91	SHORT CHIP	0		
JR1411	1-216-295-91	SHORT CHIP	0		
JR1412	1-216-025-11	RES-CHIP	100	5%	1/10W
JR1415	1-216-295-91	SHORT CHIP	0		
JR1417	1-216-295-91	SHORT CHIP	0		
JR1418	1-216-295-91	SHORT CHIP	0		
JR1419	1-216-295-91	SHORT CHIP	0		
JR1420	1-216-295-91	SHORT CHIP	0		
JR1421	1-216-295-91	SHORT CHIP	0		
JR1422	1-216-295-91	SHORT CHIP	0		
JR1423	1-216-295-91	SHORT CHIP	0		
JR1481	1-216-295-91	SHORT CHIP	0		
JR3201	1-216-295-91	SHORT CHIP	0		
JR3204	1-216-295-91	SHORT CHIP	0		
JR3206	1-216-295-91	SHORT CHIP	0		
JR3209	1-216-295-91	SHORT CHIP	0		
JR3210	1-216-295-91	SHORT CHIP	0		
JR3211	1-216-295-91	SHORT CHIP	0		
JR3302	1-216-295-91	SHORT CHIP	0		
JR3303	1-216-295-91	SHORT CHIP	0		
JR3306	1-216-295-91	SHORT CHIP	0		
JR3307	1-216-295-91	SHORT CHIP	0		
JR3403	1-216-295-91	SHORT CHIP	0		
JR6200	1-216-295-91	SHORT CHIP	0		
JR6202	1-216-295-91	SHORT CHIP	0		
JR6203	1-216-295-91	SHORT CHIP	0		
JR6204	1-216-295-91	SHORT CHIP	0		
JR6206	1-216-295-91	SHORT CHIP	0		
JR6210	1-216-295-91	SHORT CHIP	0		
JR6223	1-216-295-91	SHORT CHIP	0		
		<COIL>			
L1313	1-414-187-11	INDUCTOR	47UH		
L1314	1-414-856-11	INDUCTOR	10UH		
L1315	1-414-856-11	INDUCTOR	10UH		
L1317	1-414-856-11	INDUCTOR	10UH		
L1400	1-414-856-11	INDUCTOR	10UH		
L1402	1-406-665-11	INDUCTOR	100UH		
L1403	1-414-856-11	INDUCTOR	10UH		
L1404	1-406-665-11	INDUCTOR	100UH		
L1405	1-414-856-11	INDUCTOR	10UH		
L1406	1-414-856-11	INDUCTOR	10UH		
L1407	1-414-856-11	INDUCTOR	10UH		
L3202	1-414-856-11	INDUCTOR	10UH		
		<TRANSISTOR>			
Q1316	8-729-216-22	2SA1162-G			
Q1317	8-729-230-49	2SC2712-YG			
Q1318	8-729-230-49	2SC2712-YG			
Q1323	8-729-230-49	2SC2712-YG			
Q1324	8-729-230-49	2SC2712-YG			
Q1365	8-729-230-49	2SC2712-YG			
Q1372	8-729-230-49	2SC2712-YG			
Q1401	8-729-230-49	2SC2712-YG			
Q1402	8-729-216-22	2SA1162-G			
Q1403	8-729-230-49	2SC2712-YG			
Q1404	8-729-230-49	2SC2712-YG			
Q1405	8-729-230-49	2SC2712-YG			
Q1408	8-729-230-49	2SC2712-YG			
Q1409	8-729-230-49	2SC2712-YG			
Q1410	8-729-230-49	2SC2712-YG			
Q3201	8-729-224-62	2SK246-GR			
Q3202	8-729-230-49	2SC2712-YG			
Q3203	8-729-230-49	2SC2712-YG			
Q3204	8-729-224-62	2SK246-GR			
Q6201	8-729-421-19	UN2213			
Q6203	8-729-421-19	UN2213			
Q6204	8-729-421-19	UN2213			
Q6208	8-729-421-19	UN2213			
		<RESISTOR>			
R1301	1-216-041-00	RES-CHIP	470	5%	1/10W
R1318	1-216-033-00	RES-CHIP	220	5%	1/10W
R1320	1-216-081-00	RES-CHIP	22K	5%	1/10W
R1343	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1344	1-216-025-11	RES-CHIP	100	5%	1/10W
R1345	1-216-041-00	RES-CHIP	470	5%	1/10W
R1346	1-216-041-00	RES-CHIP	470	5%	1/10W
R1347	1-216-025-11	RES-CHIP	100	5%	1/10W
R1350	1-216-085-91	RES-CHIP	33K	5%	1/10W
R1359	1-216-025-11	RES-CHIP	100	5%	1/10W
R1360	1-216-041-00	RES-CHIP	470	5%	1/10W
R1361	1-216-041-00	RES-CHIP	470	5%	1/10W
R1362	1-216-055-00	RES-CHIP	1.8K	5%	1/10W
R1363	1-216-033-00	RES-CHIP	220	5%	1/10W
R1364	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1365	1-216-081-00	RES-CHIP	22K	5%	1/10W
R1366	1-216-295-91	SHORT CHIP	0		
R1368	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1369	1-216-025-11	RES-CHIP	100	5%	1/10W
R1370	1-216-041-00	RES-CHIP	470	5%	1/10W
R1371	1-216-039-00	RES-CHIP	390	5%	1/10W
R1372	1-216-041-00	RES-CHIP	470	5%	1/10W
R1397	1-216-045-00	RES-CHIP	680	5%	1/10W
R1400	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1401	1-216-031-00	RES-CHIP	180	5%	1/10W
R1402	1-216-033-00	RES-CHIP	220	5%	1/10W
R1403	1-216-033-00	RES-CHIP	220	5%	1/10W
R1404	1-216-295-91	SHORT CHIP	0		
R1406	1-216-013-00	RES-CHIP	33	5%	1/10W
R1407	1-216-033-00	RES-CHIP	220	5%	1/10W

B8 (KV-AR25M66 ONLY)

REF NO.	PART NO.	DESCRIPTION		REMARK	
R1408	1-216-031-00	RES-CHIP	180	5%	1/10W
R1409	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1410	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1411	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1412	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1413	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1414	1-216-025-11	RES-CHIP	100	5%	1/10W
R1417	1-216-025-11	RES-CHIP	100	5%	1/10W
R1418	1-216-025-11	RES-CHIP	100	5%	1/10W
R1419	1-216-025-11	RES-CHIP	100	5%	1/10W
R1420	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1421	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R1423	1-216-025-11	RES-CHIP	100	5%	1/10W
R1424	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1425	1-216-047-91	RES-CHIP	820	5%	1/10W
R1426	1-216-025-11	RES-CHIP	100	5%	1/10W
R1427	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R1428	1-216-025-11	RES-CHIP	100	5%	1/10W
R1429	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1430	1-216-025-11	RES-CHIP	100	5%	1/10W
R1431	1-216-025-11	RES-CHIP	100	5%	1/10W
R1432	1-216-041-00	RES-CHIP	470	5%	1/10W
R1433	1-216-025-11	RES-CHIP	100	5%	1/10W
R1434	1-216-025-11	RES-CHIP	100	5%	1/10W
R1435	1-216-022-00	RES-CHIP	75	5%	1/10W
R1436	1-216-025-11	RES-CHIP	100	5%	1/10W
R1437	1-216-022-00	RES-CHIP	75	5%	1/10W
R1438	1-216-025-11	RES-CHIP	100	5%	1/10W
R1439	1-216-017-91	RES-CHIP	47	5%	1/10W
R1441	1-216-025-11	RES-CHIP	100	5%	1/10W
R1442	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1443	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1444	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1445	1-216-025-11	RES-CHIP	100	5%	1/10W
R1446	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1447	1-216-025-11	RES-CHIP	100	5%	1/10W
R1448	1-216-043-91	RES-CHIP	560	5%	1/10W
R1449	1-249-429-11	CARBON	10K	5%	1/4W
R1450	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1451	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1452	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1453	1-216-025-11	RES-CHIP	100	5%	1/10W
R1454	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1455	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1456	1-216-113-00	RES-CHIP	470K	5%	1/10W
R1457	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1458	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1459	1-216-025-11	RES-CHIP	100	5%	1/10W
R1460	1-216-033-00	RES-CHIP	220	5%	1/10W
R1461	1-216-025-11	RES-CHIP	100	5%	1/10W
R1462	1-216-025-11	RES-CHIP	100	5%	1/10W
R1463	1-249-429-11	CARBON	10K	5%	1/4W
R1464	1-216-113-00	RES-CHIP	470K	5%	1/10W
R1465	1-216-113-00	RES-CHIP	470K	5%	1/10W
R1466	1-216-033-00	RES-CHIP	220	5%	1/10W
R1467	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R1468	1-216-093-91	RES-CHIP	68K	5%	1/10W
R1469	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1470	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1471	1-216-022-00	RES-CHIP	75	5%	1/10W
R1472	1-216-033-00	RES-CHIP	220	5%	1/10W
R1473	1-216-033-00	RES-CHIP	220	5%	1/10W
R1474	1-216-295-91	SHORT CHIP	0		

REF NO.	PART NO.	DESCRIPTION		REMARK	
R1475	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1476	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1477	1-216-047-91	RES-CHIP	820	5%	1/10W
R1478	1-216-051-00	RES-CHIP	1.2K	5%	1/10W
R1479	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1480	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1481	1-216-022-00	RES-CHIP	75	5%	1/10W
R1483	1-216-025-11	RES-CHIP	100	5%	1/10W
R1484	1-216-025-11	RES-CHIP	100	5%	1/10W
R1485	1-216-025-11	RES-CHIP	100	5%	1/10W
R1486	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R1487	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1488	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1489	1-216-022-00	RES-CHIP	75	5%	1/10W
R1490	1-216-025-11	RES-CHIP	100	5%	1/10W
R1491	1-216-025-11	RES-CHIP	100	5%	1/10W
R1492	1-216-021-00	RES-CHIP	68	5%	1/10W
R1493	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R1494	1-216-031-00	RES-CHIP	180	5%	1/10W
R1495	1-216-033-00	RES-CHIP	220	5%	1/10W
R1496	1-216-041-00	RES-CHIP	470	5%	1/10W
R1497	1-216-041-00	RES-CHIP	470	5%	1/10W
R1498	1-216-025-11	RES-CHIP	100	5%	1/10W
R1499	1-216-025-11	RES-CHIP	100	5%	1/10W
R1500	1-216-025-11	RES-CHIP	100	5%	1/10W
R1501	1-216-045-00	RES-CHIP	680	5%	1/10W
R1503	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1504	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1505	1-216-022-00	RES-CHIP	75	5%	1/10W
R1506	1-216-033-00	RES-CHIP	220	5%	1/10W
R1507	1-216-025-11	RES-CHIP	100	5%	1/10W
R1508	1-216-025-11	RES-CHIP	100	5%	1/10W
R1509	1-216-041-00	RES-CHIP	470	5%	1/10W
R3200	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3201	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3202	1-216-097-11	RES-CHIP	100K	5%	1/10W
R3203	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3204	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R3205	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R3206	1-216-039-00	RES-CHIP	390	5%	1/10W
R3207	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3219	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3220	1-216-097-11	RES-CHIP	100K	5%	1/10W
R3221	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3222	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3223	1-216-045-00	RES-CHIP	680	5%	1/10W
R3224	1-216-101-00	RES-CHIP	150K	5%	1/10W
R3229	1-216-025-11	RES-CHIP	100	5%	1/10W
R3230	1-216-025-11	RES-CHIP	100	5%	1/10W
R3231	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3232	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3233	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R3234	1-216-039-00	RES-CHIP	390	5%	1/10W
R3235	1-216-101-00	RES-CHIP	150K	5%	1/10W
R3236	1-216-113-00	RES-CHIP	470K	5%	1/10W
R3237	1-216-045-00	RES-CHIP	680	5%	1/10W
R3238	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3239	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3240	1-216-081-00	RES-CHIP	22K	5%	1/10W
R3241	1-216-093-91	RES-CHIP	68K	5%	1/10W
R3242	1-216-081-00	RES-CHIP	22K	5%	1/10W
R3245	1-216-097-11	RES-CHIP	100K	5%	1/10W

B8 (KV-AR25M66 ONLY)

REF NO.	PART NO.	DESCRIPTION		REMARK	
R3246	1-216-045-00	RES-CHIP	680	5%	1/10W
R3251	1-216-101-00	RES-CHIP	150K	5%	1/10W
R3252	1-216-113-00	RES-CHIP	470K	5%	1/10W
R3253	1-216-045-00	RES-CHIP	680	5%	1/10W
R3254	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3255	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3256	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3257	1-216-097-11	RES-CHIP	100K	5%	1/10W
R3258	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3259	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R3262	1-216-101-00	RES-CHIP	150K	5%	1/10W
R3263	1-216-093-91	RES-CHIP	68K	5%	1/10W
R3267	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3268	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3269	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R3271	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R3273	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R3274	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R3301	1-216-079-00	RES-CHIP	18K	5%	1/10W
R3302	1-216-081-00	RES-CHIP	22K	5%	1/10W
R3303	1-216-079-00	RES-CHIP	18K	5%	1/10W
R3304	1-216-077-91	RES-CHIP	15K	5%	1/10W
R3305	1-216-077-91	RES-CHIP	15K	5%	1/10W
R3306	1-216-081-00	RES-CHIP	22K	5%	1/10W
R3307	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3308	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3309	1-216-025-11	RES-CHIP	100	5%	1/10W
R3310	1-216-025-11	RES-CHIP	100	5%	1/10W
R3311	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3312	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3313	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3314	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3315	1-216-295-91	SHORT CHIP	0		
R3318	1-216-295-91	SHORT CHIP	0		
R3401	1-216-025-11	RES-CHIP	100	5%	1/10W
R3402	1-216-025-11	RES-CHIP	100	5%	1/10W
R3403	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3406	1-216-025-11	RES-CHIP	100	5%	1/10W
R3407	1-216-025-11	RES-CHIP	100	5%	1/10W
R6201	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6202	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6203	1-216-295-91	SHORT CHIP	0		
R6209	1-216-049-11	RES-CHIP	1K	5%	1/10W
R6219	1-216-089-91	RES-CHIP	47K	5%	1/10W
R6245	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6246	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6254	1-216-021-00	RES-CHIP	68	5%	1/10W
R6255	1-216-308-00	RES-CHIP	4.7	5%	1/10W
R6258	1-216-021-00	RES-CHIP	68	5%	1/10W
R6259	1-216-308-00	RES-CHIP	4.7	5%	1/10W
R6278	1-216-295-91	SHORT CHIP	0		
		<TUNER>			
TU1401	8-598-450-10	TUNER, FSS BTF-LG434			

****

* A-1300-868-A B10 BOARD COMPLETE (KV-AR25M60)
* A-1300-516-A B10 BOARD COMPLETE (KV-AR25M80/AR25N90)
****

B10 (EXCEPT KV-AR25M66)

REF NO.	PART NO.	DESCRIPTION			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
		<CAPACITOR>			
C1305	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1307	1-164-346-11	CERAMIC CHIP	1UF		16V
C1310	1-126-947-11	ELECT	47UF	20.00%	16V
C1312	1-126-947-11	ELECT	47UF	20.00%	16V
C1330	1-126-964-11	ELECT	10UF	20.00%	50V
C1333	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1395	1-163-249-11	CERAMIC CHIP	82PF	5.00%	50V
C1396	1-125-889-91	CERAMIC CHIP	2.2UF	10%	10V
C1401	1-104-661-91	ELECT	330UF	20.00%	16V
C1402	1-126-947-11	ELECT	47UF	20.00%	25V
C1403	1-126-947-11	ELECT	47UF	20.00%	25V
C1404	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C1405	1-126-947-11	ELECT	47UF	20.00%	25V
C1406	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C1408	1-126-964-11	ELECT	10UF	20.00%	50V
C1410	1-126-947-11	ELECT	47UF	20.00%	25V
C1411	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C1413	1-126-935-11	ELECT	470UF	20.00%	16V
C1414	1-164-346-11	CERAMIC CHIP	1UF		16V
C1415	1-126-947-11	ELECT	47UF	20.00%	25V
C1416	1-164-346-11	CERAMIC CHIP	1UF		16V
C1418	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C1419	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C1421	1-164-346-11	CERAMIC CHIP	1UF		16V
C1422	1-164-346-11	CERAMIC CHIP	1UF		16V
C1423	1-164-346-11	CERAMIC CHIP	1UF		16V
C1425	1-164-346-11	CERAMIC CHIP	1UF		16V
C1426	1-164-346-11	CERAMIC CHIP	1UF		16V
C1428	1-104-665-11	ELECT	100UF	20.00%	25V
C1429	1-104-663-11	ELECT	33UF	20.00%	25V
C1431	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1432	1-126-933-11	ELECT	100UF	20.00%	16V
C1433	1-126-947-11	ELECT	47UF	20.00%	16V
C1434	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1435	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1436	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1439	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1440	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1441	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1442	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1443	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1444	1-164-005-11	CERAMIC CHIP	0.47UF		25V
C1445	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1446	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1447	1-126-964-11	ELECT	10UF	20.00%	50V
C1448	1-164-005-11	CERAMIC CHIP	0.47UF		25V
C1449	1-126-933-11	ELECT	100UF	20.00%	16V
C1457	1-164-346-11	CERAMIC CHIP	1UF		16V
C1459	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1460	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C1461	1-164-346-11	CERAMIC CHIP	1UF		16V
C1462	1-164-346-11	CERAMIC CHIP	1UF		16V
C1464	1-126-933-11	ELECT	100UF	20.00%	16V
C3201	1-126-964-11	ELECT	10UF	20.00%	50V
C3202	1-136-171-00	FILM	0.33UF	5.00%	50V
C3203	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C3220	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C3221	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V

B10 (EXCEPT KV-AR25M66)

REF NO.	PART NO.	DESCRIPTION		REMARK	
C3222	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C3223	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C3224	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C3225	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C3226	1-126-964-11	ELECT	10UF	20.00%	50V
C3227	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C3228	1-107-698-11	ELECT	10UF	20.00%	25V
C3229	1-107-698-11	ELECT	10UF	20.00%	25V
C3238	1-164-005-11	CERAMIC CHIP	0.47UF		25V
C3239	1-136-171-00	FILM	0.33UF	5.00%	50V
C3243	1-163-989-11	CERAMIC CHIP	0.033UF	10.00%	25V
C3244	1-164-346-11	CERAMIC CHIP	1UF		16V
C3245	1-164-005-11	CERAMIC CHIP	0.47UF		25V
C3246	1-163-243-11	CERAMIC CHIP	47PF	5.00%	50V
C3247	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3248	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C3249	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C3250	1-164-346-11	CERAMIC CHIP	1UF		16V
C3251	1-126-964-11	ELECT	10UF	20.00%	50V
C3252	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C3253	1-126-933-11	ELECT	100UF	20.00%	16V
C3254	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C3255	1-163-243-11	CERAMIC CHIP	47PF	5.00%	50V
C3256	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3257	1-164-346-11	CERAMIC CHIP	1UF		16V
C3258	1-163-989-11	CERAMIC CHIP	0.033UF	10.00%	25V
C3259	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3260	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C3262	1-126-947-11	ELECT	47UF	20.00%	16V
C3264	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C3301	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3302	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3303	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3304	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3305	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3306	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3307	1-104-665-11	ELECT	100UF	20.00%	25V
C3308	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C3309	1-104-760-11	CERAMIC CHIP	0.047UF	10.00%	50V
C3310	1-104-760-11	CERAMIC CHIP	0.047UF	10.00%	50V
C3311	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C3312	1-164-489-11	CERAMIC CHIP	0.22UF	10.00%	16V
C3313	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C3314	1-164-489-11	CERAMIC CHIP	0.22UF	10.00%	16V
C3315	1-164-182-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C3316	1-115-185-11	CERAMIC CHIP	0.033UF	10.00%	50V
C3317	1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C3318	1-164-489-11	CERAMIC CHIP	0.22UF	10.00%	16V
C3319	1-110-501-11	CERAMIC CHIP	0.33UF	10.00%	16V
C3320	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3321	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3322	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3323	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C3324	1-126-964-11	ELECT	10UF	20.00%	50V
C3325	1-104-665-11	ELECT	100UF	20.00%	25V
C3326	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3327	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3328	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3329	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3330	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3331	1-164-489-11	CERAMIC CHIP	0.22UF	10.00%	16V
C3332	1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C3333	1-115-185-11	CERAMIC CHIP	0.033UF	10.00%	50V
C3334	1-164-182-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C3335	1-163-019-00	CERAMIC CHIP	0.0068UF	10.00%	50V
C3336	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C3337	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C3338	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C6200	1-216-295-91	SHORT CHIP	0		
C6202	1-128-550-11	ELECT	2200UF	20.00%	50V
C6203	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C6204	1-128-550-11	ELECT	2200UF	20.00%	50V
C6205	1-130-495-00	MYLAR	0.1UF	5.00%	50V
C6206	1-128-550-11	ELECT	2200UF	20.00%	50V
C6209	1-130-495-00	MYLAR	0.1UF	5.00%	50V
C6210	1-126-924-11	ELECT	330UF	20.00%	10V
C6211	1-126-924-11	ELECT	330UF	20.00%	10V
C6212	1-126-947-11	ELECT	47UF	20.00%	25V
C6213	1-126-964-11	ELECT	10UF	20.00%	50V
C6217	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C6220	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C6222	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C6223	1-126-960-11	ELECT	1UF	20.00%	50V
C6241	1-126-964-11	ELECT	10UF	20.00%	50V
C6244	1-163-018-00	CERAMIC CHIP	0.0056UF	10.00%	50V
C6245	1-163-018-00	CERAMIC CHIP	0.0056UF	10.00%	50V
C6249	1-216-295-91	SHORT CHIP	0		

<CONNECTOR>

CN1300	*	1-564-506-11	PLUG, CONNECTOR 3P
CN1400	*	1-564-512-11	PLUG, CONNECTOR 9P
CN1401	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN1403	*	1-564-506-11	PLUG, CONNECTOR 3P
CN1405	*	1-779-892-11	CONNECTOR, BOARD TO BOARD 10P
CN1406	*	1-779-892-11	CONNECTOR, BOARD TO BOARD 10P
CN1407	*	1-779-891-11	CONNECTOR, BOARD TO BOARD 8P
CN1409		1-764-818-11	CONNECTOR, BOARD TO BOARD 10P
CN6200	*	1-564-507-11	PLUG, CONNECTOR 4P
CN6204	*	1-564-509-11	PLUG, CONNECTOR 6P
CN6206	*	1-564-508-11	PLUG, CONNECTOR 5P

<DIODE>

D1401	8-719-069-60	UDZSTE-179.1B
D1402	8-719-069-60	UDZSTE-179.1B
D1403	8-719-069-60	UDZSTE-179.1B
D1404	8-719-069-60	UDZSTE-179.1B
D1405	8-719-069-60	UDZSTE-179.1B
D1406	8-719-069-60	UDZSTE-179.1B
D1407	8-719-069-60	UDZSTE-179.1B
D1408	8-719-069-60	UDZSTE-179.1B
D1409	8-719-069-60	UDZSTE-179.1B
D1410	8-719-069-60	UDZSTE-179.1B
D1411	8-719-069-60	UDZSTE-179.1B
D1412	8-719-069-60	UDZSTE-179.1B
D1415	8-719-069-60	UDZSTE-179.1B
D1416	8-719-069-60	UDZSTE-179.1B
D1418	8-719-069-60	UDZSTE-179.1B
D3201	8-719-988-61	1SS355TE-17
D3203	8-719-988-61	1SS355TE-17
D3301	8-719-081-97	MMDL914T1 (KV-AR25M60)
D3301	8-719-404-50	MA111-TX (KV-AR25M80/N90)
D3302	8-719-081-97	MMDL914T1 (KV-AR25M60)

B10 (EXCEPT KV-AR25M66)

REF NO.	PART NO.	DESCRIPTION	REMARK
D3302	8-719-404-50	MA111-TX (KV-AR25M80/N90)	
D6210	8-719-914-42	DA204K	
D6211	8-719-081-97	MMDL914T1 (KV-AR25M80/N90)	
D6211	8-719-404-50	MA111-TX (KV-AR25M60)	
D6212	8-719-081-97	MMDL914T1 (KV-AR25M80/N90)	
D6212	8-719-404-50	MA111-TX (KV-AR25M60)	
		<IC>	
IC1401	8-752-068-46	CXA1855S	
IC1402	8-759-100-96	UPC4558G2	
IC1404	8-759-701-59	NJM78M09FA	
IC3200	8-759-100-96	UPC4558G2	
IC3202	8-759-100-96	UPC4558G2	
IC3204	8-759-100-96	UPC4558G2	
IC3205	8-752-058-68	CXA1315M	
IC3301	8-759-711-10	NJU4066BM	
IC3302	6-702-145-01	IC NJW1139GK1-TE2	
IC6200	8-759-168-24	TA8200AH	
		<JACK>	
J1401	1-784-646-11	TERMINAL, S	
J1402	1-778-387-11	JACK BLOCK, PIN 12P	
		<CHIP CONDUCTOR>	
JR1301	1-216-295-91	SHORT CHIP 0	
JR1405	1-216-295-91	SHORT CHIP 0	
JR1406	1-216-295-91	SHORT CHIP 0	
JR1407	1-216-295-91	SHORT CHIP 0	
JR1409	1-216-295-91	SHORT CHIP 0	
JR1410	1-216-295-91	SHORT CHIP 0	
JR1411	1-216-295-91	SHORT CHIP 0	
JR3204	1-216-295-91	SHORT CHIP 0	
JR3209	1-216-295-91	SHORT CHIP 0	
JR6200	1-216-295-91	SHORT CHIP 0	
JR6202	1-216-295-91	SHORT CHIP 0	
JR6203	1-216-295-91	SHORT CHIP 0	
JR6204	1-216-295-91	SHORT CHIP 0	
JR6206	1-216-295-91	SHORT CHIP 0	
		<COIL>	
L1313	1-414-187-11	INDUCTOR 47UH	
L1314	1-414-856-11	INDUCTOR 10UH	
L1315	1-414-856-11	INDUCTOR 10UH	
L1317	1-414-856-11	INDUCTOR 10UH	
L1404	1-412-537-31	INDUCTOR 100UH	
L3202	1-414-856-11	INDUCTOR 10UH	
		<TRANSISTOR>	
Q1316	8-729-216-22	2SA1162-G	
Q1317	8-729-230-49	2SC2712-YG	
Q1318	8-729-230-49	2SC2712-YG	
Q1323	8-729-230-49	2SC2712-YG	
Q1324	8-729-230-49	2SC2712-YG	
Q1365	8-729-230-49	2SC2712-YG	
Q1372	8-729-230-49	2SC2712-YG	
Q1402	8-729-216-22	2SA1162-G	
Q1403	8-729-230-49	2SC2712-YG	
Q1404	8-729-230-49	2SC2712-YG	
Q1408	8-729-230-49	2SC2712-YG	
Q1409	8-729-230-49	2SC2712-YG	
Q3201	8-729-224-62	2SK246-GR	
Q3202	8-729-230-49	2SC2712-YG	
Q3203	8-729-230-49	2SC2712-YG	
Q3204	8-729-224-62	2SK246-GR	
Q6201	8-729-421-19	UN2213	
Q6203	8-729-421-19	UN2213	
Q6204	8-729-421-19	UN2213	
Q6208	8-729-421-19	UN2213	
		<RESISTOR>	
R1301	1-216-041-00	RES-CHIP 470 5% 1/10W	
R1318	1-216-033-00	RES-CHIP 220 5% 1/10W	
R1320	1-216-081-00	RES-CHIP 22K 5% 1/10W	
R1343	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R1344	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1345	1-216-041-00	RES-CHIP 470 5% 1/10W	
R1346	1-216-041-00	RES-CHIP 470 5% 1/10W	
R1347	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1350	1-216-085-91	RES-CHIP 33K 5% 1/10W	
R1359	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1360	1-216-041-00	RES-CHIP 470 5% 1/10W	
R1361	1-216-041-00	RES-CHIP 470 5% 1/10W	
R1362	1-216-055-00	RES-CHIP 1.8K 5% 1/10W	
R1363	1-216-033-00	RES-CHIP 220 5% 1/10W	
R1364	1-216-089-91	RES-CHIP 47K 5% 1/10W	
R1365	1-216-081-00	RES-CHIP 22K 5% 1/10W	
R1366	1-216-295-91	SHORT CHIP 0	
R1368	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R1369	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1370	1-216-041-00	RES-CHIP 470 5% 1/10W	
R1371	1-216-039-00	RES-CHIP 390 5% 1/10W	
R1372	1-216-041-00	RES-CHIP 470 5% 1/10W	
R1397	1-216-045-00	RES-CHIP 680 5% 1/10W	
R1400	1-216-105-91	RES-CHIP 220K 5% 1/10W	
R1403	1-216-033-00	RES-CHIP 220 5% 1/10W	
R1404	1-216-295-91	SHORT CHIP 0	
R1406	1-216-013-00	RES-CHIP 33 5% 1/10W	
R1407	1-216-033-00	RES-CHIP 220 5% 1/10W	
R1408	1-216-031-00	RES-CHIP 180 5% 1/10W	
R1409	1-216-105-91	RES-CHIP 220K 5% 1/10W	
R1410	1-216-105-91	RES-CHIP 220K 5% 1/10W	
R1411	1-216-089-91	RES-CHIP 47K 5% 1/10W	
R1412	1-216-089-91	RES-CHIP 47K 5% 1/10W	
R1413	1-216-105-91	RES-CHIP 220K 5% 1/10W	
R1414	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1417	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1418	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1421	1-216-057-00	RES-CHIP 2.2K 5% 1/10W	
R1424	1-216-073-91	RES-CHIP 10K 5% 1/10W	
R1425	1-216-047-91	RES-CHIP 820 5% 1/10W	
R1426	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1427	1-216-063-91	RES-CHIP 3.9K 5% 1/10W	
R1428	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1429	1-216-089-91	RES-CHIP 47K 5% 1/10W	
R1430	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1431	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1432	1-216-041-00	RES-CHIP 470 5% 1/10W	
R1433	1-216-025-11	RES-CHIP 100 5% 1/10W	
R1435	1-216-022-00	RES-CHIP 75 5% 1/10W	
R1436	1-216-025-11	RES-CHIP 100 5% 1/10W	

B10 (EXCEPT KVAR25M66)

REF NO.	PART NO.	DESCRIPTION		REMARK	
R1437	1-216-022-00	RES-CHIP	75	5%	1/10W
R1438	1-216-025-11	RES-CHIP	100	5%	1/10W
R1439	1-216-017-91	RES-CHIP	47	5%	1/10W
R1441	1-216-025-11	RES-CHIP	100	5%	1/10W
R1442	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1443	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1444	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1445	1-216-025-11	RES-CHIP	100	5%	1/10W
R1446	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1447	1-216-025-11	RES-CHIP	100	5%	1/10W
R1448	1-216-043-91	RES-CHIP	560	5%	1/10W
R1449	1-249-429-11	CARBON	10K	5%	1/4W
R1450	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1451	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1452	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1453	1-216-025-11	RES-CHIP	100	5%	1/10W
R1454	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1455	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1456	1-216-113-00	RES-CHIP	470K	5%	1/10W
R1457	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1458	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1459	1-216-025-11	RES-CHIP	100	5%	1/10W
R1460	1-216-033-00	RES-CHIP	220	5%	1/10W
R1461	1-216-025-11	RES-CHIP	100	5%	1/10W
R1463	1-249-429-11	CARBON	10K	5%	1/4W
R1464	1-216-113-00	RES-CHIP	470K	5%	1/10W
R1465	1-216-113-00	RES-CHIP	470K	5%	1/10W
R1466	1-216-033-00	RES-CHIP	220	5%	1/10W
R1467	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R1468	1-216-093-91	RES-CHIP	68K	5%	1/10W
R1469	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1470	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1471	1-216-022-00	RES-CHIP	75	5%	1/10W
R1472	1-216-033-00	RES-CHIP	220	5%	1/10W
R1473	1-216-033-00	RES-CHIP	220	5%	1/10W
R1475	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1476	1-216-089-91	RES-CHIP	47K	5%	1/10W
R1477	1-216-047-91	RES-CHIP	820	5%	1/10W
R1478	1-216-051-00	RES-CHIP	1.2K	5%	1/10W
R1479	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1480	1-216-105-91	RES-CHIP	220K	5%	1/10W
R1481	1-216-022-00	RES-CHIP	75	5%	1/10W
R1483	1-216-025-11	RES-CHIP	100	5%	1/10W
R1484	1-216-025-11	RES-CHIP	100	5%	1/10W
R1485	1-216-025-11	RES-CHIP	100	5%	1/10W
R1486	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R1487	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1488	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1489	1-216-022-00	RES-CHIP	75	5%	1/10W
R1490	1-216-025-11	RES-CHIP	100	5%	1/10W
R1491	1-216-025-11	RES-CHIP	100	5%	1/10W
R1492	1-216-021-00	RES-CHIP	68	5%	1/10W
R1493	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R1496	1-216-041-00	RES-CHIP	470	5%	1/10W
R1497	1-216-041-00	RES-CHIP	470	5%	1/10W
R1498	1-216-025-11	RES-CHIP	100	5%	1/10W
R1499	1-216-025-11	RES-CHIP	100	5%	1/10W
R1500	1-216-025-11	RES-CHIP	100	5%	1/10W
R1501	1-216-045-00	RES-CHIP	680	5%	1/10W
R1503	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1504	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1505	1-216-022-00	RES-CHIP	75	5%	1/10W
R1506	1-216-033-00	RES-CHIP	220	5%	1/10W
R1507	1-216-025-11	RES-CHIP	100	5%	1/10W
R3200	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3201	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3202	1-216-097-11	RES-CHIP	100K	5%	1/10W
R3203	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3204	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R3205	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R3206	1-216-039-00	RES-CHIP	390	5%	1/10W
R3207	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3219	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3220	1-216-097-11	RES-CHIP	100K	5%	1/10W
R3221	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3222	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3223	1-216-045-00	RES-CHIP	680	5%	1/10W
R3224	1-216-101-00	RES-CHIP	150K	5%	1/10W
R3229	1-216-025-11	RES-CHIP	100	5%	1/10W
R3230	1-216-025-11	RES-CHIP	100	5%	1/10W
R3231	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3232	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3233	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R3234	1-216-039-00	RES-CHIP	390	5%	1/10W
R3235	1-216-101-00	RES-CHIP	150K	5%	1/10W
R3236	1-216-113-00	RES-CHIP	470K	5%	1/10W
R3237	1-216-045-00	RES-CHIP	680	5%	1/10W
R3238	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3239	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3240	1-216-081-00	RES-CHIP	22K	5%	1/10W
R3241	1-216-093-91	RES-CHIP	68K	5%	1/10W
R3242	1-216-081-00	RES-CHIP	22K	5%	1/10W
R3245	1-216-097-11	RES-CHIP	100K	5%	1/10W
R3246	1-216-045-00	RES-CHIP	680	5%	1/10W
R3251	1-216-101-00	RES-CHIP	150K	5%	1/10W
R3252	1-216-113-00	RES-CHIP	470K	5%	1/10W
R3253	1-216-045-00	RES-CHIP	680	5%	1/10W
R3254	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3255	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3256	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3257	1-216-097-11	RES-CHIP	100K	5%	1/10W
R3258	1-216-121-11	RES-CHIP	1M	5%	1/10W
R3259	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R3262	1-216-101-00	RES-CHIP	150K	5%	1/10W
R3263	1-216-093-91	RES-CHIP	68K	5%	1/10W
R3267	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3268	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3269	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R3271	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R3273	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R3274	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R3301	1-216-079-00	RES-CHIP	18K	5%	1/10W
R3302	1-216-081-00	RES-CHIP	22K	5%	1/10W
R3303	1-216-079-00	RES-CHIP	18K	5%	1/10W
R3304	1-216-077-91	RES-CHIP	15K	5%	1/10W
R3305	1-216-077-91	RES-CHIP	15K	5%	1/10W
R3306	1-216-081-00	RES-CHIP	22K	5%	1/10W
R3307	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3308	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3309	1-216-025-11	RES-CHIP	100	5%	1/10W
R3310	1-216-025-11	RES-CHIP	100	5%	1/10W
R3311	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3312	1-216-073-91	RES-CHIP	10K	5%	1/10W

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

B10 (EXCEPT KV-AR25M66) C6

REF NO.	PART NO.	DESCRIPTION		REMARK	
R3313	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3314	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3315	1-216-295-91	SHORT CHIP	0		
R3318	1-216-295-91	SHORT CHIP	0		
R6201	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6202	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6203	1-216-295-91	SHORT CHIP	0		
R6209	1-216-049-11	RES-CHIP	1K	5%	1/10W
R6219	1-216-089-91	RES-CHIP	47K	5%	1/10W
R6245	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6246	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6254	1-216-021-00	RES-CHIP	68	5%	1/10W
R6255	1-216-308-00	RES-CHIP	4.7	5%	1/10W
R6258	1-216-021-00	RES-CHIP	68	5%	1/10W
R6259	1-216-308-00	RES-CHIP	4.7	5%	1/10W
R6278	1-216-295-91	SHORT CHIP	0		

****

*	A-1401-808-A	C6 BOARD MOUNTED (KV-AR25M60)
*	A-1401-671-A	C6 BOARD MOUNTED (KV-AR25M66)
*	A-1401-971-A	C6 BOARD MOUNTED (KV-AR25M80/AR25N90)
		**********
	4-382-854-11	SCREW (M3X10), P, SW (+)

<CAPACITOR>

C701	1-115-350-51	CERAMIC	0.0047UF		2KV
C702	1-102-074-00	CERAMIC	0.001UF	10.00%	50V
C708	1-102-114-00	CERAMIC	470PF	10.00%	50V
C709	1-102-114-00	CERAMIC	470PF	10.00%	50V
C710	1-102-114-00	CERAMIC	470PF	10.00%	50V
C712	1-102-115-00	CERAMIC	560PF	10.00%	50V
C713	1-102-112-00	CERAMIC	330PF	10.00%	50V
C714	1-102-113-00	CERAMIC	390PF	10.00%	50V
C716	1-126-933-11	ELECT	100UF	20.00%	16V
C717	1-107-651-11	ELECT	4.7UF	20.00%	250V
C1800	1-126-964-11	ELECT	10UF	20.00%	50V
C1803	1-126-964-11	ELECT	10UF	20.00%	50V
C1804	1-126-964-11	ELECT	10UF	20.00%	50V
C1809	1-126-942-61	ELECT	1000UF	20.00%	25V

<CONNECTOR>

CN700		1-695-915-11	TAB (CONTACT)
CN702		1-695-915-11	TAB (CONTACT)
CN703	*	1-564-509-11	PLUG, CONNECTOR 6P
CN704		1-695-915-11	TAB (CONTACT)
CN712	*	1-564-507-11	PLUG, CONNECTOR 4P
CN1801	*	1-564-509-11	PLUG, CONNECTOR 6P
CN1802	*	1-564-506-11	PLUG, CONNECTOR 3P

<DIODE>

D701	8-719-911-19	1SS119-25
D702	8-719-911-19	1SS119-25
D703	8-719-911-19	1SS119-25
D704	8-719-911-19	1SS119-25
D705	8-719-911-19	1SS119-25
D706	8-719-911-19	1SS119-25
D707	8-719-911-19	1SS119-25
D708	8-719-911-19	1SS119-25
D709	8-719-911-19	1SS119-25
D710	8-719-911-19	1SS119-25
D711	8-719-911-19	1SS119-25
D712	8-719-911-19	1SS119-25
D716	8-719-911-19	1SS119-25
D717	8-719-070-16	NNCD9.1A-T1 (KV-AR25M60)
D717	8-719-929-15	HZS9.1NB2 (EXCEPT KV-AR25M60)
D1803	8-719-911-19	1SS119-25
D1804	8-719-911-19	1SS119-25
D1808	8-719-908-03	GP08D

<IC>

IC1800	8-759-822-38	LA6510

<JACK>

J701	⚠	1-540-071-22	SOCKET, CRT

<COIL>

L701	1-410-667-31	INDUCTOR	22UH		
L703	1-414-187-11	INDUCTOR	47UH		
L705	1-414-186-31	INDUCTOR	33UH		
L707	1-414-187-11	INDUCTOR	47UH		

<TRANSISTOR>

Q701	8-729-326-11	2SC2611
Q702	8-729-326-11	2SC2611
Q703	8-729-326-11	2SC2611
Q704	8-729-326-11	2SC2611
Q705	8-729-326-11	2SC2611
Q706	8-729-326-11	2SC2611
Q707	8-729-200-17	2SA1091-O
Q708	8-729-200-17	2SA1091-O
Q709	8-729-200-17	2SA1091-O
Q710	8-729-119-78	2SC2785-HFE
Q711	8-729-119-78	2SC2785-HFE
Q712	8-729-119-78	2SC2785-HFE
Q714	8-729-255-12	2SC2551-O
Q1800	8-729-119-76	2SA1175-HFE
Q1802	8-729-119-78	2SC2785-HFE

<RESISTOR>

R701	1-219-752-11	METAL	100K	5%	1/2W
R705	1-216-392-11	METAL OXIDE	1.8	5%	3W
R710	1-215-923-00	METAL OXIDE	10K	5%	3W
R711	1-260-330-11	CARBON	1.5K	5%	1/2W
R712	1-215-923-00	METAL OXIDE	10K	5%	3W
R713	1-260-330-11	CARBON	1.5K	5%	1/2W
R714	1-215-923-00	METAL OXIDE	10K	5%	3W
R715	1-260-330-11	CARBON	1.5K	5%	1/2W
R716	1-249-899-11	CARBON	100	5%	1/4W
R717	1-249-899-11	CARBON	100	5%	1/4W
R718	1-249-899-11	CARBON	100	5%	1/4W
R719	1-215-469-00	METAL	100K	1%	1/4W
R720	1-249-923-11	CARBON	1K	5%	1/4W

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

C6 F H1

REF NO.	PART NO.	DESCRIPTION			REMARK
R721	1-215-473-00	METAL (KV-AR25M66)	150K	1%	1/4W
R722	1-249-923-11	CARBON	1K	5%	1/4W
R723	1-215-485-00	METAL (KV-AR25M60/AR25M80/AR25N90)	470K	1%	1/4W
R723	1-215-469-00	METAL (KV-AR25M66)	100K	1%	1/4W
R724	1-249-923-11	CARBON	1K	5%	1/4W
R725	1-249-424-11	CARBON	3.9K	5%	1/4W
R726	1-249-424-11	CARBON	3.9K	5%	1/4W
R727	1-249-424-11	CARBON	3.9K	5%	1/4W
R728	1-249-408-11	CARBON	180	5%	1/4W
R729	1-249-408-11	CARBON	180	5%	1/4W
R730	1-249-408-11	CARBON	180	5%	1/4W
R731	1-249-401-11	CARBON	47	5%	1/4W
R732	1-249-401-11	CARBON	47	5%	1/4W
R733	1-249-401-11	CARBON	47	5%	1/4W
R734	1-219-743-11	METAL	100	5%	1/2W
R738	1-247-807-31	CARBON	100	5%	1/4W
R739	1-247-807-31	CARBON	100	5%	1/4W
R740	1-247-807-31	CARBON	100	5%	1/4W
R747	1-215-926-00	METAL OXIDE	33K	5%	3W
R749	1-215-927-00	METAL OXIDE	47K	5%	3W
R751	1-216-490-11	METAL OXIDE	39K	5%	3W
R753	1-249-429-11	CARBON	10K	5%	1/4W
R755	1-249-427-11	CARBON	6.8K	5%	1/4W
R756	1-249-427-11	CARBON	6.8K	5%	1/4W
R757	1-249-427-11	CARBON	6.8K	5%	1/4W
R758	1-249-419-11	CARBON	1.5K	5%	1/4W
R759	1-249-419-11	CARBON	1.5K	5%	1/4W
R760	1-249-419-11	CARBON	1.5K	5%	1/4W
R1800	1-249-417-11	CARBON	1K	5%	1/4W
R1801	1-249-426-11	CARBON	5.6K	5%	1/4W
R1802	1-249-387-11	CARBON	3.3	5%	1/4W
R1803	1-249-387-11	CARBON	3.3	5%	1/4W
R1805	1-249-429-11	CARBON	10K	5%	1/4W
R1806	1-249-425-11	CARBON	4.7K	5%	1/4W
R1808	1-249-425-11	CARBON	4.7K	5%	1/4W
R1809	1-249-435-11	CARBON	33K	5%	1/4W
R1810	1-249-435-11	CARBON	33K	5%	1/4W
R1811	1-249-435-11	CARBON	33K	5%	1/4W
R1812	1-249-435-11	CARBON	33K	5%	1/4W
R1821	1-249-435-11	CARBON	33K	5%	1/4W
R1822	1-249-435-11	CARBON	33K	5%	1/4W
R1823	1-249-426-11	CARBON	5.6K	5%	1/4W
R1824	1-249-435-11	CARBON	33K	5%	1/4W
R1825	1-247-843-11	CARBON	3.3K	5%	1/4W

<VARIABLE RESISTOR>

RV702	1-241-656-11	RES, ADJ, METAL FILM 110M
RV1801	1-238-019-11	RES, ADJ, CARBON 47K

****

* A-1401-345-A F BOARD MOUNTED (KV-AR25M60)
* A-1241-493-A F BOARD MOUNTED (KV-AR25M66/AR25M80/AR25N90(PHILIPPINES))
* A-1241-456-A F BOARD MOUNTED (KV-AR25N90(TAIWAN))
****

1-533-223-11 FUSE HOLDER 0A 0V

REF NO.	PART NO.	DESCRIPTION			REMARK
		<CAPACITOR>			
C654	⚠ 1-117-703-51	CERAMIC	0.0047UF	99%	250V
C4601	⚠ 1-104-708-11	MYLAR (KV-AR25M60/AR25N90(TAIWAN))	0.47UF	20.00%	250V
C4602	⚠ 1-109-835-11	MYLAR (KV-AR25M60/AR25N90(TAIWAN))	0.68UF	20.00%	250V
		<CONNECTOR>			
CN4601	* 1-580-843-11	PIN, CONNECTOR (POWER)			
CN4602	* 1-580-843-11	PIN, CONNECTOR (POWER)			
CN4603	1-695-915-11	TAB (CONTACT)			
		<FUSE>			
F4601	⚠ 1-576-334-11	FUSE	5A	250V 5A/	
		<RESISTOR>			
R4601	⚠ 1-202-885-91	METAL	1M	5%	1/2W
		<TRANSFORMER>			
T4601	1-429-505-11	COIL, LINE FILTER (KV-AR25M60)			
T4601	1-424-505-11	TRANSFORMER, LINE FILTER (KV-AR25N90(TAIWAN))			
T4602	1-431-182-11	COIL, LINE FILTER (KV-AR25M60)			
T4602	1-431-182-11	TRANSFORMER, LINE FILTER (KV-AR25N90(TAIWAN))			

****

* A-1401-322-A H1 BOARD MOUNTED (KV-AR25M60)
* A-1400-972-A H1 BOARD MOUNTED (KV-AR25M66/AR25M80/AR25N90)
****

		<CAPACITOR>			
C3900	1-136-153-00	FILM	0.01UF	5.00%	50V
C3902	1-136-153-00	FILM	0.01UF	5.00%	50V
C3904	1-126-947-11	ELECT	47UF	20.00%	25V
C3905	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3906	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3910	1-126-947-11	ELECT	47UF	20.00%	16V
C3911	1-126-947-11	ELECT	47UF	20.00%	16V
C3913	1-126-960-11	ELECT	1UF	20.00%	50V
		<CONNECTOR>			
CN3901	* 1-564-507-11	PLUG, CONNECTOR 4P			
CN3902	* 1-564-509-11	PLUG, CONNECTOR 6P			
CN3904	* 1-564-512-11	PLUG, CONNECTOR 9P			
CN3905	* 1-564-512-11	PLUG, CONNECTOR 9P			
CN3907	* 1-564-521-11	PLUG, CONNECTOR 6P			
		<DIODE>			
D3900	8-719-070-16	NNCD9.1A-T1			
D3901	8-719-070-16	NNCD9.1A-T1			
D3905	8-719-070-16	NNCD9.1A-T1			

H1 H2 J

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

REF NO.	PART NO.	DESCRIPTION			REMARK
D3907	8-719-070-16	NNCD9.1A-T1			
D3908	8-719-070-16	NNCD9.1A-T1			
		<JACK>			
J3901	1-750-264-11	JACK			
J3902	1-784-646-11	TERMINAL, S			
J3903	1-770-329-13	JACK, PIN 3P			
		<COIL>			
L3901	1-414-183-41	INDUCTOR	10UH		
L3902	1-414-183-41	INDUCTOR	10UH		
		<TRANSISTOR>			
Q3901	8-729-030-02	DTC144ESA			
Q3902	8-729-030-02	DTC144ESA			
		<RESISTOR>			
R3900	1-249-411-11	CARBON	330	5%	1/4W
R3901	1-249-411-11	CARBON	330	5%	1/4W
R3902	1-247-804-11	CARBON	75	5%	1/4W
R3904	1-249-429-11	CARBON	10K	5%	1/4W
R3905	1-249-429-11	CARBON	10K	5%	1/4W
R3907	1-249-426-11	CARBON	5.6K	5%	1/4W
R3908	1-249-413-11	CARBON	470	5%	1/4W
R3909	1-249-417-11	CARBON	1K	5%	1/4W
R3910	1-249-420-11	CARBON	1.8K	5%	1/4W
R3911	1-249-411-11	CARBON	330	5%	1/4W
R3912	1-247-843-11	CARBON	3.3K	5%	1/4W
R3913	1-249-429-11	CARBON	10K	5%	1/4W
R3914	1-249-411-11	CARBON	330	5%	1/4W
R3915	1-249-429-11	CARBON	10K	5%	1/4W
R3916	1-249-401-11	CARBON	47	5%	1/4W
R3917	1-247-804-11	CARBON	75	5%	1/4W
R3918	1-247-807-31	CARBON	100	5%	1/4W
R3919	1-249-409-11	CARBON	220	5%	1/4W
R3920	1-247-807-31	CARBON	100	5%	1/4W
R3921	1-247-807-31	CARBON	100	5%	1/4W
R3922	1-249-421-11	CARBON	2.2K	5%	1/4W
		<SWITCH>			
S3902	1-692-431-21	SWITCH, TACTILE			
S3903	1-692-431-21	SWITCH, TACTILE			
S3904	1-692-431-21	SWITCH, TACTILE			
S3905	1-692-431-21	SWITCH, TACTILE			
S3906	1-692-431-21	SWITCH, TACTILE			
S3907	1-692-431-21	SWITCH, TACTILE			
S3908	1-692-431-21	SWITCH, TACTILE			

****

* A-1401-323-A H2 BOARD MOUNTED (KV-AR25M60)
* A-1400-973-A H2 BOARD MOUNTED (KV-AR25M66/AR25M80/AR25N90)
****

* 4-055-304-11 HOLDER, LED

REF NO.	PART NO.	DESCRIPTION			REMARK
		<CAPACITOR>			
C3912	1-102-114-00	CERAMIC	470PF	10.00%	50V
		<CONNECTOR>			
CN3601 *	1-580-844-11	PIN, CONNECTOR (POWER)			
CN3602 *	1-580-844-11	PIN, CONNECTOR (POWER)			
CN3603 *	1-564-521-11	PLUG, CONNECTOR 6P			
		<DIODE>			
D3906	8-719-083-18	DIODE SPB-25MVWF			
		<IC>			
IC3901	6-600-129-01	IC RPM7140-H5			
		<SWITCH>			
S3601 ⚠	1-571-433-31	SWITCH, PUSH (AC POWER)			

****

* A-1401-328-A J BOARD MOUNTED (KV-AR25M60)
* A-1400-975-A J BOARD MOUNTED (KV-AR25M66/AR25M80/AR25N90)
****

		<CAPACITOR>			
C2410	1-126-967-11	ELECT	47UF	20.00%	50V
C2411	1-126-967-11	ELECT	47UF	20.00%	50V
C2412	1-126-967-11	ELECT	47UF	20.00%	50V
C2413	1-102-112-00	CERAMIC	330PF	10.00%	50V
C2414	1-102-112-00	CERAMIC	330PF	10.00%	50V
C2418	1-126-960-11	ELECT	1UF	20.00%	50V
C2419	1-126-960-11	ELECT	1UF	20.00%	50V
		<CONNECTOR>			
CN2410 *	1-564-523-11	PLUG, CONNECTOR 8P			
		<DIODE>			
D2410	8-719-070-16	NNCD9.1A-T1			
D2411	8-719-070-16	NNCD9.1A-T1			
D2412	8-719-070-16	NNCD9.1A-T1			
D2414	8-719-070-16	NNCD9.1A-T1			
D2415	8-719-070-16	NNCD9.1A-T1			
		<JACK>			
J2410	1-784-623-11	BLOCK, PIN JACK 5P			
		<RESISTOR>			
R2410	1-247-804-11	CARBON	75	5%	1/4W
R2411	1-247-804-11	CARBON	75	5%	1/4W
R2412	1-247-804-11	CARBON	75	5%	1/4W
R2414	1-247-887-00	CARBON	220K	5%	1/4W
R2415	1-247-807-31	CARBON	100	5%	1/4W

J P5 (KV-AR25M66 ONLY)

REF NO.	PART NO.	DESCRIPTION			REMARK
R2417	1-247-887-00	CARBON	220K	5%	1/4W
R2418	1-247-807-31	CARBON	100	5%	1/4W
R2419	1-249-409-11	CARBON	220	5%	1/4W
R2420	1-249-409-11	CARBON	220	5%	1/4W
R2421	1-249-409-11	CARBON	220	5%	1/4W

****

* A-1401-241-A P5 BOARD MOUNTED (KV-AR25M66 ONLY)
****

<CAPACITOR>

C4002	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4003	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C4004	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4005	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4006	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4007	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4008	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4009	1-163-227-11	CERAMIC CHIP	10PF	0.50PF	50V
C4010	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4011	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4012	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4013	1-163-227-11	CERAMIC CHIP	10PF	0.50PF	50V
C4014	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4015	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4016	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4017	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4018	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4019	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4020	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4021	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4022	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4023	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4024	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4025	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4027	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C4028	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4029	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4030	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C4031	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C4032	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C4034	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4035	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4036	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4101	1-126-206-11	ELECT CHIP	100UF	20.00%	6.3V
C4102	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C4103	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4104	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4105	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4107	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4108	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4109	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4110	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4113	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4114	1-126-396-11	ELECT CHIP	47UF	20.00%	16V
C4115	1-126-396-11	ELECT CHIP	47UF	20.00%	16V
C4116	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4117	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4118	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4121	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4122	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V

REF NO.	PART NO.	DESCRIPTION			REMARK
C4123	1-164-346-11	CERAMIC CHIP	1UF		16V
C4124	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4125	1-164-346-11	CERAMIC CHIP	1UF		16V
C4126	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C4127	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4129	1-126-601-11	ELECT CHIP	2.2UF	20.00%	50V
C4130	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C4131	1-163-227-11	CERAMIC CHIP	10PF	0.50PF	50V
C4132	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4135	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4139	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4140	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4141	1-164-346-11	CERAMIC CHIP	1UF		16V
C4142	1-164-346-11	CERAMIC CHIP	1UF		16V
C4143	1-164-346-11	CERAMIC CHIP	1UF		16V
C4144	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4153	1-126-398-11	ELECT CHIP	4.7UF	20.00%	35V
C4154	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4155	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4156	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4157	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C4158	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C4159	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C4160	1-164-346-11	CERAMIC CHIP	1UF		16V
C4164	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4168	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4169	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4170	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4172	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C4173	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C4175	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C4179	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4180	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4181	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4189	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4190	1-126-396-11	ELECT CHIP	47UF	20.00%	16V
C4191	1-163-243-11	CERAMIC CHIP	47PF	5.00%	50V
C4193	1-124-778-00	ELECT CHIP	22UF	20.00%	6.3V
C4194	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4204	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4205	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4206	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4207	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4208	1-126-392-11	ELECT CHIP	100UF	20.00%	6.3V
C4209	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4210	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4211	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4212	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4213	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4214	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4218	1-126-398-11	ELECT CHIP	4.7UF	20.00%	35V
C4219	1-126-398-11	ELECT CHIP	4.7UF	20.00%	35V
C4220	1-126-398-11	ELECT CHIP	4.7UF	20.00%	35V
C4221	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C4222	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4223	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4224	1-164-182-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C4225	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4226	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4227	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4228	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4229	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V

P5 (KV-AR25M66 ONLY)

REF NO.	PART NO.	DESCRIPTION		REMARK	
C4230	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4231	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4232	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4233	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4234	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4235	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4236	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4237	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4238	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4239	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4240	1-163-007-11	CERAMIC CHIP	680PF	10.00%	50V
C4241	1-126-603-11	ELECT CHIP	4.7UF	20.00%	35V
C4242	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4243	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C4244	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4245	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4246	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4248	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4249	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4255	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4256	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4257	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4258	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4259	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4260	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4262	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4263	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4264	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4265	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4301	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4302	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4303	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C4304	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4305	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4306	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4307	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4308	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4309	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4310	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4311	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4401	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4402	1-126-206-11	ELECT CHIP	100UF	20.00%	6.3V
C4403	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4404	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4405	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4406	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4407	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4408	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4409	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4410	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4411	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C4412	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C4413	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C4414	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4415	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4416	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4417	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4418	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4419	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4420	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4421	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4422	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4423	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4424	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4425	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4426	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C4427	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4428	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4429	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4430	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4431	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4432	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4433	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4434	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4438	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4439	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4442	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4444	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4445	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4446	1-126-206-11	ELECT CHIP	100UF	20.00%	6.3V
C4448	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4449	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4450	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C4451	1-126-396-11	ELECT CHIP	47UF	20.00%	16V
C4452	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4453	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4454	1-126-206-11	ELECT CHIP	100UF	20.00%	6.3V
C4455	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4465	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4466	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4467	1-126-204-11	ELECT CHIP	47UF	20.00%	16V

<CONNECTOR>

CN4101 *	1-564-523-11	PLUG, CONNECTOR 8P	
CN4102 *	1-564-520-11	PLUG, CONNECTOR 5P	
CN4103 *	1-564-518-11	PLUG, CONNECTOR 3P	
CN4104	1-764-811-11	CONNECTOR, BOARD TO BOARD 10P	
CN4105	1-764-811-11	CONNECTOR, BOARD TO BOARD 10P	
CN4106 *	1-564-519-11	PLUG, CONNECTOR 4P	
CN4108 *	1-564-518-11	PLUG, CONNECTOR 3P	

<DIODE>

D4003	8-719-069-60	UDZSTE-179.1B	
D4102	8-719-404-50	MA111-TX	
D4400	8-719-404-50	MA111-TX	
D4403	8-719-404-50	MA111-TX	
D4404	8-719-404-50	MA111-TX	
D4405	8-719-404-50	MA111-TX	

<FERRITE BEAD>

FB4401	1-234-330-21	FILTER, EMI	

<FILTER>

FL4101	1-234-177-21	FERRITE	0UH
FL4102	1-234-177-21	FERRITE	0UH
FL4103	1-234-177-21	FERRITE	0UH
FL4104	1-234-177-21	FERRITE	0UH
FL4105	1-234-177-21	FERRITE	0UH
FL4106	1-234-177-21	FERRITE	0UH
FL4107	1-234-177-21	FERRITE	0UH
FL4108	1-234-177-21	FERRITE	0UH

P5 (KV-AR25M66 ONLY)

REF NO.	PART NO.	DESCRIPTION		REMARK
FL4109	1-234-177-21	FERRITE	0UH	
FL4110	1-234-177-21	FERRITE	0UH	
FL4111	1-234-177-21	FERRITE	0UH	
FL4112	1-234-177-21	FERRITE	0UH	
FL4201	1-233-877-11	FILTER, LOW PASS		
FL4202	1-233-504-21	FILTER, LOW PASS		
FL4203	1-233-504-21	FILTER, LOW PASS		
FL4204	1-234-177-21	FERRITE	0UH	
FL4205	1-234-177-21	FERRITE	0UH	
FL4206	1-234-177-21	FERRITE	0UH	
FL4207	1-234-177-21	FERRITE	0UH	
FL4209	1-234-177-21	FERRITE	0UH	
FL4301	1-234-177-21	FERRITE	0UH	
FL4401	1-234-177-21	FERRITE	0UH	
FL4402	1-234-177-21	FERRITE	0UH	
FL4403	1-234-177-21	FERRITE	0UH	
FL4404	1-234-177-21	FERRITE	0UH	
FL4405	1-233-877-11	FILTER, LOW PASS		
FL4406	1-233-504-21	FILTER, LOW PASS		
FL4407	1-233-504-21	FILTER, LOW PASS		
FL4409	1-234-177-21	FERRITE	0UH	
		<IC>		
IC4101	8-759-460-72	BA033FP-E2		
IC4102	8-759-666-90	IC TDA9181T		
IC4103	8-759-830-24	SDA9588XB23		
IC4104	8-752-099-05	IC CXA2163AQ-T6		
IC4105	8-759-485-79	TC7SET08FU(TE85L		
IC4106	8-759-576-72	LF50CDT-TR		
IC4201	8-759-460-72	BA033FP-E2		
IC4202	8-759-427-92	PST9126NL		
IC4203	6-702-548-01	IC CXD9694Q		
IC4301	6-702-550-01	IC CXD9695Q		
IC4401	8-759-832-05	IC BA18BC0FP-E2		
IC4402	6-702-549-01	IC CXD9696Q		
IC4403	8-759-669-78	TLC2933IPWR-12		
IC4404	8-759-058-56	TC7S02FU(TE85R)		
IC4405	8-759-576-72	LF50CDT-TR		
		<CHIP CONDUCTOR>		
JR5001	1-216-295-91	SHORT CHIP	0	
JR5002	1-216-295-91	SHORT CHIP	0	
JR5003	1-216-295-91	SHORT CHIP	0	
		<COIL>		
L4101	1-412-029-11	INDUCTOR	10UH	
L4104	1-412-029-11	INDUCTOR	10UH	
L4105	1-412-029-11	INDUCTOR	10UH	
L4106	1-412-029-11	INDUCTOR	10UH	
L4107	1-412-029-11	INDUCTOR	10UH	
L4108	1-412-030-11	INDUCTOR	22UH	
L4201	1-412-031-11	INDUCTOR	47UH	
L4202	1-412-031-11	INDUCTOR	47UH	
L4203	1-412-031-11	INDUCTOR	47UH	
L4204	1-412-031-11	INDUCTOR	47UH	
L4205	1-412-029-11	INDUCTOR	10UH	
L4301	1-412-029-11	INDUCTOR	10UH	
L4401	1-412-029-11	INDUCTOR	10UH	
L4402	1-412-031-11	INDUCTOR	47UH	
L4403	1-412-031-11	INDUCTOR	47UH	
L4404	1-412-031-11	INDUCTOR	47UH	
L4406	1-412-029-11	INDUCTOR	10UH	
L4407	1-412-029-11	INDUCTOR	10UH	
L4408	1-412-029-11	INDUCTOR	10UH	
		<TRANSISTOR>		
Q4101	8-729-120-28	2SC1623-L5L6		
Q4102	8-729-026-49	2SA1037AK-T146-R		
Q4106	8-729-120-28	2SC1623-L5L6		
Q4107	8-729-026-49	2SA1037AK-T146-R		
Q4108	1-801-806-11	TR DTC144EKA		
Q4112	8-729-120-28	2SC1623-L5L6		
Q4113	8-729-026-49	2SA1037AK-T146-R		
Q4114	8-729-026-49	2SA1037AK-T146-R		
Q4115	8-729-026-49	2SA1037AK-T146-R		
Q4116	8-729-026-49	2SA1037AK-T146-R		
Q4117	8-729-026-49	2SA1037AK-T146-R		
Q4118	8-729-120-28	2SC1623-L5L6		
Q4119	8-729-026-49	2SA1037AK-T146-R		
Q4120	8-729-026-49	2SA1037AK-T146-R		
Q4121	8-729-026-49	2SA1037AK-T146-R		
Q4122	8-729-120-28	2SC1623-L5L6		
Q4123	8-729-120-28	2SC1623-L5L6		
Q4124	8-729-120-28	2SC1623-L5L6		
Q4125	8-729-026-49	2SA1037AK-T146-R		
Q4126	8-729-026-49	2SA1037AK-T146-R		
Q4127	8-729-026-49	2SA1037AK-T146-R		
Q4128	8-729-026-49	2SA1037AK-T146-R		
Q4129	8-729-120-28	2SC1623-L5L6		
Q4130	8-729-120-28	2SC1623-L5L6		
Q4131	8-729-120-28	2SC1623-L5L6		
Q4132	8-729-026-49	2SA1037AK-T146-R		
Q4133	8-729-026-49	2SA1037AK-T146-R		
Q4134	8-729-026-49	2SA1037AK-T146-R		
Q4135	8-729-120-28	2SC1623-L5L6		
Q4136	8-729-120-28	2SC1623-L5L6		
Q4137	8-729-120-28	2SC1623-L5L6		
Q4138	8-729-026-49	2SA1037AK-T146-R		
Q4139	8-729-026-49	2SA1037AK-T146-R		
Q4140	8-729-026-49	2SA1037AK-T146-R		
Q4141	8-729-120-28	2SC1623-L5L6		
Q4142	8-729-120-28	2SC1623-L5L6		
Q4143	8-729-120-28	2SC1623-L5L6		
Q4146	8-729-026-49	2SA1037AK-T146-R		
Q4201	8-729-120-28	2SC1623-L5L6		
Q4202	8-729-120-28	2SC1623-L5L6		
Q4203	8-729-120-28	2SC1623-L5L6		
Q4204	8-729-120-28	2SC1623-L5L6		
Q4205	8-729-120-28	2SC1623-L5L6		
Q4206	8-729-120-28	2SC1623-L5L6		
Q4207	8-729-028-28	2SK2036(TE85L)		
Q4208	8-729-120-28	2SC1623-L5L6		
Q4209	8-729-028-28	2SK2036(TE85L)		
Q4210	8-729-120-28	2SC1623-L5L6		
Q4211	8-729-120-28	2SC1623-L5L6		
Q4212	1-801-806-11	TR DTC144EKA		
Q4213	8-729-120-28	2SC1623-L5L6		
Q4214	8-729-120-28	2SC1623-L5L6		
Q4215	8-729-026-49	2SA1037AK-T146-R		
Q4216	8-729-026-49	2SA1037AK-T146-R		
Q4217	8-729-026-49	2SA1037AK-T146-R		

P5 (KV-AR25M66 ONLY)

REF NO.	PART NO.	DESCRIPTION		REMARK	
Q4401	8-729-026-49	2SA1037AK-T146-R			
Q4402	8-729-026-49	2SA1037AK-T146-R			
Q4403	8-729-026-49	2SA1037AK-T146-R			
Q4404	8-729-026-49	2SA1037AK-T146-R			
Q4405	8-729-026-49	2SA1037AK-T146-R			
Q4406	8-729-026-49	2SA1037AK-T146-R			
Q4407	8-729-026-49	2SA1037AK-T146-R			
Q4408	8-729-120-28	2SC1623-L5L6			
Q4409	8-729-026-49	2SA1037AK-T146-R			
Q4410	8-729-120-28	2SC1623-L5L6			
Q4420	8-729-026-49	2SA1037AK-T146-R			
		<RESISTOR>			
R4001	1-125-889-91	CERAMIC CHIP	2.2UF	10%	10V
R4003	1-216-377-11	METAL OXIDE	4.7	5%	2W
R4004	1-215-881-11	METAL OXIDE	15	5%	2W
R4005	1-216-025-11	RES-CHIP	100	5%	1/10W
R4006	1-216-081-00	RES-CHIP	22K	5%	1/10W
R4007	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4008	1-216-033-00	RES-CHIP	220	5%	1/10W
R4009	1-216-005-00	RES-CHIP	15	5%	1/10W
R4010	1-216-041-00	RES-CHIP	470	5%	1/10W
R4011	1-216-025-11	RES-CHIP	100	5%	1/10W
R4012	1-216-025-11	RES-CHIP	100	5%	1/10W
R4013	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4014	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4015	1-216-295-91	SHORT CHIP	0		
R4016	1-216-639-11	METAL CHIP	330	0.5%	1/10W
R4017	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4018	1-216-025-11	RES-CHIP	100	5%	1/10W
R4019	1-216-025-11	RES-CHIP	100	5%	1/10W
R4020	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R4021	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R4022	1-216-041-00	RES-CHIP	470	5%	1/10W
R4023	1-216-025-11	RES-CHIP	100	5%	1/10W
R4024	1-216-041-00	RES-CHIP	470	5%	1/10W
R4025	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4026	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4027	1-216-649-11	METAL CHIP	820	0.5%	1/10W
R4028	1-216-649-11	METAL CHIP	820	0.5%	1/10W
R4029	1-216-051-00	RES-CHIP	1.2K	5%	1/10W
R4030	1-216-041-00	RES-CHIP	470	5%	1/10W
R4031	1-216-041-00	RES-CHIP	470	5%	1/10W
R4032	1-216-041-00	RES-CHIP	470	5%	1/10W
R4033	1-216-025-11	RES-CHIP	100	5%	1/10W
R4034	1-216-025-11	RES-CHIP	100	5%	1/10W
R4035	1-216-097-11	RES-CHIP	100K	5%	1/10W
R4036	1-216-121-11	RES-CHIP	1M	5%	1/10W
R4037	1-216-025-11	RES-CHIP	100	5%	1/10W
R4038	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4039	1-216-089-91	RES-CHIP	47K	5%	1/10W
R4040	1-216-089-91	RES-CHIP	47K	5%	1/10W
R4041	1-216-089-91	RES-CHIP	47K	5%	1/10W
R4042	1-216-089-91	RES-CHIP	47K	5%	1/10W
R4043	1-216-025-11	RES-CHIP	100	5%	1/10W
R4044	1-216-025-11	RES-CHIP	100	5%	1/10W
R4045	1-216-025-11	RES-CHIP	100	5%	1/10W
R4046	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4047	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4048	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4049	1-216-025-11	RES-CHIP	100	5%	1/10W
R4050	1-216-025-11	RES-CHIP	100	5%	1/10W
R4051	1-216-025-11	RES-CHIP	100	5%	1/10W
R4053	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4054	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4057	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4060	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4067	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4068	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4069	1-216-295-91	SHORT CHIP	0		
R4071	1-216-025-11	RES-CHIP	100	5%	1/10W
R4072	1-216-041-00	RES-CHIP	470	5%	1/10W
R4073	1-216-025-11	RES-CHIP	100	5%	1/10W
R4074	1-216-041-00	RES-CHIP	470	5%	1/10W
R4075	1-216-025-11	RES-CHIP	100	5%	1/10W
R4076	1-216-041-00	RES-CHIP	470	5%	1/10W
R4080	1-216-037-00	RES-CHIP	330	5%	1/10W
R4081	1-216-041-00	RES-CHIP	470	5%	1/10W
R4082	1-216-295-91	SHORT CHIP	0		
R4083	1-216-041-00	RES-CHIP	470	5%	1/10W
R4084	1-216-025-11	RES-CHIP	100	5%	1/10W
R4085	1-216-037-00	RES-CHIP	330	5%	1/10W
R4086	1-216-041-00	RES-CHIP	470	5%	1/10W
R4087	1-216-295-91	SHORT CHIP	0		
R4088	1-216-041-00	RES-CHIP	470	5%	1/10W
R4089	1-216-295-91	SHORT CHIP	0		
R4090	1-216-033-00	RES-CHIP	220	5%	1/10W
R4091	1-216-041-00	RES-CHIP	470	5%	1/10W
R4092	1-216-295-91	SHORT CHIP	0		
R4095	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4096	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4097	1-216-295-91	SHORT CHIP	0		
R4100	1-216-121-11	RES-CHIP	1M	5%	1/10W
R4101	1-216-295-91	SHORT CHIP	0		
R4102	1-216-295-91	SHORT CHIP	0		
R4103	1-218-179-11	RES-CHIP	10M	5%	1/10W
R4104	1-216-025-11	RES-CHIP	100	5%	1/10W
R4105	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R4106	1-216-041-00	RES-CHIP	470	5%	1/10W
R4107	1-216-029-00	RES-CHIP	150	5%	1/10W
R4108	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4109	1-216-031-00	RES-CHIP	180	5%	1/10W
R4111	1-216-081-00	RES-CHIP	22K	5%	1/10W
R4112	1-216-033-00	RES-CHIP	220	5%	1/10W
R4114	1-216-025-11	RES-CHIP	100	5%	1/10W
R4115	1-216-025-11	RES-CHIP	100	5%	1/10W
R4120	1-216-083-00	RES-CHIP	27K	5%	1/10W
R4124	1-216-665-11	METAL CHIP	3.9K	0.5%	1/10W
R4126	1-208-291-11	RES-CHIP	4.7M	5%	1/10W
R4127	1-208-291-11	RES-CHIP	4.7M	5%	1/10W
R4130	1-208-291-11	RES-CHIP	4.7M	5%	1/10W
R4131	1-216-025-11	RES-CHIP	100	5%	1/10W
R4132	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4133	1-216-017-91	RES-CHIP	47	5%	1/10W
R4135	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R4136	1-216-025-11	RES-CHIP	100	5%	1/10W
R4137	1-216-025-11	RES-CHIP	100	5%	1/10W
R4139	1-216-025-11	RES-CHIP	100	5%	1/10W
R4140	1-216-025-11	RES-CHIP	100	5%	1/10W
R4141	1-216-025-11	RES-CHIP	100	5%	1/10W
R4142	1-216-295-91	SHORT CHIP	0		
R4143	1-216-041-00	RES-CHIP	470	5%	1/10W
R4144	1-216-041-00	RES-CHIP	470	5%	1/10W

P5 (KV-AR25M66 ONLY)

REF NO.	PART NO.	DESCRIPTION		REMARK	
R4145	1-216-017-91	RES-CHIP	47	5%	1/10W
R4146	1-216-041-00	RES-CHIP	470	5%	1/10W
R4147	1-216-041-00	RES-CHIP	470	5%	1/10W
R4148	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4149	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4150	1-216-025-11	RES-CHIP	100	5%	1/10W
R4151	1-216-025-11	RES-CHIP	100	5%	1/10W
R4152	1-216-025-11	RES-CHIP	100	5%	1/10W
R4153	1-216-089-91	RES-CHIP	47K	5%	1/10W
R4154	1-216-097-11	RES-CHIP	100K	5%	1/10W
R4155	1-216-089-91	RES-CHIP	47K	5%	1/10W
R4156	1-216-097-11	RES-CHIP	100K	5%	1/10W
R4157	1-216-089-91	RES-CHIP	47K	5%	1/10W
R4158	1-216-097-11	RES-CHIP	100K	5%	1/10W
R4159	1-216-295-91	SHORT CHIP	0		
R4160	1-216-295-91	SHORT CHIP	0		
R4161	1-216-295-91	SHORT CHIP	0		
R4163	1-216-025-11	RES-CHIP	100	5%	1/10W
R4164	1-216-025-11	RES-CHIP	100	5%	1/10W
R4165	1-216-025-11	RES-CHIP	100	5%	1/10W
R4172	1-216-041-00	RES-CHIP	470	5%	1/10W
R4173	1-216-041-00	RES-CHIP	470	5%	1/10W
R4174	1-216-041-00	RES-CHIP	470	5%	1/10W
R4175	1-216-041-00	RES-CHIP	470	5%	1/10W
R4176	1-216-041-00	RES-CHIP	470	5%	1/10W
R4177	1-216-041-00	RES-CHIP	470	5%	1/10W
R4178	1-216-041-00	RES-CHIP	470	5%	1/10W
R4179	1-216-041-00	RES-CHIP	470	5%	1/10W
R4180	1-216-041-00	RES-CHIP	470	5%	1/10W
R4181	1-216-025-11	RES-CHIP	100	5%	1/10W
R4182	1-216-295-91	SHORT CHIP	0		
R4183	1-216-295-91	SHORT CHIP	0		
R4184	1-216-295-91	SHORT CHIP	0		
R4185	1-216-295-91	SHORT CHIP	0		
R4186	1-216-295-91	SHORT CHIP	0		
R4187	1-216-295-91	SHORT CHIP	0		
R4190	1-216-025-11	RES-CHIP	100	5%	1/10W
R4191	1-216-025-11	RES-CHIP	100	5%	1/10W
R4192	1-216-025-11	RES-CHIP	100	5%	1/10W
R4195	1-216-081-00	RES-CHIP	22K	5%	1/10W
R4196	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4197	1-216-081-00	RES-CHIP	22K	5%	1/10W
R4198	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4199	1-216-041-00	RES-CHIP	470	5%	1/10W
R4200	1-216-041-00	RES-CHIP	470	5%	1/10W
R4201	1-216-295-91	SHORT CHIP	0		
R4202	1-216-295-91	SHORT CHIP	0		
R4203	1-216-295-91	SHORT CHIP	0		
R4210	1-216-025-11	RES-CHIP	100	5%	1/10W
R4211	1-216-041-00	RES-CHIP	470	5%	1/10W
R4212	1-216-025-11	RES-CHIP	100	5%	1/10W
R4213	1-216-025-11	RES-CHIP	100	5%	1/10W
R4214	1-216-295-91	SHORT CHIP	0		
R4216	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R4217	1-216-041-00	RES-CHIP	470	5%	1/10W
R4218	1-216-041-00	RES-CHIP	470	5%	1/10W
R4219	1-216-295-91	SHORT CHIP	0		
R4220	1-216-295-91	SHORT CHIP	0		
R4223	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R4224	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R4225	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R4226	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R4227	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R4228	1-216-081-00	RES-CHIP	22K	5%	1/10W
R4229	1-216-033-00	RES-CHIP	220	5%	1/10W
R4230	1-216-033-00	RES-CHIP	220	5%	1/10W
R4231	1-216-033-00	RES-CHIP	220	5%	1/10W
R4232	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R4233	1-216-295-91	SHORT CHIP	0		
R4234	1-216-295-91	SHORT CHIP	0		
R4235	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4236	1-216-295-91	SHORT CHIP	0		
R4237	1-216-081-00	RES-CHIP	22K	5%	1/10W
R4238	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4240	1-216-615-11	METAL CHIP	33	0.5%	1/10W
R4241	1-208-760-11	METAL CHIP	120	0.5%	1/10W
R4242	1-216-603-11	METAL CHIP	10	0.5%	1/10W
R4243	1-216-041-00	RES-CHIP	470	5%	1/10W
R4244	1-216-615-11	METAL CHIP	33	0.5%	1/10W
R4245	1-208-760-11	METAL CHIP	120	0.5%	1/10W
R4246	1-216-603-11	METAL CHIP	10	0.5%	1/10W
R4247	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4249	1-216-615-11	METAL CHIP	33	0.5%	1/10W
R4250	1-208-760-11	METAL CHIP	120	0.5%	1/10W
R4251	1-216-603-11	METAL CHIP	10	0.5%	1/10W
R4252	1-216-041-00	RES-CHIP	470	5%	1/10W
R4253	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R4254	1-216-615-11	METAL CHIP	33	0.5%	1/10W
R4255	1-208-760-11	METAL CHIP	120	0.5%	1/10W
R4256	1-216-603-11	METAL CHIP	10	0.5%	1/10W
R4257	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4258	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4259	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4261	1-216-025-11	RES-CHIP	100	5%	1/10W
R4273	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4275	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4276	1-216-295-91	SHORT CHIP	0		
R4278	1-216-295-91	SHORT CHIP	0		
R4279	1-216-025-11	RES-CHIP	100	5%	1/10W
R4280	1-216-025-11	RES-CHIP	100	5%	1/10W
R4282	1-216-295-91	SHORT CHIP	0		
R4284	1-216-295-91	SHORT CHIP	0		
R4286	1-216-025-11	RES-CHIP	100	5%	1/10W
R4287	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4288	1-216-025-11	RES-CHIP	100	5%	1/10W
R4290	1-216-295-91	SHORT CHIP	0		
R4291	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4292	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R4293	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R4295	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4296	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4297	1-216-025-11	RES-CHIP	100	5%	1/10W
R4298	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R4299	1-216-025-11	RES-CHIP	100	5%	1/10W
R4300	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4308	1-216-025-11	RES-CHIP	100	5%	1/10W
R4309	1-216-025-11	RES-CHIP	100	5%	1/10W
R4311	1-208-783-11	METAL CHIP	1.1K	0.5%	1/10W
R4312	1-208-792-11	METAL CHIP	2.7K	0.5%	1/10W
R4313	1-216-631-11	METAL CHIP	150	0.5%	1/10W
R4314	1-216-631-11	METAL CHIP	150	0.5%	1/10W
R4315	1-216-631-11	METAL CHIP	150	0.5%	1/10W
R4317	1-216-017-91	RES-CHIP	47	5%	1/10W

P5 (KV-AR25M66 ONLY)

REF NO.	PART NO.	DESCRIPTION		REMARK	
R4318	1-216-017-91	RES-CHIP	47	5%	1/10W
R4319	1-216-017-91	RES-CHIP	47	5%	1/10W
R4320	1-216-017-91	RES-CHIP	47	5%	1/10W
R4321	1-216-017-91	RES-CHIP	47	5%	1/10W
R4322	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4323	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R4329	1-216-295-91	SHORT CHIP	0		
R4330	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4402	1-216-295-91	SHORT CHIP	0		
R4403	1-216-025-11	RES-CHIP	100	5%	1/10W
R4404	1-216-025-11	RES-CHIP	100	5%	1/10W
R4406	1-216-025-11	RES-CHIP	100	5%	1/10W
R4407	1-216-025-11	RES-CHIP	100	5%	1/10W
R4408	1-216-295-91	SHORT CHIP	0		
R4415	1-216-025-11	RES-CHIP	100	5%	1/10W
R4418	1-208-783-11	METAL CHIP	1.1K	0.5%	1/10W
R4419	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R4420	1-208-792-11	METAL CHIP	2.7K	0.5%	1/10W
R4421	1-216-631-11	METAL CHIP	150	0.5%	1/10W
R4422	1-216-631-11	METAL CHIP	150	0.5%	1/10W
R4423	1-216-631-11	METAL CHIP	150	0.5%	1/10W
R4424	1-216-025-11	RES-CHIP	100	5%	1/10W
R4425	1-216-025-11	RES-CHIP	100	5%	1/10W
R4426	1-216-025-11	RES-CHIP	100	5%	1/10W
R4427	1-216-025-11	RES-CHIP	100	5%	1/10W
R4434	1-216-025-11	RES-CHIP	100	5%	1/10W
R4436	1-216-025-11	RES-CHIP	100	5%	1/10W
R4438	1-216-025-11	RES-CHIP	100	5%	1/10W
R4440	1-216-295-91	SHORT CHIP	0		
R4441	1-216-025-11	RES-CHIP	100	5%	1/10W
R4442	1-216-295-91	SHORT CHIP	0		
R4449	1-216-295-91	SHORT CHIP	0		
R4451	1-216-295-91	SHORT CHIP	0		
R4452	1-216-295-91	SHORT CHIP	0		
R4454	1-216-295-91	SHORT CHIP	0		
R4458	1-216-295-91	SHORT CHIP	0		
R4461	1-216-295-91	SHORT CHIP	0		
R4464	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4465	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R4466	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4467	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4468	1-216-295-91	SHORT CHIP	0		
R4469	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R4470	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R4471	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R4472	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R4473	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R4474	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4475	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4476	1-216-017-91	RES-CHIP	47	5%	1/10W
R4477	1-216-017-91	RES-CHIP	47	5%	1/10W
R4478	1-216-033-00	RES-CHIP	220	5%	1/10W
R4479	1-216-025-11	RES-CHIP	100	5%	1/10W
R4480	1-216-015-00	RES-CHIP	39	5%	1/10W
R4481	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4482	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4483	1-216-025-11	RES-CHIP	100	5%	1/10W
R4484	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R4485	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R4487	1-216-089-91	RES-CHIP	47K	5%	1/10W
R4489	1-216-113-00	RES-CHIP	470K	5%	1/10W

V1 (KV-AR25M66 ONLY)

REF NO.	PART NO.	DESCRIPTION		REMARK	
R4490	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4491	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4492	1-216-025-11	RES-CHIP	100	5%	1/10W
R4494	1-216-041-00	RES-CHIP	470	5%	1/10W
R4496	1-216-017-91	RES-CHIP	47	5%	1/10W
R4512	1-216-085-91	RES-CHIP	33K	5%	1/10W
R4513	1-216-113-00	RES-CHIP	470K	5%	1/10W
R4514	1-216-683-11	METAL CHIP	22K	0.5%	1/10W
R4515	1-216-617-11	METAL CHIP	39	0.5%	1/10W
R4527	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4528	1-216-295-91	SHORT CHIP	0		
R4559	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R4560	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R4561	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R4562	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R4563	1-208-810-11	METAL CHIP	15K	0.5%	1/10W
R4564	1-208-782-11	METAL CHIP	1K	0.5%	1/10W
R4568	1-216-017-91	RES-CHIP	47	5%	1/10W
R4569	1-216-017-91	RES-CHIP	47	5%	1/10W
R4570	1-216-017-91	RES-CHIP	47	5%	1/10W
R4573	1-216-295-91	SHORT CHIP	0		

<########>

RB4201	1-239-409-11	NETWORK RESISTOR (CHIP) 47
RB4202	1-239-409-11	NETWORK RESISTOR (CHIP) 47
RB4203	1-239-409-11	NETWORK RESISTOR (CHIP) 47
RB4204	1-239-409-11	NETWORK RESISTOR (CHIP) 47
RB4301	1-239-409-11	NETWORK RESISTOR (CHIP) 47
RB4302	1-239-409-11	NETWORK RESISTOR (CHIP) 47
RB4303	1-239-409-11	NETWORK RESISTOR (CHIP) 47
RB4304	1-239-409-11	NETWORK RESISTOR (CHIP) 47

<CRYSTAL>

X4101	1-781-946-21	VIBRATOR, CRYSTAL
X4102	1-781-612-11	VIBRATOR, CRYSTAL

****

* A-1347-164-A V1 BOARD COMPLETE (KV-AR25M66 ONLY)
****

<CAPACITOR>

C801	1-126-947-11	ELECT	47UF	20.00%	16V
C805	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C806	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C814	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C815	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C816	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C817	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C818	1-163-239-11	CERAMIC CHIP	33PF	5.00%	50V
C820	1-163-239-11	CERAMIC CHIP	33PF	5.00%	50V
C821	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C822	1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C823	1-126-933-11	ELECT	100UF	20.00%	16V
C826	1-126-963-11	ELECT	4.7UF	20.00%	50V
C829	1-163-247-91	CERAMIC CHIP	68PF	5.00%	50V
C830	1-163-038-91	CERAMIC CHIP	0.1UF		25V

V1 (KV-AR25M66 ONLY) VM1

REF NO.	PART NO.	DESCRIPTION			REMARK
C831	1-126-933-11	ELECT	100UF	20.00%	16V
C832	1-126-964-11	ELECT	10UF	20.00%	50V
C835	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C837	1-126-933-11	ELECT	100UF	20.00%	16V
		<CONNECTOR>			
CN801	* 1-774-812-11	CONNECTOR, BOARD TO BOARD 7P			
CN803	* 1-774-812-11	CONNECTOR, BOARD TO BOARD 7P			
		<DIODE>			
D802	8-719-941-09	DAP202U			
D803	8-719-105-46	RD3.3M-B2			
D804	8-719-105-91	RD5.6M-B2			
		<FERRITE BEAD>			
FB801	1-410-397-21	FERRITE	1.1UH		
FB802	1-410-397-21	FERRITE	1.1UH		
FB803	1-410-397-21	FERRITE	1.1UH		
FB804	1-414-223-11	INDUCTOR	470UH		
FB805	1-410-397-21	FERRITE	1.1UH		
		<IC>			
IC801	8-759-476-87	SAA5261			
		<CHIP CONDUCTOR>			
JR800	1-216-295-91	SHORT CHIP	0		
JR801	1-216-295-91	SHORT CHIP	0		
JR802	1-216-295-91	SHORT CHIP	0		
JR804	1-216-295-91	SHORT CHIP	0		
JR805	1-216-295-91	SHORT CHIP	0		
		<TRANSISTOR>			
Q801	8-729-120-28	2SC1623-L5L6			
Q803	8-729-120-28	2SC1623-L5L6			
Q805	8-729-120-28	2SC1623-L5L6			
Q806	8-729-120-28	2SC1623-L5L6			
Q807	8-729-120-28	2SC1623-L5L6			
Q808	8-729-120-28	2SC1623-L5L6			
Q810	8-729-120-28	2SC1623-L5L6			
Q811	8-729-019-01	2SD2394-EF			
Q817	8-729-421-22	UN2211			
		<RESISTOR>			
R800	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R801	1-216-295-91	SHORT CHIP	0		
R802	1-216-025-11	RES-CHIP	100	5%	1/10W
R803	1-216-295-91	SHORT CHIP	0		
R804	1-216-295-91	SHORT CHIP	0		
R805	1-216-295-91	SHORT CHIP	0		
R807	1-216-295-91	SHORT CHIP	0		
R813	1-216-295-91	SHORT CHIP	0		
R820	1-216-073-91	RES-CHIP	10K	5%	1/10W
R821	1-216-083-00	RES-CHIP	27K	5%	1/10W
R822	1-216-025-11	RES-CHIP	100	5%	1/10W
R824	1-216-295-91	SHORT CHIP	0		
R825	1-216-295-91	SHORT CHIP	0		

REF NO.	PART NO.	DESCRIPTION			REMARK
R827	1-216-295-91	SHORT CHIP	0		
R828	1-216-025-11	RES-CHIP	100	5%	1/10W
R829	1-216-025-11	RES-CHIP	100	5%	1/10W
R830	1-216-295-91	SHORT CHIP	0		
R831	1-216-295-91	SHORT CHIP	0		
R832	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R835	1-216-295-91	SHORT CHIP	0		
R839	1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W
R841	1-216-025-11	RES-CHIP	100	5%	1/10W
R842	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R843	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R844	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R845	1-216-049-11	RES-CHIP	1K	5%	1/10W
R846	1-216-049-11	RES-CHIP	1K	5%	1/10W
R847	1-216-049-11	RES-CHIP	1K	5%	1/10W
R848	1-216-049-11	RES-CHIP	1K	5%	1/10W
R849	1-216-049-11	RES-CHIP	1K	5%	1/10W
R850	1-216-105-91	RES-CHIP	220K	5%	1/10W
R851	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R853	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R857	1-216-077-91	RES-CHIP	15K	5%	1/10W
R861	1-216-049-11	RES-CHIP	1K	5%	1/10W
R862	1-260-095-11	CARBON	470	5%	1/2W
R863	1-216-049-11	RES-CHIP	1K	5%	1/10W
R864	1-216-041-00	RES-CHIP	470	5%	1/10W
R866	1-215-880-00	METAL OXIDE	10	5%	2W
R871	1-216-037-00	RES-CHIP	330	5%	1/10W
R879	1-216-073-91	RES-CHIP	10K	5%	1/10W
R880	1-216-041-00	RES-CHIP	470	5%	1/10W
R882	1-216-049-11	RES-CHIP	1K	5%	1/10W
R884	1-216-025-11	RES-CHIP	100	5%	1/10W
		<CRYSTAL>			
X801	1-578-774-11	VIBRATOR, CRYSTAL			

****

*	A-1401-349-A	VM1 BOARD MOUNTED (KV-AR25M60)
*	A-1401-835-A	VM1 BOARD MOUNTED (KV-AR25M66)
*	A-1400-974-A	VM1 BOARD MOUNTED (KV-AR25M80/AR25N90)
		**********
	4-382-854-11	SCREW (M3X10), P, SW (+)

<CAPACITOR>

C5900	1-102-115-00	CERAMIC	560PF	10.00%	50V
C5902	1-104-661-91	ELECT	330UF	20.00%	16V
C5903	1-161-830-00	CERAMIC	0.0047UF		500V
C5905	1-126-935-11	ELECT	470UF	20.00%	10V
C5906	1-130-491-00	MYLAR	0.047UF	5.00%	50V
C5907	1-107-638-11	ELECT	33UF	20.00%	160V
C5908	1-106-383-00	MYLAR	0.047UF	10.00%	200V
C5909	1-126-933-11	ELECT	100UF	20.00%	16V
C5910	1-130-471-00	MYLAR	0.001UF	5.00%	50V
C5911	1-107-949-11	ELECT	2.2UF	20.00%	160V
C5912	1-104-999-11	MYLAR	0.1UF	10.00%	200V
C5913	1-130-471-00	MYLAR	0.001UF	5.00%	50V
C5914	1-126-933-11	ELECT	100UF	20.00%	16V

REF NO.	PART NO.	DESCRIPTION		REMARK	
C5916	1-130-491-00	MYLAR	0.047UF	5.00%	50V
C5917	1-126-935-11	ELECT	470UF	20.00%	10V
C5918	1-102-244-00	CERAMIC	220PF	10.00%	500V
C5919	1-136-165-00	FILM	0.1UF	5.00%	50V
		<CONNECTOR>			
CN2801	* 1-564-506-11	PLUG, CONNECTOR 3P (KV-AR25M60 ONLY)			
CN5901	* 1-564-510-11	PLUG, CONNECTOR 7P			
CN5902	* 1-564-506-11	PLUG, CONNECTOR 3P (EXCEPT KV-AR25M60)			
CN5904	* 1-770-723-11	CONNECTOR, BOARD TO BOARD 8P			
		<DIODE>			
D5901	8-719-911-19	1SS119-25			
D5902	8-719-110-86	RD39ES-B			
D5903	8-719-911-19	1SS119-25			
D5904	8-719-110-86	RD39ES-B			
D5905	8-719-911-19	1SS119-25			
D5906	1-249-406-11	CARBON	120	5%	1/4W
D5907	1-249-406-11	CARBON	120	5%	1/4W
		<COIL>			
L5901	1-414-187-11	INDUCTOR	47UH		
		<TRANSISTOR>			
Q5901	8-729-230-45	2SC2458-YGR			
Q5902	8-729-809-26	2SA1606-E			
Q5903	8-729-230-45	2SC2458-YGR			
Q5904	8-729-119-76	2SA1175-HFE			
Q5905	8-729-230-45	2SC2458-YGR			
Q5906	8-729-809-29	2SC4159-E			
Q5907	8-729-230-45	2SC2458-YGR			
		<RESISTOR>			
R5901	1-249-401-11	CARBON	47	5%	1/4W
R5902	1-249-414-11	CARBON	560	5%	1/4W
R5903	1-247-734-11	CARBON	39	5%	1/2W
R5904	1-249-411-11	CARBON	330	5%	1/4W
R5905	1-249-417-11	CARBON	1K	5%	1/4W
R5906	1-249-417-11	CARBON	1K	5%	1/4W
R5907	1-249-417-11	CARBON	1K	5%	1/4W
R5908	1-249-383-11	CARBON	1.5	5%	1/4W
R5909	1-249-409-11	CARBON	220	5%	1/4W
R5910	1-249-403-11	CARBON	68	5%	1/4W
R5911	1-249-439-11	CARBON	68K	5%	1/4W
R5912	1-249-437-11	CARBON	47K	5%	1/4W
R5914	1-249-403-11	CARBON	68	5%	1/4W
R5915	1-249-429-11	CARBON	10K	5%	1/4W
R5916	1-249-419-11	CARBON	1.5K	5%	1/4W
R5917	1-249-416-11	CARBON	820	5%	1/4W
R5918	1-249-429-11	CARBON	10K	5%	1/4W
R5919	1-249-417-11	CARBON	1K	5%	1/4W
R5920	1-249-439-11	CARBON	68K	5%	1/4W
R5921	1-216-476-11	METAL OXIDE	180	5%	3W
R5922	1-249-414-11	CARBON	560	5%	1/4W
R5923	1-249-383-11	CARBON	1.5	5%	1/4W
R5925	1-249-400-11	CARBON	39	5%	1/4W
R5927	1-249-416-11	CARBON	820	5%	1/4W
R5929	1-215-880-00	METAL OXIDE	10	5%	2W

****

ACCESSORIES AND PACKING MATERIALS
****

	3-701-910-00	SCREW, SPECIAL (DIA. 3.8X20)
*	4-037-760-01	BAG, PROTECTION (KV-AR25M60)
*	4-029-168-01	BAG, PROTECTION (EXCEPT KV-AR25M60)
*	4-090-805-01	CUSHION (UPPER) (KV-AR25M60)
*	4-091-259-01	CUSHION UPPER (EXCEPT KV-AR25M60)
*	4-090-806-01	CUSHION (LOWER) (KV-AR25M60)
	1-429-707-11	CUSHION LOWER (EXCEPT KV-AR25M60)
*	4-091-364-01	INDIVIDUAL CARTON (KV-AR25M60)
*	4-091-047-01	INDIVIDUAL CARTON (KV-AR25M66)
*	4-088-012-02	INDIVIDUAL CARTON (KV-AR25M80)
*	4-091-270-01	INDIVIDUAL CARTON (KV-AR25N90)
	4-089-671-11	MANUAL, INSTRUCTION (KV-AR25M60)
	4-089-575-11	MANUAL, INSTRUCTION (KV-AR25M66)
	4-088-962-12	MANUAL, INSTRUCTION (KV-AR25M80(E))
	4-091-356-11	MANUAL INSTRUCTION (KV-AR25M80(ME))
	4-091-882-11	MANUAL, INSTRUCTION (KV-AR25N90(PHILLIPPINES))
	4-090-833-11	MANUAL, INSTRUCTION (KV-AR25N90(TAIWAN))
	4-392-003-21	BAND, HOLDING (KV-AR25M60)
	4-392-003-11	BAND, HOLD (EXCEPT KV-AR25M60)
	4-059-705-01	CLIP (KV-AR25M60)
	4-392-004-11	CLIP (EXCEPT KV-AR25M60)

****

REMOTE COMMANDER
****

	1-477-314-11	REMOTE COMMANDER (RM-993) (KV-AR25M66)
	1-477-407-11	REMOTE COMMANDER (RM-995) (KV-AR25M60/AR25M80)
	1-477-490-11	REMOTE COMMANDER (RM-996) (KV-AR25N90)
	4-079-833-01	BATTERY COVER REMOTE COMMANDER

Sony Corporation
Sony Technology Malaysia Sdn. Bhd.
Visual Products

9-872-338-01

English
© 2002.10

SONY

4-088-962-**12** (1)

Trinitron Color TV

Operating Instructions — GB

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

使用說明書 — CT

- 使用本電視機之前請先詳細閱讀此手冊，並妥善保存以備日後用作參考。

Panduan Pengendalian — MY

- Sebelum mengendalikan unit, sila baca buku panduan ini dengan teliti dan simpan untuk rujukan masa depan.

FD Trinitron
WEGA

KV-AR29
KV-AR25

M61
M80
M50

© 2002 Sony Corporation

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110-240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

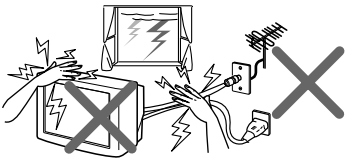

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

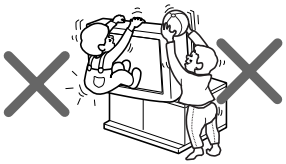

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

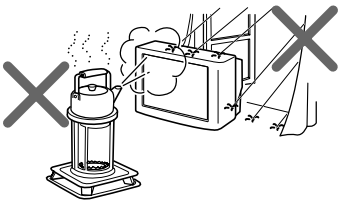

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

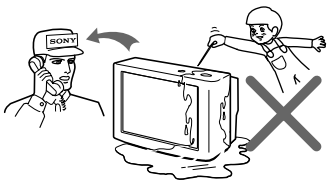

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

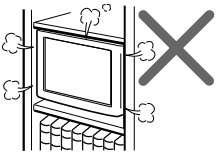

Do not block the ventilation openings of the TV.
Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

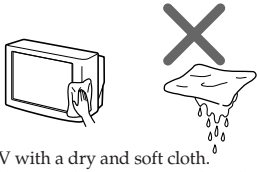

Clean the TV with a dry and soft cloth.
Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e. g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.

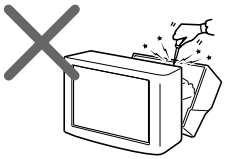

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

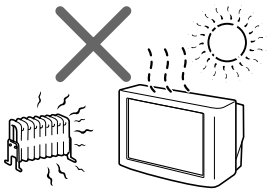

Your TV is recommended for home use only.
Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

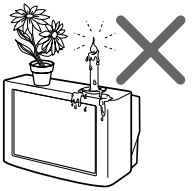

Do not place any objects on the TV.

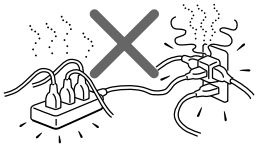

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

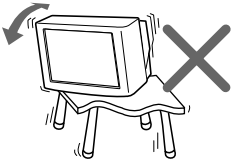

Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

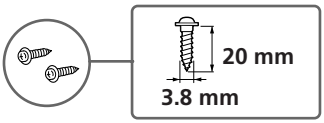

screws

clamps



band

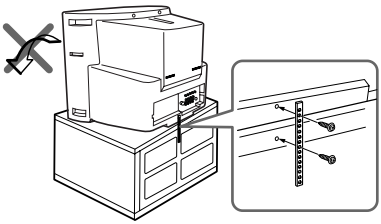

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

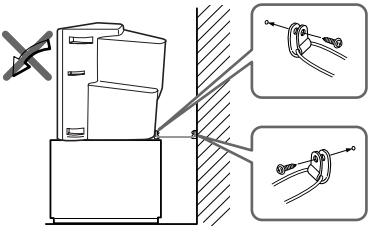

(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

or

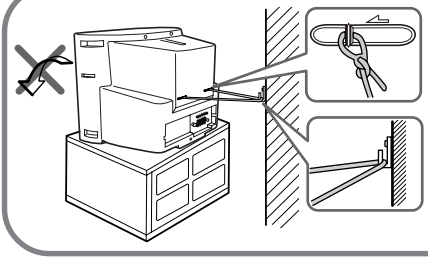

(1) Attach each end of a cord or chain to the provided holders at the rear of your TV.
(2) Securely fix the attached cord or chain to a wall or pillar using an attachment which can support the TV set weight.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

Getting Started 6
Setting up your TV ("INITIAL SETUP") 7

Overview of Controls

TV front and rear panels 8
Remote control 9

Advanced Operations

Selecting the picture and sound modes 11
Viewing the picture in wide mode .. 12
Listening with surround sound 12
Setting the timers 13
Enjoying stereo or bilingual programs (KV-AR29M61/AR25M61 only) 14
Viewing Teletext (KV-AR29M61/AR25M61 only) 15

Menu Adjustment

Introducing the menu system 16
Changing the "PICTURE" setting ... 19
Changing the "SOUND" setting 21
Changing the "SETUP" setting 23
Changing the Channel Preset ("CH PRESET") setting 25

Additional Information

Connecting optional components ... 28
Troubleshooting 30
Specifications ..... **Back cover**

GB

■ Getting Started

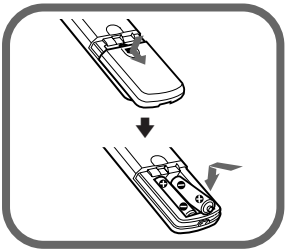

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

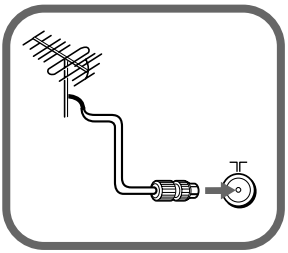

Step 2

Connect the antenna cable (not supplied) to ⍑ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 28).

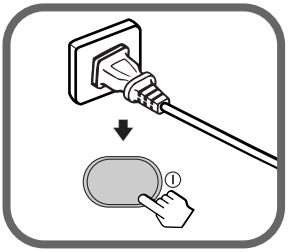

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

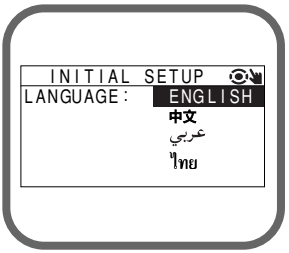

Step 4

Set up the TV by following the instructions of the "INITIAL SETUP"menu (see page 7).

■ Setting up your TV (“INITIAL SETUP”)

When you turn on your TV for the first time, the “INITIAL SETUP” menu will appear. This menu allows you to change the menu language, adjust the picture position and preset the TV channels automatically.

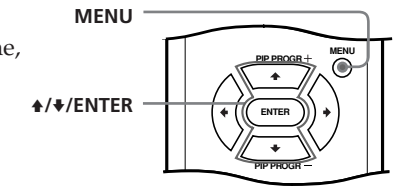

1 Press ↑ or ↓ to select the desired menu language (e.g.,”ENGLISH”), then press ENTER.

The selected menu language appears.

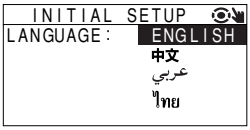

2 If the “PIC ROTATION” bar is slanted, press ↑ or ↓ to adjust it, then press ENTER.

If no adjustment is necessary, then press ENTER.

The ⊞ or ⊟ icon on the screen flashes while adjusting.

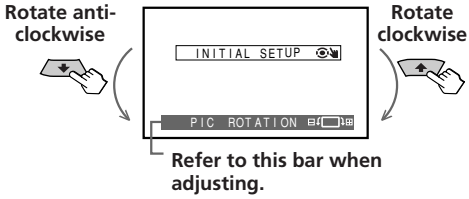

3 Press ↑ or ↓ to select “YES”, then press ENTER to preset the channels automatically (see page 25).

The screen will indicate automatic presetting is in progress.

To skip automatic channel presetting, select “NO”, then press ENTER.

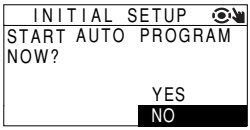

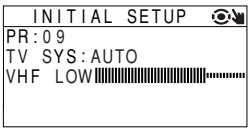

4 Press ↑ or ↓ to select “NO”, then press ENTER. The “INITIAL SETUP” menu will not appear again the next time you turn on the TV by pressing ⏻.

To allow this menu to appear again, select “YES”, then press ENTER.

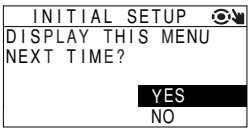

Tips

- You can immediately go to the end of the ”INITIAL SETUP” menu by pressing MENU.
- You can also set up your TV using the menu system (see page 16).

■ TV front and rear panels

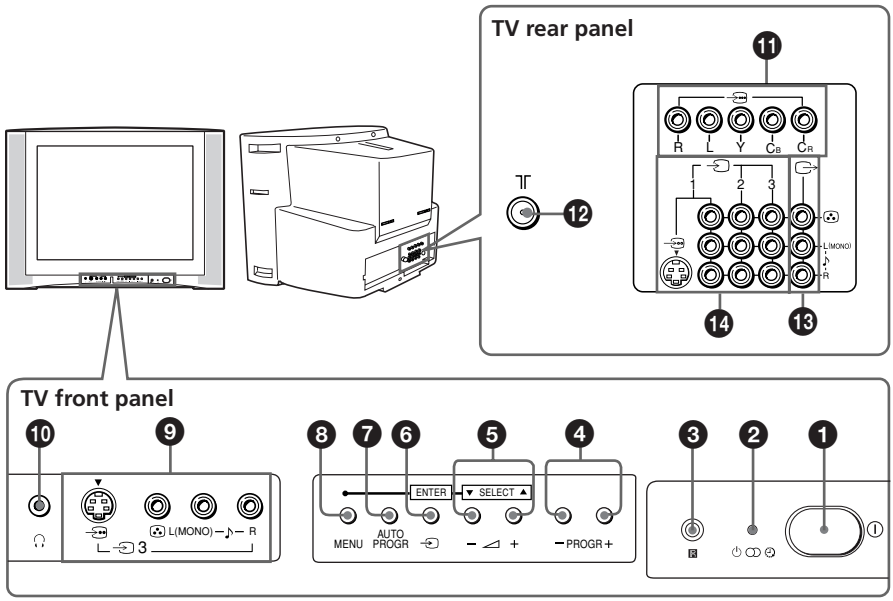

Button/Terminal	Function	Page
❶ ⏻	Turn off or turn on the TV.	6
❷ ⏻	Standby indicator.	–
❷ 🕘	Wake Up indicator.	13
❷ (KV-AR29M61/ AR25M61 only)	Stereo/bilingual indicator.	14
❸	Remote control sensor.	–
❹ PROGR +/–	Select program number.	–
❺ +/–	Adjust volume.	–
❻	Select TV or video input.	–
❼ AUTO PROGR	Preset channels automatically.	–
Menu operations		
❺ SELECT ▼/▲	Select and adjust items.	18
❻ ENTER	Confirm selected items.	18
❽ MENU	Display or cancel the menu.	18
❾ 3	Video input terminal 3.	28
❿	Headphone jack.	–
⓫	Component video input terminal.	29
⓬	Antenna input terminal.	28
⓭	Monitor output terminal.	28
⓮ 1, 2, 3	Video input terminal 1, 2, 3.	28

■ Remote control

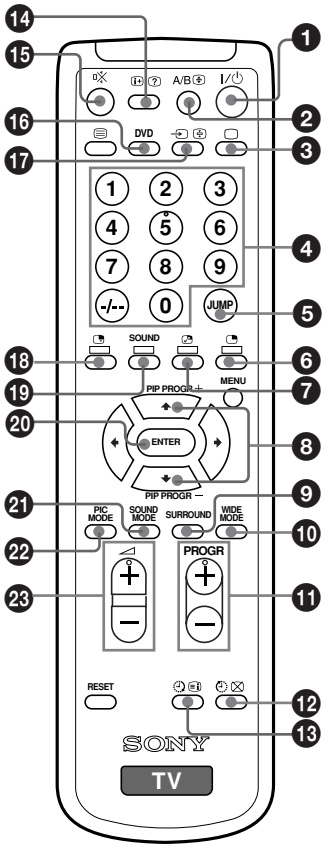

Button	Function	Page
❶ I/⏻	Turn off temporarily or turn on the TV.	–
❸ ▭	Display the TV input.	–
❹ 0 – 9, -/--	Input numbers.	–
❺ JUMP	Jump to previous program number.	–
❾ SURROUND	Select surround mode.	12
❿ WIDE MODE	Select wide-mode (16:9).	12
⓫ PROGR +/–	Select program number.	–
⓮ i+	Display on-screen information.	–
⓯ 🔇	Mute the sound.	–
⓰ DVD	Select DVD input.	29
⓱ ⏎	Select TV or video input.	28
㉑ SOUND MODE	Select sound mode.	11
㉒ PIC MODE	Select picture mode.	11
㉓ 🔊 +/–	Adjust volume.	–
Timer operations		
⓬ ⏲	Set TV to turn off automatically.	13
⓭ ⏲	Set TV to turn on automatically.	13
PIP operations (yellow label)		
❻ ◔	Not function for your TV.	–
❼ ♪		
❽ PIP PROGR + / PIP PROGR –		
⓲ ◔		
⓳ SOUND		
⓴ ENTER		
Stereo/bilingual operations (KV-AR29M61/AR25M61 only)		
❷ A/B	Select stereo/bilingual mode.	14

continue

continued

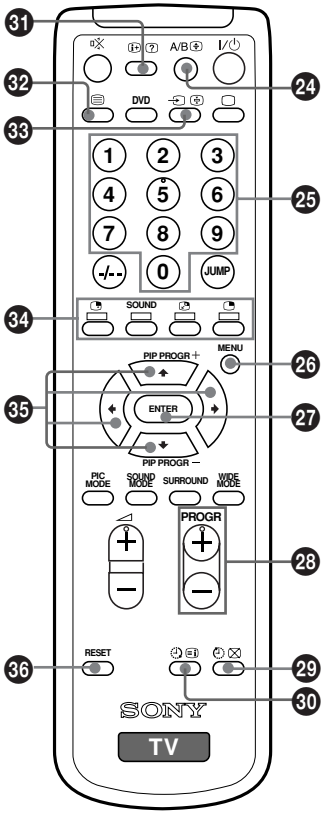

Button	Function	Page
Menu operations		
26 MENU	Display or cancel the menu.	18
27 ENTER	Confirm selected items.	18
35 ↑, ↓, ←, →	Select and adjust items.	18
Teletext operations (green label) (KV-AR29M61/AR25M61 only)		
24 ⊜	Enlarge the Teletext display.	15
25 0 – 9	Input Teletext page number.	15
28 PROGR +/–	Display the next or previous page.	15
29 ⊠	Show TV screen while waiting for Teletext page.	15
30 ⓘ	Display Teletext service contents.	15
31 ?	Reveal concealed information.	15
32 ≡	Display Teletext broadcast.	15
33 ⊟	Stop Teletext display from scrolling.	15
34 ▬ (red, green, yellow, blue)	Access a FASTEXT menu.	15
36 RESET	Set TV to factory setting.	30

■ Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the “PERSONAL” option.

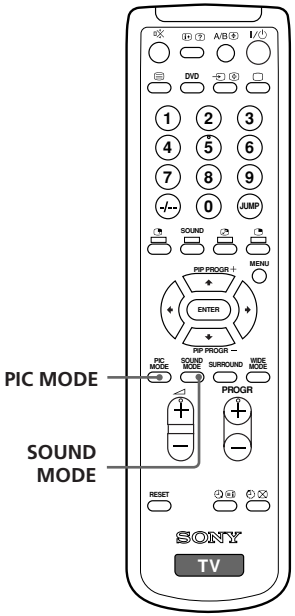

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
“DYNAMIC”	view high contrast pictures.
“STANDARD”	view normal pictures.
“SOFT”	view mild pictures.
“PERSONAL”	receive the last adjusted picture setting from the “ADJUST” option in the “PICTURE” menu (see page 20).

Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

Select	To
“♪ DYNAMIC”	listen to dynamic and clear sound that emphasizes both the low and high tones.
“♪ DRAMA”	listen to sound that emphasizes voice and high tones.
“♪ SOFT”	listen to soft sound.
“♪ PERSONAL”	receive the last adjusted sound setting from the “ADJUST” option in the “SOUND” menu (see page 22).

Viewing the picture in wide mode

When receiving a wide-mode (16:9) signal, the picture will appear “squeezed” (compressed) on your screen. Use the WIDE MODE button to view the picture with the optimal effect.

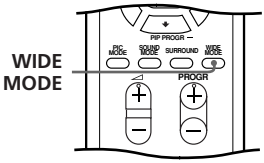

Select	To
“ON”	view the picture in wide-mode (16:9).
“OFF”	cancel wide-mode (16:9).

Listening with surround sound

You can use the SURROUND button to listen to the sound effects of a concert hall or movie theater.

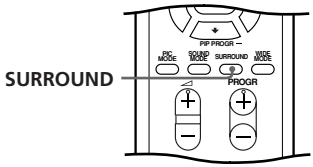

Select	To
“TruSurround”	listen to the surround sound that spreads out to the rear of a room.
“SIMULATED”	listen to monaural sound with a stereo-like effect.
“OFF”	cancel surround sound.

The surround of your TV is categorized as TruSurround.

TruSurround™ is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents.

■ Setting the timers

You can set your TV to turn on and off automatically by using the Wake Up timer and Sleep timer respectively.

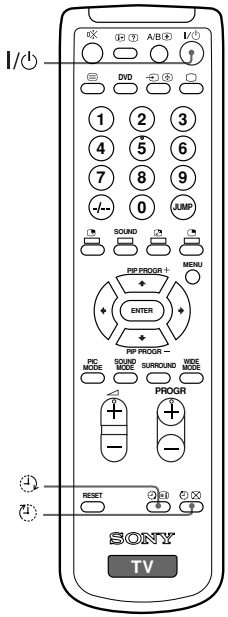

Setting the Wake Up timer

1 Press 🕘 until the desired period of time appears on the screen.

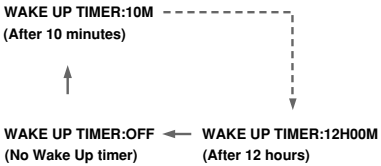

The Wake Up timer starts immediately after you have set it.

2 Select the program number or video input you want to wake up to.

3 Press I/⏻, or set the Sleep timer if you want the TV to turn off automatically.

The 🕘 indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press 🕘 until the desired period of time appears on the screen.

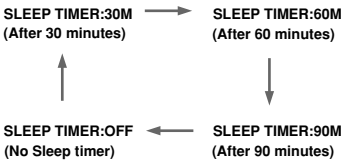

The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by pressing ⏻ on the TV to turn off the TV.
- If no buttons are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

■ Enjoying stereo or bilingual programs

▶ KV-AR29M61/AR25M61 only

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

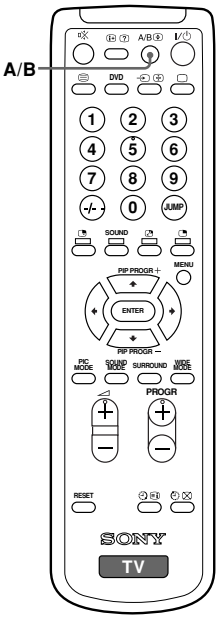

When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → MONO (Regular sound)
NICAM bilingual	NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound)
NICAM monaural	NICAM MAIN (Main sound) → MONO (Regular sound)

When receiving an A2 program

Broadcasting	On-screen display (Selected sound)
A2 stereo	STEREO (Stereo sound) → MONO (Regular sound)
A2 bilingual	MAIN (Main sound) → SUB (Sub sound)

Notes

- If the stereo sound is noisy when receiving a stereo program, select "MONO". The sound becomes monaural, but the noise is reduced.
- If the sound is distorted when receiving a monaural program through ⅂⌜ (antenna input), press A/B repeatedly until "MONO" appears on the screen. To cancel the monaural sound setting, press A/B again until "AUTO" appears on the screen.

■ Viewing Teletext

▶ KV-AR29M61/AR25M61 only

Some TV stations broadcast an information service called Teletext which allows you to receive various information, such as stock market reports and news.

You can use the buttons on the remote to view Teletext.

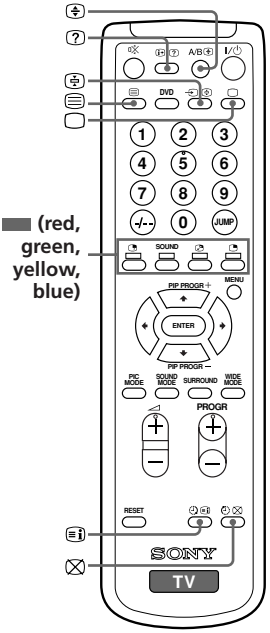

To	Do this
display a Teletext page on the TV picture	Press ☰. Each time you press ☰, the screen changes as follows: Teletext → Teletext and TV → TV. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.
check the contents of a Teletext service	Press ⓘ. An overview of the Teletext contents, including page numbers, appears on the screen.
select a Teletext page	Press the number buttons to enter the three-digit page number of the desired Teletext page. If you make a mistake, reenter the correct page number. To access the next or previous page, press PROGR +/–.
hold (pause) a Teletext display	Press ⊕ to display the symbol "⊕" at the top left corner of the screen. To resume normal Teletext viewing, press ⊕ or ☰.
reveal concealed information (e.g., an answer to a quiz)	Press ?. To conceal the information, press the button again.
enlarge the Teletext display	Press ⊕. Each time you press ⊕, the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.
stand by for a Teletext page while watching a TV program	1 Enter the Teletext page number that you want to refer to, then press ⊠. 2 When the page number is displayed, press ☰ to show the text.
select a FASTEXT menu or the colored boxes	Press ■ (red, green, yellow and blue) that corresponds to the desired menu or page number.
turn off Teletext	Press ▭.

Note

- The FASTEXT feature can be used only when the FASTEXT broadcast is available.

■ Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.

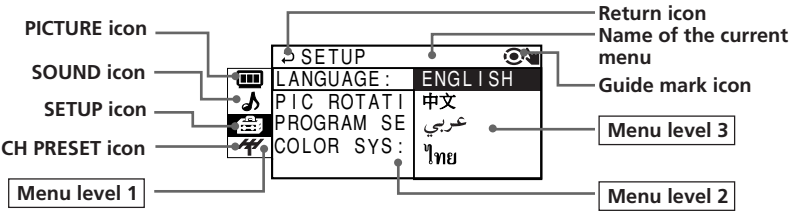

Level 1	Level 2	Level 3/Function	Page
"PICTURE"	"PICTURE MODE"	Select the picture mode: "DYNAMIC" → "STANDARD" → "SOFT" → "PERSONAL" → "ADJUST"	19
	"ADJUST"	Adjust the "PERSONAL" option: "PICTURE" → "COLOR" → "BRIGHT" → "HUE" → "SHARP"	
	"WIDE MODE"	Change the picture size: "ON" → "OFF"	
	"INTELLIGENT PIC"	Optimize picture quality: "ON" → "OFF"	
"SOUND"	"SOUND MODE"	Select the sound mode: "DYNAMIC" → "DRAMA" → "SOFT" → "PERSONAL" → "ADJUST"	21
	"ADJUST"	Adjust the "PERSONAL" option: "BASS" → "TREBLE" → "BALANCE" → "BBE"*	
	"SURROUND"	Select the "SURROUND" mode: "TruSurround" → "SIMULATED" → "OFF"	
	"INTELLIGENT VOL"	Adjust volume automatically: "ON" → "OFF"	
SETUP"	"LANGUAGE"	Change the menu language: "ENGLISH" → "中文"(Chinese) → "عربي"(Arabic) → "ไทย"(Thai)	23
	"PIC ROTATION"	Adjust the picture position.	
	"PROGRAM SETUP"	Adjust each program number settings.	
	"COLOR SYS"	Select the color system: "AUTO" → " PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43"	

Level 1	Level 2	Level 3/Function	Page
"CH PRESET"	"AUTO PROGRAM"	Preset channels automatically.	25
	"MANUAL PROGRAM"	Preset channels manually.	
	"TV SYS"	Select the TV system: "B/G" → "I" → "D/K" → "M"	

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE symbol are the trademarks of BBE Sound, Inc.

How to use the menu

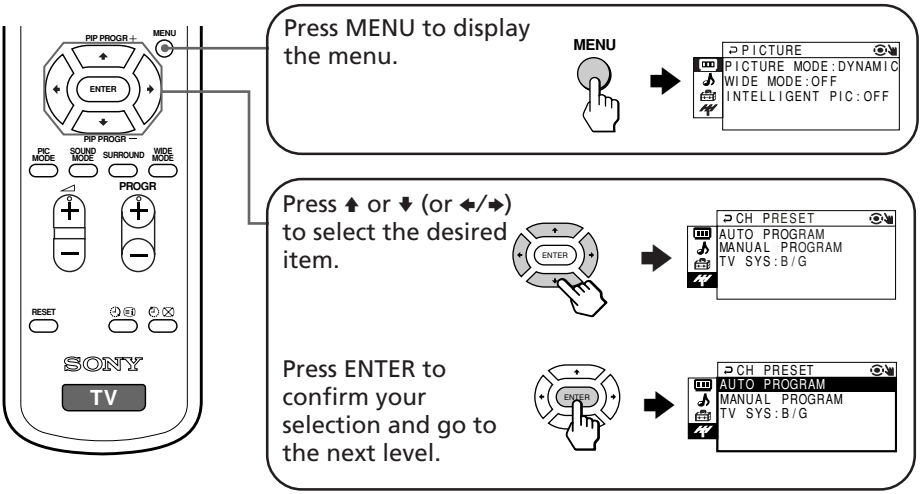

Other menu operations

To	Press
Adjust the setting value	↑, ↓, ← or →.
Move to the next/previous menu level	← or →.
Cancel the menu	MENU.

Tips

- If you want to exit from Menu level 2 to Menu level 1, press ↑ or ↓ until the return icon (⮌) is highlighted, then press ENTER.
- Some of the menu items can be operated directly using the remote buttons.
- The MENU, ENTER, and SELECT ▼/▲ buttons on the TV can also be used for the operations above.

Front of TV

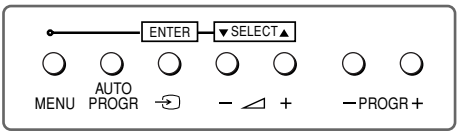

■ Changing the “PICTURE” setting

The “PICTURE” menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the “PICTURE” icon (▣) is selected, then press ENTER.

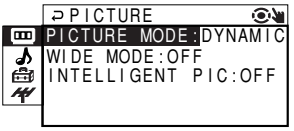

3 Press ↑ or ↓ to select the desired item (e.g., “PICTURE MODE”), then press ENTER.

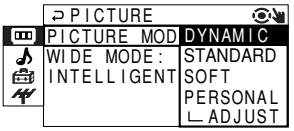

Select	To
“PICTURE MODE”	choose either “DYNAMIC”, “STANDARD”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“WIDE MODE”	choose either “ON” or “OFF” (see page 12).
“INTELLIGENT PIC”	optimize picture quality. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted picture settings from the “ADJUST” option (see page 20).

continue

continued

Adjusting the "ADJUST" items under "PICTURE MODE"

1 Press ↑ or ↓ to select the desired item (e.g.,"COLOR"), then press ENTER.

2 Adjust the value according to the following table, then press ENTER.

For	Press ↓ or ← to	Press ↑ or → to
"PICTURE"	decrease picture contrast.	increase picture contrast.
"COLOR"	decrease color intensity.	increase color intensity.
"BRIGHT"	darken the picture.	brighten the picture.
"HUE"	increase red picture tones.	increase green picture tones.
"SHARP"	soften the picture.	sharpen the picture.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

Notes

- "HUE" can be adjusted for the NTSC color system only.
- Reducing sharpness ("SHARP") can also reduce picture noise.

■ Changing the “SOUND” setting

The “SOUND” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press ↑ or ↓ to select the “SOUND” icon (♪), then press ENTER.

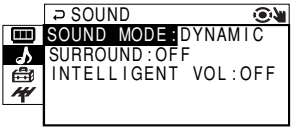

3 Press ↑ or ↓ to select the desired item (e.g., “SOUND MODE”), then press ENTER.

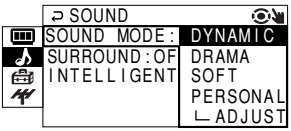

Select	To
“SOUND MODE”	choose either “DYNAMIC”, “DRAMA”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“SURROUND”	choose either “TruSurround”, “SIMULATED” or “OFF” (see page 12).
“INTELLIGENT VOL”	adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted sound settings from the “ADJUST” option (see page 22).

Adjusting the “ADJUST” items under “SOUND MODE”

1 Press ↑ or ↓ to select the desired item (e.g., “BALANCE”), then press ENTER.

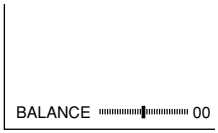

2 Adjust the value according to the following table, then press ENTER .

For	Press ↓ or ← to	Press ↑ or → to
“BASS”	decrease the bass.	increase the bass.
“TREBLE”	decrease the treble.	increase the treble.
“BALANCE”	increase the left speaker’s volume.	increase the right speaker’s volume.
“BBE”	select “HIGH” for higher enhancement of sound clarity; select “LOW” for lower enhancement of sound clarity; select “OFF” to cancel BBE sound.	

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select “PERSONAL”.

■ Changing the “SETUP” setting

The “SETUP” menu allows you to change the menu language, adjust the picture position, set up your program numbers and select the color system.

1 Press MENU.

2 Press ↑ or ↓ to select the “SETUP” icon (🧰), then press ENTER.

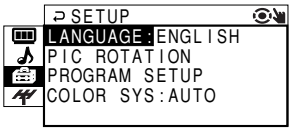

3 Press ↑ or ↓ to select the desired item (e.g., “COLOR SYS”), then press ENTER.

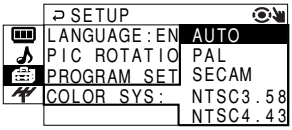

Select	To
“LANGUAGE”	change the menu language. Press ↑ or ↓ to select either “ENGLISH”, “中文” (Chinese), “ عربي ” (Arabic), or “ ไทย ” (Thai) then press ENTER. The selected menu language appears.
“PIC ROTATION”	adjust the picture position when it is not aligned with the TV screen. Press ↑ , → , ↓ or ← to adjust the picture position, then press ENTER.
“PROGRAM SETUP”	adjust each channel settings (see **Adjusting each program number settings (“PROGRAM SETUP”)** on page 24).
“COLOR SYS”	select the color system. Normally, set this to “AUTO”.

continue

continued

Adjusting each program number settings (“PROGRAM SETUP”)

1 Select “PROGRAM SETUP” from the “SETUP” menu.

2 Select “PR” and press ENTER. Press ↑ or ↓ to select the desired program number you want to adjust, then press ENTER.

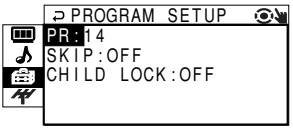

3 Press ↑ or ↓ to select the desired item (e.g., “SKIP”), then press ENTER.

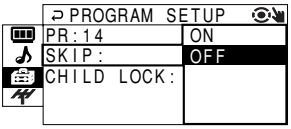

Select	To
“PR”	select the desired program number.
“SKIP”	skip unwanted or unused program number. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“CHILD LOCK”	prevent children from watching this selected program number. Press ↑ or ↓ to select “ON”, then press ENTER. The lock symbol (🔒) appears on the screen. To cancel, select “OFF”, then press ENTER. If you preset a locked program number, that program number will be unlocked automatically.

4 To continue adjusting other program numbers, press ↑ or ↓ to select “PR”, then repeat step 2 and 3.

■ Changing the Channel Preset ("CH PRESET") setting

The "CH PRESET" menu allows you to preset channels automatically, manually preset channels and select the TV system.

1 Press MENU.

2 Press ↑ or ↓ to select the "CH PRESET" icon (), then press ENTER.

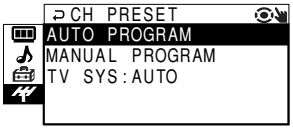

3 Press ↑ or ↓ to select the desired item (e.g., "AUTO PROGRAM"), then press ENTER.

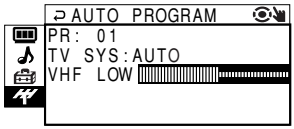

Select	To
"AUTO PROGRAM"	preset channels automatically.
"MANUAL PROGRAM"	manually preset desired channels and channels that cannot be preset automatically (see **Presetting channels manually** on page 26).
"TV SYS"	select the TV system. Press ↑ or ↓ to select either "B/G", "I", "D/K" or "M", then press ENTER.

Note (KV-AR29M50/AR25M80/AR25M50 only)

- During automatic channel presetting, your TV screen will indicate "B/G", "I", "D/K" or "M" for the TV system ("TV SYS").

continue

continued

Presetting channels manually

1 After selecting "MANUAL PROGRAM", select the program number to which you want to preset a channel.

(1) Make sure "PR" is selected, then press ENTER.

(2) Press ↑ or ↓ until the program number you want to preset (e.g., program number "10") appears on the menu, then press ENTER.

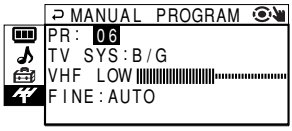

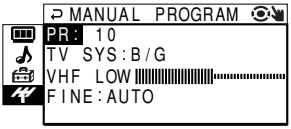

2 Select the desired channel.

(1) Make sure either "VHF LOW", "VHF HIGH", or "UHF" is selected, then press ENTER.

(2) Press ↑ or ↓ until the desired channel's broadcast appears on the TV screen, then press ENTER.

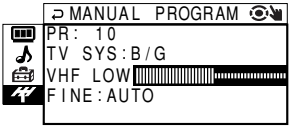

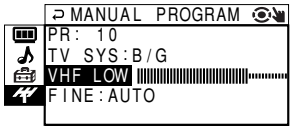

3 If the sound of the desired channel is abnormal, select the appropriate TV system.

(1) Press ↑ or ↓ to select "TV SYS", then press ENTER.

(2) Press ↑ or ↓ until the sound becomes normal, then press ENTER.

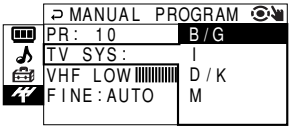

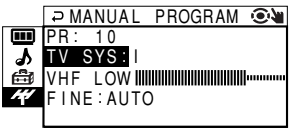

Tip

- You can also select the program number with the PROGR +/– or number buttons.

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the "FINE" tuning feature.

(1) Press ↑ or ↓ to select "FINE", then press ENTER.

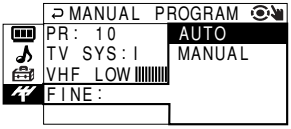

(2) Press ↑ or ↓ to select "MANUAL", then press ENTER.

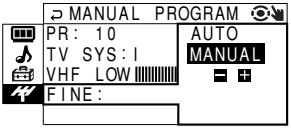

(3) Press ↑, ↓, ← or → until the picture and sound quality are optimal, then press ENTER.
The + or – icon on the menu flashes while tuning.

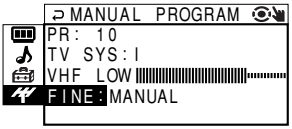

Note

- If you connect a VCR to ⅂ (antenna input), preset the signal output from the VCR to the program number 0 on the TV.

■ Connecting optional components

Connecting to the video input terminal ( )

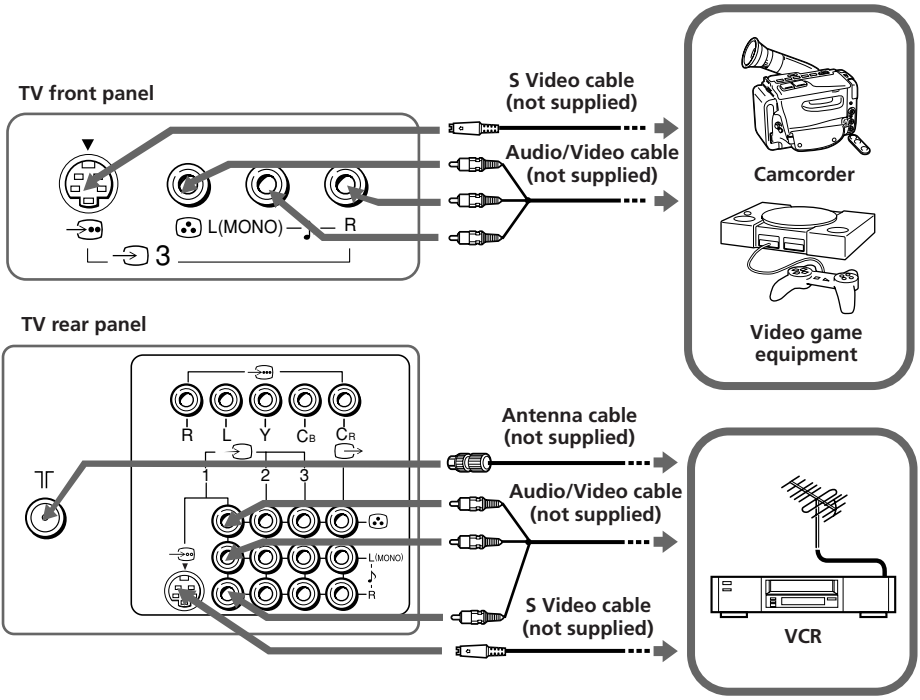

Connecting to the monitor output terminal ( )

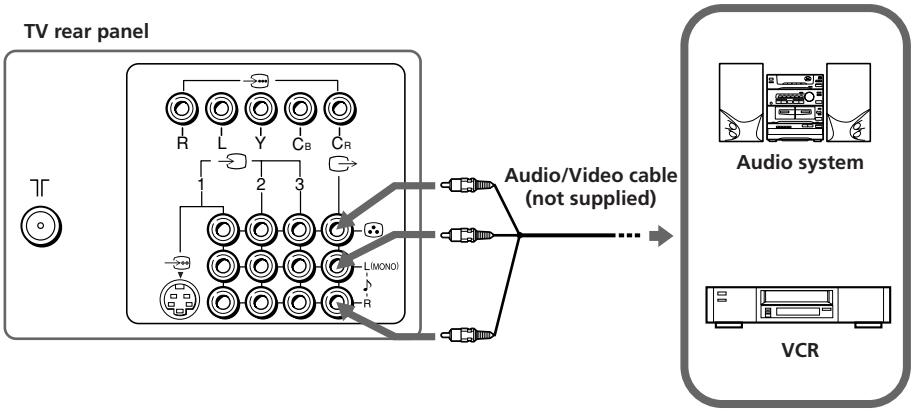

Connecting a DVD player to the component video input terminal ( )

1 Using an audio cable, connect R and L under (component video input) on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.

2 Using a component video cable, connect Y, C_B, and C_R under (component video input) on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.

3 Press DVD on the remote to watch the (component video input) and "DVD" will appear on your screen.

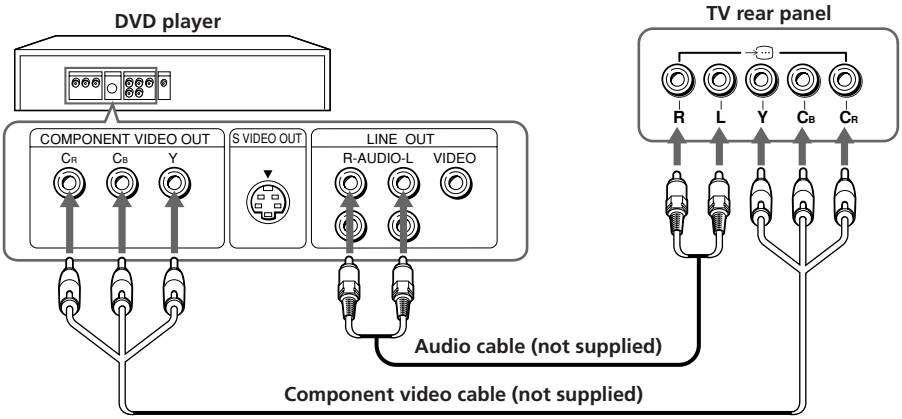

Notes

- If your DVD player can ouput interlace and progressive mode signals, select the interlace output when connecting to (component video input) on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
- Some DVD player terminals may be labeled differently:

Connect	To (on the DVD player)
Y (green)	Y
C_B (blue)	C_B, P_B, C_b or B-Y
C_R (red)	C_R, P_R, C_r or R-Y

- When both (S video) and (video) for 1 or 3 are connected at the same time, (S video) is automatically selected. To view (video), disconnect the S video cable.
- If you select "DVD" on your TV screen, the signal from the (monitor output) jacks will not be output properly. This does not indicate a malfunction.

Troubleshooting

If you have any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

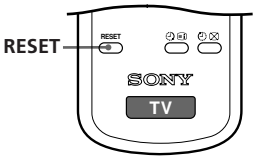

Reset function

Press the RESET button on your remote control. Your TV will go blank for about half a second then the picture will reappear with "RESET" displayed on your TV screen for about 10 seconds.

Pressing RESET will set your TV to the factory setting, but certain problems may be solved.

Troubleshooting guide

Symptom	Possible cause	Solutions	Page
Snowy picture  **Noisy sound**	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	28
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Channel presetting is inappropriate or incomplete.	• Display the "CH PRESET" menu and select "MANUAL PROGRAM" to preset the channel again.	26
	• Signal transmission is low.	• Try using a booster.	–
Distorted picture **Noisy sound**	• Broadcast signals are too strong.	• Turn off or disconnect the booster if it is in use.	–
Good picture **Noisy sound**	• The TV system setting is inappropriate.	• Display the "CH PRESET" menu and select the appropriate TV system ("TV SYS").	26

Symptom	Possible cause	Solutions	Page
No picture **No sound** 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and VCR connections.	28
	• The TV is not turned on.	• Press I/⏻ (power). • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	9 8
Good picture **No sound** 	• The volume level is too low.	• Press + to increase the volume level.	9
	• The sound is muted.	• Press 🔇 to cancel the muting.	9
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.	– –
Double images or "ghosts" 	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna. • Use the fine tuning ("FINE") function.	– 27
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Use of a booster is inappropriate.	• Turn off or disconnect the booster if it is in use.	–
No color 	• The color level setting is too low.	• Display the "PICTURE" menu and select "ADJUST" of "PICTURE MODE", then adjust the "COLOR" level.	20
	• The color system setting is inappropriate.	• Display the "SETUP" menu and check the color system ("COLOR SYS") setting (usually set this to "AUTO").	23
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–

continue

continued

Symptom	Possible cause	Solutions	Page
Picture slant 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. • Display the "SETUP" menu and adjust "PIC ROTATION" so that the picture position is optimal.	– 23
Abnormal color patches 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.	–
TV cannot receive stereo broadcast sound.	• The stereo reception setting is inappropriate.	• Press A/B until "AUTO" appears on the screen.	14
or **Stereo broadcast sound switches on and off or is distorted. (KV-AR29M61/ AR25M61 only)**	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	28
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
"100" appears at the top of the screen and there is no Teletext display. (KV-AR29M61/ AR25M61 only)	• The channel carries no Teletext broadcast.	—	15
Teletext display is incomplete (snowy picture or double images). (KV-AR29M61/ AR25M61 only)	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR, and at the wall.	28
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Signal transmission is too low.	• Try using a booster. • Use the fine tuning ("FINE") function.	– 27
The ⏻ (standby) indicator on your TV flashes red several times after every three seconds.	• Your TV's self-diagnosis function indicates the possible problems.	• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.	–

Symptom	Possible cause	Solutions	Page
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.	—	–
A small "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

Specifications

	KV-AR29M61 KV-AR29M50	KV-AR25M61 KV-AR25M80 KV-AR25M50	Note
Power requirements	110-240 V AC, 50/60 Hz		
Power consumption (W)	Indicated on the rear of the TV		
Television system	B/G, I, D/K, M		
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43		
Stereo/Bilingual system	NICAM Stereo/Bilingual B/G, I; A2 Stereo/Bilingual B/G		KV-AR29M61 KV-AR25M61 only
Teletext language	English, Arabic, French		KV-AR29M61 KV-AR25M61 only
Channel coverage			
B/G	VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41		
I	UHF : B21 to B68 CATV : S01 to S03, S1 to S41		
D/K	VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39		
M	VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84		
(Antenna)	75-ohm external terminal		
Audio output (Speaker)	8W + 8W		
Number of terminal			
(Video)	Input: 4* Output: 1	Phono jacks; 1 Vp-p, 75 ohms	* Three input lines available
(Audio)	Input: 4* Output: 1	Phono jacks; 500 mVrms	* Three input lines available
(S Video)	Input: 2	Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms	
(Component Video)	Input: 1	Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative C_B: 0.7 Vp-p, 75 ohms C_R: 0.7 Vp-p, 75 ohms Audio: 500 mVrms	
(Headphone)	Output: 1	Stereo minijack	
Picture tube	29 in.	25 in.	
Tube size (cm)	72	64	Measured diagonally
Screen size (cm)	68	60	Measured diagonally
Dimensions (w/h/d, mm)	765 × 578 × 502	650 × 517 × 496	
Mass (kg)	49	39	

Design and specifications are subject to change without notice.

http://www.sony.net/
Sony Corporation

SONY

4-089-575-**11** (1)

Trinitron Color TV

Operating Instructions — GB

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

使用說明書 — CT

- 使用本電視機之前請先詳細閱讀此手冊，並妥善保存以備日後用作參考。

Panduan Pengendalian — MY

- Sebelum mengendalikan unit, sila baca buku panduan ini dengan teliti dan simpan untuk rujukan masa depan.

FD Trinitron WEGA

KV-AR34
KV-AR29
KV-AR25

© 2002 Sony Corporation

M66

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

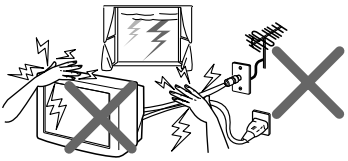

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

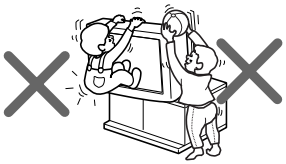

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

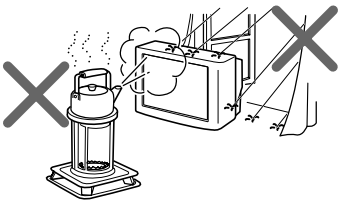

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

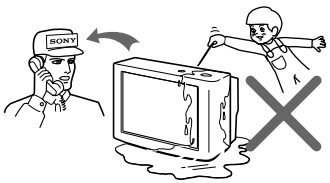

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

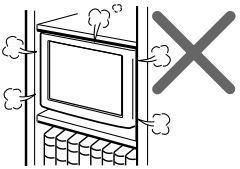

Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

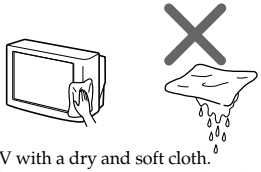

Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.

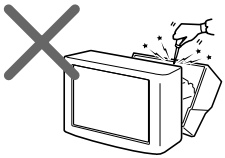

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

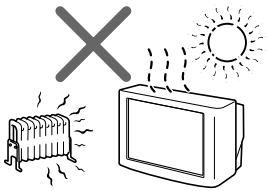

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

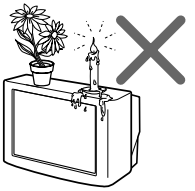

Do not place any objects on the TV.

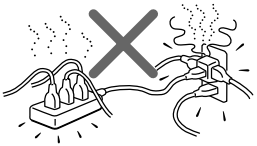

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

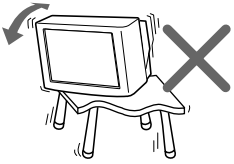

Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

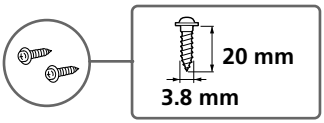

screws

clamps



band

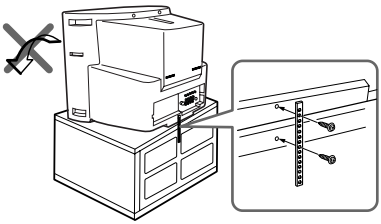

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

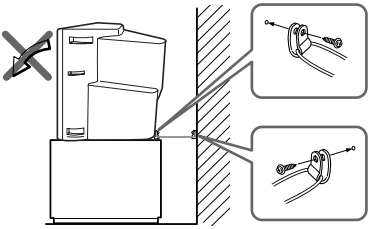

(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

or

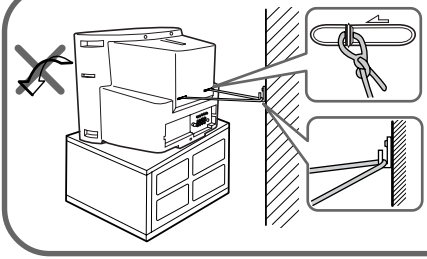

(1) Attach each end of a cord or chain to the provided holders at the rear of your TV.
(2) Securely fix the attached cord or chain to a wall or pillar using an attachment which can support the TV set weight.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

Getting Started **6**
Setting up your TV ("INITIAL SETUP") **7**

Overview of Controls

TV front and rear panels **8**
Remote control **9**

Advanced Operations

Selecting the picture and sound modes **11**
Viewing the picture with DTE **12**
Viewing the picture in wide mode .. **12**
Watching Picture-in-Picture (PIP) ... **13**
Selecting a TV program using PIP .. **14**
Listening with surround sound **14**
Setting the timers **15**
Enjoying stereo or bilingual programs **16**
Viewing Teletext **17**

Menu Adjustment

Introducing the menu system **18**
Changing the "PICTURE" setting ... **21**
Changing the "SOUND" setting **23**
Changing the Picture-in-Picture ("PIP") setting **25**
Changing the "SETUP" setting **26**
Changing the Channel Preset ("CH PRESET") setting **28**

Additional Information

Connecting optional components ... **31**
Troubleshooting **33**
Specifications ..... **Back cover**

GB

■ Getting Started

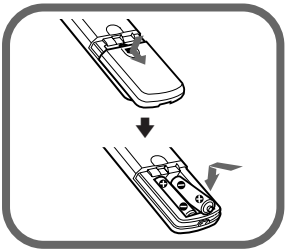

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

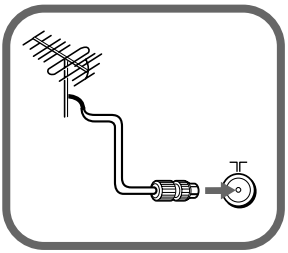

Step 2

Connect the antenna cable (not supplied) to ⅂⊢ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 31).

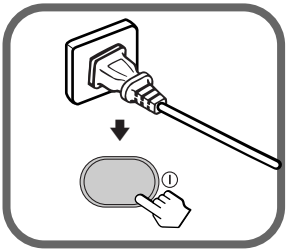

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

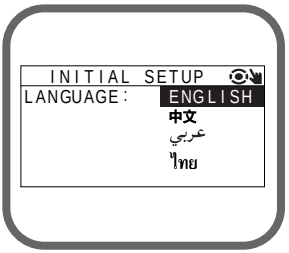

Step 4

Set up the TV by following the instructions of the "INITIAL SETUP"menu (see page 7).

■ Setting up your TV ("INITIAL SETUP")

When you turn on your TV for the first time, the "INITIAL SETUP" menu will appear. This menu allows you to change the menu language, adjust the picture position and preset the TV channels automatically.

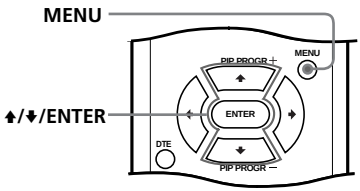

1 Press ↑ or ↓ to select the desired menu language (e.g.,"ENGLISH"), then press ENTER.

The selected menu language appears.

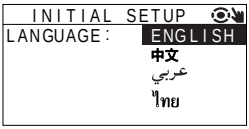

2 If the "PIC ROTATION" bar is slanted, press ↑ or ↓ to adjust it, then press ENTER.

If no adjustment is necessary, then press ENTER.

The ⊞ or ⊟ icon on the screen flashes while adjusting.

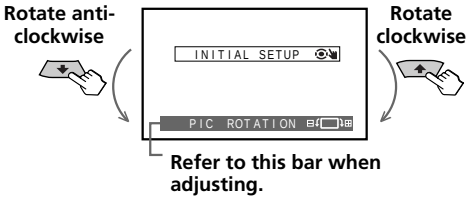

3 Press ↑ or ↓ to select "YES", then press ENTER to preset the channels automatically (see page 28).

The screen will indicate automatic presetting is in progress.

To skip automatic channel presetting, select "NO", then press ENTER.

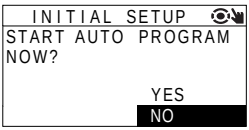

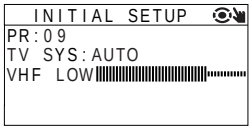

4 Press ↑ or ↓ to select "NO", then press ENTER. The "INITIAL SETUP" menu will not appear again the next time you turn on the TV by pressing ⏻.

To allow this menu to appear again, select "YES", then press ENTER.

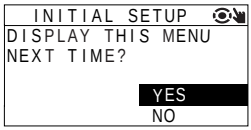

Tips

- You can immediately go to the end of the "INITIAL SETUP" menu by pressing MENU.
- You can also set up your TV using the menu system (see page 18).

■ TV front and rear panels

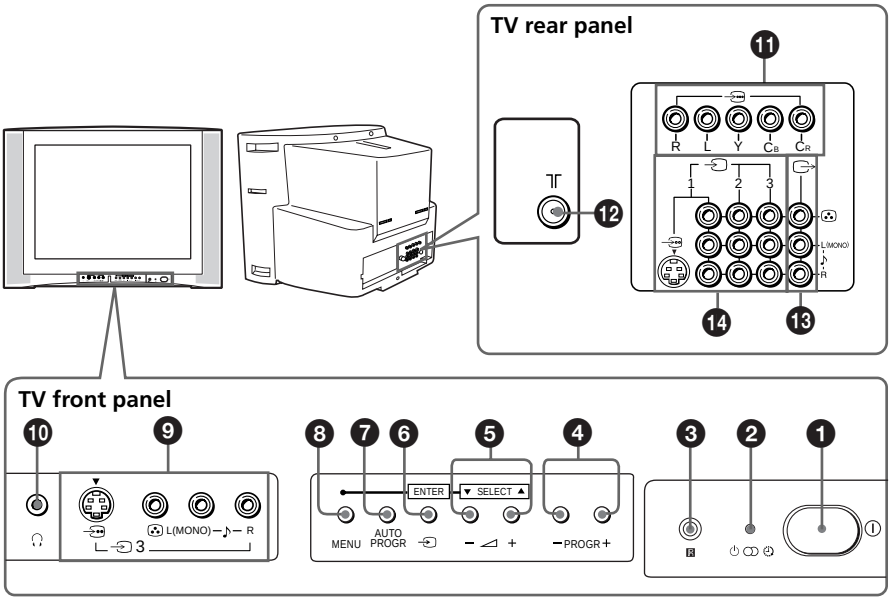

Button/Terminal	Function	Page
❶ ⏻	Turn off or turn on the TV.	6
❷ ⏻	Standby indicator.	–
❷ 🕘	Wake Up indicator.	15
❷ ◯◯	Stereo/bilingual indicator.	16
❸	Remote control sensor.	–
❹ PROGR +/–	Select program number.	–
❺ ◿ +/–	Adjust volume.	–
❻ ⇥	Select TV or video input.	–
❼ AUTO PROGR	Preset channels automatically.	–
Menu operations		
❺ SELECT ▼/▲	Select and adjust items.	20
❻ ENTER	Confirm selected items.	20
❽ MENU	Display or cancel the menu.	20
❾ ⇥3	Video input terminal 3.	31
❿ 🎧	Headphone jack.	–
⓫ ⇥	Component video input terminal.	32
⓬ ⊤	Antenna input terminal.	31
⓭ ⇨	Monitor output terminal.	31
⓮ ⇥1, ⇥2, ⇥3	Video input terminal 1, 2, 3.	31

■ Remote control

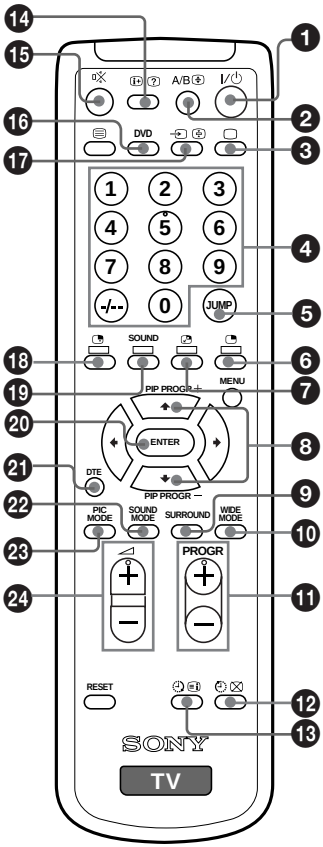

Button	Function	Page
❶ I/⏻	Turn off temporarily or turn on the TV.	–
❸ ▭	Display the TV input.	–
❹ 0 – 9, -/--	Input numbers.	–
❺ JUMP	Jump to previous program number.	–
❾ SURROUND	Select surround mode.	14
❿ WIDE MODE	Select wide-mode (16:9).	12
⓫ PROGR +/–	Select program number.	–
⓮ i+	Display on-screen information.	–
⓯ 🔇	Mute the sound.	–
⓰ DVD	Select component video input.	32
⓱ ▭	Select TV or video input.	31
㉑ DTE	Select DTE mode.	12
㉒ SOUND MODE	Select sound mode.	11
㉓ PIC MODE	Select picture mode.	11
㉔ ◿ +/–	Adjust volume.	–
Timer operations		
⓬ ⏲	Set TV to turn off automatically.	15
⓭ ⏲	Set TV to turn on automatically.	15
PIP operations (yellow label)		
❻ ▭	Display a sub screen.	13
❼ ▭	Swap main and sub screens.	13
❽ PIP PROGR +/ PIP PROGR –	Display and change programs in the sub screen.	13,14
⓲ ▭	Select a video input in the sub screen.	13
⓳ SOUND	Swap sound between main and sub screen.	13
⓴ ENTER	Change sub screen to main screen.	14
Stereo/bilingual operations		
❷ A/B	Select stereo/bilingual mode.	16

continue

continued

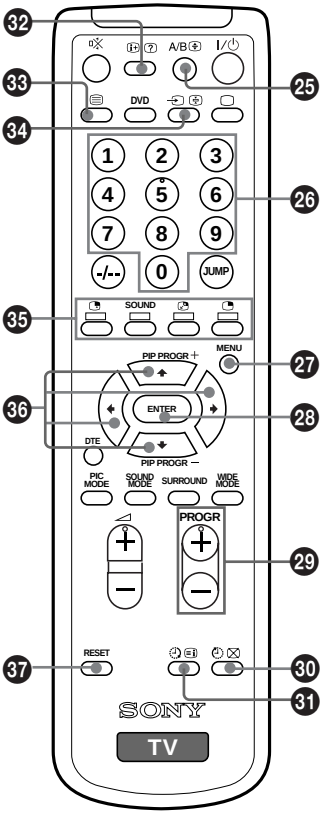

Button	Function	Page
Menu operations		
㉗ MENU	Display or cancel the menu.	20
㉘ ENTER	Confirm selected items.	20
㊱ ↑, ↓, ←, →	Select and adjust items.	20
Teletext operations (green label)		
㉕ ⇳	Enlarge the Teletext display.	17
㉖ 0 – 9	Input Teletext page number.	17
㉙ PROGR +/–	Display the next or previous page.	17
㉚ ⊠	Show TV screen while waiting for Teletext page.	17
㉛ ⓘ	Display Teletext service contents.	17
㉜ ?	Reveal concealed information.	17
㉝ ☰	Displat Teletext broadcast.	17
㉞ ⇳	Stop Teletext display from scrolling.	17
㉟ ▬ (red, green, yellow, blue)	Access a FASTEXT menu.	17
㊲ RESET	Set TV to factory setting.	33

■ Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the “PERSONAL” option.

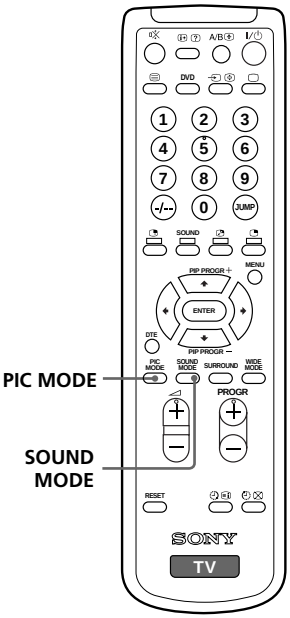

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
“DYNAMIC”	view high contrast pictures.
“STANDARD”	view normal pictures.
“SOFT”	view mild pictures.
“PERSONAL”	receive the last adjusted picture setting from the “ADJUST” option in the “PICTURE” menu (see page 22).

Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

Select	To
“♪ DYNAMIC”	listen to dynamic and clear sound that emphasizes both the low and high tones.
“♪ DRAMA”	listen to sound that emphasizes voice and high tones.
“♪ SOFT”	listen to soft sound.
“♪ PERSONAL”	receive the last adjusted sound setting from the “ADJUST” option in the “SOUND” menu (see page 24).

■ Viewing the picture with DTE

The Digital Texture Enhancer (DTE) feature allows you to enjoy a more natural and vivid picture by optimizing the contrast of each object in the picture.
You can use the DTE button to select “ON” or “OFF”.

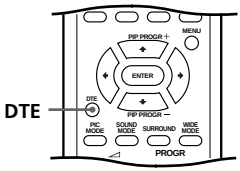

Select	To
“ON”	enhance each object’s details and contours with optimum contrast.
“OFF”	cancel DTE.

Note

- The DTE mode is not selectable when the “GAME MODE”is turned “ON”.

The DTE logo (DTE Digital Texture Enhancer) and “DTE” are trademarks of Sony Corporation.

■ Viewing the picture in wide mode

When receiving a wide-mode (16:9) signal, the picture will appear “squeezed” (compressed) on your screen. Use the WIDE MODE button to view the picture with the optimal effect.

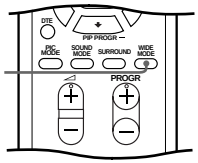

Select	To
“ON”	view the picture in wide-mode (16:9).
“OFF”	cancel wide-mode (16:9).

■ Watching Picture-in-Picture (PIP)

With the PIP feature, you can display two different TV programs or video input at the same time by using the ◔ button.

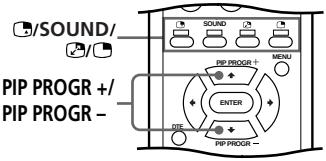

To	Press
Display a sub screen	◔. To cancel the sub screen, press the button again.
Change a program number in the sub screen	PIP PROGR + or PIP PROGR –.
Select a video input in the sub screen	◔.
Swap pictures between the main and sub screens	◔.
Swap sound between the main and sub screens A "♪" symbol will appear next to the program number or video input display to indicate which screen you are hearing.	SOUND.

Note

- The picture and sound from the ⇨ (monitor output) terminals will always be from the main screen, even when you select the sub screen sound by pressing SOUND (see page 31).

■ Selecting a TV program using PIP

You can select your desired TV program directly from the PIP sub screen by using PIP PROGR +/– buttons.

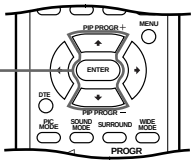

1 Press PIP PROGR +/– until the desired program appears in the sub screen.

2 Press ENTER to change the sub screen program to the main screen.

■ Listening with surround sound

You can use the SURROUND button to listen to the sound effects of a concert hall or movie theater.

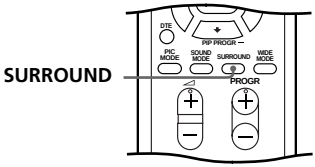

Select	To
"TruSurround"	listen to the surround sound that spreads out to the rear of a room.
"SIMULATED"	listen to monaural sound with a stereo-like effect.
"OFF"	cancel surround sound.

The surround of your TV is categorized as TruSurround.

TruSurround™ is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents.

■ Setting the timers

You can set your TV to turn on and off automatically by using the WAKE UP and SLEEP timers respectively.

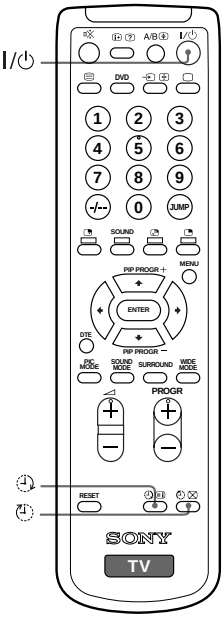

Setting the Wake Up timer

1 Press 🕘 until the desired period of time appears on the screen.

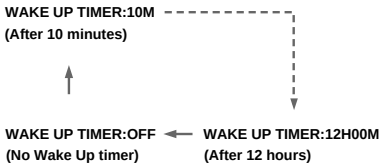

The Wake Up timer starts immediately after you have set it.

2 Select the program number or video input you want to wake up to.

3 Press **I**/⏻, or set the Sleep timer if you want the TV to turn off automatically.

The 🕘 indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press 🕘 until the desired period of time appears on the screen.

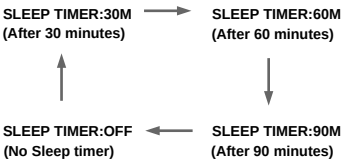

The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by pressing ⏻ on the TV to turn off the TV.
- If no buttons are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

■ Enjoying stereo or bilingual programs

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

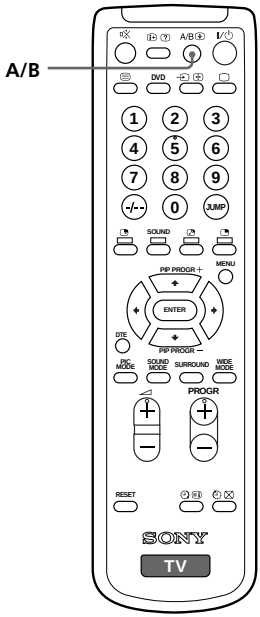

When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → MONO (Regular sound)
NICAM bilingual	NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound)
NICAM monaural	NICAM MAIN (Main sound) → MONO (Regular sound)

When receiving an A2 program

Broadcasting	On-screen display (Selected sound)
A2 stereo	STEREO (Stereo sound) → MONO (Regular sound)
A2 bilingual	MAIN (Main sound) → SUB (Sub sound)

Notes

- If the stereo sound is noisy when receiving a stereo program, select "MONO". The sound becomes monaural, but the noise is reduced.
- If the sound is distorted when receiving a monaural program through ⅂Γ (antenna input), press A/B repeatedly until "MONO" appears on the screen. To cancel the monaural sound setting, press A/B again until "AUTO" appears on the screen.
- Your TV can only receive monaural sound when you select the PIP sub screen sound by pressing SOUND (see page 13).

■ Viewing Teletext

Some TV stations broadcast an information service called Teletext which allows you to receive various information, such as stock market reports and news.

You can use the buttons on the remote to view Teletext.

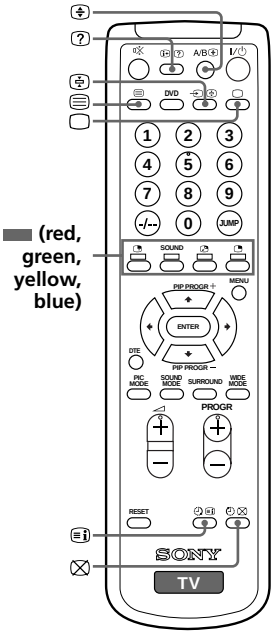

To	Do this
display a Teletext page on the TV picture	Press ☰. Each time you press ☰, the screen changes as follows: Teletext → Teletext and TV → TV. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.
check the contents of a Teletext service	Press ⓘ. An overview of the Teletext contents, including page numbers, appears on the screen.
select a Teletext page	Press the number buttons to enter the three-digit page number of the desired Teletext page. If you make a mistake, reenter the correct page number. To access the next or previous page, press PROGR +/–.
hold (pause) a Teletext display	Press ⊕ to display the symbol "⊕" at the top left corner of the screen. To resume normal Teletext viewing, press ⊕ or ☰.
reveal concealed information (e.g., an answer to a quiz)	Press ?. To conceal the information, press the button again.
enlarge the Teletext display	Press ⊕. Each time you press ⊕, the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.
stand by for a Teletext page while watching a TV program	1 Enter the Teletext page number that you want to refer to, then press ⊠. 2 When the page number is displayed, press ☰ to show the text.
select a FASTEXT menu or the colored boxes	Press ■ (red, green, yellow and blue) that corresponds to the desired menu or page number.
turn off Teletext	Press ▭.

Note

- The FASTEXT feature can be used only when the FASTEXT broadcast is available.

■ Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.

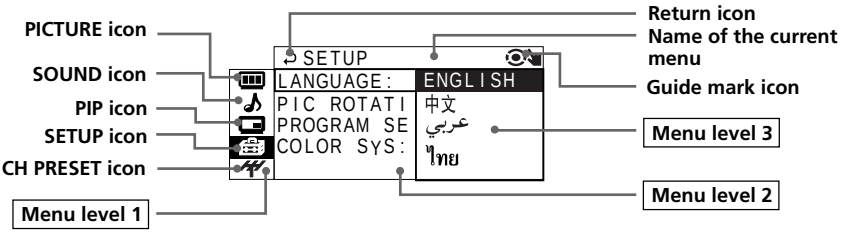

Level 1	Level 2	Level 3/Function	Page
"PICTURE"	"PICTURE MODE"	Select the picture mode: "DYNAMIC" → "STANDARD" → "SOFT" → "PERSONAL" → "ADJUST"	21
	"ADJUST"	Adjust the "PERSONAL" option: "PICTURE" → "COLOR" → "BRIGHT" → "HUE" → "SHARP"	
	"DTE"	Optimize the picture contrast: "ON" → "OFF"	
	"WIDE MODE"	Change the picture size. "ON" → "OFF"	
	"GAME MODE"	Adjust the picture settings for video games. "ON" → "OFF"	
"SOUND"	"SOUND MODE"	Select the sound mode: "DYNAMIC" → "DRAMA" → "SOFT" → "PERSONAL" → "ADJUST"	23
	"ADJUST"	Adjust the "PERSONAL" option: "BASS" → "TREBLE" → "BALANCE" → "BBE"*	
	"SURROUND"	Select the "SURROUND" mode: "TruSurround" → "SIMULATED" →"OFF"	
	"INTELLIGENT VOL"	Adjust volume automatically: "ON" → "OFF"	
"PIP"	"POSITION"	Change the position of the sub screen.	25
	"PIP"	Display a sub screen within the main picture: "ON" → "OFF"	
	"SWAP"	Exchange pictures between main screen and sub screen.	

Level 1	Level 2	Level 3/Function	Page
"SETUP"	"LANGUAGE"	Change the menu language: "ENGLISH" → "中文"(Chinese) → "عربي"(Arabic) → "ไทย"(Thai)	26
	"PIC ROTATION"	Adjust the picture position.	
	"PROGRAM SETUP"	Adjust each program number settings.	
	"COLOR SYS"	Select the color system: "AUTO" →" PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43"	
"CH PRESET"	"AUTO PROGRAM"	Preset channels automatically.	28
	"MANUAL PROGRAM"	Preset channels manually.	
	"TV SYS"	Select the TV system: "B/G" → "I" → "D/K" → "M"	

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE symbol are the trademarks of BBE Sound, Inc.

continue

continued

How to use the menu

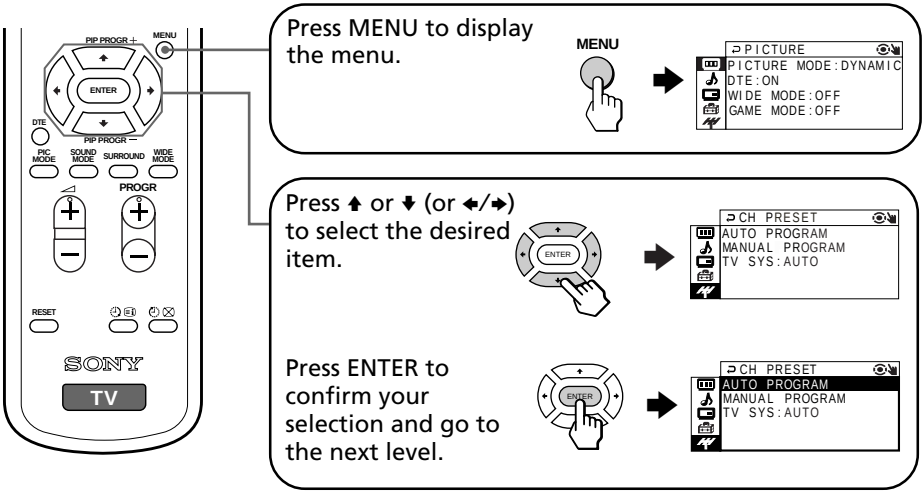

Other menu operations

To	Press
Adjust the setting value	↑, ↓, ← or →.
Move to the next/previous menu level	← or →.
Cancel the menu	MENU.

Tips

- If you want to exit from Menu level 2 to Menu level 1, press ↑ or ↓ until the return icon (⮌) is highlighted, then press ENTER.
- Some of the menu items can be operated directly using the remote buttons.
- The MENU, ENTER, and SELECT ▼/▲ buttons on the TV can also be used for the operations above.

Front of TV

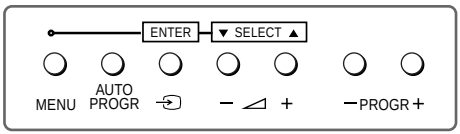

■ Changing the “PICTURE” setting

The “PICTURE” menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the “PICTURE” icon ( ) is selected, then press ENTER.

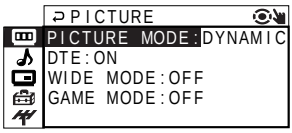

3 Press ↑ or ↓ to select the desired item (e.g., “PICTURE MODE”), then press ENTER.

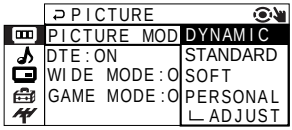

Select	To
“PICTURE MODE”	choose either “DYNAMIC”, “STANDARD”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“DTE”	optimize the picture contrast. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“WIDE MODE”	choose either “ON” or “OFF” (see page 12).
“GAME MODE”	adjust the picture setting that is suitable to view video games. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted picture settings from the “ADJUST” option (see page 22).

Notes

- “GAME MODE” is available only when receiving signals through (video input), (S video input), or (component video input).
- The DTE mode is not selectable when “GAME MODE” is turned “ON”.

continue

continued

Adjusting the "ADJUST" items under "PICTURE MODE"

1 Press ↑ or ↓ to select the desired item (e.g.,"COLOR"), then press ENTER.

2 Adjust the value according to the following table, then press ENTER.

For	Press ↓ or ← to	Press ↑ or → to
"PICTURE"	decrease picture contrast.	increase picture contrast.
"COLOR"	decrease color intensity.	increase color intensity.
"BRIGHT"	darken the picture.	brighten the picture.
"HUE"	increase red picture tones.	increase green picture tones.
"SHARP"	soften the picture.	sharpen the picture.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

Notes

- "HUE" can be adjusted for the NTSC color system only.
- Reducing sharpness ("SHARP") can also reduce picture noise.

■ Changing the “SOUND” setting

The “SOUND” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press ↑ or ↓ to select the “SOUND” icon (♪), then press ENTER.

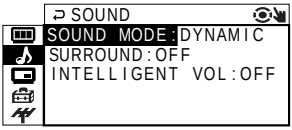

3 Press ↑ or ↓ to select the desired item (e.g., “SOUND MODE”), then press ENTER.

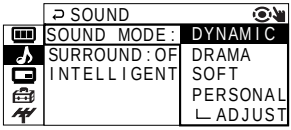

Select	To
“SOUND MODE”	choose either “DYNAMIC”, “DRAMA”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“SURROUND”	choose either “TruSurround”, “SIMULATED” or “OFF” (see page 14).
“INTELLIGENT VOL”	adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted sound settings from the “ADJUST” option (see page 24).

continue

continued

Adjusting the "ADJUST" items under "SOUND MODE"

1 Press ↑ or ↓ to select the desired item (e.g., "BALANCE"), then press ENTER.

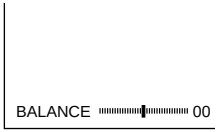

2 Adjust the value according to the following table, then press ENTER .

For	Press ↓ or ← to	Press ↑ or → to
"BASS"	decrease the bass.	increase the bass.
"TREBLE"	decrease the treble.	increase the treble.
"BALANCE"	increase the left speaker's volume.	increase the right speaker's volume.
"BBE"	select "HIGH" for higher enhancement of sound clarity; select "LOW" for lower enhancement of sound clarity; select "OFF" to cancel BBE sound.	

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

■ Changing the Picture-in-Picture ("PIP") setting

The "PIP" menu allows you to display a sub screen, change the sub screen position and exchange pictures between the main and sub screens.

1 Press MENU.

2 Press ↑ or ↓ to select the "PIP" icon (), then press ENTER.

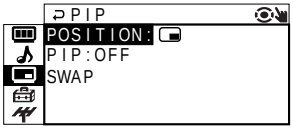

3 Press ↑ or ↓ to select the desired item (e.g., "POSITION"), then press ENTER.

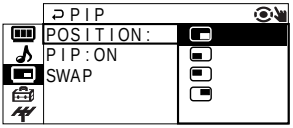

Select	To
"POSITION"	change the position of the sub screen. Press ↑ or ↓ to select the desired position, then press ENTER . 
"PIP"	display a sub screen. Press ↑ or ↓ to select "ON", then press ENTER . To cancel, press or select "OFF", then press ENTER .
"SWAP"	exchange pictures between the main screen and sub screen.

■ Changing the “SETUP” setting

The “SETUP” menu allows you to change the menu language, adjust the picture position, set up your program numbers and select the color system.

1 Press MENU.

2 Press ↑ or ↓ to select the “SETUP” icon (), then press ENTER.

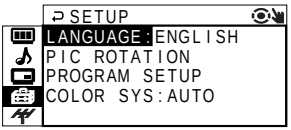

3 Press ↑ or ↓ to select the desired item (e.g., “COLOR SYS”), then press ENTER.

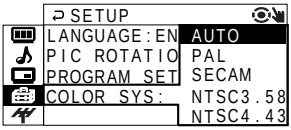

Select	To
“LANGUAGE”	change the menu language. Press ↑ or ↓ to select either “ENGLISH”, “中文” (Chinese), “ عربي ” (Arabic), or “ ไทย ” (Thai), then press ENTER. The selected menu language appears.
“PIC ROTATION”	adjust the picture position when it is not aligned with the TV screen. Press ↑ , → , ↓ or ← to adjust the picture position, then press ENTER.
“PROGRAM SETUP”	adjust each channel settings (see **Adjusting each program number settings (“PROGRAM SETUP”)** on page 27).
“COLOR SYS”	select the color system. Normally, set this to “AUTO”.

Adjusting each program number settings (“PROGRAM SETUP”)

1 Select “PROGRAM SETUP” from the “SETUP” menu.

2 Select “PR” and press ENTER. Press ↑ or ↓ to select the desired program number you want to adjust, then press ENTER.

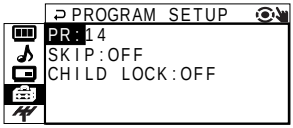

3 Press ↑ or ↓ to select the desired item (e.g., “SKIP”), then press ENTER.

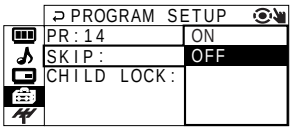

Select	To
“PR”	select the desired program number.
“SKIP”	skip unwanted or unused program number. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“CHILD LOCK”	prevent children from watching this selected program number. Press ↑ or ↓ to select “ON”, then press ENTER. The lock symbol (🔒) appears on the screen. To cancel, select “OFF”, then press ENTER. If you preset a locked program number, that program number will be unlocked automatically.

4 To continue adjusting other program numbers, press ↑ or ↓ to select “PR”, then repeat step 2 and 3.

■ Changing the Channel Preset ("CH PRESET") setting

The "CH PRESET" menu allows you to preset channels automatically, manually preset channels and select the TV system.

1 Press MENU.

2 Press ↑ or ↓ to select the "CH PRESET" icon (), then press ENTER.

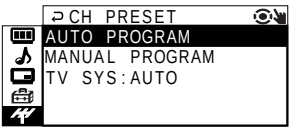

3 Press ↑ or ↓ to select the desired item (e.g., "AUTO PROGRAM"), then press ENTER.

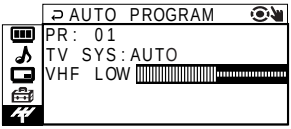

Select	To
"AUTO PROGRAM"	preset channels automatically.
"MANUAL PROGRAM"	manually preset desired channels and channels that cannot be preset automatically (see **Presetting channels manually** on page 29).
"TV SYS"	select the TV system. Press ↑ or ↓ to select either "B/G", "I", "D/K" or "M", then press ENTER.

Presetting channels manually

1 After selecting "MANUAL PROGRAM", select the program number to which you want to preset a channel.

(1) Make sure "PR" is selected, then press ENTER.

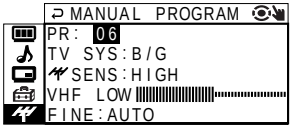

(2) Press ↑ or ↓ until the program number you want to preset (e.g., program number "10") appears on the menu, then press ENTER.

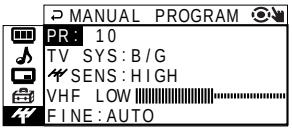

2 Select the desired channel.

(1) Make sure either "VHF LOW", "VHF HIGH", or "UHF" is selected, then press ENTER.

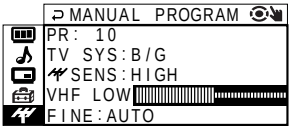

(2) Press ↑ or ↓ until the desired channel's broadcast appears on the TV screen, then press ENTER.

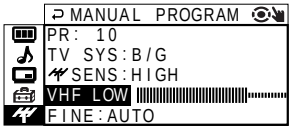

3 If the sound of the desired channel is abnormal, select the appropriate TV system.

(1) Press ↑ or ↓ to select "TV SYS", then press ENTER.

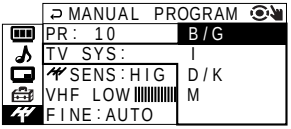

(2) Press ↑ or ↓ until the sound becomes normal, then press ENTER.

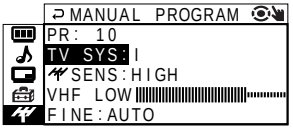

Tip

- You can also select the program number with the PROGR +/– or number buttons.

continue

continued

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the "FINE" tuning feature.

(1) Press ↑ or ↓ to select "FINE", then press ENTER.

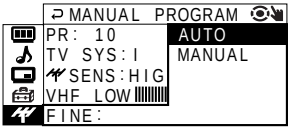

(2) Press ↑ or ↓ to select "MANUAL", then press ENTER.

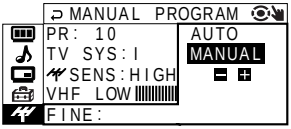

(3) Press ↑, ↓, ← or → until the picture and sound quality are optimal, then press ENTER.
The + or – icon on the menu flashes while tuning.

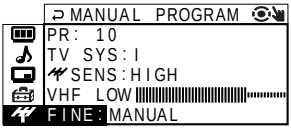

5 If the TV signal is too strong and the picture is distorted, you can adjust the TV reception sensitivity.

(1) Press ↑ or ↓ to select "SENS", then press ENTER.

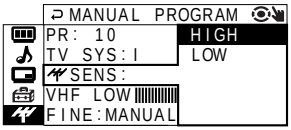

(2) Press ↑ or ↓ to select "LOW", then press ENTER.

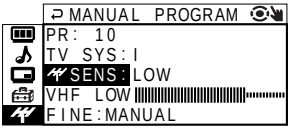

Note

- If you connect a VCR to ⅂ (antenna input), preset the signal output from the VCR to the program number 0 on the TV.

■ Connecting optional components

Connecting to the video input terminal ( )

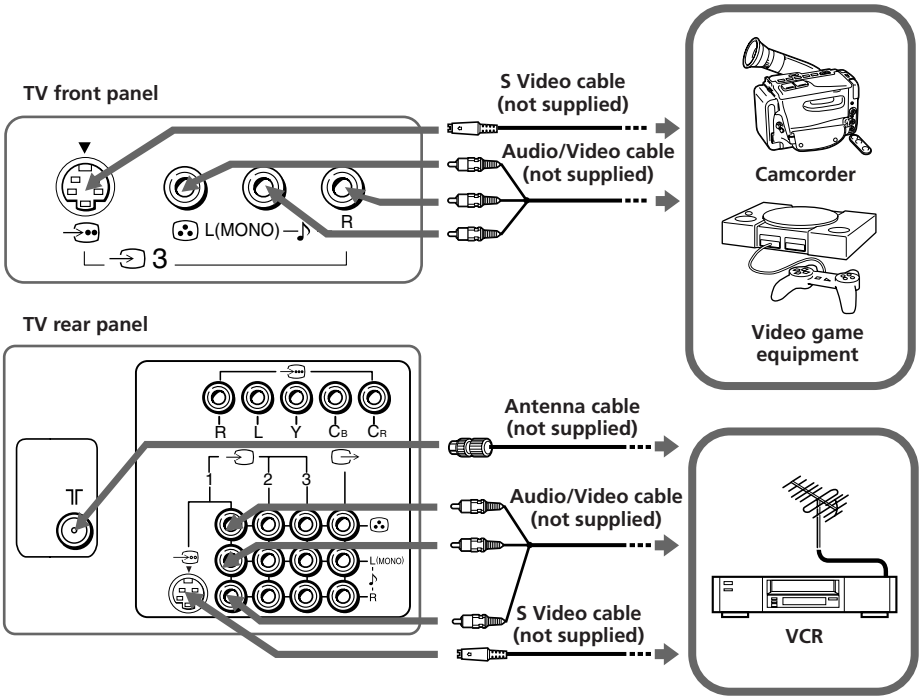

Connecting to the monitor output terminal ( )

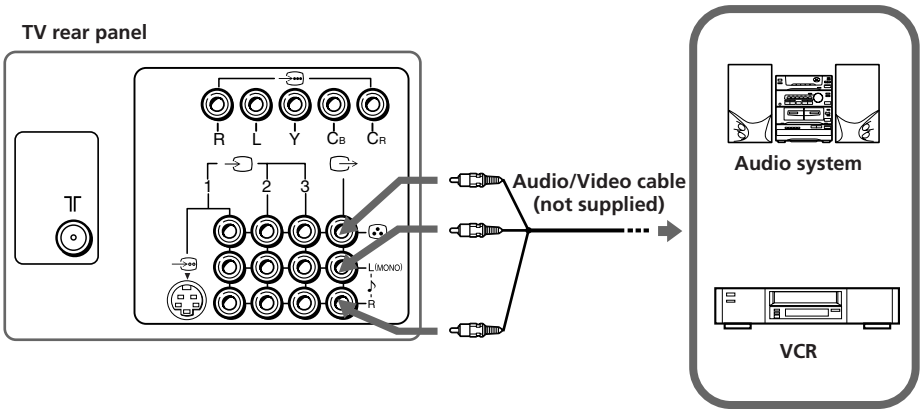

continue

continued

Connecting a DVD player to the component video input terminal ( )

1 Using an audio cable, connect R and L under (component video input) on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.

2 Using a component video cable, connect Y, C_B, and C_R under (component video input) on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.

3 Press DVD on the remote to watch the (component video input) and "DVD" will appear on your screen.

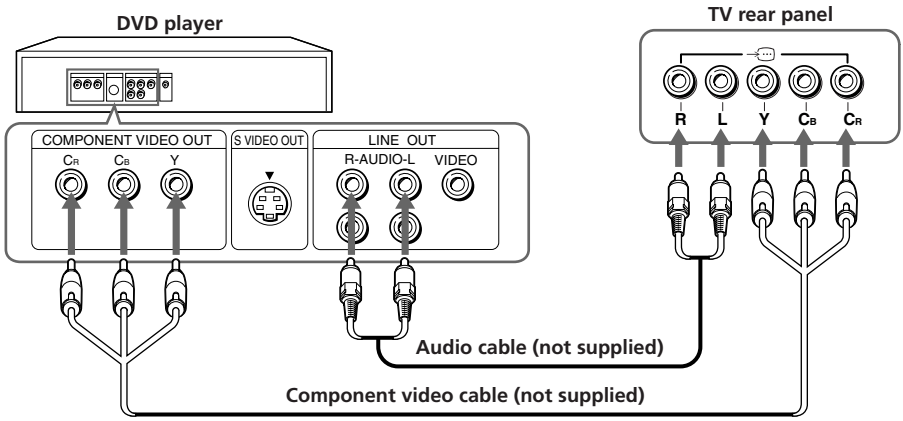

Notes

- If your DVD player can ouput interlace and progressive mode signals, select the interlace output when connecting to (component video input) on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
- Some DVD player terminals may be labeled differently:

Connect	To (on the DVD player)
Y (green)	Y
C_B (blue)	C_B, P_B, C_b or B-Y
C_R (red)	C_R, P_R, C_r or R-Y

- When both (S video) and (video) for 1 or 3 are connected at the same time, (S video) is automatically selected. To view (video), disconnect the S video cable.
- If you select "DVD" on your TV screen, the signal from the (monitor output) jacks will not be output properly. This does not indicate a malfunction.

■ Troubleshooting

If you have any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

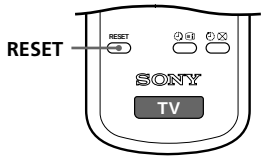

Reset function

Press the RESET button on your remote control. Your TV will go blank for about half a second then the picture will reappear with "RESET" displayed on your TV screen for about 10 seconds.

Pressing RESET will set your TV to the factory setting, but certain problems may be solved.

Troubleshooting guide

Symptom	Possible cause	Solutions	Page
Snowy picture  **Noisy sound**	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	31
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Channel presetting is inappropriate or incomplete.	• Display the "CH PRESET" menu and select "MANUAL PROGRAM" to preset the channel again.	29
	• Signal transmission is low.	• Try using a booster.	–
Distorted picture **Noisy sound**	• Broadcast signals are too strong.	• Display the "CH PRESET" menu and select "MANUAL PROGRAM". Then, select "SENS: LOW".	30
		• Turn off or disconnect the booster if it is in use.	–
Good picture **Noisy sound**	• The TV system setting is inappropriate.	• Display the "CH PRESET" menu and select the appropriate TV system ("TV SYS").	29
	• PIP sound is selected when PIP is displayed.	• Press SOUND or .	13

continue

continued

Symptom	Possible cause	Solutions	Page
No picture **No sound** 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and VCR connections.	31
	• The TV is not turned on.	• Press I/⏻ (power). • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	9 8
Good picture **No sound** 	• The volume level is too low.	• Press + to increase the volume level.	9
	• The sound is muted. • PIP sound is selected when PIP is displayed.	• Press 🔇 to cancel the muting. • Press SOUND or ◔.	9 13
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.	– –
Double images or "ghosts" 	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna. • Use the fine tuning ("FINE") function.	– 30
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Use of a booster is inappropriate.	• Turn off or disconnect the booster if it is in use.	–
No color 	• The color level setting is too low.	• Display the "PICTURE" menu and select "ADJUST" of "PICTURE MODE", then adjust the "COLOR" level.	22
	• The color system setting is inappropriate.	• Display the "SETUP" menu and check the color system ("COLOR SYS") setting (usually set this to "AUTO").	26
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–

Symptom	Possible cause	Solutions	Page
Picture slant 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. • Display the "SETUP" menu and adjust "PIC ROTATION" so that the picture position is optimal.	– 26
Abnormal color patches 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.	–
TV cannot receive stereo broadcast sound.	• The stereo reception setting is inappropriate.	• Press A/B until "AUTO" appears on the screen.	16
or	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and on the wall.	31
Stereo broadcast sound switches on and off or is distorted.	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
"100" appears at the top of the screen and there is no Teletext display.	• The channel carries no Teletext broadcast.	—	17
Teletext display is incomplete (snowy picture or double images).	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR, and at the wall.	31
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Signal transmission is too low.	• Try using a booster. • Use the fine tuning ("FINE") function.	– 30
The ⏻ indicator on your TV flashes red several times between three-second intervals.	• Your TV may need servicing.	• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.	–

continue

continued

Symptom	Possible cause	Solutions	Page
Cannot play shooting games.	• Some shooting games which involve pointing a light beam at the TV screen with an electronic gun or rifle cannot be used with your TV. For detail, see the instruction manual supplied with the video game software.	—	–
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.	—	–
A small "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

Specifications

	KV-AR34M66	KV-AR29M66	KV-AR25M66	Note
Power requirements	110 – 240 V AC, 50/60 Hz			
Power consumption (W)	Indicated on the rear of the TV			
Television system	B/G, I, D/K, M			
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43			
Stereo/Bilingual system	NICAM Stereo/Bilingual B/G, I; A2 Stereo/Bilingual B/G			
Teletext language	English, Arabic, French			
Channel coverage **B/G**	VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41			
I	UHF : B21 to B68 CATV : S01 to S03, S1 to S41			
D/K	VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39			
M	VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84			
(Antenna)	75-ohm external terminal			
Audio output (Speaker)	8W + 8W			
Number of terminal **(Video)**	Input: 4* Output: 1	Phono jacks; 1 Vp-p, 75 ohms		* Three input lines available
(Audio)	Input: 4* Output: 1	Phono jacks; 500 mVrms		* Three input lines available
(S Video)	Input: 2	Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms		
(Component Video)	Input: 1	Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative C_B: 0.7 Vp-p, 75 ohms C_R 0.7 Vp-p, 75 ohms Audio: 500 mVrms		
(Headphone)	Output: 1	Stereo minijack		
Picture tube	34 in.	29 in.	25 in.	
Tube size (cm)	86	72	64	Measured diagonally
Screen size (cm)	80	68	60	Measured diagonally
Dimensions (w/h/d, mm)	896 × 686 × 569	765 × 578 × 502	650 × 517 × 496	
Mass (kg)	79	49	39	

Design and specifications are subject to change without notice.

http://www.sony.net/
Sony Corporation

SONY

4-089-671-**11** (1)

Trinitron Color TV
เครื่องรับโทรทัศน์สี Trinitron

Operating Instructions **GB**

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

คู่มือการใช้งาน **ไทย**

- ก่อนเริ่มการใช้งานกรุณาอ่านคู่มือนี้โดยละเอียดทั้งหมดและเก็บรักษาคู่มือไว้สำหรับอ้างอิงในโอกาสต่อ ๆไป

FD Trinitron
WEGA

KV-AR34
KV-AR29
KV-AR25

© 2002 Sony Corporation

M60

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 220-240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

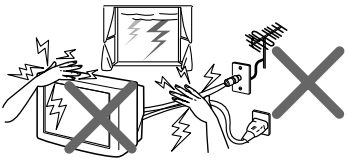

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

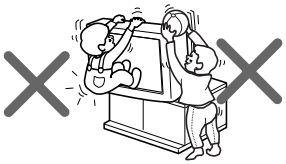

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

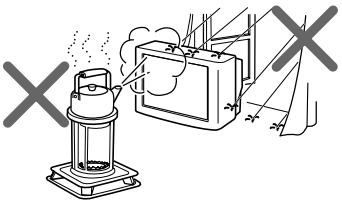

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

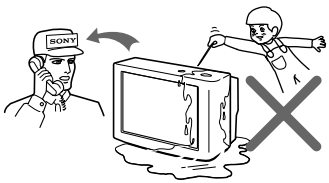

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

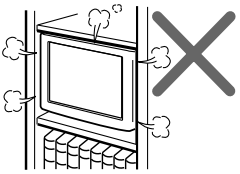

Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

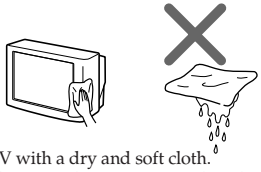

Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e. g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.

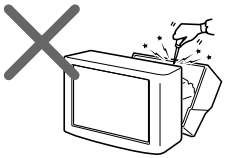

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

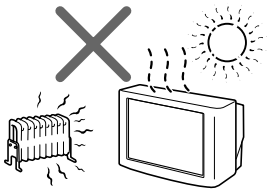

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

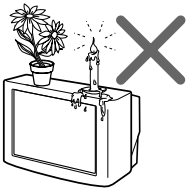

Do not place any objects on the TV.

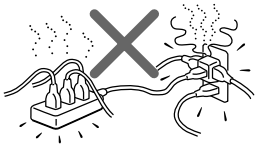

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

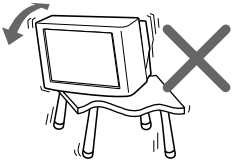

Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

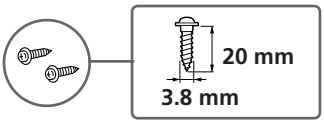

screws

clamps



band

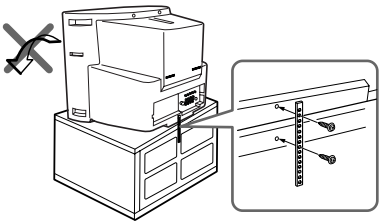

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

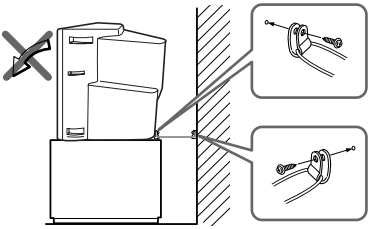

(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

or

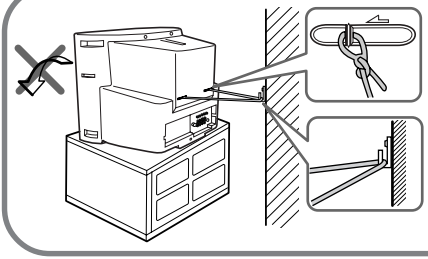

(1) Attach each end of a cord or chain to the provided holders at the rear of your TV.
(2) Securely fix the attached cord or chain to a wall or pillar using an attachment which can support the TV set weight.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

Getting Started **6**
Setting up your TV ("INITIAL SETUP") **7**

Overview of Controls

TV front and rear panels **8**
Remote control **9**

Advanced Operations

Selecting the picture and sound modes **11**
Viewing the picture in wide mode .. **12**
Listening with surround sound **12**
Setting the timers **13**
Enjoying stereo or bilingual programs **14**

Menu Adjustment

Introducing the menu system **15**
Changing the "PICTURE" setting ... **18**
Changing the "SOUND" setting **20**
Changing the "SETUP" setting **22**
Changing the Channel Preset ("CH PRESET") setting **24**

Additional Information

Connecting optional components ... **27**
Troubleshooting **29**
Specifications ..... **Back cover**

GB

■ Getting Started

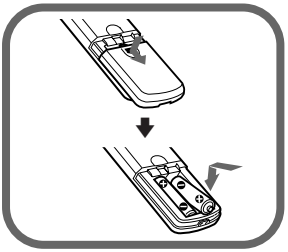

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

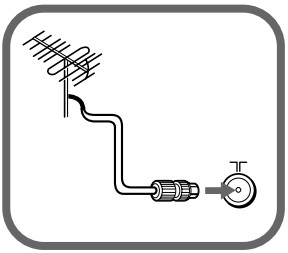

Step 2

Connect the antenna cable (not supplied) to ⅂⊢ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 27).

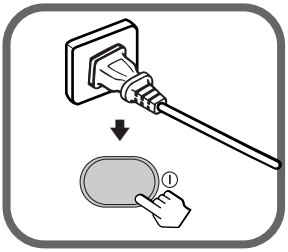

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

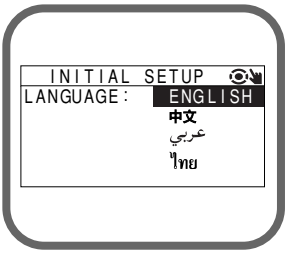

Step 4

Set up the TV by following the instructions of the "INITIAL SETUP"menu (see page 7).

■ Setting up your TV ("INITIAL SETUP")

When you turn on your TV for the first time, the "INITIAL SETUP" menu will appear. This menu allows you to change the menu language, adjust the picture position and preset the TV channels automatically.

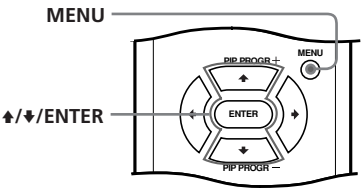

1 Press ▲ or ▼ to select the desired menu language (e.g.,"ENGLISH"), then press ENTER.

The selected menu language appears.

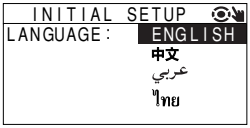

2 If the "PIC ROTATION" bar is slanted, press ▲ or ▼ to adjust it, then press ENTER.

If no adjustment is necessary, then press ENTER.

The ⊞ or ⊟ icon on the screen flashes while adjusting.

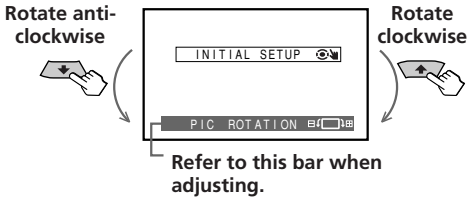

3 Press ▲ or ▼ to select "YES", then press ENTER to preset the channels automatically (see page 24).

The screen will indicate automatic presetting is in progress.

To skip automatic channel presetting, select "NO", then press ENTER.

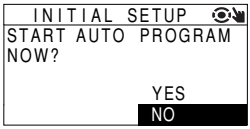

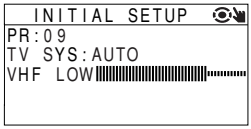

4 Press ▲ or ▼ to select "NO", then press ENTER. The "INITIAL SETUP" menu will not appear again the next time you turn on the TV by pressing ⏻.

To allow this menu to appear again, select "YES", then press ENTER.

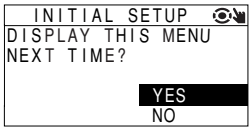

Tips

- You can immediately go to the end of the "INITIAL SETUP" menu by pressing MENU.
- You can also set up your TV using the menu system (see page 15).

■ TV front and rear panels

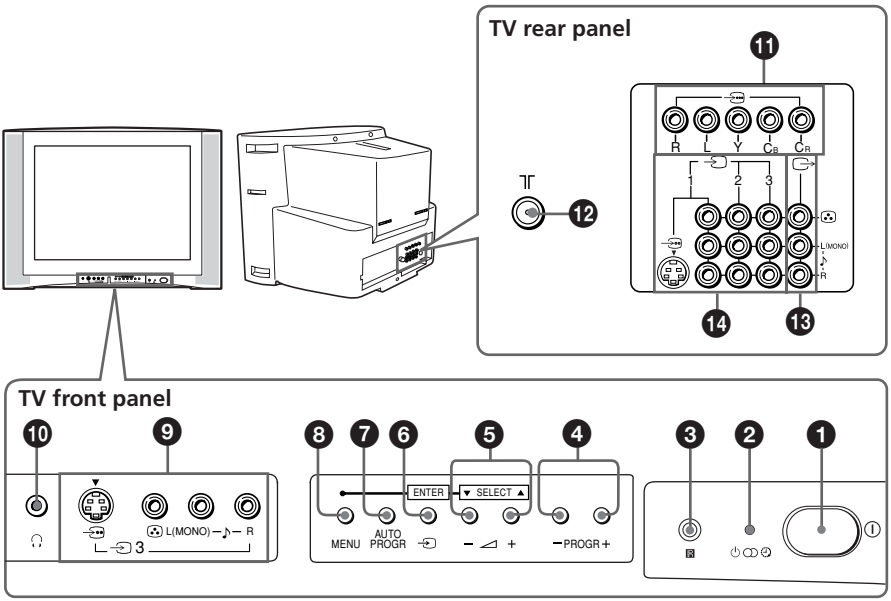

Button/Terminal	Function	Page
❶ ⏻	Turn off or turn on the TV.	6
❷ ⏻	Standby indicator.	–
❷ 🕘	Wake Up indicator.	13
❷ ◯◯	Stereo/bilingual indicator.	14
❸	Remote control sensor.	–
❹ PROGR +/–	Select program number.	–
❺ +/–	Adjust volume.	–
❻	Select TV or video input.	–
❼ AUTO PROGR	Preset channels automatically.	–
Menu operations		
❺ SELECT ▼/▲	Select and adjust items.	17
❻ ENTER	Confirm selected items.	17
❽ MENU	Display or cancel the menu.	17
❾ 3	Video input terminal 3.	27
❿	Headphone jack.	–
⓫	Component video input terminal.	28
⓬	Antenna input terminal.	27
⓭	Monitor output terminal.	27
⓮ 1, 2, 3	Video input terminal 1, 2, 3.	27

■ Remote control

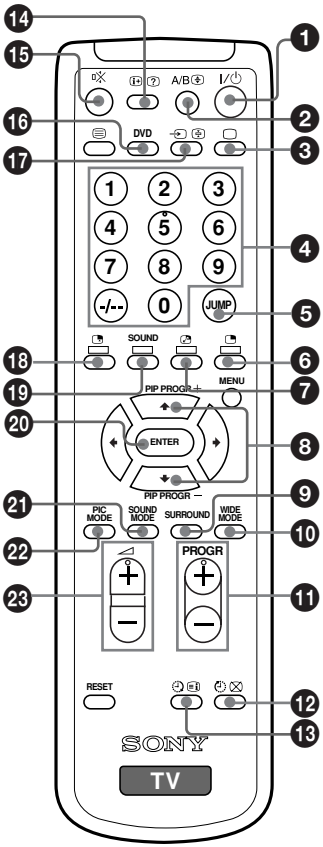

Button	Function	Page
❶ I/⏻	Turn off temporarily or turn on the TV.	–
❸ ▭	Display the TV input.	–
❹ 0 – 9, -/--	Input numbers.	–
❺ JUMP	Jump to previous program number.	–
❾ SURROUND	Select surround mode.	12
❿ WIDE MODE	Select wide-mode (16:9).	12
⓫ PROGR +/–	Select program number.	–
⓮ ⓘ+	Display on-screen information.	–
⓯ 🔇	Mute the sound.	–
⓰ DVD	Select DVD input.	28
⓱ ⏎	Select TV or video input.	27
㉑ SOUND MODE	Select sound mode.	11
㉒ PIC MODE	Select picture mode.	11
㉓ ◿ +/–	Adjust volume.	–
Timer operations		
⓬ ⏲	Set TV to turn off automatically.	13
⓭ ⏲	Set TV to turn on automatically.	13
PIP operations (yellow label)		
❻ ◳	Not function for your TV.	–
❼ ♪		
❽ PIP PROGR + / PIP PROGR –		
⓲ ◳		
⓳ SOUND		
⓴ ENTER		
Stereo/bilingual operations		
❷ A/B	Select stereo/bilingual mode.	14

continue

continued

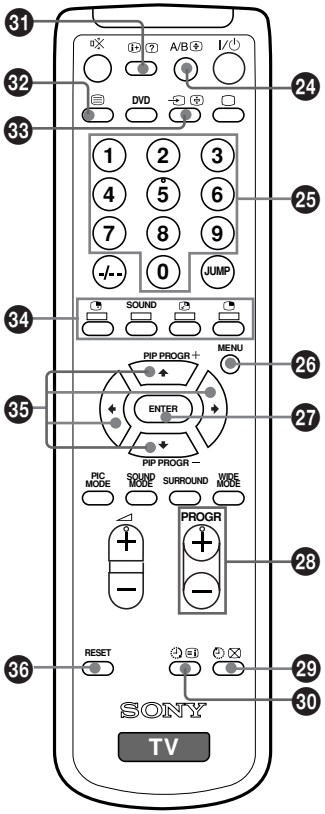

Button	Function	Page
Menu operations		
26 MENU	Display or cancel the menu.	17
27 ENTER	Confirm selected items.	17
35 ↑, ↓, ←, →	Select and adjust items.	17
Teletext operations (green label)		
24 ⇳	Not function for your TV.	–
25 0 – 9		
28 PROGR +/–		
29 ⊠		
30 ⓘ		
31 ?		
32 ☰		
33 ⇳		
34 ▬ (red, green, yellow, blue)		
36 RESET	Set TV to factory setting.	29

Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the “PERSONAL” option.

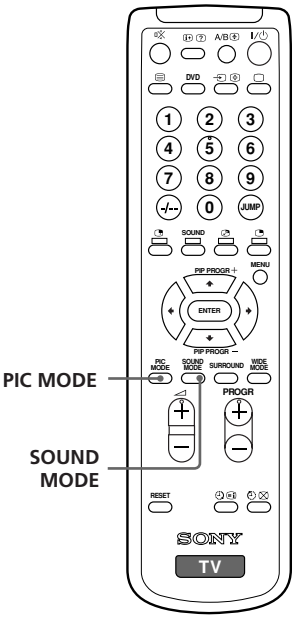

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
“DYNAMIC”	view high contrast pictures.
“STANDARD”	view normal pictures.
“SOFT”	view mild pictures.
“PERSONAL”	receive the last adjusted picture setting from the “ADJUST” option in the “PICTURE” menu (see page 19).

Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

Select	To
“♪ DYNAMIC”	listen to dynamic and clear sound that emphasizes both the low and high tones.
“♪ DRAMA”	listen to sound that emphasizes voice and high tones.
“♪ SOFT”	listen to soft sound.
“♪ PERSONAL”	receive the last adjusted sound setting from the “ADJUST” option in the “SOUND” menu (see page 21).

■ Viewing the picture in wide mode

When receiving a wide-mode (16:9) signal, the picture will appear “squeezed” (compressed) on your screen. Use the WIDE MODE button to view the picture with the optimal effect.

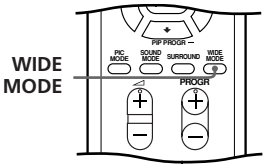

Select	To
“ON”	view the picture in wide-mode (16:9).
“OFF”	cancel wide-mode (16:9).

■ Listening with surround sound

You can use the SURROUND button to listen to the sound effects of a concert hall or movie theater.

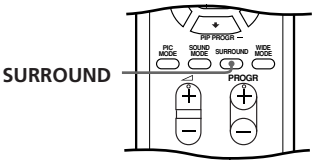

Select	To
“TruSurround”	listen to the surround sound that spreads out to the rear of a room.
“SIMULATED”	listen to monaural sound with a stereo-like effect.
“OFF”	cancel surround sound.

The surround of your TV is categorized as TruSurround.

TruSurround™ is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents.

■ Setting the timers

You can set your TV to turn on and off automatically by using the WAKE UP and SLEEP timers respectively.

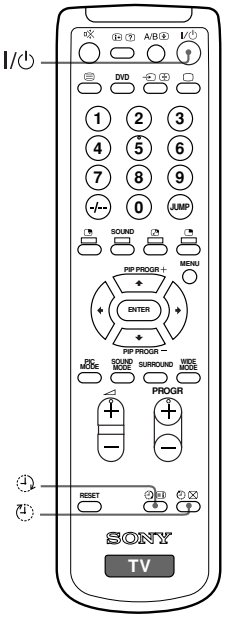

Setting the Wake Up timer

1 Press 🕘 until the desired period of time appears on the screen.

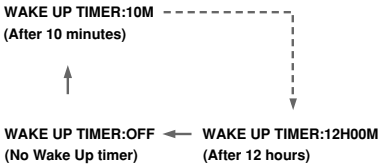

The Wake Up timer starts immediately after you have set it.

2 Select the program number or video input you want to wake up to.

3 Press I/⏻, or set the Sleep timer if you want the TV to turn off automatically.

The 🕘 indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press 🕘 until the desired period of time appears on the screen.

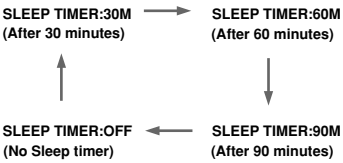

The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by pressing ⏻ on the TV to turn off the TV.
- If no buttons are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

■ Enjoying stereo or bilingual programs

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

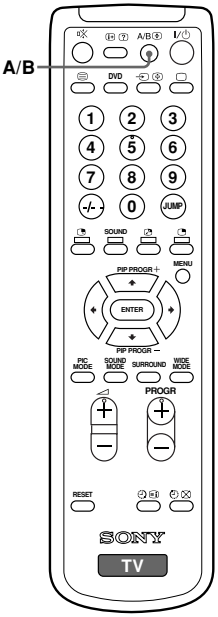

When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → MONO (Regular sound)
NICAM bilingual	NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound)
NICAM monaural	NICAM MAIN (Main sound) → MONO (Regular sound)

When receiving an A2 program

Broadcasting	On-screen display (Selected sound)
A2 stereo	STEREO (Stereo sound) → MONO (Regular sound)
A2 bilingual	MAIN (Main sound) → SUB (Sub sound)

Notes

- If the stereo sound is noisy when receiving a stereo program, select “MONO”. The sound becomes monaural, but the noise is reduced.
- If the sound is distorted when receiving a monaural program through ⅂⌜ (antenna input), press A/B repeatedly until “MONO” appears on the screen. To cancel the monaural sound setting, press A/B again until “AUTO” appears on the screen.

■ Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.

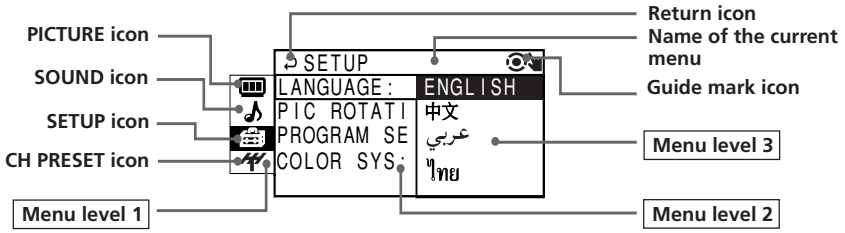

Level 1	Level 2	Level 3/Function	Page
"PICTURE"	"PICTURE MODE"	Select the picture mode: "DYNAMIC" → "STANDARD" → "SOFT" → "PERSONAL" → "ADJUST"	18
	"ADJUST"	Adjust the "PERSONAL" option: "PICTURE" → "COLOR" → "BRIGHT" → "HUE" → "SHARP"	
	"WIDE MODE"	Change the picture size: "ON" → "OFF"	
	"INTELLIGENT PIC"	Optimize picture quality: "ON" → "OFF"	
"SOUND"	"SOUND MODE"	Select the sound mode: "DYNAMIC" → "DRAMA" → "SOFT" → "PERSONAL" → "ADJUST"	20
	"ADJUST"	Adjust the "PERSONAL" option: "BASS" → "TREBLE" → "BALANCE" → "BBE"*	
	"SURROUND"	Select the "SURROUND" mode: "TruSurround" → "SIMULATED" →"OFF"	
	"INTELLIGENT VOL"	Adjust volume automatically: "ON" → "OFF"	

continue

continued

Level 1	Level 2	Level 3/Function	Page
"SETUP"	"LANGUAGE"	Change the menu language: "ENGLISH" → "中文"(Chinese) → "عربي"(Arabic) → "ไทย"(Thai)	22
	"PIC ROTATION"	Adjust the picture position.	
	"PROGRAM SETUP"	Adjust each program number settings.	
	"COLOR SYS"	Select the color system: "AUTO" →" PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43"	
"CH PRESET"	"AUTO PROGRAM"	Preset channels automatically.	24
	"MANUAL PROGRAM"	Preset channels manually.	
	"TV SYS"	Select the TV system: "B/G" → "I" → "D/K" → "M"	

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE symbol are the trademarks of BBE Sound, Inc.

How to use the menu

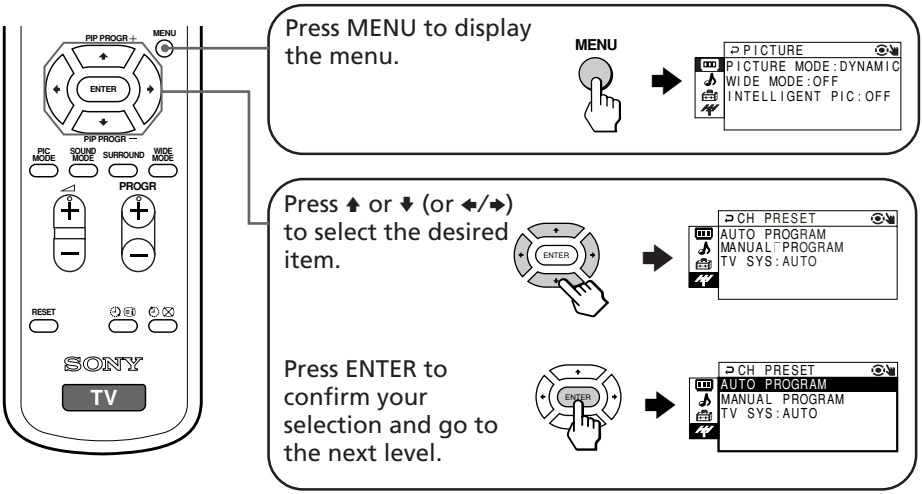

Other menu operations

To	Press
Adjust the setting value	↑, ↓, ← or →.
Move to the next/previous menu level	← or →.
Cancel the menu	MENU.

Tips

- If you want to exit from Menu level 2 to Menu level 1, press ↑ or ↓ until the return icon (⮌) is highlighted, then press ENTER.
- Some of the menu items can be operated directly using the remote buttons.
- The MENU, ENTER, and SELECT ▼/▲ buttons on the TV can also be used for the operations above.

Front of TV

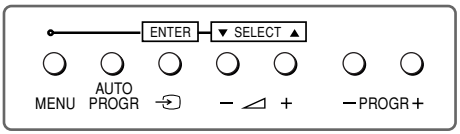

■ Changing the “PICTURE” setting

The “PICTURE” menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the “PICTURE” icon ( ) is selected, then press ENTER.

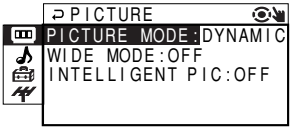

3 Press ↑ or ↓ to select the desired item (e.g., “PICTURE MODE”), then press ENTER.

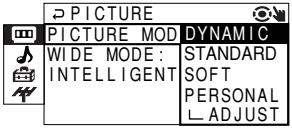

Select	To
“PICTURE MODE”	choose either “DYNAMIC”, “STANDARD”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“WIDE MODE”	choose either “ON” or “OFF” (see page 12).
“INTELLIGENT PIC”	optimize picture quality. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted picture settings from the “ADJUST” option (see page 19).

Adjusting the “ADJUST” items under “PICTURE MODE”

1 Press ↑ or ↓ to select the desired item (e.g.,“COLOR”), then press ENTER.

2 Adjust the value according to the following table, then press ENTER.

For	Press ↓ or ← to	Press ↑ or → to
“PICTURE”	decrease picture contrast.	increase picture contrast.
“COLOR”	decrease color intensity.	increase color intensity.
“BRIGHT”	darken the picture.	brighten the picture.
“HUE”	increase red picture tones.	increase green picture tones.
“SHARP”	soften the picture.	sharpen the picture.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select “PERSONAL”.

Notes

- “HUE” can be adjusted for the NTSC color system only.
- Reducing sharpness (“SHARP”) can also reduce picture noise.

■ Changing the “SOUND” setting

The “SOUND” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press ↑ or ↓ to select the “SOUND” icon (♪), then press ENTER.

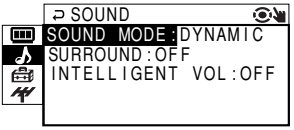

3 Press ↑ or ↓ to select the desired item (e.g., “SOUND MODE”), then press ENTER.

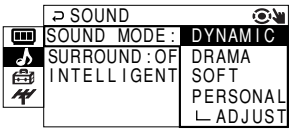

Select	To
“SOUND MODE”	choose either “DYNAMIC”, “DRAMA”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“SURROUND”	choose either “TruSurround”, “SIMULATED” or “OFF” (see page 12).
“INTELLIGENT VOL”	adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted sound settings from the “ADJUST” option (see page 21).

Adjusting the “ADJUST” items under “SOUND MODE”

1 Press ↑ or ↓ to select the desired item (e.g., “BALANCE”), then press ENTER.

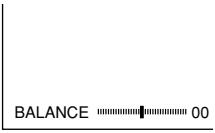

2 Adjust the value according to the following table, then press ENTER .

For	Press ↓ or ← to	Press ↑ or → to
“BASS”	decrease the bass.	increase the bass.
“TREBLE”	decrease the treble.	increase the treble.
“BALANCE”	increase the left speaker’s volume.	increase the right speaker’s volume.
“BBE”	select “HIGH” for higher enhancement of sound clarity; select “LOW” for lower enhancement of sound clarity; select “OFF” to cancel BBE sound.	

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select “PERSONAL”.

■ Changing the “SETUP” setting

The “SETUP” menu allows you to change the menu language, adjust the picture position, set up your program numbers and select the color system.

1 Press MENU.

2 Press ↑ or ↓ to select the “SETUP” icon (), then press ENTER.

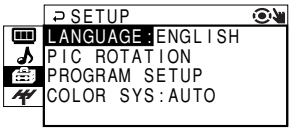

3 Press ↑ or ↓ to select the desired item (e.g., “COLOR SYS”), then press ENTER.

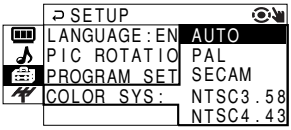

Select	To
“LANGUAGE”	change the menu language. Press ↑ or ↓ to select either “ENGLISH”, “中文” (Chinese), “ عربي ” (Arabic), or “ ไทย ” (Thai) then press ENTER. The selected menu language appears.
“PIC ROTATION”	adjust the picture position when it is not aligned with the TV screen. Press ↑ , → , ↓ or ← to adjust the picture position, then press ENTER.
“PROGRAM SETUP”	adjust each channel settings (see **Adjusting each program number settings (“PROGRAM SETUP”)** on page 23).
“COLOR SYS”	select the color system. Normally, set this to “AUTO”.

Adjusting each program number settings (“PROGRAM SETUP”)

1 Select “PROGRAM SETUP” from the “SETUP” menu.

2 Select “PR” and press ENTER. Press ↑ or ↓ to select the desired program number you want to adjust, then press ENTER.

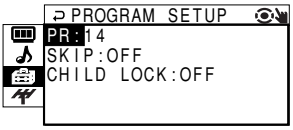

3 Press ↑ or ↓ to select the desired item (e.g., “SKIP”), then press ENTER.

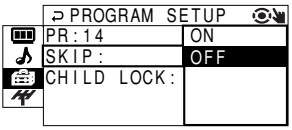

Select	To
“PR”	select the desired program number.
“SKIP”	skip unwanted or unused program number. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“CHILD LOCK”	prevent children from watching this selected program number. Press ↑ or ↓ to select “ON”, then press ENTER. The lock symbol (🔒) appears on the screen. To cancel, select “OFF”, then press ENTER. If you preset a locked program number, that program number will be unlocked automatically.

4 To continue adjusting other program numbers, press ↑ or ↓ to select “PR”, then repeat step 2 and 3.

■ Changing the Channel Preset ("CH PRESET") setting

The "CH PRESET" menu allows you to preset channels automatically, manually preset channels and select the TV system.

1 Press MENU.

2 Press ↑ or ↓ to select the "CH PRESET" icon (), then press ENTER.

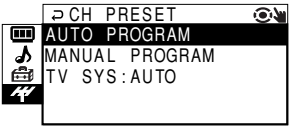

3 Press ↑ or ↓ to select the desired item (e.g., "AUTO PROGRAM"), then press ENTER.

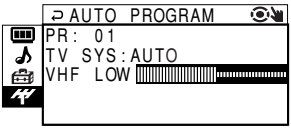

Select	To
"AUTO PROGRAM"	preset channels automatically.
"MANUAL PROGRAM"	manually preset desired channels and channels that cannot be preset automatically (see **Presetting channels manually** on page 25).
"TV SYS"	select the TV system. Press ↑ or ↓ to select either "B/G", "I", "D/K" or "M", then press ENTER.

Presetting channels manually

1 After selecting "MANUAL PROGRAM", select the program number to which you want to preset a channel.

(1) Make sure "PR" is selected, then press ENTER.

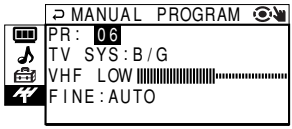

(2) Press ↑ or ↓ until the program number you want to preset (e.g., program number "10") appears on the menu, then press ENTER.

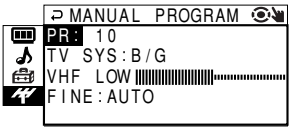

2 Select the desired channel.

(1) Make sure either "VHF LOW", "VHF HIGH", or "UHF" is selected, then press ENTER.

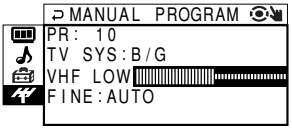

(2) Press ↑ or ↓ until the desired channel's broadcast appears on the TV screen, then press ENTER.

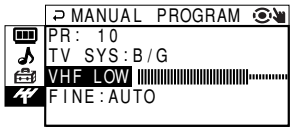

3 If the sound of the desired channel is abnormal, select the appropriate TV system.

(1) Press ↑ or ↓ to select "TV SYS", then press ENTER.

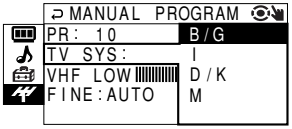

(2) Press ↑ or ↓ until the sound becomes normal, then press ENTER.

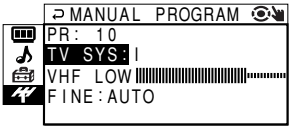

Tip

- You can also select the program number with the PROGR +/– or number buttons.

continue

continued

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the "FINE" tuning feature.

(1) Press ↑ or ↓ to select "FINE", then press ENTER.

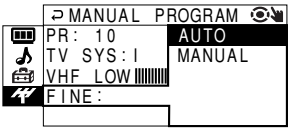

(2) Press ↑ or ↓ to select "MANUAL", then press ENTER.

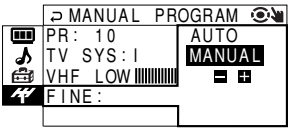

(3) Press ↑, ↓, ← or → until the picture and sound quality are optimal, then press ENTER.
The + or – icon on the menu flashes while tuning.

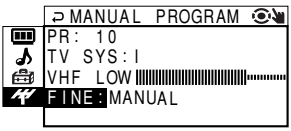

Note

- If you connect a VCR to ⅂⌐ (antenna input), preset the signal output from the VCR to the program number 0 on the TV.

■ Connecting optional components

Connecting to the video input terminal ( )

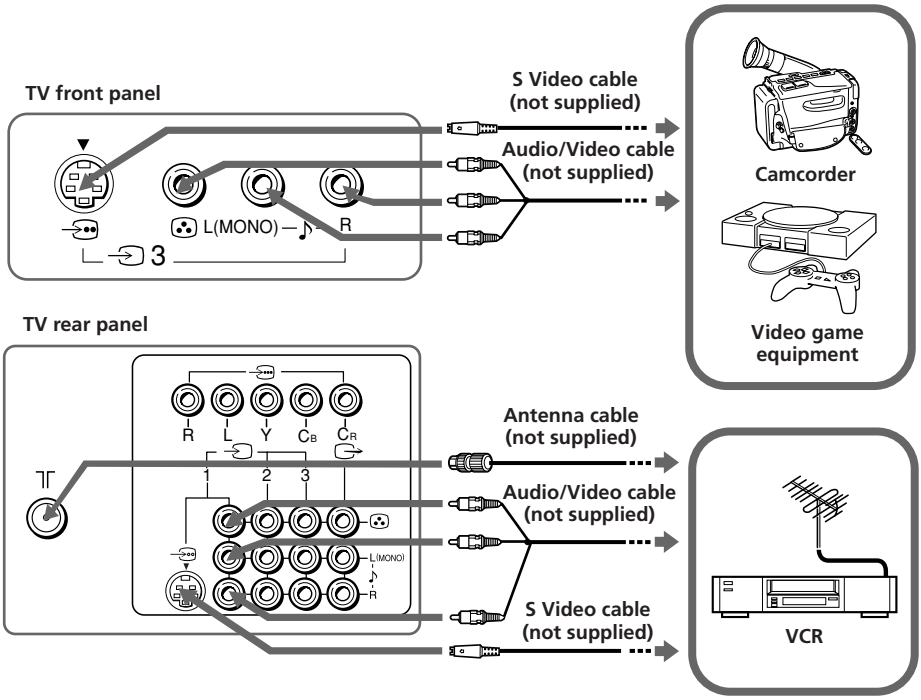

Connecting to the monitor output terminal ( )

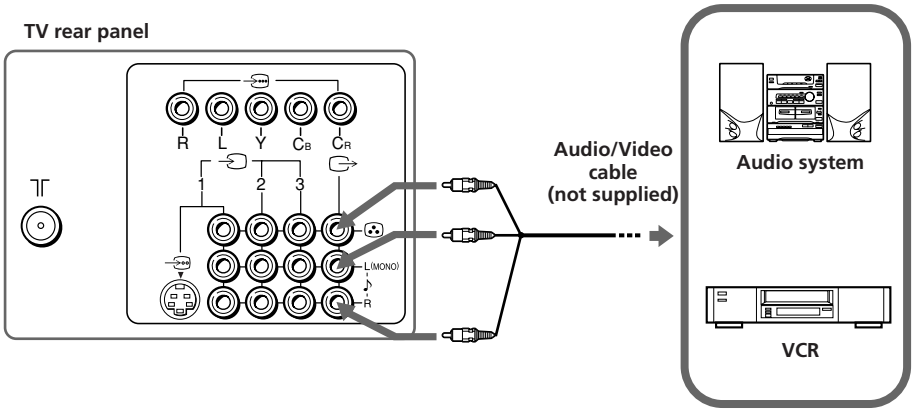

continue

continued

Connecting a DVD player to the component video input terminal ( )

1 Using an audio cable, connect R and L under (component video input) on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.

2 Using a component video cable, connect Y, C_B, and C_R under (component video input) on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.

3 Press DVD on the remote to watch the (component video input) and "DVD" will appear on your screen.

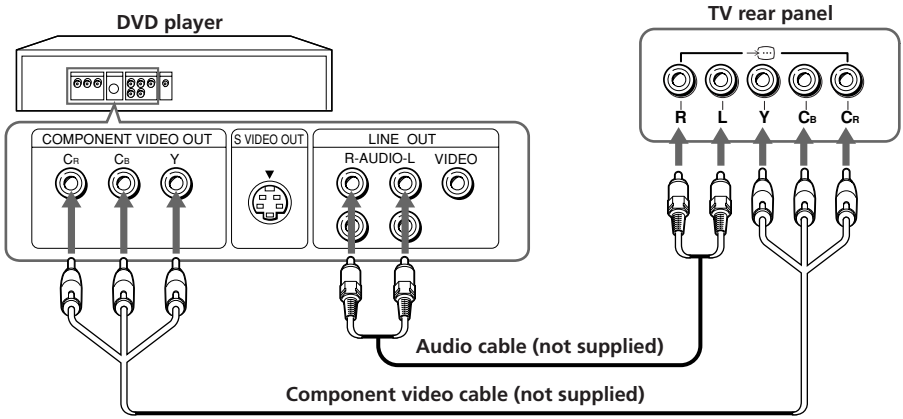

Notes

- If your DVD player can ouput interlace and progressive mode signals, select the interlace output when connecting to (component video input) on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
- Some DVD player terminals may be labeled differently:

Connect	To (on the DVD player)
Y (green)	Y
C_B (blue)	C_B, P_B, C_b or B-Y
C_R (red)	C_R, P_R, C_r or R-Y

- When both (S video) and (video) for 1 or 3 are connected at the same time, (S video) is automatically selected. To view (video), disconnect the S video cable.
- If you select "DVD" on your TV screen, the signal from the (monitor output) jacks will not be output properly. This does not indicate a malfunction.

■ Troubleshooting

If you have any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

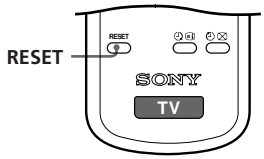

Reset function

Press the RESET button on your remote control. Your TV will go blank for about half a second then the picture will reappear with "RESET" displayed on your TV screen for about 10 seconds.

Pressing RESET will set your TV to the factory setting, but certain problems may be solved.

Troubleshooting guide

Symptom	Possible cause	Solutions	Page
Snowy picture  Noisy sound	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	27
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Channel presetting is inappropriate or incomplete.	• Display the "CH PRESET" menu and select "MANUAL PROGRAM" to preset the channel again.	25
	• Signal transmission is low.	• Try using a booster.	–
Distorted picture Noisy sound	• Broadcast signals are too strong.	• Turn off or disconnect the booster if it is in use.	–
Good picture Noisy sound	• The TV system setting is inappropriate.	• Display the "CH PRESET" menu and select the appropriate TV system ("TV SYS").	25

continue

continued

Symptom	Possible cause	Solutions	Page
No picture **No sound** 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and VCR connections.	27
	• The TV is not turned on.	• Press I/⏻ (power). • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	9 8
Good picture **No sound** 	• The volume level is too low.	• Press + to increase the volume level.	9
	• The sound is muted.	• Press 🔇 to cancel the muting.	9
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.	– –
Double images or "ghosts" 	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna. • Use the fine tuning ("FINE") function.	– 26
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Use of a booster is inappropriate.	• Turn off or disconnect the booster if it is in use.	–
No color 	• The color level setting is too low.	• Display the "PICTURE" menu and select "ADJUST" of "PICTURE MODE", then adjust the "COLOR" level.	19
	• The color system setting is inappropriate.	• Display the "SETUP" menu and check the color system ("COLOR SYS") setting (usually set this to "AUTO").	22
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–

Symptom	Possible cause	Solutions	Page
Picture slant 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. • Display the "SETUP" menu and adjust "PIC ROTATION" so that the picture position is optimal.	– 22
Abnormal color patches 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.	–
TV cannot receive stereo broadcast sound. **or** **Stereo broadcast sound switches on and off or is distorted.**	• The stereo reception setting is inappropriate.	• Press A/B until "AUTO" appears on the screen.	14
	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and on the wall.	27
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
The ⏻ (standby) indicator on your TV flashes red several times after every three seconds.	• Your TV's self-diagnosis function indicates the possible problems.	• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.	–
Cannot play shooting games.	• Some shooting games which involve pointing a light beam at the TV screen with an electronic gun or rifle cannot be used with your TV. For detail, see the instruction manual supplied with the video game software.	—	–
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.	—	–
A small "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

■ Specifications

	KV-AR34M60	KV-AR29M60	KV-AR25M60	Note
Power requirements	220 – 240 V AC, 50/60 Hz			
Power consumption (W)	Indicated on the rear of the TV			
Television system	B/G, I, D/K, M			
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43			
Stereo/Bilingual system	NICAM Stereo/Bilingual B/G, I; A2 Stereo/Bilingual B/G			
Channel coverage				
B/G	VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41			
I	UHF : B21 to B68 CATV : S01 to S03, S1 to S41			
D/K	VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39			
M	VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84			
┬ (Antenna)	75-ohm external terminal			
Audio output (Speaker)	8W + 8W			
Number of terminal				
(Video)	Input: 4* Output: 1	Phono jacks; 1 Vp-p, 75 ohms		* Three input lines available
♪ (Audio)	Input: 4* Output: 1	Phono jacks; 500 mVrms		* Three input lines available
(S Video)	Input: 2	Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms		
(Component Video)	Input: 1	Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative C_B: 0.7 Vp-p, 75 ohms C_R 0.7 Vp-p, 75 ohms Audio: 500 mVrms		
(Headphone)	Output: 1	Stereo minijack		
Picture tube	34 in.	29 in.	25 in.	
Tube size (cm)	86	72	64	Measured diagonally
Screen size (cm)	80	68	60	Measured diagonally
Dimensions (w/h/d, mm)	896 × 686 × 569	765 × 578 × 502	650 × 517 × 496	
Mass (kg)	79	49	39	

Design and specifications are subject to change without notice.

Sony Thai Co., Ltd.
2126 Kromadit Building, New Petchburi Road,
Bangkapi, Huaykwang, Bangkok 10320

http://www.sony.net/

Sony Corporation

SONY

4-090-833-**11** (1)

Trinitron Color TV

使用說明書

CT

• 使用本電視機之前請先詳細閱讀此手冊，並妥善保存以備日後用作參考。

FD Trinitron

WEGA

KV-AR34
KV-AR29
KV-AR25

© 2002 Sony Corporation

N90

警告

- 本電視機內存在危險性高電壓。
- 本電視機僅可在 110 伏特交流電壓下操作。
- 若未完成所有連接程序，請勿插入電源線；否則極少量的電流可能經天線或其它端子外泄。
- 若打算近期內不使用遙控器，請將電池取出，以避免電池泄漏而損壞遙控器。若您不小心觸及電池所泄漏的液體，應立即用水洗淨。

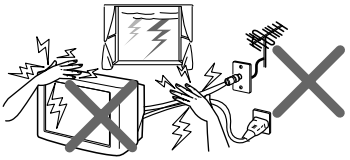

爲了個人安全起見，雷雨期間，請勿觸摸電視機的任何部份，包括電源線和天線電纜。

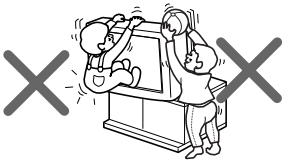

爲了兒童安全起見，請勿讓他們獨自逗留在電視機旁。千萬別讓兒童攀爬本電視機。

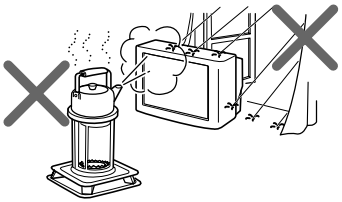

爲防止火災或觸電，請勿使本電視機被雨淋或受潮。

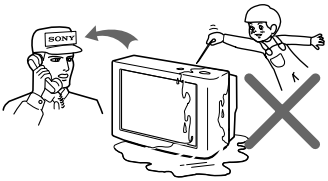

若有任何液體流入或固體落入本電視機內時，請勿操作本電視機。應立即請合格的專業人員檢查。

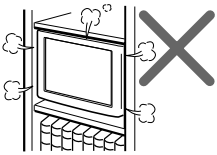

請勿堵塞本電視機的通風口。
請勿將本電視機放置於諸如書架或嵌入式壁櫥等封閉之處。

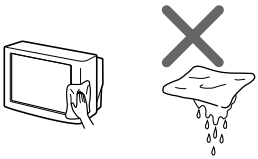

請用乾的軟布清潔本電視機。請勿在電視機殼噴涂表面貼附任何物體（例如，貼紙，透明玻璃膠紙，膠合劑等）。請勿使用汽油、稀釋劑或任何其它化學品清潔本電視機。請勿刮劃顯像管。

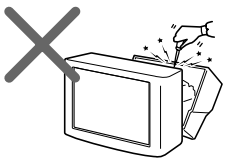

請勿打開本電視機的機殼和後蓋，因爲電視機內存在高電壓和危險性部件。須由合格的專業人員對電視機進行檢修或棄置。

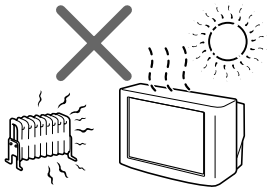

本電視機只適於家庭使用。請勿將本電視機放置於任何交通工具內或多塵、高溫、潮濕或震動頻繁之處。

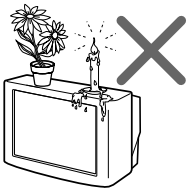

請勿放置任何物體於電視機上。

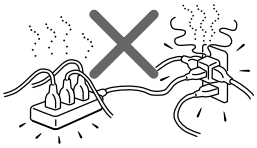

請勿在同一電源插座上插入太多的電器。請勿損壞電源線。

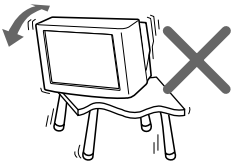

放置電視機於穩定的、並足以支撐電視機重量的電視支架及地面上。確保電視支架的表面平整且表面積大於電視機底面。



捏住插頭將電源線拔開。請勿直接拉拔電源線。即使電視機已斷開電源，但只要電源線還在插座內，它仍接通至交流電源。若想移動本電視機或打算近期內不使用本電視機時，請將電源線拔開。

■ 固定電視機

爲防止電視機摔落，請使用所提供的螺絲、夾子和帶條以固定電視機。

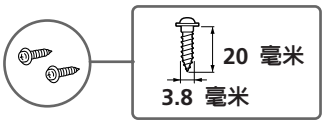

螺絲

夾子

帶條

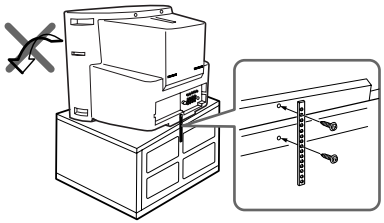

將帶條分別固定至電視機背後提供的螺絲孔及電視支架上。

或

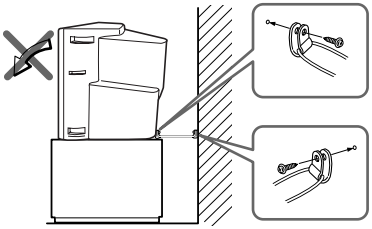

(1) 將一根繩索或鏈條穿過夾子。
(2) 將其中一個夾子固定至牆上或柱子上，而另一個夾子則固定至電視機背後提供的螺絲孔上。

或

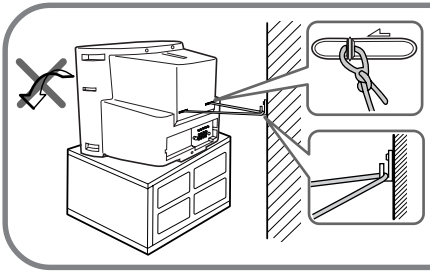

(1) 將繩索或鏈條的未端分別穿過電視機背後提供的柄上。
(2) 用可支撐電視機重量的連接物將繩索或鏈條固定至牆上或柱子上。

注

- 請僅使用提供的螺絲。使用其它螺絲可能會損壞本電視機。

目錄

設置您的電視機

準備工作 6
設定您的電視機（“原始設定”） 7

控制鍵總概況

電視機前面和背後的控制板 8
遙控器 9

高級操作

選擇畫質和音效模式 11
觀看寬螢幕模式的圖像 12
收聽環繞音效 12
設置定時器 13
欣賞立體聲或雙語言節目 14

調整您的設定（MENU）

介紹選單系統 15
調整“畫面設定” 18
調整“聲音設定” 20
調整“系統設定”選單 22
調整“頻道預設”設定 24

附加信息

連接選購的裝置 25
故障檢修 27
規格 30

CT

■ 準備工作

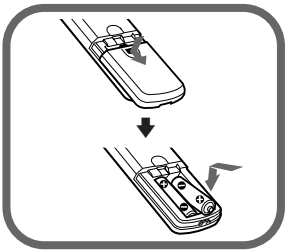

步驟 1

將所提供的電池裝入遙控器。

注

- 請勿使用舊電池或同時使用不同類型的電池。

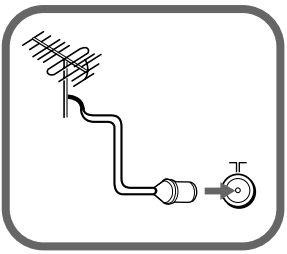

步驟 2

將天線電纜（未提供）連接至電視機背後的 ⅂（天線輸入）端子。

提示

- 您也可將本電視機連接至其它選購的裝置（參考第 25 頁）。

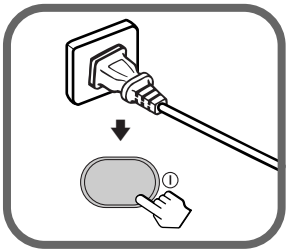

步驟 3

插入電源線，然後按壓電視機上的 ①（電源）鍵以接通電視機的電源。

步驟 4

按照“原始設定”的指示以設定您的電視機（參考第 7 頁）。

■ 設定您的電視機（“原始設定”）

當您第一次打開電視機時，“原始設定”選單將會顯示在畫面上。這選單可讓您改變選單語言，調整圖像位置，以及自動預設頻道。

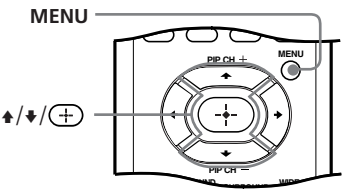

1 **按壓 ↑ 或 ↓ 鍵以選擇所要的選單語言（例如，“中文”），然後按壓 ⊕ 鍵。**

被選擇的選單語言將顯示在畫面上。

2 **若“傾斜調整”線條傾斜，按壓 ↑ 或 ↓ 鍵以作出調整，然後按壓 ⊕ 鍵。**

若不需作出調整，則按壓 ⊕ 鍵。

畫面上的 ⊞ 或 ⊟ 符號將會在調諧時閃爍。

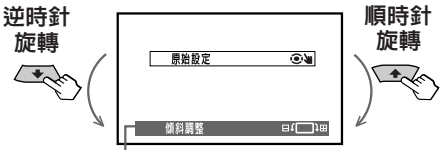

當調整時，參考此線條。

3 **按壓 ↑ 或 ↓ 鍵以選擇“是”，然後按壓 ⊕ 鍵以自動預設頻道（參考第 24 頁）。**

若要略掉自動預設頻道，選擇“否”，然後按壓 ⊕ 鍵。

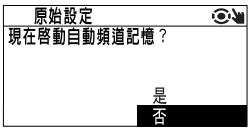

4 **按壓 ↑ 或 ↓ 鍵以選擇“否”，然後按壓 ⊕ 鍵。則當您再次按壓 ① 鍵打開電視機時，“原始設定”選單將不會再顯示在畫面上。**

若要“原始設定”選單再次顯示在畫面上，選擇“是”，然後按壓 ⊕ 鍵。

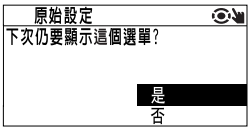

提示

- 您可按壓 MENU（目錄）鍵直接進入“原始設定”選單最後的設定項目。
- 您也可使用選單系統設定您的電視機（參考第 15 頁）。

■ 電視機前面和背後的控制板

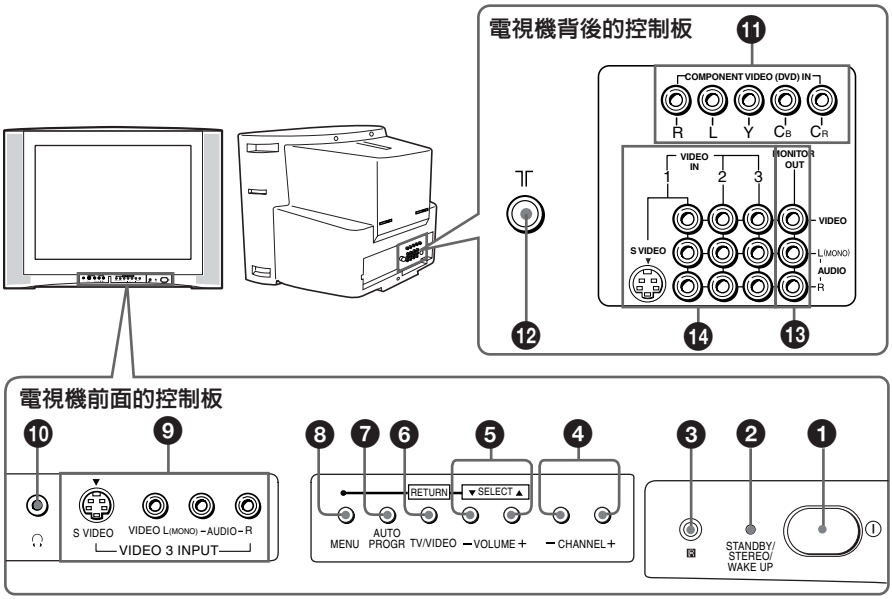

按鍵 / 端子	功能	頁面
❶ ⏻（電源）	打開或關閉電視機。	6
❷ STANDBY（待機）	待機指示燈。	–
❷ WAKE UP（開機定時）	開機指示燈。	13
❷ STEREO （立體聲）	立體聲／雙語言指示燈。	14
❸	遙控傳感器。	–
❹ CHANNEL +/–（頻道）	選擇頻道號碼。	–
❺ VOLUME +/–（音量）	調整音量。	–
❻ TV/VIDEO（電視 / 影音）	選擇電視或影音輸入。	–
❼ AUTO PROGR（自動頻道記憶）	自動預設頻道。	–
目錄操作		
❺ SELECT ▼/▲（功能選擇）	選擇和調整項目。	17
❻ RETURN（輸入）	確認被選項目。	17
❽ MENU（目錄）	顯示或取消選單。	17
❾ VIDEO 3 INPUT（影音 3 輸入）	影音輸入端子 3。	25
❿ 🎧	耳機插口。	–
⓫ COMPONENT VIDEO (DVD) IN （聲音 / 色差端子 (DVD) 輸入）	聲音 / 色差 (DVD) 輸入端子。	26
⓬ 📡	天線輸入端子。	25
⓭ MONITOR OUT （監視器輸出）	監視器輸出端子。	25
⓮ VIDEO IN 1,2,3 （影音輸入）	影音輸入端子 1，2，3。	25

■ 遙控器

若您喜愛中文標記，請拉開標籤（提供）的背後，然後將其貼在遙控器上。

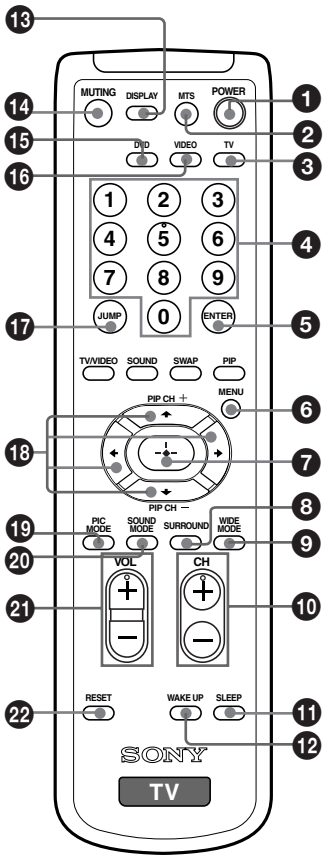

按鍵	功能	頁面
❶ POWER（電源）	打開或暫時關閉電視機。	–
❷ MTS（音聲多重）	選擇立體聲或雙語言模式。	14
❸ TV（電視）	顯示電視頻道。	–
❹ 0 – 9	輸入數字鍵。	–
❺ ENTER（頻道輸入）	確認所選的頻道。	–
❽ SURROUND（環繞音效）	選擇環繞聲模式。	12
❾ WIDE MODE（寬螢幕模式）	選擇 16:9 寬螢幕模式。	12
❿ CH +/–（頻道）	選擇頻道號碼。	–
⓭ DISPLAY（顯示）	顯示畫面上的信息。	–
⓮ MUTING（靜音）	消除聲音。	–
⓯ DVD	顯示聲音 / 色差端子 (DVD) 輸入。	26
⓰ VIDEO（影音）	選擇電視或影音輸入。	25
⓱ JUMP（回復）	跳回到之前的頻道號碼。	–
⓳ PIC MODE（畫質模式）	選擇畫質模式。	11
⓴ SOUND MODE（音效模式）	選擇音效模式。	11
㉑ VOL +/–（音量）	調整音量。	–
㉒ RESET（重新設定）	使電視機回復工廠設定。	27
定時器操作		
⓫ SLEEP（睡眠定時）	設定電視自動關閉。	13
⓬ WAKE UP（開機定時）	設定電視自動打開。	13
目錄操作		
❻ MENU（目錄）	顯示選單。	17
❼ ⊕	確認被選項目。	17
⓲ ↑, ↓, ←, →	選擇和調整項目。	17

續

續

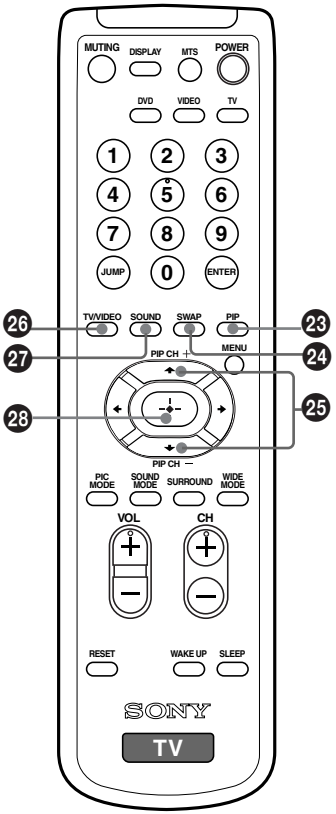

按鍵	功能	頁面
子母畫面操作（黃色標記）		
㉓ PIP（子母畫面） ㉔ SWAP（畫面切換） ㉕ PIP CH +/– （子畫面頻道 +/–） ㉖ TV/VIDEO （電視 / 影音） ㉗ SOUND（聲音） ㉘ ⊕	本電視機無此操作。	–

■ 選擇畫質和音效模式

您可選擇畫質和音效模式並使用“個人”模式來調整您所偏好的設定。

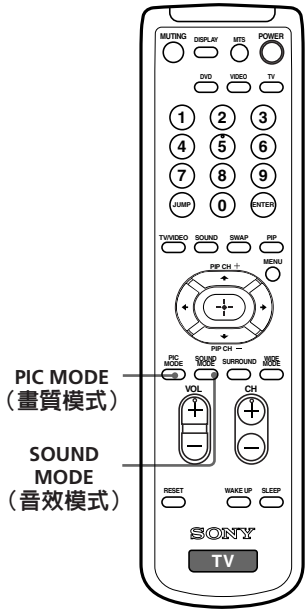

選擇畫質模式

按壓 PIC MODE（畫質模式）鍵直到您所要的畫質模式被選定。

選擇	以
“動態”	觀看對比度強的圖像。
“標準”	觀看普通的圖像。
“柔和”	觀看柔和的圖像。
“個人”	接收“畫面設定”選單中的“設定”項目所調整的最終圖像設定（參考第 19 頁）。

選擇音效模式

按壓 SOUND MODE（音效模式）鍵直到您所要的音效模式被選定。

選擇	以
“♪ 動態”	收聽強調低音和高音的動態範圍寬而清晰的音響。
“♪ 戲劇”	收聽強調人聲和高音調的聲音。
“♪ 柔和”	收聽柔和的聲音。
“♪ 個人”	接收在“聲音設定”選單中的“設定”項目所調整的最終聲音設定（參考第 21 頁）。

■ 觀看寬螢幕模式的圖像

當接收 16:9 寬螢幕模式信號時，“压缩”的圖像將會顯示在畫面上。您可使用 WIDE MODE（寬螢幕模式）鍵以觀看最佳效果的圖像。

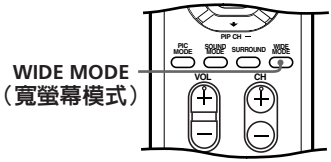

選擇	以
“開”	觀看 16:9 寬螢幕模式的圖像。
“關”	取消 16:9 寬螢幕模式。

■ 收聽環繞音效

您可使用 SURROUND（環繞音效）鍵以收聽音樂廳或電影院的音響效果。

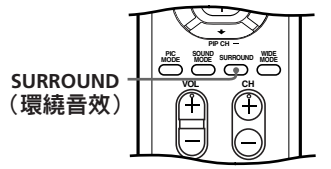

選擇	以
“TruSurround”	收聽傳遍整個房間的環繞音效。
“模擬立體音效”	收聽模擬立體聲的單聲道音響。
“關”	取消環繞音效。

您的電視機的環繞音效是屬於 TruSurround 的音響效果。

TruSurround™ 是 SRS Labs, Inc. 的注冊商標。SRS 及 SRS 的標識是 SRS Labs, Inc. 在美國及一些經特選的外國注冊登記過的商標。SRS 及 TruSurround 科技是登記在 SRS Labs, Inc. 特許證下，並受到美國專利號碼 4,748,669 和 4,841,572, 以及許多補充發佈的和正待發佈的外國專利保護。

■ 設置定時器

您可分別使用開機和睡眠定時器以設定您的電視機自動打開及自動關閉。

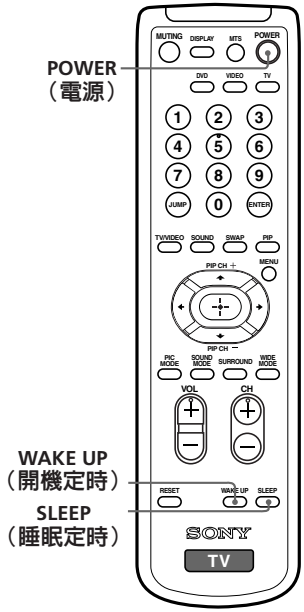

設定開機定時器

1 **按壓 WAKE UP（開機定時）鍵直到您所指定的時間顯示在畫面上。**

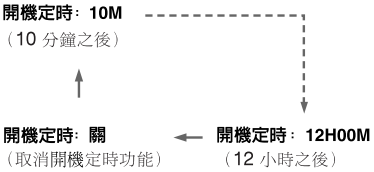

一旦時間被設定，開機定時器便立即啓動。

2 **請選擇當您醒來時所要觀看的頻道號碼或影音輸入。**

3 **若您要電視機自動切斷電源，請按壓 POWER 鍵或設定睡眠定時功能。**

當電視機進入待機狀態時，電視機上的 WAKE UP（開機定時）指示燈將發出橙色亮光。

設定睡眠定時器

按壓 SLEEP（睡眠定時）鍵直到您所指定的時間顯示在畫面上。

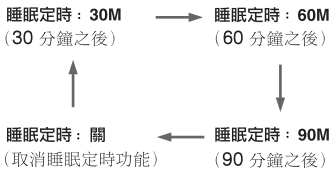

一旦時間被設定，睡眠定時器便立即啓動。

注

- 您可按壓電視機上的 ⏻ 切斷電視機電源以取消開機和睡眠定時功能。
- 用開機定時器接通電視機電源並超過兩小時後，若您不按壓電視機或遙控器上的任何一個按鍵或控制鍵，則電視機再進入待機狀態。

■ 欣賞立體聲或雙語言節目

您可使用 MTS（音聲多重）鍵以欣賞 MTS（音聲多重）立體聲制式的立體聲或雙語言節目。

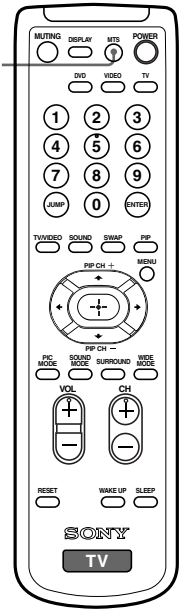

選擇立體聲或雙語言節目

按壓 MTS（音聲多重）鍵至接收到您所想收聽的聲音。

選擇	以
“立體聲”	收聽立體聲。
“副語音”	收聽雙語言節目。
“單聲道”	接收單聲道的聲音。

注

- 當選擇“副語音”時，非副語音節目的聲音將會與立體聲相似。
- 當信號微弱時，“副語音”或“立體聲”的聲音可能會不正常。要改善聲音，選擇“單聲道”。

■ 介紹選單系統

MENU（目錄）鍵能讓您顯示選單和調整電視上的設定。以下是選單系統的總概況。

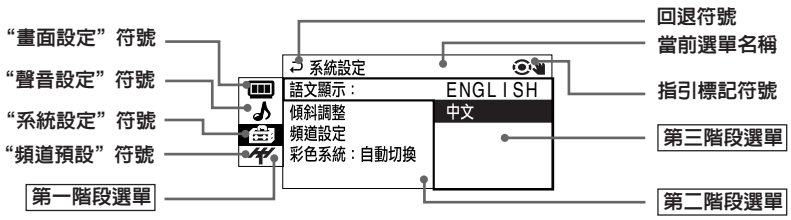

第一階段	第二階段	第三階段 / 功能	頁面
“畫面設定”	“畫質模式”	選擇圖像模式： “動態” → “標準” → “柔和” → “個人” → “設定”	18
	“個人設定”	調整“個人”項目： “對比” → “彩色” → “亮度” → “色相” → “銳度”	
	“寬螢幕模式”	改變圖像的尺寸： “開” → “關”	
	“智慧型畫質設定”	接收最理想的畫面效果： “開” → “關”	
“聲音設定”	“音效模式”	選擇聲音模式： “動態” → “戲劇” → “柔和” → “個人” → “設定”	20
	“個人設定”	調整“個人”項目： “低音” → “高音” → “平衡” → “BBE” *	
	“環繞音效”	選擇環繞音效模式： “TruSurround” → “模擬立體音效” → “關”	
	“智慧型音量設定”	自動調整音量： “開” → “關”	

續

續

第一階段	第二階段	第三階段 / 功能	頁面
“系統設定”	“語文顯示/ LANGUAGE”	改變選單語文顯示： “ENGLISH”（英文）→“中文”	22
	“傾斜調整”	調整圖像位置。	
	“頻道設定”	調整個別頻道號碼的設定。	
	“彩色系統”	選擇彩色系統（僅於影音輸入）： “自動切換”→“PAL”→ “SECAM”→ “NTSC3.58”→“NTSC4.43”	
“頻道預設”	“自動頻道記憶”	自動預設頻道。	24
	“有線電視”	收看有線電視節目： “開”→“關”	

* BBE 是 Sony 公司經 BBE 音響公司獲准後生產的並應用了美國專利號碼 No. 4,638,258 和 No. 4,482,866。“BBE”這詞與 BBE 這符號是 BBE 音響公司的注冊商標。

如何使用選單

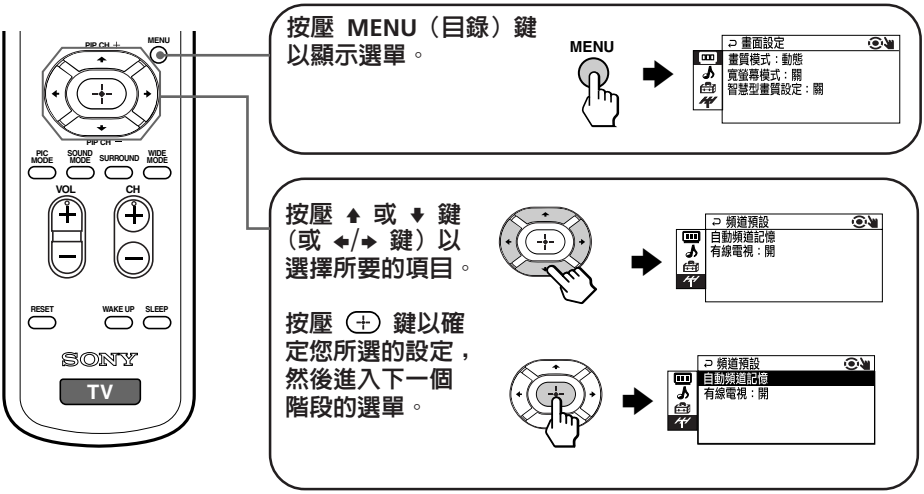

其它選單操作

要	按壓
調整設定值	▲,▼,← 或 → 鍵。
回到之前或進入下一個階段的選單	← 或 → 鍵。
取消選單	MENU（目錄）鍵。

提示

- 要從第二階段選單回到第一階段選單時，則請按壓 ▲ 或 ▼ 鍵直到回退符號（⮌）被選中，然後按壓 ⊕ 鍵。
- 您也可使用遙控器的按鍵以直接操作選單上的某些項目。
- 電視機上的 MENU（目錄）鍵 、 RETURN（輸入）鍵和 SELECT ▼/▲（功能選擇）鍵也可同時用於上述操作。

電視機前面

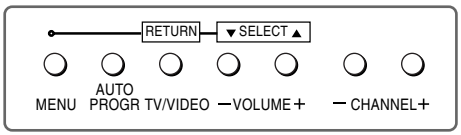

■ 調整“畫面設定”

“畫面設定”選單可使您調整畫面設定。

1 **按壓 MENU（目錄）鍵。**

2 **確認“畫面設定”符號（▣）已被選擇，然後按壓 ⊕ 鍵。**

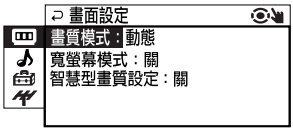

3 **按壓 ▲ 或 ▼ 鍵以選擇所要的項目（例如，“畫質模式”），然後按壓 ⊕ 鍵。**

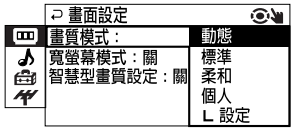

選擇	以
“畫質模式”	選擇“動態”、“標準”、“柔和”、“個人”* 或“設定”（參考第 11 頁）。
“寬螢幕模式”	選擇“開”或“關”（參考第 12 頁）。
“智慧型畫質設定”	接收最理想的畫面效果。 按壓 ▲ 或 ▼ 鍵以選擇“開”，然後按壓 ⊕ 鍵。 要取消時，選擇“關”然後按壓 ⊕ 鍵。

* 當選擇“個人”模式時，您可接收到最後一次在“設定”模式中所調整的圖像設定（參考第 19 頁）。

調整“畫質模式”下的“設定”項目（“個人設定”）

1 **按壓 ↑ 或 ↓ 鍵以選擇所要的項目（例如，“彩色”），然後按壓 ⊕ 鍵。**

彩色 80

2 **按照下表調整項目值，然後按壓 ⊕ 鍵。**

項目	按壓 ↓ 或 ← 鍵以	按壓 ↑ 或 → 鍵以
“對比”	降低圖像對比度。	提高圖像對比度。
“彩色”	減低彩色濃度。	增加彩色濃度。
“亮度”	降低圖像亮度。	提高圖像亮度。
“色相”	使圖像色調增強紅色。	使圖像色調增強綠色。
“銳度”	使圖像柔和。	使圖像鮮明。

3 **重復上述步驟以調整其它項目。**

當選擇“個人”項目時，您可接收已被調整的設定。

注

- 只有當彩色系統爲 NTSC 時，您才能調整“色相”設定。
- 您也可減少“銳度”以降低圖像噪聲。

■ 調整“聲音設定”

“聲音設定”選單可使您調整聲音設定。

1 **按壓 MENU（目錄）鍵。**

2 **按壓 ▲ 或 ▼ 鍵以選擇“聲音設定”符號（♪），然後按壓 ⊕ 鍵。**

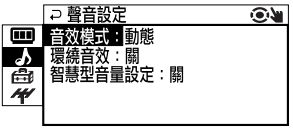

3 **按壓 ▲ 或 ▼ 鍵以選擇所要的項目（例如，“音效模式”），然後按壓 ⊕ 鍵。**

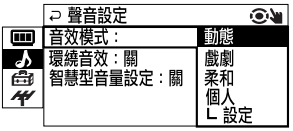

選擇	以
“音效模式”	選擇“動態”、“戲劇”、“柔和”、“個人”* 或“設定”（參考第 11 頁）。
“環繞音效”	選擇“TruSurround”，“模擬立體音效” 或“關”（參考第 12 頁）。
“智慧型音量設定”	自動調整所有頻道號碼和影音輸入的音量。 按壓 ▲ 或 ▼ 鍵以選擇“開”，然後按壓 ⊕ 鍵。 要取消時，選擇“關”，然後按壓 ⊕ 鍵。

* 當選擇“個人”模式時，您可接收到最後一次在“個人設定”模式中所調整的聲音設定（參考第 21 頁）。

調整“音效模式”下的“設定”項目（“個人設定”）

1 **按壓 ▲ 或 ▼ 鍵以選擇所要的項目（例如，“平衡”），然後按壓 ⊕ 鍵。**

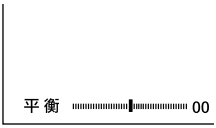

2 **按照下表調整項目值，然後按壓 ⊕ 鍵。**

項目	按壓 ▼ 或 ◀ 鍵以	按壓 ▲ 或 ▶ 鍵以
“低音”	減弱低音。	增強低音。
“高音”	減弱高音。	增強高音。
“平衡”	提高左揚聲器的音量。	提高右揚聲器的音量。
“BBE”	選擇“強”以強調較高的聲音清純度； 選擇“弱”以強調較低的聲音清純度； 選擇“關”以取消 BBE 功能。	

3 **重復上述步驟以調整其它項目。**
當選擇“個人”項目時，您可接收已被調整的設定。

■ 調整“系統設定”選單

“系統設定”選單可使您更換選單語言，調整圖像位置，調整頻道號碼以及選擇彩色系統。

1 **按壓 MENU（目錄）鍵。**

2 **按壓 ↑ 或 ↓ 鍵以選擇“系統設定”符號（🔧），然後按壓 ⊕ 鍵。**

3 **按壓 ↑ 或 ↓ 鍵以選擇所要的項目（例如，“語文顯示／LANGUAGE”），然後按壓 ⊕ 鍵。**

選擇	以
“語文顯示/LANGUAGE”	更換選單語言。 按壓 ↑ 或 ↓ 鍵以選擇“ENGLISH”（英文）或“中文”，然後按壓 ⊕ 鍵。 被選擇的選單語言將顯示在畫面上。
“傾斜調整”	調整電視上傾斜的圖像。 按壓 ↑,→,↓ 或 ← 鍵以調整圖像位置，然後按壓 ⊕ 鍵。
“頻道設定”	調整個別頻道號碼的設定（參考第 23 頁的**調整個別頻道號碼的設定（“頻道設定”）**）。
“彩色系統”	更換彩色系統 （僅於影音輸入）。 按壓 ↑ 或 ↓ 鍵以選擇適當的彩色系統，然後按壓 ⊕ 鍵。 通常將此設定爲“自動切換”。

調整個別頻道號碼的設定（“頻道設定”）

1 **選擇“系統設定”選單中的“頻道設定”。**

2 **按壓“CH”後再按壓 ⊕ 鍵。**
按壓 ▲ 或 ▼ 鍵以選擇您所要調整的頻道號碼，然後按壓 ⊕ 鍵。

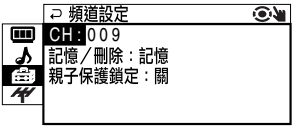

3 **按壓 ▲ 或 ▼ 鍵以選擇您所要的項目，(例如，“記憶／刪除”)，然後按壓 ⊕ 鍵。**

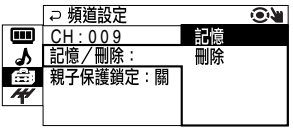

選擇	以
“CH”	選擇您所要的頻道號碼。
“記憶／刪除”	手動預設頻道。 按壓 ▲ 或 ▼ 鍵以選擇“記憶”，然後按壓 ⊕ 鍵。 若要略掉不用或不要的頻道，選擇“刪除”，然後按壓 ⊕ 鍵。
“親子保護鎖定”	避免小孩觀看某些頻道號碼。 按壓 ▲ 或 ▼ 鍵以選擇“開”，然後按壓 ⊕ 鍵。 親子保護鎖定符號（🔒）即顯示在畫面上。 要取消時，選擇“關”，然後按壓 ⊕ 鍵。 若您預設任何一個鎖定頻道號碼，此頻道號碼將自動解鎖。

4 **若要繼續調整其它頻道號碼，按壓 ▲ 或 ▼ 鍵以選擇“CH”，然後重復第 2 和第 3 步驟。**

■ 調整“頻道預設”設定

“頻道預設”選單可使您調整電視機的設定，以接收有線電視或 VHF/UHF 廣播頻道。

1 **按壓 MENU（目錄）鍵。**

2 **按壓 ▲ 或 ▼ 鍵以選擇“頻道預設”符號（📡），然後按壓 ⊕ 鍵。**

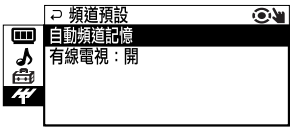

3 **按壓 ▲ 或 ▼ 鍵以選擇所要的項目（例如，“有線電視”），然後按壓 ⊕ 鍵。**

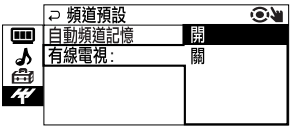

選擇	以
“自動頻道記憶”	自動預設頻道。
“有線電視”	接收有線電視節目。 按壓 ▲ 或 ▼ 鍵以選擇“開”，然後按壓 ⊕ 鍵。 若您選擇“有線電視：開”，您將會接收到 125 個有線電視頻道。 若沒有有線電視頻道，您將會接收到 VHF 的廣播頻道而已。 若只想接收 VHF/UHF 廣播頻道，選擇“關”，然後按壓 ⊕ 鍵。

■ 連接選購的裝置

連接至 VIDEO 3 INPUT（影音 3 輸入）端子和 VIDEO IN 1, 2 或 3（影音輸入）端子

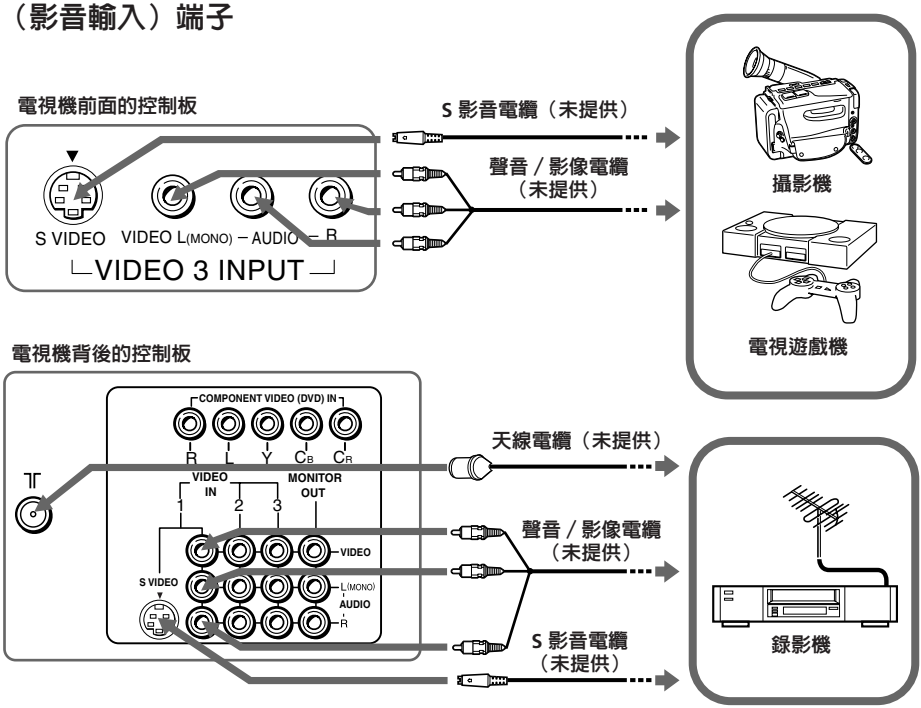

連接至 MONITOR OUT（監視器輸出）端子

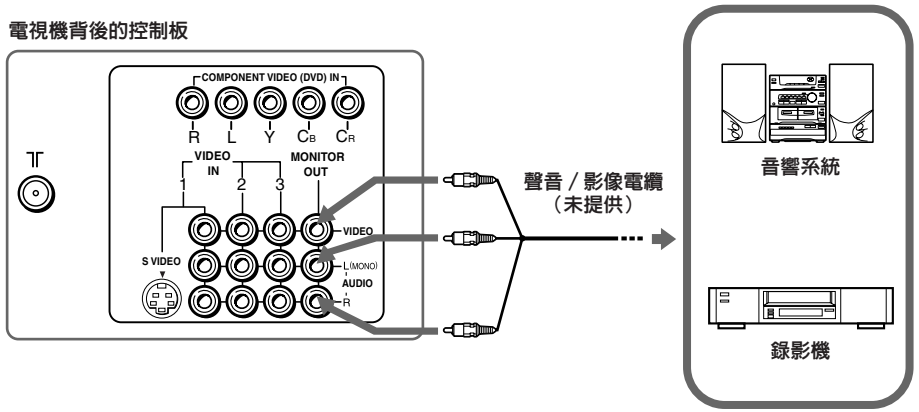

續

續

用 COMPONENT VIDEO（DVD）IN（聲音／色差端子（DVD）輸入）端子與 DVD 播放機相連接

1 將電視機上的 COMPONENT VIDEO（DVD）IN（聲音／色差端子（DVD）輸入）R（右）和 L（左）與 DVD 播放機上的 LINE OUT（線路輸出）的 AUDIO（聲音）R（右）和 L（左）輸出插口連接起來。

2 用 DVD 影音電纜將電視機上的 COMPONENT VIDEO（DVD）IN（聲音／色差端子（DVD）輸入）Y，C_B 和 C_R 插口連接至 DVD 播放機上的 COMPONENT VIDEO OUT（DVD 影音輸出）Y，C_B 和 C_R 插口。

3 按壓遙控器上的 DVD 鍵以觀看 COMPONENT VIDEO（DVD）IN（聲音／色差端子（DVD）輸入），“DVD”也將同時顯示在畫面上。

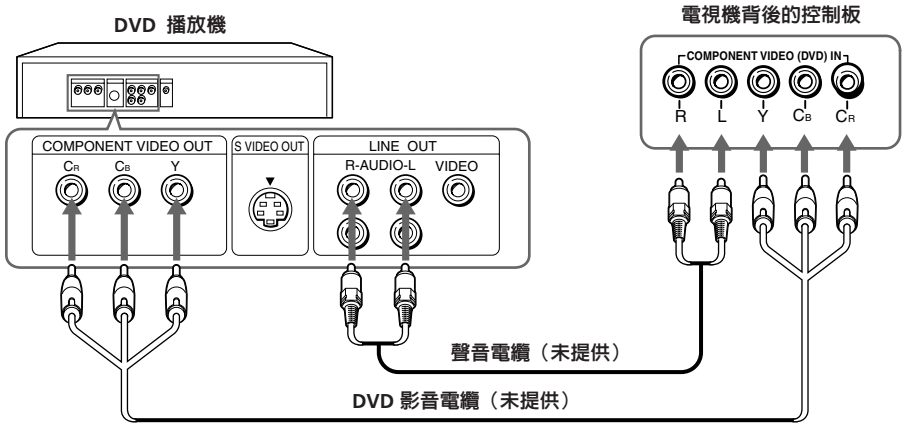

注

- 當連接 DVD 播放機至電視機上的 COMPONENT VIDEO (DVD) IN（聲音 / 色差端子 DVD 輸入）時，若您的 DVD 播放機可輸出隔行和逐行的掃描模式信號，則請選擇隔行掃描輸出。您的電視機可接收 525i/60 赫茲或 625i/50 赫茲的隔行掃描信號。
- 某些 DVD 播放機的插口可能標記不同：

連接	至（DVD 播放機上）
Y（綠色）	Y
C_B（藍色）	C_B, P_B, C_b 或 B-Y
C_R（紅色）	C_R, P_R, C_r 或 R-Y

- 當 S VIDEO（S 影像）和 VIDEO IN 1 （影音輸入）或 VIDEO 3 INPUT（影音 3 輸入）的 VIDEO（影像）同時被連接時，S VIDEO（S 影像）即自動被選定。要收看 VIDEO（影像）時，斷開 S 影像電纜即可。
- 若您在電視畫面上選擇“DVD”，MONITOR OUT（監視器輸出）插口將不能輸出正常的信號。這並不表示發生故障。

■ 故障檢修

若在觀看電視時遇見任何問題，您可使用重新設定功能以解決問題或參考下列故障檢修指南。若問題仍然存在，請聯絡 Sony 經銷商。

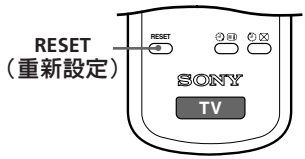

重新設定功能

按壓遙控器上的 RESET（重新設定）鍵。電視畫面即呈現空白，約半秒後，圖像將重現。“重新設定”同時會顯示在電視畫面上，十秒後“重新設定”即消失。

按壓 RESET 鍵使電視機恢復到工廠設定，一些電視故障可能會消失。

故障檢修指南

癥狀	可能因素	解決方法	頁面
圖像有雪花狀斑點  有噪聲 	• 連接已鬆脫或電纜已損壞。	• 檢查天線電纜以及電視機，錄影機和牆上的天線連接是否正確。	25
	• 天線裝置不正確。	• 檢查天線的裝置。請尋求 Sony 經銷商的協助。	–
	• 頻道預設不適當或不完整。	• 再次預設頻道。	24
	• 傳送信號微弱。	• 嘗試使用信號增強器。	–
圖像失真 有噪聲 	• 廣播信號太強。	• 切斷信號增強器的電源或拔掉其插頭以終止其操作。	–
沒有圖像 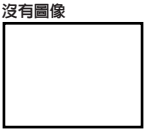 沒有聲音 	• 電源線、天線或錄影機沒有被連接。	• 檢查電源線，天線和錄影機之連接是否正確。	25
	• 電視機電源沒有被接通。	• 按壓 POWER（電源）鍵。 • 按壓電視機上的 ①（電源）鍵以切斷電視機的電源，五秒左右後再次接通電源。	9 8

續

續

癥狀	可能因素	解決方法	頁面
圖像良好 **沒有聲音** 	• 音量水平過低。	• 按壓 VOL +（音量）鍵以提高音量水平。	9
	• 聲音被消除。	• 按壓 MUTING（靜音）鍵以取消消音。	9
圖像有點線或條紋 	• 受周圍環境（如汽車、霓虹燈、吹風機、發電機等）影響。	• 不要在電視機旁使用吹風機或其它電器。 • 檢查天線的裝置。請尋求 Sony 經銷商的協助。	– –
圖像出現雙重影像 	• 廣播信號受周圍高山或大廈干擾。	• 使用高定向天線。	–
	• 天線裝置不正確。	• 檢查天線的裝置。請尋求 Sony 經銷商的協助。	–
	• 信號增強器的使用不適當。	• 切斷信號增強器的電源或拔掉其插頭以終止其操作。	–
圖像無彩色 	• 彩色水平設定過低。	• 顯示“畫面設定”選單，並選擇“畫質模式”裡的“設定”，然後調整“彩色”濃度。	19
	• 彩色系統設定不正確（僅於影音輸入）。	• 顯示“系統設定”選單，並檢查“彩色系統”設定（通常將此設定爲“自動切換”）。	22
	• 天線裝置不正確。	• 檢查天線的裝置。請尋求 Sony 經銷商的協助。	–
圖像傾斜 	• 受外部揚聲器或其它電器電磁性的影響，或受地球磁場方向的影響。	• 將電視機放置在離外部揚聲器或其它電器較遠的地方。 • 顯示“系統設定”選單並調整“傾斜調整”以使畫面位置調至最佳。	– 22

癥狀	可能因素	解決方法	頁面
圖像出現反常彩色斑點 	• 受外部揚聲器或其它電器電磁性的影響，或受地球磁場方向的影響。	• 將電視機放置在離外部揚聲器或其它電器較遠的地方。請勿移動已被接通電源的電視機。按壓電視機上的 ①（電源）鍵以切斷電視機電源。約 15 分鐘後再接通電視機電源。	–
立體聲廣播聲音開關失常或聲音失真。 **或**	• 立體聲接收設定不適當。	• 按壓 MTS（音聲多重）鍵直到“立體聲”顯示在畫面上。	14
	• 連接已鬆脫或電纜已損壞。	• 檢查天線電纜以及電視機，錄影機和牆上的天線連接是否正確。	25
聲音頻繁地轉換於單聲道和立體聲之間。	• 天線裝置不正確。	• 檢查天線的裝置。請尋求 Sony 經銷商的協助。	–
電視機上的 STANDBY（待機）指示燈每隔三秒閃爍至少一次的紅色亮光。	• 您的電視機的自動檢測判斷功能表明可能存在的原因。	• 計算 STANDBY（待機）指示燈的亮光次數。按壓 ①（電源）鍵以切斷電視機電源。通知您鄰近的 Sony 維修服務中心。	–
電視機外殼吱嘎聲。	• 室溫的變化有時會導致電視機的外殼膨脹或縮小，因此產生噪聲。這並不表示發生故障。	—	–
當您接通電視機時，聽到“嘣”的聲音。	• 電視機自動消磁。這並不表示發生故障。	—	–

■ 規格

	KV-AR34N90	KV-AR29N90	KV-AR25N90	注
電源	110 伏特交流電，60 赫茲			
電力消耗（瓦特）	標示於電視機後			
電視系統	M			
彩色系統	NTSC 3.58, PAL*, PAL 60*, SECAM*, NTSC 4.43*			* 僅於影音輸入
立體聲／雙語言系統	MTS（音聲多重）			
頻道範圍	VHF : 2 至 13 UHF : 14 至 69 CATV : 1 至 125			
╖（天線）	75 歐姆外部端子			
音頻輸出（喇叭）	8 瓦特 + 8 瓦特			
插口數量				
VIDEO（影像）	輸入：4* 輸出：1	Phono 型插口； 1 伏特峰間值，75 歐姆		* 備有三條輸入線
AUDIO（聲音）	輸入：4* 輸出：1	Phono 型插口； 500 毫伏		* 備有三條輸入線
S VIDEO（S 影像）	輸入：2	Y: 1 伏特峰間值，75 歐姆， 非平衡，負同步 C: 0.286 伏特峰間值，75 歐姆		
COMPONENT VIDEO (DVD) IN（聲音/色差端子（DVD）輸入）	輸入：1	Phono 型插口； Y: 1.0 伏特峰間值，75 歐姆，負同步 C_B : 0.7 伏特峰間值，75 歐姆 C_R : 0.7 伏特峰間值，75 歐姆 聲音：500 毫伏		
（耳機）	輸出：1	立體聲微型插口		
顯像管	34 in.	29 in.	25 in.	
顯像管對角線尺寸	859 mm	724 mm	639 mm	
可見畫面對角線尺寸	803 mm	679 mm	598 mm	
外形尺寸（寬×高×深）	896 x 686 x 569 mm	765 x 578 x 502 mm	650 x 517 x 496 mm	
重量	79 kg	49 kg	39 kg	

本機設計和規格若有任何更改，恕不另行通知。

產品名稱：	彩色電視機
型號：	KV-AR34N90 KV-AR29N90 KV-AR25N90
額定電壓：	110 伏特
額定頻率：	60 赫茲
消耗功率：	KV-AR34N90 ： 220 瓦特 KV-AR29N90 ： 180 瓦特 KV-AR25N90 ： 135 瓦特
製造日期：	如機體上標示
機器號碼：	如機體上標示
產地：	馬來西亞
製造廠商：	Sony Technology Malaysia Sdn. Bhd.
進口商：	新力索尼股份有限公司
地址：	台北市敦化南路 2 段 198 號 6 樓
服務洽詢專線：	
台北總公司：	(02)8732-8822
台中分公司：	(04)2337-5821
高雄分公司：	(07)556-2246

http://www.sony.net/
Sony Corporation

SONY

4-091-356-**11** (1)

Trinitron Color TV

Operating Instructions — GB

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

Mode d'emploi — FR

- Avant de faire fonctionner cet appareil, lisez attentivement le présent mode d' emploi et conservez-le pour toute référence ultérieure.

دفترچه راهنما — PR

- قبل از تنظیم کردن دستگاه، لطفا دفترچه راهنما را با دقت بخوانید وبه منظور مراجعه بعدی ان رانگه دارید.

تعليمات التشغيل — AR

- قبل تشغيل الجهاز، يرجى قراءة هذا الدليل بصورة كاملة والاحتفاظ به للمراجعة مستقبلاً.

FD Trinitron

WEGA

KV-AR34
KV-AR25

M81
M80

© 2002 Sony Corporation

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

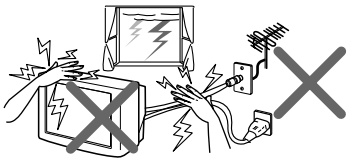

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

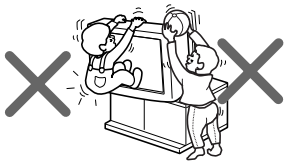

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

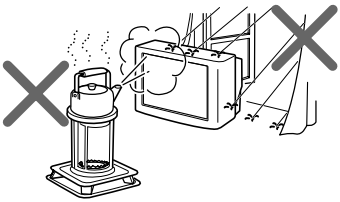

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

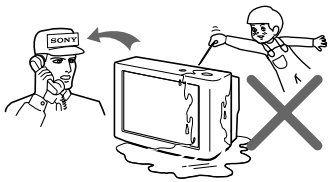

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

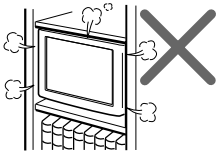

Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

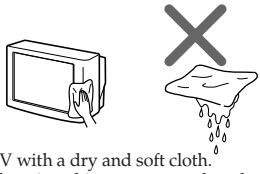

Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.

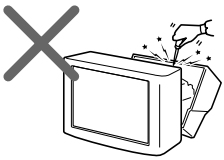

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

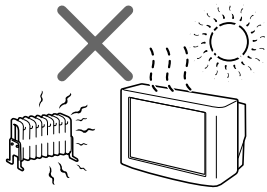

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

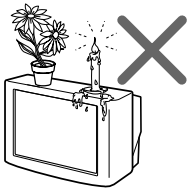

Do not place any objects on the TV.

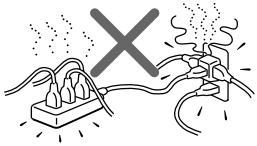

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

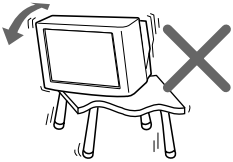

Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

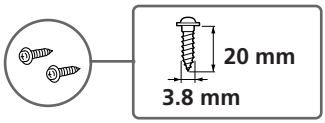

screws

clamps



band

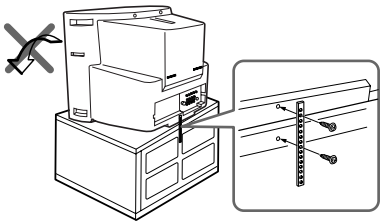

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

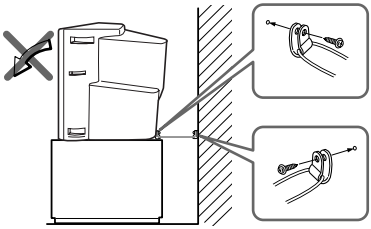

(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

or

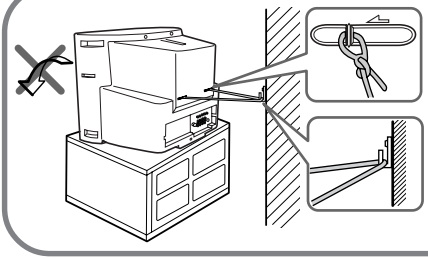

(1) Attach each end of a cord or chain to the provided holders at the rear of your TV.
(2) Securely fix the attached cord or chain to a wall or pillar using an attachment which can support the TV set weight.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

Getting Started **6**
Setting up your TV ("INITIAL SETUP") **7**

Overview of Controls

TV front and rear panels **8**
Remote control **9**

Advanced Operations

Selecting the picture and sound modes **11**
Viewing the picture in wide mode .. **12**
Listening with surround sound **12**
Setting the timers **13**
Viewing Teletext (KV-AR34M81 only) **14**

Menu Adjustment

Introducing the menu system **15**
Changing the "PICTURE" setting ... **18**
Changing the "SOUND" setting **20**
Changing the "SETUP" setting **22**
Changing the Channel Preset ("CH PRESET") setting **24**

Additional Information

Connecting optional components ... **27**
Troubleshooting **29**
Specifications ..... **Back cover**

GB

■ Getting Started

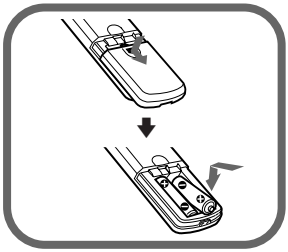

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

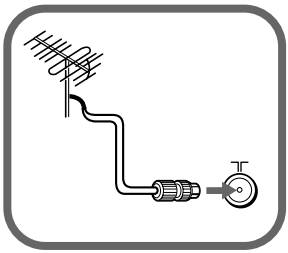

Step 2

Connect the antenna cable (not supplied) to ⅂⊢ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 27).

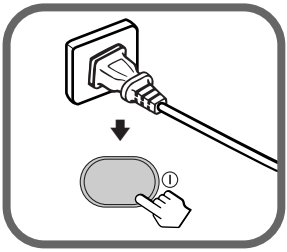

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

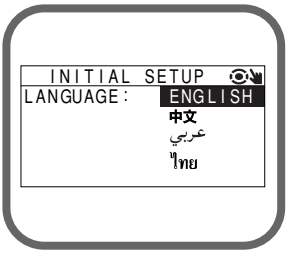

Step 4

Set up the TV by following the instructions of the "INITIAL SETUP"menu (see page 7).

■ Setting up your TV (“INITIAL SETUP”)

When you turn on your TV for the first time, the “INITIAL SETUP” menu will appear. This menu allows you to change the menu language, adjust the picture position and preset the TV channels automatically.

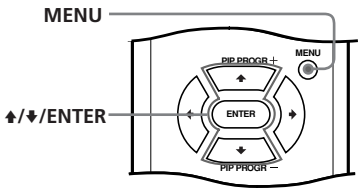

1 Press ↑ or ↓ to select the desired menu language (e.g.,”ENGLISH”), then press ENTER.

The selected menu language appears.

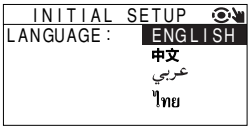

2 If the “PIC ROTATION” bar is slanted, press ↑ or ↓ to adjust it, then press ENTER.

If no adjustment is necessary, then press ENTER.

The ⊞ or ⊟ icon on the screen flashes while adjusting.

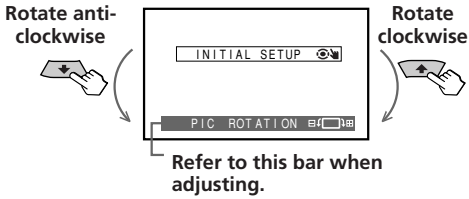

3 Press ↑ or ↓ to select “YES”, then press ENTER to preset the channels automatically (see page 24).

The screen will indicate automatic presetting is in progress.

To skip automatic channel presetting, select “NO”, then press ENTER.

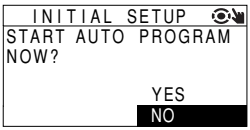

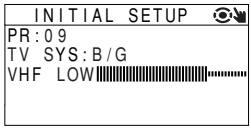

4 Press ↑ or ↓ to select “NO”, then press ENTER. The “INITIAL SETUP” menu will not appear again the next time you turn on the TV by pressing ⏻.

To allow this menu to appear again, select “YES”, then press ENTER.

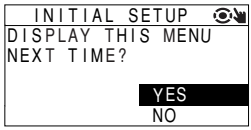

Tips

- You can immediately go to the end of the ”INITIAL SETUP” menu by pressing MENU.
- You can also set up your TV using the menu system (see page 15).

■ TV front and rear panels

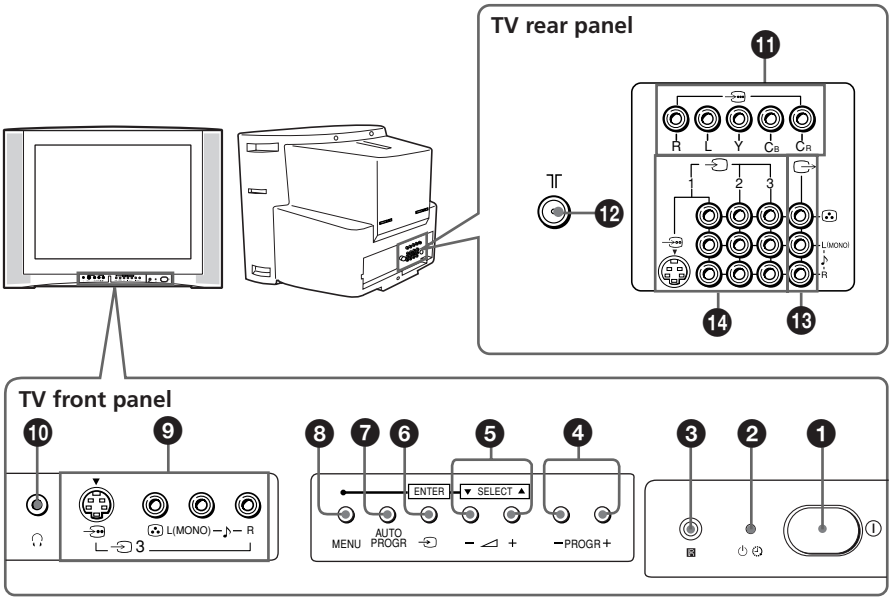

Button/Terminal	Function	Page
❶ ⏻	Turn off or turn on the TV.	6
❷ ⏻	Standby indicator.	–
❷ 🕘	Wake Up indicator.	13
❸	Remote control sensor.	–
❹ PROGR +/–	Select program number.	–
❺ +/–	Adjust volume.	–
❻	Select TV or video input.	–
❼ AUTO PROGR	Preset channels automatically.	–
Menu operations		
❺ SELECT ▼/▲	Select and adjust items.	17
❻ ENTER	Confirm selected items.	17
❽ MENU	Display or cancel the menu.	17
❾ 3	Video input terminal 3.	27
❿	Headphone jack.	–
⓫	Component video input terminal.	28
⓬	Antenna input terminal.	27
⓭	Monitor output terminal.	27
⓮ 1, 2, 3	Video input terminal 1, 2, 3.	27

■ Remote control

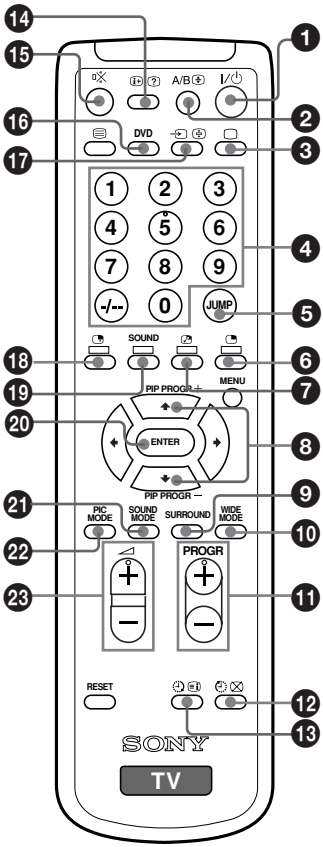

Button	Function	Page
❶ I/⏻	Turn off temporarily or turn on the TV.	–
❸ ▭	Display the TV input.	–
❹ 0 – 9, -/--	Input numbers.	–
❺ JUMP	Jump to previous program number.	–
❾ SURROUND	Select surround mode.	12
❿ WIDE MODE	Select wide-mode (16:9).	12
⓫ PROGR +/–	Select program number.	–
⓮ ⓘ+	Display on-screen information.	–
⓯ 🔇	Mute the sound.	–
⓰ DVD	Select component video input.	28
⓱ ⇥	Select TV or video input.	27
㉑ SOUND MODE	Select sound mode.	11
㉒ PIC MODE	Select picture mode.	11
㉓ ◿ +/–	Adjust volume.	–
Timer operations		
⓬ ⏲	Set TV to turn off automatically.	13
⓭ ⏲	Set TV to turn on automatically.	13
PIP operations (yellow label)		
❻ ◔	Not function for your TV.	–
❼ ♪		
❽ PIP PROGR + / PIP PROGR –		
⓲ ◔		
⓳ SOUND		
⓴ ENTER		
Stereo/bilingual operations		
❷ A/B	Not function for your TV.	–

continue

continued

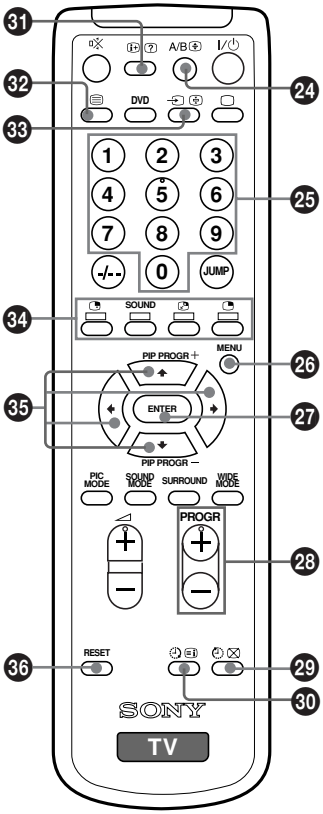

Button	Function	Page
Menu operations		
㉖ MENU	Display or cancel the menu.	17
㉗ ENTER	Confirm selected items.	17
㉟ ↑, ↓, ←, →	Select and adjust items.	17
Teletext operations (green label) (KV-AR34M81 only)		
㉔ ⊜	Enlarge the Teletext display.	14
㉕ 0 – 9	Input Teletext page number.	14
㉘ PROGR +/–	Display the next or previous page.	14
㉙ ⊠	Show TV screen while waiting for Teletext page.	14
㉚ ⊟	Display Teletext service contents.	14
㉛ ?	Reveal concealed information.	14
㉜ ≡	Display Teletext broadcast.	14
㉝ ⊜	Stop Teletext display from scrolling.	14
㉞ ▬ (red, green, yellow, blue)	Access a FASTEXT menu.	14
㊱ RESET	Set TV to factory setting.	29

Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the “PERSONAL” option.

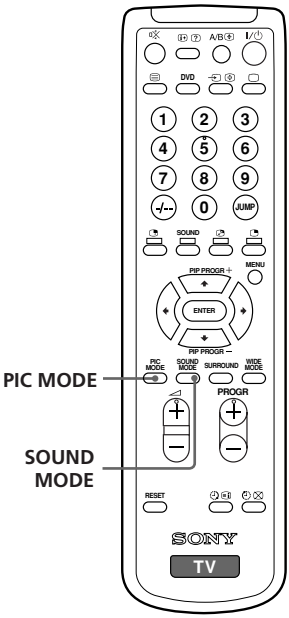

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
“DYNAMIC”	view high contrast pictures.
“STANDARD”	view normal pictures.
“SOFT”	view mild pictures.
“PERSONAL”	receive the last adjusted picture setting from the “ADJUST” option in the “PICTURE” menu (see page 19).

Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

Select	To
“♪ DYNAMIC”	listen to dynamic and clear sound that emphasizes both the low and high tones.
“♪ DRAMA”	listen to sound that emphasizes voice and high tones.
“♪ SOFT”	listen to soft sound.
“♪ PERSONAL”	receive the last adjusted sound setting from the “ADJUST” option in the “SOUND” menu (see page 21).

■ Viewing the picture in wide mode

When receiving a wide-mode (16:9) signal, the picture will appear “squeezed” (compressed) on your screen. Use the WIDE MODE button to view the picture with the optimal effect.

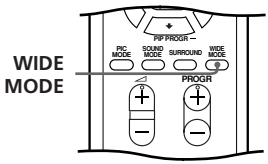

Select	To
“ON”	view the picture in wide-mode (16:9).
“OFF”	cancel wide-mode (16:9).

■ Listening with surround sound

You can use the SURROUND button to listen to the sound effects of a concert hall or movie theater.

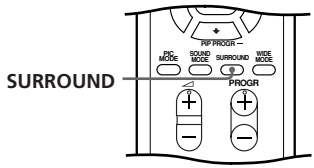

Select	To
“TruSurround”	listen to the surround sound that spreads out to the rear of a room.
“SIMULATED”	listen to monaural sound with a stereo-like effect.
“OFF”	cancel surround sound.

The surround of your TV is categorized as TruSurround.

TruSurround™ is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents.

■ Setting the timers

You can set your TV to turn on and off automatically by using the Wake up timer and Sleep timer respectively.

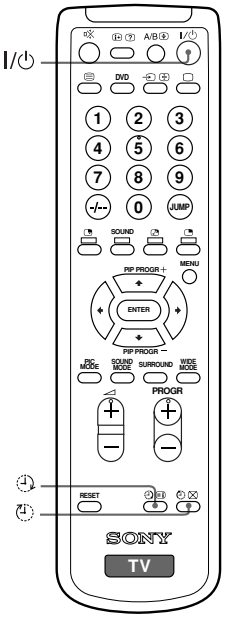

Setting the Wake Up timer

1 Press 🕘 until the desired period of time appears on the screen.

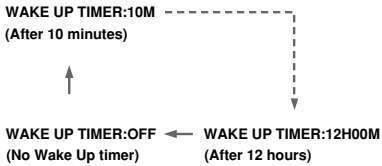

The Wake Up timer starts immediately after you have set it.

2 Select the program number or video input you want to wake up to.

3 Press I/⏻, or set the Sleep timer if you want the TV to turn off automatically.

The 🕘 indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press 🕘 until the desired period of time appears on the screen.

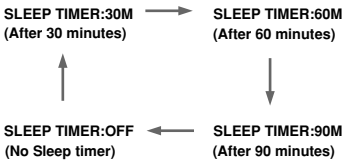

The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by pressing ⏻ on the TV to turn off the TV.
- If no buttons are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

■ Viewing Teletext

▶ KV-AR34M81 only

Some TV stations broadcast an information service called Teletext which allows you to receive various information, such as stock market reports and news.

You can use the buttons on the remote to view Teletext.

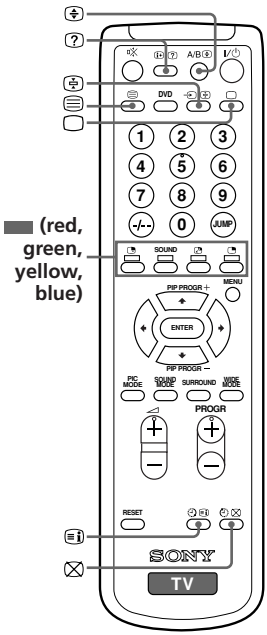

To	Do this
display a Teletext page on the TV picture	Press ☰. Each time you press ☰, the screen changes as follows: Teletext → Teletext and TV → TV. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.
check the contents of a Teletext service	Press ⓘ. An overview of the Teletext contents, including page numbers, appears on the screen.
select a Teletext page	Press the number buttons to enter the three-digit page number of the desired Teletext page. If you make a mistake, reenter the correct page number. To access the next or previous page, press PROGR +/–.
hold (pause) a Teletext display	Press ⊜ to display the symbol "⊜" at the top left corner of the screen. To resume normal Teletext viewing, press ⊜ or ☰.
reveal concealed information (e.g., an answer to a quiz)	Press ?. To conceal the information, press the button again.
enlarge the Teletext display	Press ⇳. Each time you press ⇳, the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.
stand by for a Teletext page while watching a TV program	1 Enter the Teletext page number that you want to refer to, then press ⊠. 2 When the page number is displayed, press ☰ to show the text.
select a FASTEXT menu or the colored boxes	Press ■ (red, green, yellow and blue) that corresponds to the desired menu or page number.
turn off Teletext	Press ▭.

Note

- The FASTEXT feature can be used only when the FASTEXT broadcast is available.

■ Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.

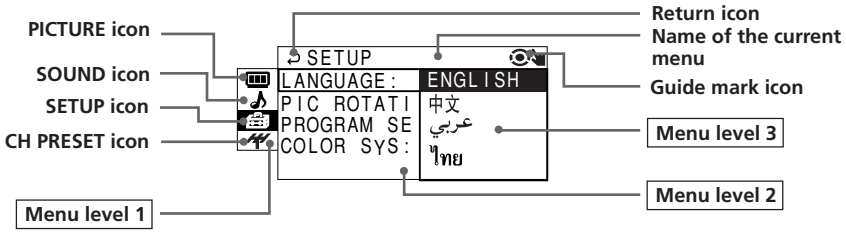

Level 1	Level 2	Level 3/Function	Page
"PICTURE"	"PICTURE MODE"	Select the picture mode: "DYNAMIC" → "STANDARD" → "SOFT" → "PERSONAL" → "ADJUST"	18
	"ADJUST"	Adjust the "PERSONAL" option: "PICTURE" → "COLOR" → "BRIGHT" → "HUE" → "SHARP"	
	"WIDE MODE"	Change the picture size: "ON" → "OFF"	
	"INTELLIGENT PIC"	Optimize picture quality: "ON" → "OFF"	
"SOUND"	"SOUND MODE"	Select the sound mode: "DYNAMIC" → "DRAMA" → "SOFT" → "PERSONAL" → "ADJUST"	20
	"ADJUST"	Adjust the "PERSONAL" option: "BASS" → "TREBLE" → "BALANCE" → "BBE"*	
	"SURROUND"	Select the "SURROUND" mode: "TruSurround" → "SIMULATED" →"OFF"	
	"INTELLIGENT VOL"	Adjust volume automatically: "ON" → "OFF"	

continue

continued

Level 1	Level 2	Level 3/Function	Page
"SETUP"	"LANGUAGE"	Change the menu language: "ENGLISH" → "中文"(Chinese) → "عربي"(Arabic) → "ไทย"(Thai)	22
	"PIC ROTATION"	Adjust the picture position.	
	"PROGRAM SETUP"	Adjust each program number settings.	
	"COLOR SYS"	Select the color system: "AUTO" →" PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43"	
"CH PRESET"	"AUTO PROGRAM"	Preset channels automatically.	24
	"MANUAL PROGRAM"	Preset channels manually.	
	"TV SYS"	Select the TV system: "B/G" → "I" → "D/K" → "M"	

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE symbol are the trademarks of BBE Sound, Inc.

How to use the menu

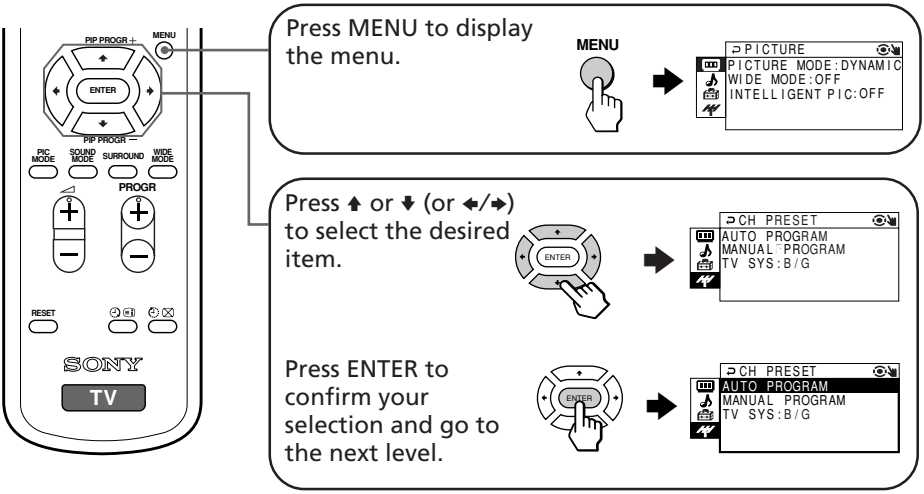

Other menu operations

To	Press
Adjust the setting value	↑, ↓, ← or →.
Move to the next/previous menu level	← or →.
Cancel the menu	MENU.

Tips

- If you want to exit from Menu level 2 to Menu level 1, press ↑ or ↓ until the return icon (⮌) is highlighted, then press ENTER.
- Some of the menu items can be operated directly using the remote buttons.
- The MENU, ENTER, and SELECT ▼/▲ buttons on the TV can also be used for the operations above.

Front of TV

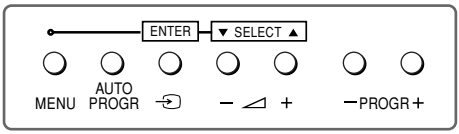

■ Changing the “PICTURE” setting

The “PICTURE” menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the “PICTURE” icon ( ) is selected, then press ENTER.

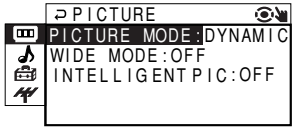

3 Press ↑ or ↓ to select the desired item (e.g., “PICTURE MODE”), then press ENTER.

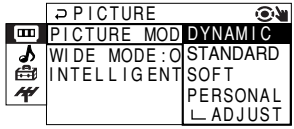

Select	To
“PICTURE MODE”	choose either “DYNAMIC”, “STANDARD”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“WIDE MODE”	choose either “ON” or “OFF” (see page 12).
“INTELLIGENT PIC”	optimize picture quality. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted picture settings from the “ADJUST” option (see page 19).

Adjusting the "ADJUST" items under "PICTURE MODE"

1 Press ↑ or ↓ to select the desired item (e.g.,"COLOR"), then press ENTER.

2 Adjust the value according to the following table, then press ENTER.

For	Press ↓ or ← to	Press ↑ or → to
"PICTURE"	decrease picture contrast.	increase picture contrast.
"COLOR"	decrease color intensity.	increase color intensity.
"BRIGHT"	darken the picture.	brighten the picture.
"HUE"	increase red picture tones.	increase green picture tones.
"SHARP"	soften the picture.	sharpen the picture.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

Notes

- "HUE" can be adjusted for the NTSC color system only.
- Reducing sharpness ("SHARP") can also reduce picture noise.

■ Changing the “SOUND” setting

The “SOUND” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press ↑ or ↓ to select the “SOUND” icon (♪), then press ENTER.

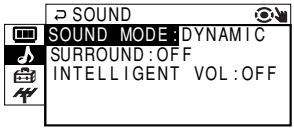

3 Press ↑ or ↓ to select the desired item (e.g., “SOUND MODE”), then press ENTER.

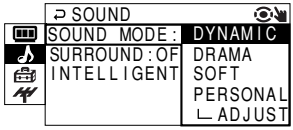

Select	To
“SOUND MODE”	choose either “DYNAMIC”, “DRAMA”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“SURROUND”	choose either “TruSurround”, “SIMULATED” or “OFF” (see page 12).
“INTELLIGENT VOL”	adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted sound settings from the “ADJUST” option (see page 21).

Adjusting the "ADJUST" items under "SOUND MODE"

1 Press ↑ or ↓ to select the desired item (e.g., "BALANCE"), then press ENTER.

2 Adjust the value according to the following table, then press ENTER.

For	Press ↓ or ← to	Press ↑ or → to
"BASS"	decrease the bass.	increase the bass.
"TREBLE"	decrease the treble.	increase the treble.
"BALANCE"	increase the left speaker's volume.	increase the right speaker's volume.
"BBE"	select "HIGH" for higher enhancement of sound clarity; select "LOW" for lower enhancement of sound clarity; select "OFF" to cancel BBE sound.	

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

■ Changing the “SETUP” setting

The “SETUP” menu allows you to change the menu language, adjust the picture position, set up your program numbers and select the color system.

1 Press MENU.

2 Press ↑ or ↓ to select the “SETUP” icon (), then press ENTER.

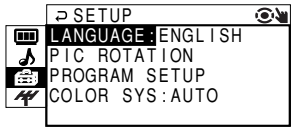

3 Press ↑ or ↓ to select the desired item (e.g., “COLOR SYS”), then press ENTER.

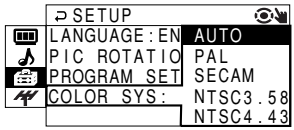

Select	To
“LANGUAGE”	change the menu language. Press ↑ or ↓ to select either “ENGLISH”, “中文” (Chinese), “ عربي ” (Arabic), or “ ไทย ” (Thai), then press ENTER. The selected menu language appears.
“PIC ROTATION”	adjust the picture position when it is not aligned with the TV screen. Press ↑ , → , ↓ or ← to adjust the picture position, then press ENTER.
“PROGRAM SETUP”	adjust each channel settings (see **Adjusting each program number settings (“PROGRAM SETUP”)** on page 23).
“COLOR SYS”	select the color system. Normally, set this to “AUTO”.

Adjusting each program number settings (“PROGRAM SETUP”)

1 Select “PROGRAM SETUP” from the “SETUP” menu.

2 Select “PR” and press ENTER. Press ↑ or ↓ to select the desired program number you want to adjust, then press ENTER.

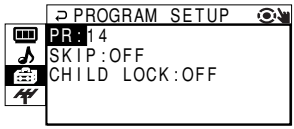

3 Press ↑ or ↓ to select the desired item (e.g., “SKIP”), then press ENTER.

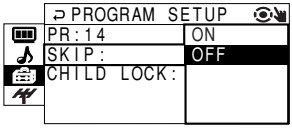

Select	To
“PR”	select the desired program number.
“SKIP”	skip unwanted or unused program number. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“CHILD LOCK”	prevent children from watching this selected program number. Press ↑ or ↓ to select “ON”, then press ENTER. The lock symbol (🔒) appears on the screen. To cancel, select “OFF”, then press ENTER. If you preset a locked program number, that program number will be unlocked automatically.

4 To continue adjusting other program numbers, press ↑ or ↓ to select “PR”, then repeat step 2 and 3.

■ Changing the Channel Preset ("CH PRESET") setting

The "CH PRESET" menu allows you to preset channels automatically, manually preset channels and select the TV system.

1 Press MENU.

2 Press ↑ or ↓ to select the "CH PRESET" icon (), then press ENTER.

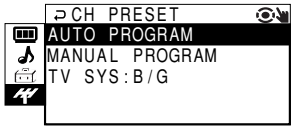

3 Press ↑ or ↓ to select the desired item (e.g., "AUTO PROGRAM"), then press ENTER.

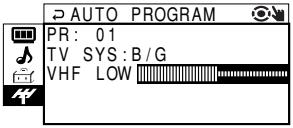

Select	To
"AUTO PROGRAM"	preset channels automatically.
"MANUAL PROGRAM"	manually preset desired channels and channels that cannot be preset automatically (see **Presetting channels manually** on page 25).
"TV SYS"	select the TV system. Press ↑ or ↓ to select either "B/G", "I", "D/K" or "M", then press ENTER.

Note

- During automatic channel presetting, your TV screen will indicate "B/G" , "I", "D/K" or "M" for the TV system ("TV SYS").

Presetting channels manually

1 After selecting "MANUAL PROGRAM", select the program number to which you want to preset a channel.

(1) Make sure "PR" is selected, then press ENTER.

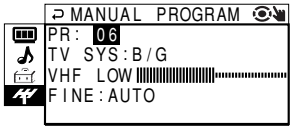

(2) Press ↑ or ↓ until the program number you want to preset (e.g., program number "10") appears on the menu, then press ENTER.

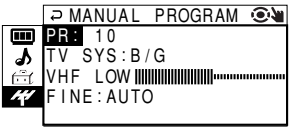

2 Select the desired channel.

(1) Make sure either "VHF LOW", "VHF HIGH", or "UHF" is selected, then press ENTER.

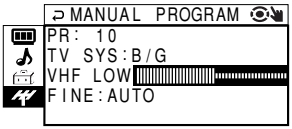

(2) Press ↑ or ↓ until the desired channel's broadcast appears on the TV screen, then press ENTER.

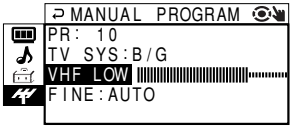

3 If the sound of the desired channel is abnormal, select the appropriate TV system.

(1) Press ↑ or ↓ to select "TV SYS", then press ENTER.

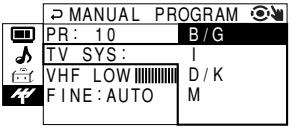

(2) Press ↑ or ↓ until the sound becomes normal, then press ENTER.

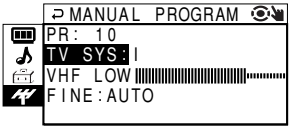

Tip

- You can also select the program number with the PROGR +/– or number buttons.

continue

continued

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the "FINE" tuning feature.

(1) Press ↑ or ↓ to select "FINE", then press ENTER.

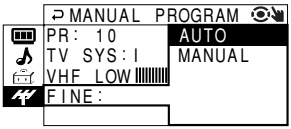

(2) Press ↑ or ↓ to select "MANUAL", then press ENTER.

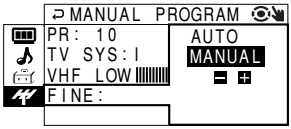

(3) Press ↑, ↓, ← or → until the picture and sound quality are optimal, then press ENTER.
The + or – icon on the menu flashes while tuning.

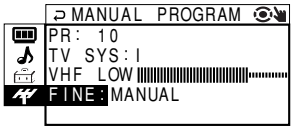

Note

- If you connect a VCR to ⅂ (antenna input), preset the signal output from the VCR to the program number 0 on the TV.

■ Connecting optional components

Connecting to the video input terminal ( )

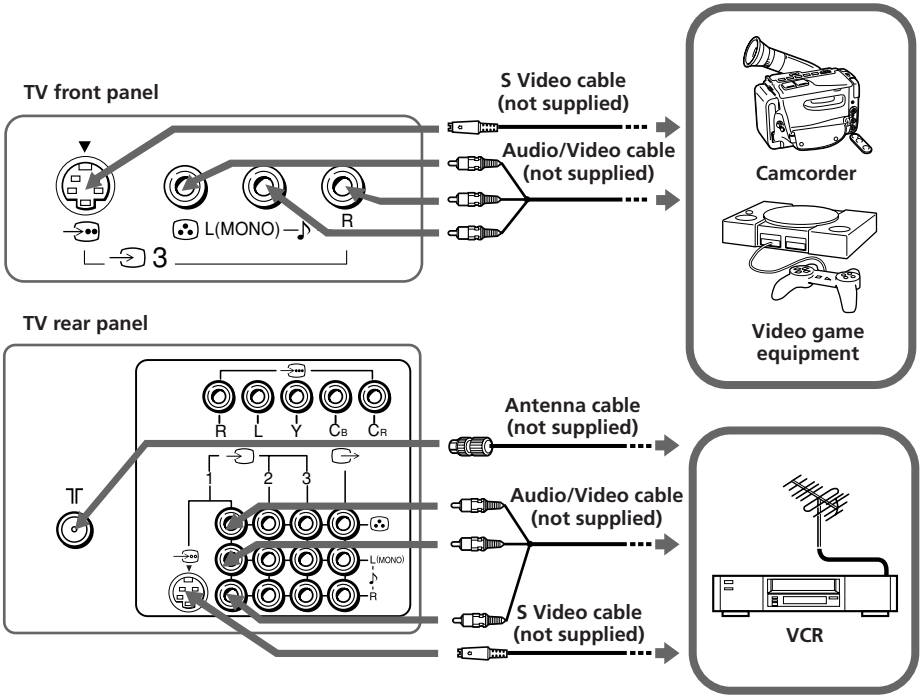

Connecting to the monitor output terminal ( )

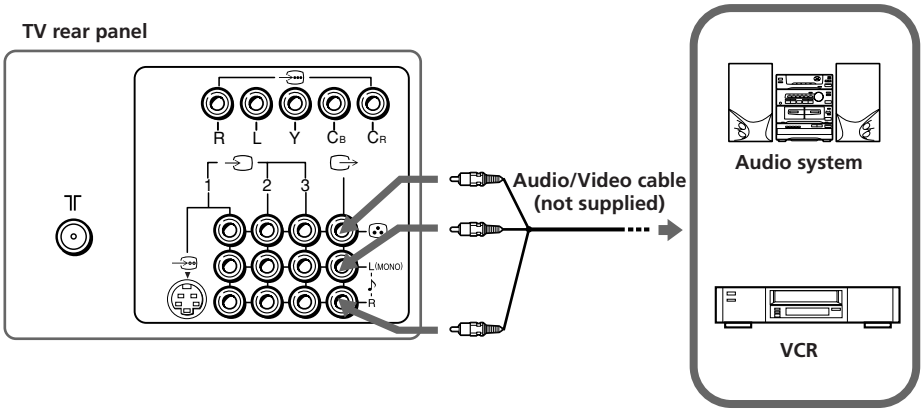

Connecting a DVD player to the component video input terminal ( )

1 Using an audio cable, connect R and L under (component video input) on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.

2 Using a component video cable, connect Y, C_B, and C_R under (component video input) on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.

3 Press DVD on the remote to watch the (component video input) and "DVD" will appear on your screen.

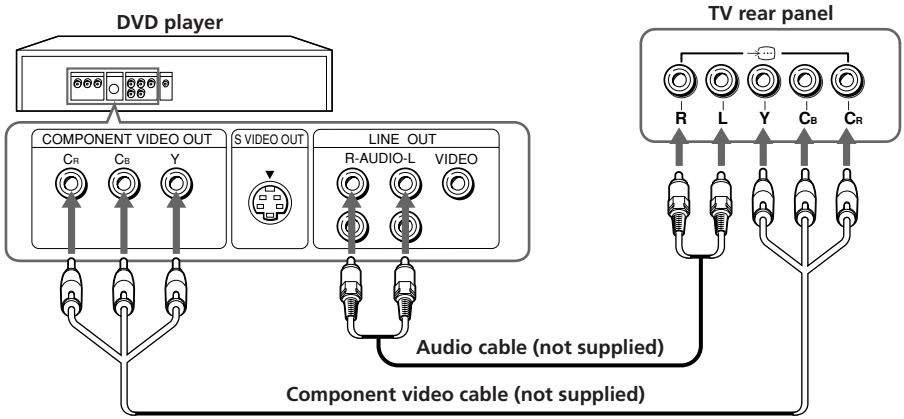

Notes

- If your DVD player can ouput interlace and progressive mode signals, select the interlace output when connecting to (component video input) on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
- Some DVD player terminals may be labeled differently:

Connect	To (on the DVD player)
Y (green)	Y
C_B (blue)	C_B, P_B, C_b or B-Y
C_R (red)	C_R, P_R, C_r or R-Y

- When both (S video) and (video) for 1 or 3 are connected at the same time, (S video) is automatically selected. To view (video), disconnect the S video cable.
- If you select "DVD" on your TV screen, the signal from the (monitor output) jacks will not be output properly. This does not indicate a malfunction.

■ Troubleshooting

If you have any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

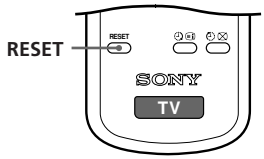

Reset function

Press the RESET button on your remote control. Your TV will go blank for about half a second then the picture will reappear with "RESET" displayed on your TV screen for about 10 seconds.

Pressing RESET will set your TV to the factory setting, but certain problems may be solved.

Troubleshooting guide

Symptom	Possible cause	Solutions	Page
Snowy picture 	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	27
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
Noisy sound	• Channel presetting is inappropriate or incomplete.	• Display the "CH PRESET" menu and select "MANUAL PROGRAM" to preset the channel again.	25
	• Signal transmission is low.	• Try using a booster.	–
Distorted picture	• Broadcast signals are too strong.	• Turn off or disconnect the booster if it is in use.	–
Noisy sound			
Good picture	• The TV system setting is inappropriate.	• Display the "CH PRESET" menu and select the appropriate TV system ("TV SYS").	25
Noisy sound			

continue

continued

Symptom	Possible cause	Solutions	Page
No picture **No sound** 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and VCR connections.	27
	• The TV is not turned on.	• Press I/⏻ (power). • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	9 8
Good picture **No sound** 	• The volume level is too low.	• Press + to increase the volume level.	9
	• The sound is muted.	• Press 🔇 to cancel the muting.	9
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.	– –
Double images or "ghosts" 	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna. • Use the fine tuning ("FINE") function.	– 26
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Use of a booster is inappropriate.	• Turn off or disconnect the booster if it is in use.	–
No color 	• The color level setting is too low.	• Display the "PICTURE" menu and select "ADJUST" of "PICTURE MODE", then adjust the "COLOR" level.	19
	• The color system setting is inappropriate.	• Display the "SETUP" menu and check the color system ("COLOR SYS") setting (usually set this to "AUTO").	22
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–

Symptom	Possible cause	Solutions	Page
Picture slant  	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. • Display the "SETUP" menu and adjust "PIC ROTATION" so that the picture position is optimal.	– 22
Abnormal color patches 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.	–
"100" appears at the top of the screen and there is no Teletext display. (KV-AR34M81 only)	• The channel carries no Teletext broadcast.	—	14
Teletext display is incomplete (snowy picture or double images). (KV-AR34M81 only)	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR, and at the wall.	27
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Signal transmission is too low.	• Try using a booster. • Use the fine tuning ("FINE") function.	– 26
The ⏻ (standby) indicator on your TV flashes red several times between three-second intervals.	• Your TV's self-diagnosis function indicates the possible problems.	• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.	–

continue

continued

Symptom	Possible cause	Solutions	Page
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.	—	–
A small "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

■ Specifications

	KV-AR34M81	KV-AR25M80	Note
Power requirements	110-240 V AC, 50/60 Hz		
Power consumption (W)	Indicated on the rear of the TV		
Television system	B/G, I, D/K, M		
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43		
Teletext language	English, Farsi (Persian), French		KV-AR34M81 only
Channel coverage			
B/G	VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41		
I	UHF : B21 to B68 CATV : S01 to S03, S1 to S41		
D/K	VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39		
M	VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84		
(Antenna)	75-ohm external terminal		
Audio output (Speaker)	8W +8W		
Number of terminal			
(Video)	Input: 4* Output: 1	Phono jacks; 1 Vp-p, 75 ohms	* Three input lines available
(Audio)	Input: 4* Output: 1	Phono jacks; 500 mVrms	* Three input lines available
(S Video)	Input: 2	Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms	
(Component Video)	Input: 1	Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative C_B: 0.7 Vp-p, 75 ohms C_R: 0.7 Vp-p, 75 ohms Audio: 500 mVrms	
(Headphone)	Output: 1	Stereo minijack	
Picture tube	34 in.	25 in.	
Tube size (cm)	86	64	Measured diagonally
Screen size (cm)	80	60	Measured diagonally
Dimensions (w/h/d, mm)	896 × 686 × 569	650 × 517 × 496	
Mass (kg)	79	39	

Design and specifications are subject to change without notice.

http://www.sony.net/

Sony Corporation

SONY

4-091-882-**11** (1)

Trinitron Color TV

Operating Instructions

GB

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

FD Trinitron
WEGA

KV-AR29
KV-AR25

© 2002 Sony Corporation

N90

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110-240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

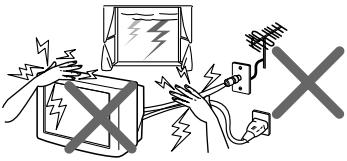

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

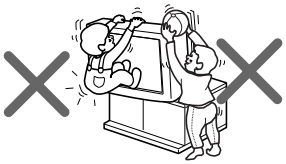

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

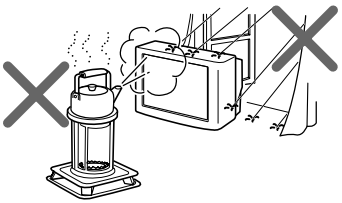

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

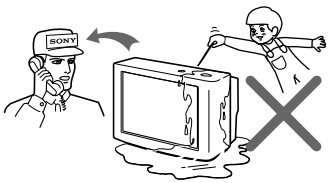

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

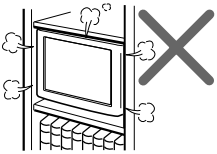

Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

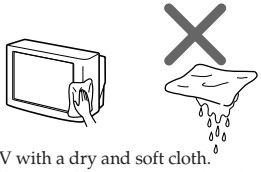

Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.

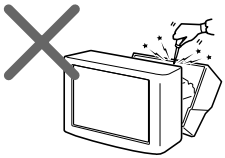

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

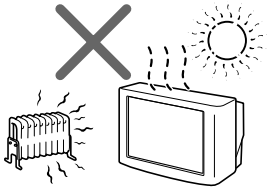

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

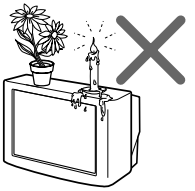

Do not place any objects on the TV.

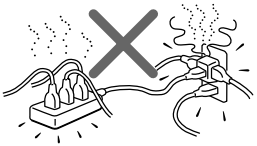

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

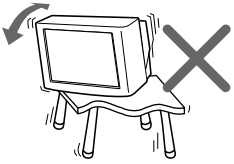

Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

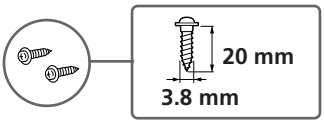

screws

clamps



band

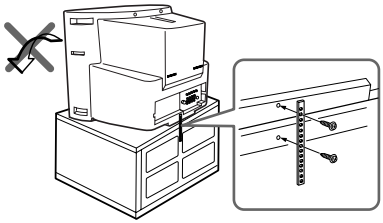

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

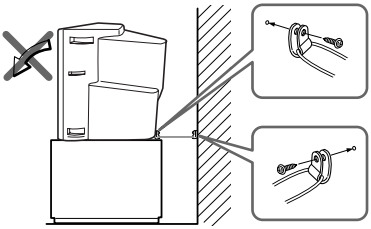

(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

or

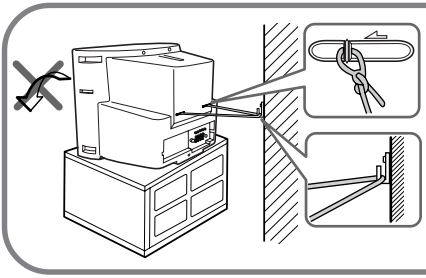

(1) Attach each end of a cord or chain to the provided holders at the rear of your TV.
(2) Securely fix the attached cord or chain to a wall or pillar using an attachment which can support the TV set weight.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

Getting Started **6**
Setting up your TV ("INITIAL SETUP") **7**

Overview of Controls

TV front and rear panels **8**
Remote control **9**

Advanced Operations

Selecting the picture and sound modes **11**
Viewing the picture in wide mode .. **12**
Listening with surround sound **12**
Setting the timers **13**
Enjoying stereo or bilingual programs **14**

Menu Adjustment

Introducing the menu system **15**
Changing the "PICTURE" setting ... **18**
Changing the "SOUND" setting **20**
Changing the "SETUP" setting **22**
Changing the Channel Preset ("CH PRESET") setting **24**

Additional Information

Connecting optional components ... **25**
Troubleshooting **27**
Specifications **30**

GB

■ Getting Started

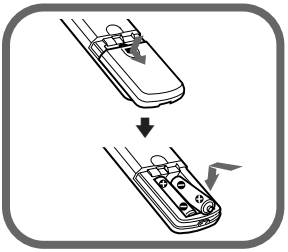

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

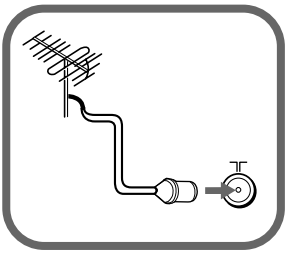

Step 2

Connect the antenna cable (not supplied) to ⊤ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 25).

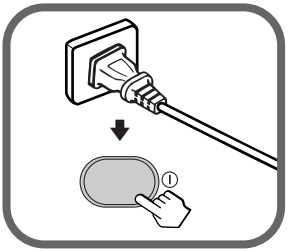

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

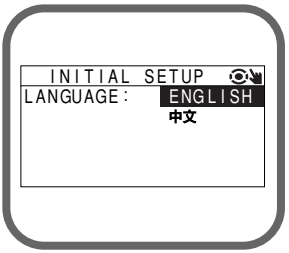

Step 4

Set up the TV by following the instructions of the "INITIAL SETUP" menu (see page 7).

■ Setting up your TV ("INITIAL SETUP")

When you turn on your TV for the first time, the "INITIAL SETUP" menu will appear. This menu allows you to change the menu language, adjust the picture position and preset the TV channels automatically.

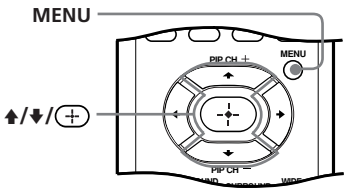

1 Press ↑ or ↓ to select the desired menu language (e.g.,"ENGLISH"), then press ⊕.

The selected menu language appears.

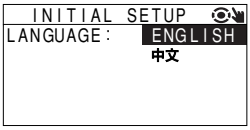

2 If the "PIC ROTATION" bar is slanted, press ↑ or ↓ to adjust it, then press ⊕.

If no adjustment is necessary, then press ⊕.

The ⊞ or ⊟ icon on the screen flashes while adjusting.

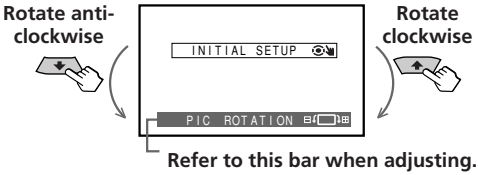

3 Press ↑ or ↓ to select "YES", then press ⊕ to preset the channels automatically (see page 24).

To skip automatic channel presetting, select "NO", then press ⊕.

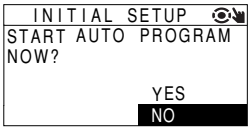

4 Press ↑ or ↓ to select "NO", then press ⊕. The "INITIAL SETUP" menu will not appear again the next time you turn on the TV by pressing ⏻.

To allow this menu to appear again, select "YES", then press ⊕.

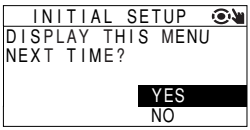

Tips

- You can immediately go to the end of the "INITIAL SETUP" menu by pressing MENU.
- You can also set up your TV using the menu system (see page 15).

■ TV front and rear panels

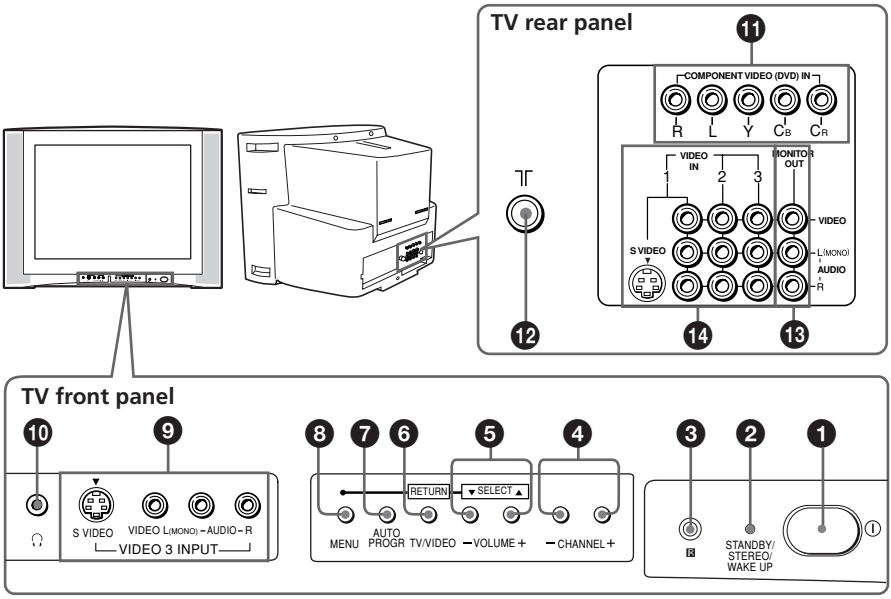

Button/Terminal	Function	Page
❶ ⏻	Turn off or turn on the TV.	6
❷ STANDBY	Standby indicator.	–
❷ WAKE UP	Wake Up indicator.	13
❷ STEREO	Stereo/bilingual indicator.	14
❸	Remote control sensor.	–
❹ CHANNEL +/–	Select channel number.	–
❺ VOLUME +/–	Adjust volume.	–
❻ TV/VIDEO	Select TV or video input.	–
❼ AUTO PROGR	Preset channels automatically.	–
Menu operations		
❺ SELECT ▼/▲	Select and adjust items.	17
❻ RETURN	Confirm selected items.	17
❽ MENU	Display or cancel the menu.	17
❾ VIDEO 3 INPUT	Video input terminal 3.	25
❿ 🎧	Headphone jack.	–
⓫ COMPONENT VIDEO (DVD) IN	Component video (DVD) input terminal.	26
⓬ ⊤	Antenna input terminal.	25
⓭ MONITOR OUT	Monitor output terminal.	25
⓮ VIDEO IN 1, 2, 3	Video input terminal 1, 2, 3.	25

Remote control

If you prefer Chinese labels, you may detach the back of the supplied sticker and attach it on your remote.

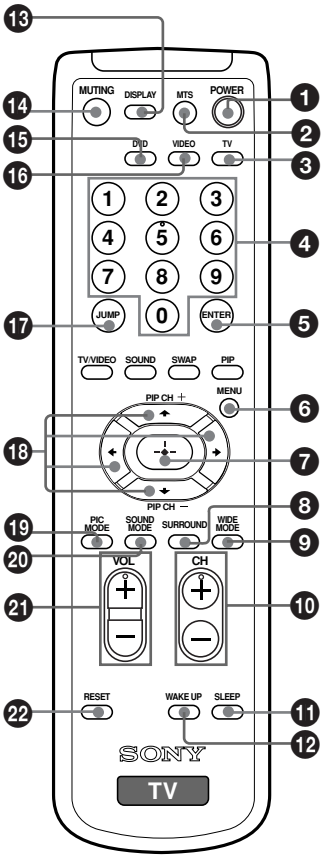

Button	Function	Page
❶ POWER	Turn off temporarily or turn on the TV.	–
❷ MTS	Select stereo/bilingual mode.	14
❸ TV	Display the TV program.	–
❹ 0-9	Input numbers.	–
❺ ENTER	Confirm input numbers.	–
❽ SURROUND	Select surround mode.	12
❾ WIDE MODE	Select wide-mode (16:9).	12
❿ CH +/–	Select channel number.	–
⓭ DISPLAY	Display on-screen information.	–
⓮ MUTING	Mute the sound.	–
⓯ DVD	Select component video input.	26
⓰ VIDEO	Select TV or video input.	25
⓱ JUMP	Jump to previous channel number	–
⓳ PIC MODE	Select picture mode.	11
⓴ SOUND MODE	Select sound mode.	11
㉑ VOL +/–	Adjust volume.	–
㉒ RESET	Set TV to factory setting.	27
Timer operations		
⓫ SLEEP	Set TV to turn off automatically.	13
⓬ WAKE UP	Set TV to turn on automatically.	13
Menu operations		
❻ MENU	Display the menu.	17
❼ ⊕	Confirm selected items.	17
⓲ ↑, ↓, ←, →	Select and adjust items.	17

continue

continued

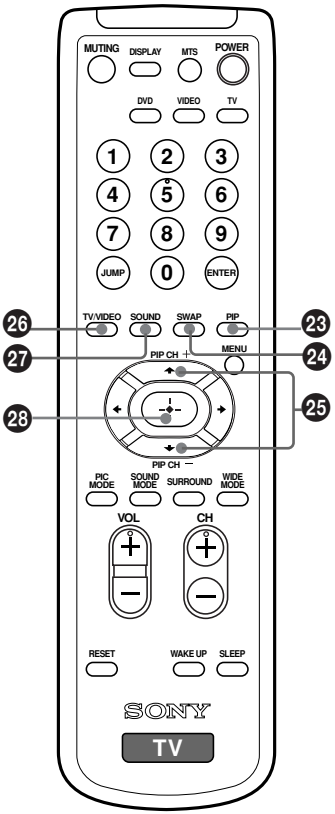

Button	Function	Page
PIP operations (yellow label)		
23 PIP	Not function for your TV.	–
24 SWAP		
25 PIP CH +/–		
26 TV/VIDEO		
27 SOUND		
28 ⊕		

Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the "PERSONAL" option.

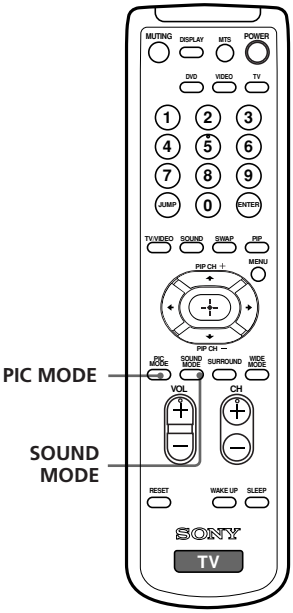

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
"DYNAMIC"	view high contrast pictures.
"STANDARD"	view normal pictures.
"SOFT"	view mild pictures.
"PERSONAL"	receive the last adjusted picture setting from the "ADJUST" option in the "PICTURE" menu (see page 19).

Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

Select	To
"♪ DYNAMIC"	listen to dynamic and clear sound that emphasizes both the low and high tones.
"♪ DRAMA"	listen to sound that emphasizes voice and high tones.
"♪ SOFT"	listen to soft sound.
"♪ PERSONAL"	receive the last adjusted sound setting from the "ADJUST" option in the "SOUND" menu (see page 21).

■ Viewing the picture in wide mode

When receiving a wide-mode (16:9) signal, the picture will appear “squeezed” (compressed) on your screen. Use the WIDE MODE button to view the picture with the optimal effect.

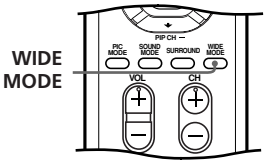

Select	To
“ON”	view the picture in wide-mode (16:9).
“OFF”	cancel wide-mode (16:9).

■ Listening with surround sound

You can use the SURROUND button to listen to the sound effects of a concert hall or movie theater.

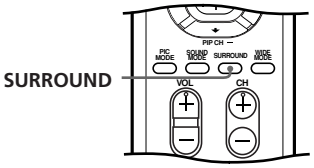

Select	To
“TruSurround”	listen to the surround sound that spreads out to the rear of a room.
“SIMULATED”	listen to monaural sound with a stereo-like effect.
“OFF”	cancel surround sound.

The surround of your TV is categorized as TruSurround.

TruSurround™ is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents.

■ Setting the timers

You can set your TV to turn on and off automatically by using the Wake up timer and Sleep timer respectively.

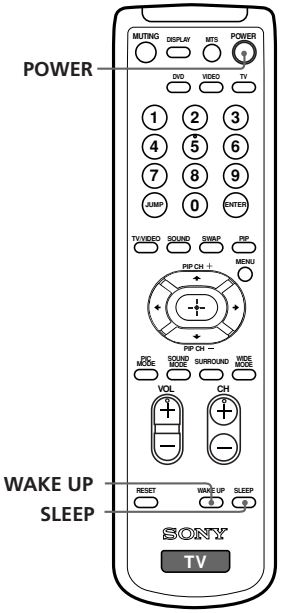

Setting the Wake Up timer

1 Press WAKE UP until the desired period of time appears on the screen.

WAKE UP TIMER:10M
(After 10 minutes)

WAKE UP TIMER:OFF ← **WAKE UP TIMER:12H00M**
(No Wake Up timer) **(After 12 hours)**

The Wake Up timer starts immediately after you have set it.

2 Select the channel number or video input you want to wake up to.

3 Press POWER, or set the Sleep timer if you want the TV to turn off automatically.

The WAKE UP indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press SLEEP until the desired period of time appears on the screen.

SLEEP TIMER:30M → **SLEEP TIMER:60M**
(After 30 minutes) **(After 60 minutes)**

↑ ↓

SLEEP TIMER:OFF ← **SLEEP TIMER:90M**
(No Sleep timer) **(After 90 minutes)**

The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by pressing ⏻ on the TV to turn off the TV.
- If no buttons are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

■ Enjoying stereo or bilingual programs

You can enjoy stereo sound or bilingual programs of MTS stereo system by using MTS button.

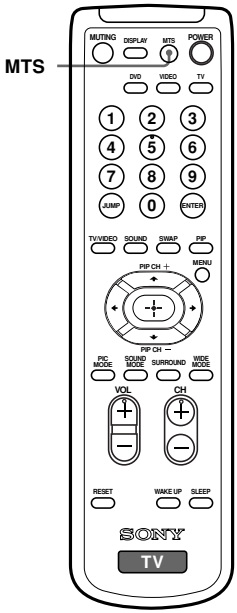

Select stereo or bilingual programs

Press MTS until you receive the sound you want.

Select	To
"STEREO"	Listen to stereo broadcast sound.
"SAP"	Listen to SAP broadcast sound.
"MONO"	Listen to monaural sound.

Notes

- When select SAP, non-SAP program sound will be same as STEREO mode sound.
- If the stereo signal is very weak, the STEREO broadcast sound may become noisy. To reduce the noise select "MONO".

■ Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.

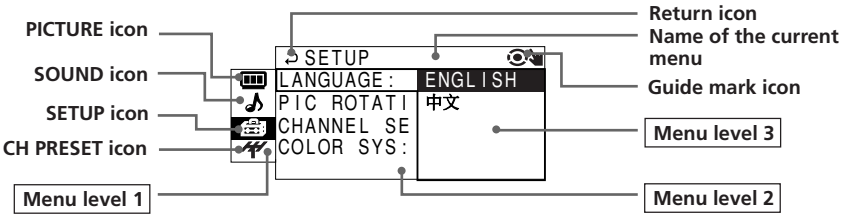

Level 1	Level 2	Level 3/Function	Page
"PICTURE"	"PICTURE MODE"	Select the picture mode: "DYNAMIC" → "STANDARD" → "SOFT" → "PERSONAL" → "ADJUST"	18
	"ADJUST"	Adjust the "PERSONAL" option: "PICTURE" → "COLOR" → "BRIGHT" → "HUE" → "SHARP"	
	"WIDE MODE"	Change the picture size. "ON" → "OFF"	
	"INTELLIGENT PIC"	Optimize the picture quality: "ON" → "OFF"	
"SOUND"	"SOUND MODE"	Select the sound mode: "DYNAMIC" → "DRAMA" → "SOFT" → "PERSONAL" → "ADJUST"	20
	"ADJUST"	Adjust the "PERSONAL" option: "BASS" → "TREBLE" → "BALANCE" → "BBE"*	
	"SURROUND"	Select the "SURROUND" mode: "TruSurround" → "SIMULATED" →"OFF"	
	"INTELLIGENT VOL"	Adjust volume automatically: "ON" → "OFF"	

continue

continued

Level 1	Level 2	Level 3/Function	Page
"SETUP"	"LANGUAGE"	Change the menu language: "ENGLISH" → "中文"(Chinese)	22
	"PIC ROTATION"	Adjust the picture position.	
	"CHANNEL SETUP"	Adjust each channel number settings.	
	"COLOR SYS"	Select the color system (for video input only): "AUTO" →" PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43"	
"CH PRESET"	"AUTO PROGRAM"	Preset channels automatically.	24
	"CABLE"	Watch cable TV programs: "ON" → "OFF"	

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE symbol are the trademarks of BBE Sound, Inc.

How to use the menu

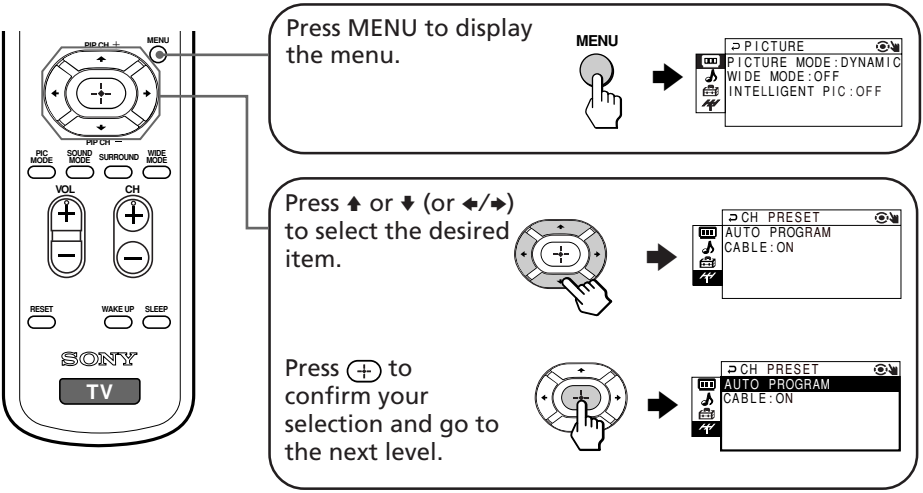

Other menu operations

To	Press
Adjust the setting value	↑, ↓, ← or →.
Move to the next/previous menu level	← or →.
Cancel the menu	MENU.

Tips

- If you want to exit from Menu level 2 to Menu level 1, press ↑ or ↓ until the return icon (⮌) is highlighted, then press ⊕.
- Some of the menu items can be operated directly using the remote buttons.
- The MENU, RETURN, and SELECT ▼/▲ buttons on the TV can also be used for the operations above.

Front of TV

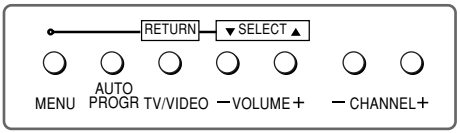

■ Changing the “PICTURE” setting

The “PICTURE” menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the “PICTURE” icon (▣) is selected, then press ⊕.

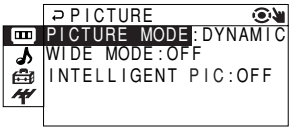

3 Press ↑ or ↓ to select the desired item (e.g., “PICTURE MODE”), then press ⊕.

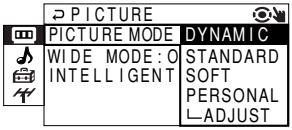

Select	To
“PICTURE MODE”	choose either “DYNAMIC”, “STANDARD”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“WIDE MODE”	choose either “ON” or “OFF” (see page 12).
“INTELLIGENT PIC”	optimize picture quality. Press ↑ or ↓ to select “ON”, then press ⊕. To cancel, select “OFF”, then press ⊕.

* When the “PERSONAL” mode is selected, you can receive the last adjusted picture settings from the “ADJUST” option (see page 19).

Adjusting the "ADJUST" items under "PICTURE MODE"

1 Press ↑ or ↓ to select the desired item (e.g.,"COLOR"), then press ⊕.

2 Adjust the value according to the following table, then press ⊕.

For	Press ↓ or ← to	Press ↑ or → to
"PICTURE"	decrease picture contrast.	increase picture contrast.
"COLOR"	decrease color intensity.	increase color intensity.
"BRIGHT"	darken the picture.	brighten the picture.
"HUE"	increase red picture tones.	increase green picture tones.
"SHARP"	soften the picture.	sharpen the picture.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

Notes

- "HUE" can be adjusted for the NTSC color system only.
- Reducing sharpness ("SHARP") can also reduce picture noise.

■ Changing the “SOUND” setting

The “SOUND” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press ↑ or ↓ to select the “SOUND” icon (♪), then press ⊕.

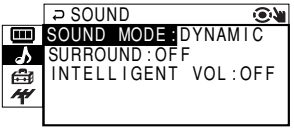

3 Press ↑ or ↓ to select the desired item (e.g., “SOUND MODE”), then press ⊕.

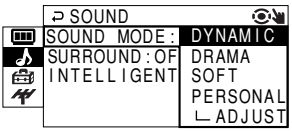

Select	To
“SOUND MODE”	choose either “DYNAMIC”, “DRAMA”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“SURROUND”	choose either “TruSurround”, “SIMULATED” or “OFF” (see page 12).
“INTELLIGENT VOL”	adjust the volume of all channel numbers and video inputs automatically. Press ↑ or ↓ to select “ON”, then press ⊕. To cancel, select “OFF”, then press ⊕.

* When the “PERSONAL” mode is selected, you can receive the last adjusted sound settings from the “ADJUST” option (see page 21).

Adjusting the "ADJUST" items under "SOUND MODE"

1 Press ↑ or ↓ to select the desired item (e.g., "BALANCE"), then press ⊕.

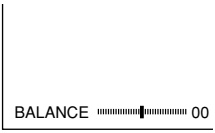

2 Adjust the value according to the following table, then press ⊕.

For	Press ↓ or ← to	Press ↑ or → to
"BASS"	decrease the bass.	increase the bass.
"TREBLE"	decrease the treble.	increase the treble.
"BALANCE"	increase the left speaker's volume.	increase the right speaker's volume.
"BBE"	select "HIGH" for higher enhancement of sound clarity; select "LOW" for lower enhancement of sound clarity; select "OFF" to cancel BBE sound.	

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

■ Changing the “SETUP” setting

The “SETUP” menu allows you to change the menu language, adjust the picture position, set up your channel numbers and select the color system.

1 Press MENU.

2 Press ↑ or ↓ to select the “SETUP” icon (🧰), then press ⊕.

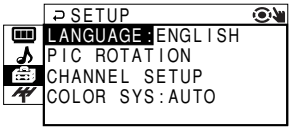

3 Press ↑ or ↓ to select the desired item (e.g., “LANGUAGE”), then press ⊕.

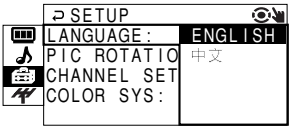

Select	To
“LANGUAGE”	change the menu language. Press ↑ or ↓ to select either “ENGLISH” or “中文” (Chinese), then press ⊕. The selected menu language appears.
“PIC ROTATION”	adjust the picture position when it is not aligned with the TV screen. Press ↑ , → , ↓ or ← to adjust the picture position, then press ⊕.
“CHANNEL SETUP”	adjust each channel number settings (see **Adjusting each channel number settings (“CHANNEL SETUP”)** on page 23).
“COLOR SYS”	change the color system (for video input only). Press ↑ or ↓ to select the appropriate color system, then press ⊕. Normally, set this to “AUTO”.

Adjusting each channel number settings ("CHANNEL SETUP")

1 Select "CHANNEL SETUP" from the "SETUP" menu.

2 Select "CH" and press ⊕.
Press ↑ or ↓ to select the desired channel number you want to adjust, then press ⊕.

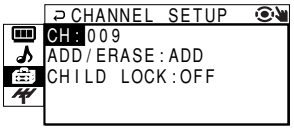

3 Press ↑ or ↓ to select the desired item (e.g., "ADD/ERASE"), then press ⊕.

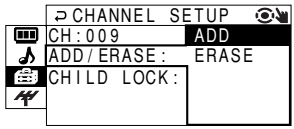

Select	To
"CH"	select the desired channel number.
"ADD/ERASE"	preset the selected channel manually. Press ↑ or ↓ to select "ADD", then press ⊕. To disable an unused or unwanted channel, select "ERASE", then press ⊕.
"CHILD LOCK"	prevent children from watching this selected channel number. Press ↑ or ↓ to select "ON", then press ⊕. The lock symbol (🔒) appears on the screen. To cancel, select "OFF", then press ⊕. If you preset a locked channel number, that channel number will be unlocked automatically.

4 To continue adjusting other channel numbers, press ↑ or ↓ to select "CH", then repeat step 2 and 3.

■ Changing the Channel Preset ("CH PRESET") setting

The "CH PRESET" menu allows you to adjust the setup of your TV to receive either CABLE TV or VHF and UHF broadcast.

1 Press MENU.

2 Press ↑ or ↓ to select the "CH PRESET" icon (), then press ⊕.

3 Press ↑ or ↓ to select the desired item (e.g., "CABLE"), then press ⊕.

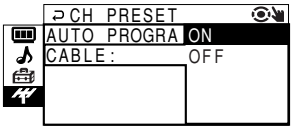

Select	To
"AUTO PROGRAM"	preset channels automatically.
"CABLE"	receive cable TV programs. Press ↑ or ↓ to select "ON", then press ⊕. If you select "CABLE: ON", you will be able to receive 125 cable TV channels. If there are no cable TV channels, you will receive VHF broadcast channels only. To receive only VHF and UHF broadcast channels, select "OFF", then press ⊕.

■ Connecting optional components

Connecting to VIDEO 3 INPUT and VIDEO IN 1,2 or 3 terminals

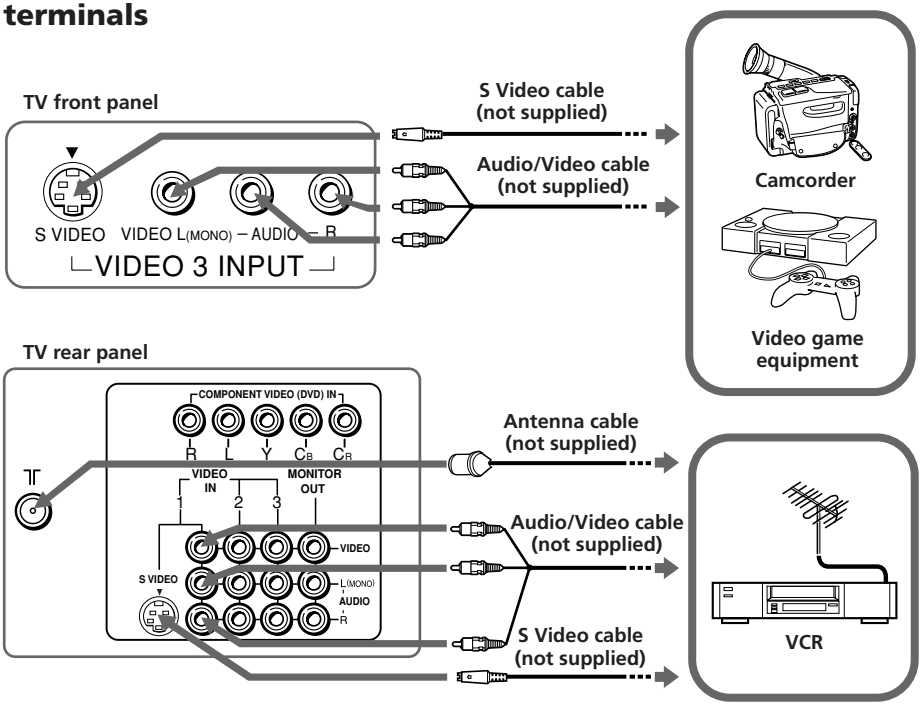

Connecting to MONITOR OUT terminal

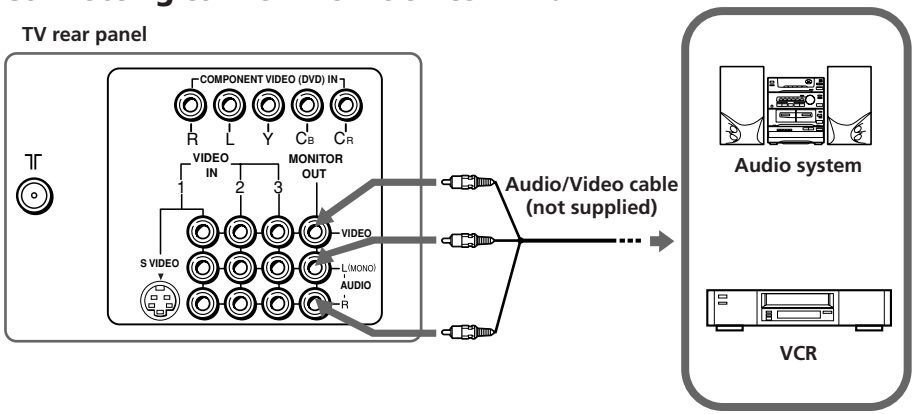

continue

continued

Connecting a DVD player to COMPONENT VIDEO (DVD) IN terminal

1 Using an audio cable, connect R and L under COMPONENT VIDEO (DVD) IN on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.
2 Using a component video cable, connect Y, C_B, and C_R under COMPONENT VIDEO (DVD) IN on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.
3 Press DVD on the remote to watch the COMPONENT VIDEO (DVD) IN and "DVD" will appear on your screen.

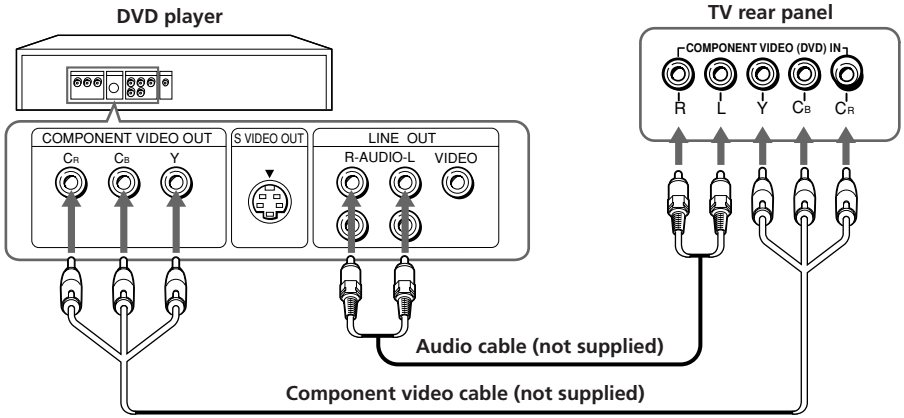

Notes

- If your DVD player can output interlace and progressive mode signals, select the interlace output when connecting to COMPONENT VIDEO (DVD) IN on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
- Some DVD player terminals may be labeled differently:

Connect	To (on the DVD player)
Y (green)	Y
C_B (blue)	C_B, P_B, C_b or B-Y
C_R (red)	C_R, P_R, C_r or R-Y

- When both S VIDEO and VIDEO for VIDEO IN 1 or VIDEO 3 INPUT are connected at the same time, S VIDEO is automatically selected. To view VIDEO, disconnect the S video cable.
- If you select "DVD" on your TV screen, the signal from the MONITOR OUT will not be output properly. This does not indicate a malfunction.

■ Troubleshooting

If you have any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

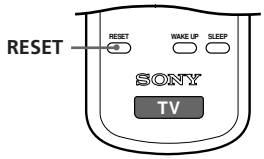

Reset function

Press the RESET button on your remote control. Your TV will go blank for about half a second then the picture will reappear with "RESET" displayed on your TV screen for about 10 seconds.

Pressing RESET will set your TV to the factory setting, but certain problems may be solved.

Troubleshooting guide

Symptom	Possible cause	Solutions	Page
Snowy picture  **Noisy sound**	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	25
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Channel presetting is inappropriate or incomplete.	• Preset the channel again.	24
	• Signal transmission is low.	• Try using a booster.	–
Distorted picture **Noisy sound**	• Broadcast signals are too strong.	• Turn off or disconnect the booster if it is in use.	–
No picture **No sound**	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and VCR connections.	25
	• The TV is not turned on.	• Press POWER. • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	9 8

continue

continued

Symptom	Possible cause	Solutions	Page
Good picture **No sound** 	• The volume level is too low.	• Press VOL + to increase the volume level.	9
	• The sound is muted.	• Press MUTING to cancel the muting.	9
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.	– –
Double images or "ghosts" 	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna.	–
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Use of a booster is inappropriate.	• Turn off or disconnect the booster if it is in use.	–
No color 	• The color level setting is too low.	• Display the "PICTURE" menu and select "ADJUST" of "PICTURE MODE", then adjust the "COLOR" level.	19
	• The color system setting is inappropriate (for video input only).	• Display the "SETUP" menu and check the color system ("COLOR SYS") setting (usually set this to "AUTO").	22
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
Picture slant 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. • Display the "SETUP" menu and adjust "PIC ROTATION" so that the picture position is optimal.	– 22

Symptom	Possible cause	Solutions	Page
Abnormal color patches	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.	–
TV cannot receive stereo broadcast sound.	• The stereo reception setting is inappropriate.	• Press MTS until "STEREO" appears on the screen.	14
or	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	25
Stereo broadcast sound switches on and off or is distorted.	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
The STANDBY indicator on your TV flashes red several times after every three seconds.	• Your TV's self-diagnosis function indicates the possible problems.	• Count the number of times the STANDBY indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.	–
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.	—	–
A small "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

■ Specifications

	KV-AR29N90	KV-AR25N90	Note
Power requirements	110-240 VAC, 50/60 Hz		
Power consumption (W)	Indicated on the rear of the TV		
Television system	M		
Color system	NTSC3.58, PAL*, PAL 60*, SECAM* , NTSC4.43*		* AV IN only
Stereo/Bilingual system	MTS		
Channel coverage	VHF : 2 to 13 UHF : 14 to 69 CATV : 1 to 125		
⅂ (Antenna)	75-ohm external terminal		
Audio output (Speaker)	8W + 8W		
Number of terminal			* Three input lines available
VIDEO	Input: 4* Output: 1	Phono jacks; 1 Vp-p, 75 ohms	
AUDIO	Input: 4* Output: 1	Phono jacks; 500 mVrms	* Three input lines available
S VIDEO	Input: 2	Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms	
COMPONENT VIDEO (DVD) IN	Input: 1	Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative C_B: 0.7 Vp-p, 75 ohms C_R 0.7 Vp-p, 75 ohms Audio: 500 mVrms	
🎧 (Headphone)	Output: 1	Stereo minijack	
Picture tube	29 in.	25 in.	
Tube size (cm)	72	64	Measured diagonally
Screen size (cm)	68	60	Measured diagonally
Dimensions (w/h/d, mm)	765 × 578 × 502	650 × 517 × 496	
Mass (kg)	49	39	

Design and specifications are subject to change without notice.

http://www.sony.net/

Sony Corporation

Product name:	Color TV
Model:	KV-AR34N90 KV-AR29N90 KV-AR25N90
Input voltage:	110V
Frequency:	60 Hz
Power consumption:	KV-AR34N90 : 220 W KV-AR29N90 : 180 W KV-AR25N90 : 135 W
Production month:	Indicated on the rear of the TV
Serial number:	Indicated on the rear of the TV
Manufacturer country:	Malaysia
Manufacturer:	Sony Technology Malaysia Sdn. Bhd.
Importer:	Sony Electronics Marketing of Taiwan Ltd.
Address:	6F, 198, Sec.2 Tun Hwa S. Road, Taipei
Contact no for service and inquiries :	
Taipei Headquarter:	(02)8732-8822
Taichoong Branch:	(04)2337-5821
Kao Shiong Branch:	(07)556-2246